



Fuse assignment supplement



4475846709

Order no. T447 0387 13 Part no. 447 584 67 09 Edition 2021-04

Mercedes-Benz



Publication details

Internet

Further information about Mercedes-Benz vehicles and about Mercedes-Benz AG can be found on the following websites:

<https://www.mercedes-benz.com>

<https://www.mbusa.com> (USA only)

<https://www.mercedes-benz.ca> (Canada only)

Documentation team

©Mercedes-Benz AG: not to be reprinted, translated or otherwise reproduced, in whole or in part, without written permission from Mercedes-Benz AG.

Vehicle manufacturer

Mercedes-Benz AG

Mercedesstraße 120

70372 Stuttgart

Germany

Vehicle dealers

Daimler VANS USA, LLC

One Mercedes-Benz Drive

Sandy Springs, GA 30328

<https://www.mbusa.com> (USA only)

<http://www.mbsprinterusa.com>

Customer Assistance Center:

1-877-762-8267

Mercedes-Benz Canada, Inc.

98 Vanderhoof Avenue

Toronto, ON M4G 4C9

<https://www.mercedes-benz.ca> (Canada only)

Customer Relations Department:

1-800-387-0100

Daimler VANS USA, LLC and Mercedes-Benz Canada, Inc. are Daimler AG enterprises.

Canada only: "Authorised Sprinter Dealer" is defined as an authorised Mercedes-Benz Sprinter Dealer.

| | |
|----------------------|----------|
| Symbols | 2 |
|----------------------|----------|

| | |
|-----------------------------------|----------|
| General notes | 3 |
| Notes on fuses and relays | 3 |
| Preparing to replace a fuse | 3 |

| | |
|---|----------|
| Fuses and relays in the engine compartment | 4 |
| Opening and closing the engine compartment fuse box | 4 |
| Fuses in the engine compartment | 4 |
| Relays in the engine compartment | 7 |

| | |
|--|----------|
| Fuses and relays in the co-driver footwell | 9 |
| Opening and closing the fuse box in the co-driver footwell | 9 |
| Fuses in the front passenger footwell | 9 |
| Relays in the co-driver footwell | 14 |

| | |
|---|-----------|
| Fuses and relays in the co-driver footwell on the A-pillar | 16 |
| Opening and closing the fuse box on the A-pillar | 16 |
| Fuses in the A-pillar | 16 |
| Relays in the A-pillar | 18 |


| | |
|---|-----------|
| Fuses and relays in the rear compartment | 19 |
| Opening and closing the rear compartment fuse box | 19 |
| Fuses and relays in the rear compartment | 19 |

| | |
|--|-----------|
| Fuses in the seat base of the right-hand front seat | 20 |
| Pre-fuse box in the seat base of the right-hand front seat | 20 |
| Fuses at the back of the right seat base | 21 |
| Fuse box in the right seat base | 21 |

| | |
|--------------------|-----------|
| Index | 23 |
|--------------------|-----------|


2 Symbols

In these Operating Instructions, you will find the following symbols:

 **DANGER** Danger due to not observing the warning notices


Warning notices draw your attention to hazards that may endanger your health or life, or the health or life of others.

► Observe the warning notices.

 **ENVIRONMENTAL NOTE** Environmental damage due to failure to observe environmental notes


Environmental notes include information on environmentally responsible behavior or environmentally responsible disposal.

► Observe environmental notes.

 **NOTE** Damage to property due to failure to observe notes on material damage

Notes on material damage inform you of risks which may lead to your vehicle being damaged.

► Observe notes on material damage.


 These symbols indicate useful instructions or further information that could be helpful to you.


► Instructions

(→ Further information on a topic page)

Display Display in the multifunction display/media display

Display in the taximeter

 Highest menu level to be selected in the multimedia system

 Corresponding submenus to be selected in the multimedia system

* Indicates a cause

Notes on fuses and relays

⚠ WARNING Risk of accident and injury due to overloaded lines

If you manipulate or bridge a faulty fuse or if you replace it with a fuse with a higher amperage, the electric line could be overloaded.

This could result in a fire.

- ▶ Always replace faulty fuses with specified new fuses containing the correct amperage.

! NOTE Damage or malfunctions caused by moisture

Moisture may cause damage to the electrical system or cause it to malfunction.

- ▶ When the fuse box is open, make sure that no moisture can enter the fuse box.
- ▶ When closing the fuse box, make sure that the seal of the lid is positioned correctly on the fuse box.

The electrical fuses in your vehicle switch off defective circuits. If a fuse blows, all the components on the circuit and their functions will cease to operate.

Replace faulty fuses with fuses of the same type that have the fuse rating recommended in the following overviews. Fuses of the same type can be recognized by the color and fuse rating. A qualified specialist workshop will be happy to advise you.

If a new fuse blows again, have the cause determined and rectified at a qualified specialist workshop.

The fuses and relays are split between the following fuse boxes in the vehicle:

- Fuse box in the engine compartment (PDC-E)
- Fuse box in the co-driver footwell (PDC-P)
- Fuse box in the co-driver footwell on the A-pillar (PDC-F)
- Fuse box in the rear compartment (PDC-R)
- Pre-fuse box next to the starter battery in the seat base of the right-hand front seat


Always have the fuses in the pre-fuse box and the relays in the fuse boxes replaced at a qualified specialist workshop.

Preparing to replace a fuse

- ▶ Apply the parking brake.
- ▶ **Vehicles with automatic transmission:** shift the transmission to position **P**.
- ▶ **Vehicles with manual transmission:** shift to neutral.
- ▶ Switch off all electrical consumers.
- ▶ Remove the key from the ignition lock.

Opening and closing the engine compartment fuse box

Opening the fuse box

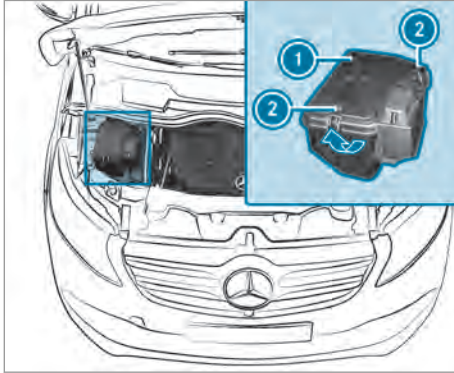


- ▶ Open the hood. Observe the important safety notes relating to opening the hood in the vehicle Operating Instructions.
- ▶ Remove any existing moisture from the fuse box using a dry cloth.
- ▶ Open retaining clamps ② and unhook them from the fuse box.
- ▶ Fold out cover ① upwards in the direction of the arrow and remove it.

Closing the fuse box

- ▶ Check that the seal sits correctly in cover ①.
- ▶ Hook cover ① in at the back and fold it down.
- ▶ Hook in retaining clamps ② on the fuse box and close.
- ▶ Close the hood (see the vehicle's Operating Instructions).

Fuses in the engine compartment

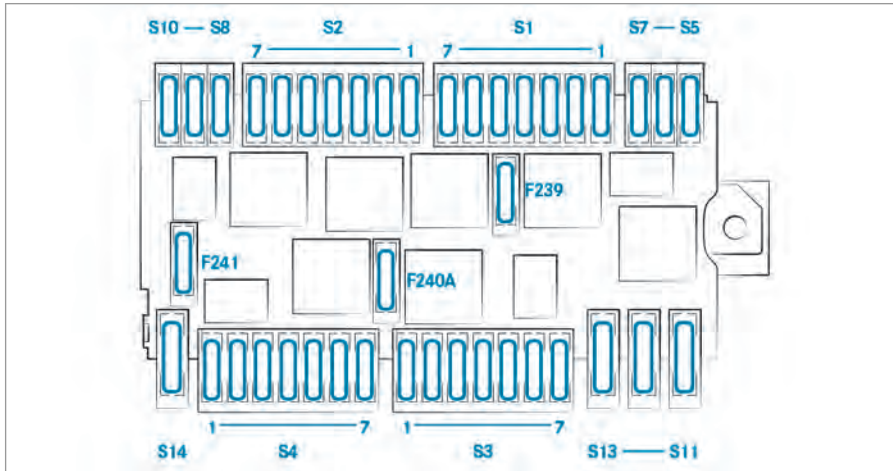

Fuse assignment in the engine compartment (view rotated 90°)

Fuse holder S1

| No. | Consumer | Fuses | Fuse rating |
|-----|--|-------|-------------|
| 1 | ESP valves | F204 | 25 A |
| 2 | Horn | F205 | 15 A |
| 3 | Engine control unit (OM654/OM622 model facelift) | F206 | 5 A |
| 4 | Shift module (NAG2) | F207 | 25 A |
| 5 | Unassigned | F208 | - |
| 6 | Supply relay N (terminal 87 engine) (OM622 model facelift) | F209 | 5 A |
| 7 | Unassigned | F210 | - |

Fuse holder S2

| No. | Consumer | Fuses | Fuse rating |
|-----|--|-------|-------------|
| 1 | Unassigned | F211 | - |
| 2 | Vehicles with gasoline engines: terminal 87 (4) engine control unit (M274) Vehicles with diesel engine: terminal 87 (4) NOx sensors/soot particulate sensor | F212 | 15 A |
| 3 | Terminal 87 (2) | F213 | 15 A |
| 4 | Terminal 87 (3) (OM622/OM651/M274) | F214 | 10 A |

6 Fuses and relays in the engine compartment

| No. | Consumer | Fuses | Fuse rating |
|-----|---|-------|-------------|
| | Terminal 87 (3) (OM622 model facelift/OM654) | | 15 A |
| 5 | Terminal 87 (1) (OM651) | F215 | 20 A |
| | Terminal 87 (1) (OM622 model facelift/OM654) | | 25 A |
| 6 | Engine control unit terminal 30G (OM622/OM651/M274) | F216 | 5 A |
| 7 | Unassigned | F217 | - |

Fuse holder S3

| No. | Consumer | Fuses | Fuse rating |
|-----|--|-------|-------------|
| 1 | Headlamp range adjustment, left (halogen headlamps) | F229 | 5 A |
| 2 | ESP® | F230 | 5 A |
| 3 | Headlamp range adjustment, right (halogen headlamps) | F231 | 5 A |
| 4 | Unassigned | F232 | - |
| 5 | Fuel filter heating (OM622 model facelift) | F233 | 25 A |
| 6 | Terminal 87 C1 (drive control CPC) | F234 | 10 A |
| 7 | Terminal 87 C2 (drive control CPC) | F235 | 15 A |

Fuse holder S4

| No. | Consumer | Fuses | Fuse rating |
|-----|---|-------|-------------|
| 1 | Engine control unit (OM654/OM622 model facelift) | F222 | 5 A |
| 2 | CPC drive control | F223 | 7.5 A |
| 3 | COLLISION PREVENTION ASSIST/DISTRONIC PLUS | F224 | 7.5 A |
| 4 | Unassigned | F225 | - |
| 5 | Radiator fan/radiator shutters (OM622/OM651/M274 with NAG2) | F226 | 5 A |
| 6 | Automatic transmission control unit (NAG2) | F227 | 10 A |
| 7 | Additional oil pump (central oil pump) (NAG2) | F228 | 15 A |

Fuse holders S5 to S14


| No. | Consumer | Fuses | Fuse rating |
|-----|--|-------|-------------|
| S5 | ATA (anti-theft alarm system) horn | F201 | 5 A |
| S6 | Auxiliary heating control unit | F202 | 20 A |
| S7 | HLL LED headlamp control unit (headlamp functions) | F203 | 20 A |

| No. | Consumer | Fuses | Fuse rating |
|-----|---|-------|-------------|
| S8 | ESP® control unit | F218 | 5 A |
| S9 | Unassigned | F219 | - |
| S10 | Unassigned | F220 | - |
| S11 | Unassigned | F238 | - |
| S12 | ESP pump | F237 | 40 A |
| S13 | CBC 2 signal acquisition and actuation module | F236 | 40 A |
| S14 | LED headlamp local control unit (LED high beam) | F221 | 40 A |

Additional fuses on the relay carrier

| No. | Consumer | Fuses | Fuse rating |
|-----|---------------------|-------|-------------|
| - | Windshield wipers | F239 | 30 A |
| - | Starter terminal 50 | F240A | 25 A |
| - | Unassigned | F241 | - |

Relays in the engine compartment

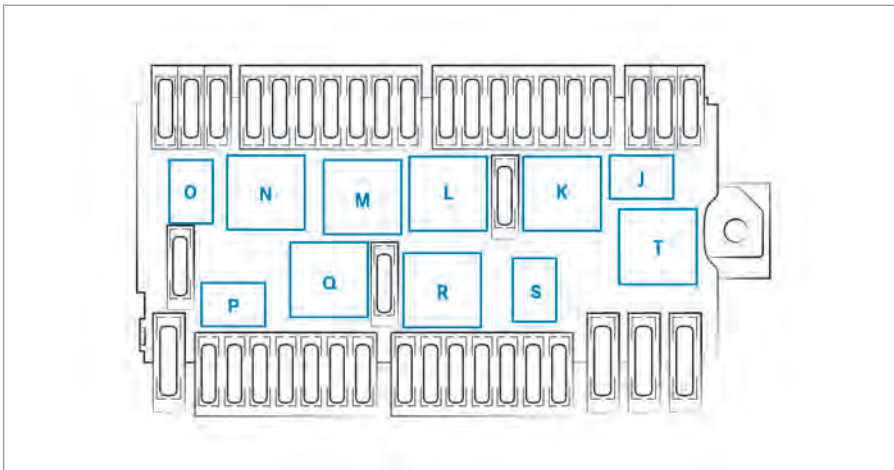


Relay assignment in the engine compartment (view rotated 90°)

8 Fuses and relays in the engine compartment

| No. | Function | Relays |
|-----|------------------------------------|--------|
| - | Horn | J |
| - | Windshield wipers, continuous wipe | K |
| - | Windshield wipers on/off | L |
| - | Starter motor | M |
| - | Terminal 87, engine | N |
| - | Unassigned | O |
| - | Unassigned | P |
| - | Unassigned | Q |
| - | Terminal 15 | R |
| - | Terminal 87C | S |
| - | Unassigned | T |

Opening and closing the fuse box in the co-driver footwell

Opening the fuse box

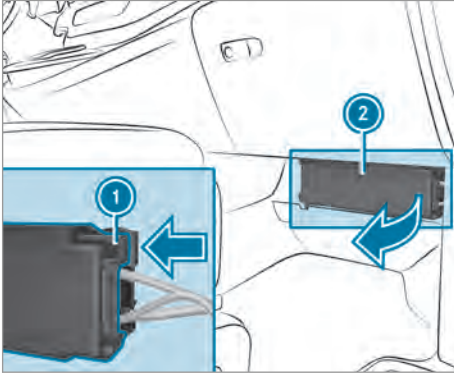


- ▶ Open the co-driver door.
- ▶ Press retaining clamp ① and fold out cover ② in the direction of the arrow until it engages.
- ▶ Pull cover ② forwards to remove it from the fuse box.

Closing the fuse box

- ▶ Insert and engage cover ② in the bracket on the left of the fuse box.
- ▶ Fold down cover ② until retaining clamp ① locks.
- ▶ Close the co-driver door.

Fuses in the front passenger footwell

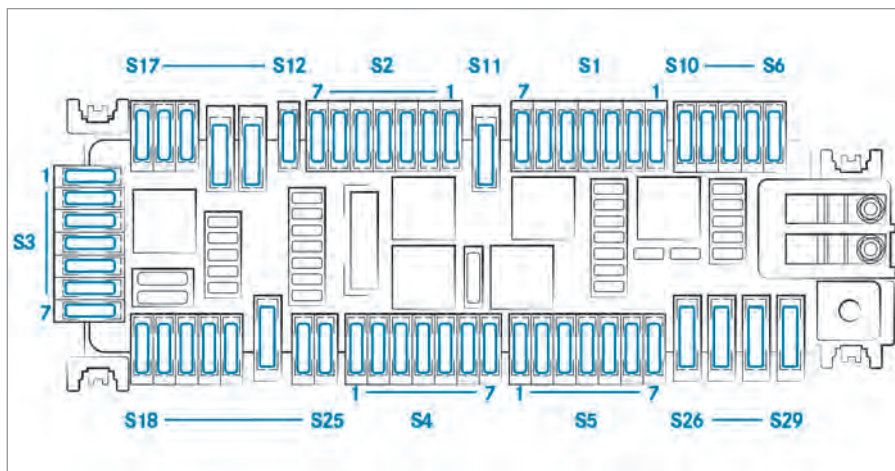

Fuse holder S1

| No. | Consumer | Fuses | Fuse rating |
|-----|--|-------|-------------|
| 1 | Rear view camera | F28 | 7.5 A |
| 2 | Radio head unit | F29 | 25 A |
| | Pre-installation for radio | | 15 A |
| 3 | Lane Keeping Assist, steering wheel | F30 | 10 A |
| 4 | Heating/automatic climate control/3-zone automatic climate control | F31 | 10 A |
| 5 | Control panel with touchpad in the center of the center console | F32 | 7.5 A |
| 6 | Digital inside rearview mirror | F33 | 5 A |
| 7 | Cigarette lighter | F34 | 15 A |

Fuse holder S2

| No. | Consumer | Fuses | Fuse rating |
|-----|--|-------|-------------|
| 1 | Driver seat control unit | F36 | 7.5 A |
| 2 | Fuse box in the engine compartment (PDC-E) | F37 | 30 A |
| 3 | Control unit, airbag | F38 | 7.5 A |
| 4 | Unassigned | F39 | - |
| 5 | SCRCM exhaust gas aftertreatment control unit (OM654/OM622 model facelift) | F40 | 15 A |

| No. | Consumer | Fuses | Fuse rating |
|-----|--|-------|-------------|
| 6 | SCRCM exhaust gas aftertreatment heater (OM654/OM622 model facelift) | F41 | 30 A |
| 7 | Front passenger seat control unit | F42 | 7.5 A |

Fuse holder S3

| No. | Consumer | Fuses | Fuse rating |
|-----|--|-------|-------------|
| 1 | Steering column tube module | F49 | 5 A |
| 2 | Radio display head unit and fan | F50 | 7.5 A |
| 3 | Unassigned | F51 | - |
| 4 | Media Interface | F52 | 5 A |
| 5 | Toll collection system, Japan (DSRC) | F53 | 7.5 A |
| 6 | Climate control blower | F54 | 30 A |
| 7 | Ignition lock/electronic steering lock | F55 | 20 A |

Fuse holder S4


| No. | Consumer | Fuses | Fuse rating |
|-----|--|-------|-------------|
| 1 | Control unit, front door, left | F64 | 30 A |
| 2 | Control unit, front door, right | F65 | 30 A |
| 3 | Rear-end door window wiper, right | F66 | 20 A |
| 4 | Electric parking brake | F67 | 7.5 A |
| 5 | Control unit, airbag | F68 | 7.5 A |
| 6 | Automatic front passenger airbag shutoff | F69 | 5 A |
| 7 | Unassigned | F70 | - |

Fuse holder S5

| No. | Consumer | Fuses | Fuse rating |
|-----|---|-------|-------------|
| 1 | Unassigned | F71 | - |
| 2 | 12 V sockets, cargo compartment | F72 | 15 A |
| 3 | Electric parking brake | F73 | 30 A |
| 4 | Electric sliding door, right/EASY-PACK tailgate | F74 | 30 A |
| 5 | Trailer module 1 | F75 | 15 A |
| 6 | Trailer module 2 | F76 | 25 A |
| 7 | Trailer module 3 | F77 | 25 A |

Fuse holders S6 to S29

| No. | Consumer | Fuses | Fuse rating |
|-----|--|-------|-------------|
| S6 | Unassigned | F23 | - |
| S7 | Trailer control unit | F24 | 7.5 A |
| S8 | Support battery, charging connection | F25 | 10 A |
| S9 | Trailer control unit | F26 | 15 A |
| S10 | Fuse box in the front passenger footwell on the A-pillar (PDC-F) | F27 | 5 A |
| S11 | Rear window heater | F35 | 30 A |
| S12 | Rear Seat Entertainment System | F43 | 10 A |
| S13 | Emergency Tensioning Device, front seat, left (PRE-SAFE®) | F44 | 40 A |
| S14 | Emergency Tensioning Device, front seat, right (PRE-SAFE®) | F45 | 40 A |
| S15 | SCRCM exhaust gas aftertreatment (gen.2) (OM651) | F46 | 10 A |
| S16 | SCRCM exhaust gas aftertreatment (gen.2) (OM651) | F47 | 20 A |
| S17 | SCRCM exhaust gas aftertreatment (gen.2) (OM651) | F48 | 15 A |
| S18 | CPC drive control | F56 | 10 A |
| | SCRCM exhaust gas aftertreatment (gen.2) (OM651) | | 5 A |
| S19 | Unassigned | F57 | - |
| S20 | Trailer brake booster (only for USA) | F58 | 25 A |
| S21 | Front passenger seat control unit | F59 | 30 A |
| S22 | Driver seat control unit | F60 | 30 A |
| S23 | Amplifier, sound system | F61 | 40 A |
| S24 | Roof turn signals | F62 | 10 A |
| S25 | Fuel supply system control unit | F63 | 20 A |
| S26 | Panoramic roof | F78 | 30 A |
| S27 | CBC 1 signal acquisition and actuation module | F79 | 40 A |
| S28 | CBC 3 signal acquisition and actuation module | F80 | 40 A |
| S29 | Blower, rear-compartment climate control | F81 | 30 A |

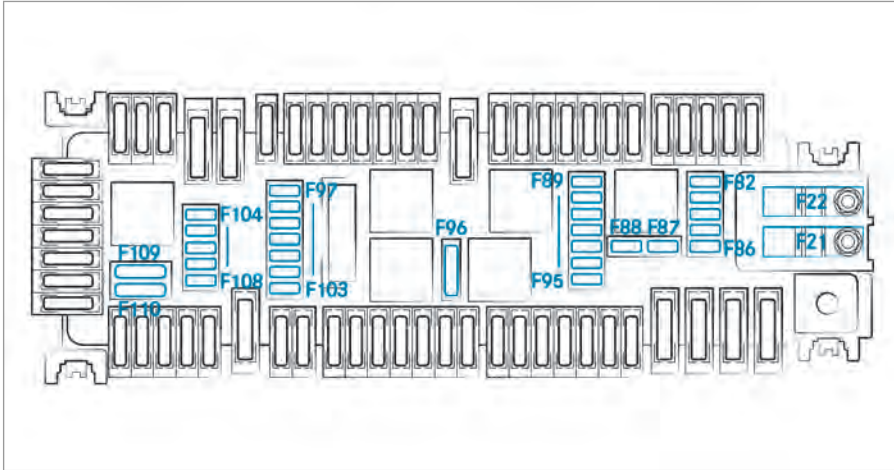
Additional fuses on the relay carrier

| No. | Consumer | Fuses | Fuse rating |
|-----|---|-------|-------------|
| - | PTC heater booster | F21 | 200 A |
| - | Support battery | F22 | 200 A |
| - | Star 2.5 central gateway | F82 | 5 A |
| - | Electronic ignition lock | F83 | 7.5 A |
| - | Center console control panel/control panel on the left next to the steering wheel | F84 | 7.5 A |
| - | Radio remote control receiver/Hermes module | F85 | 5 A |
| - | RF antenna | F86 | 5 A |
| - | Diagnostics connection | F87 | 10 A |
| - | Instrument cluster | F88 | 10 A |
| - | Light switch, diagnostics connection | F89 | 5 A |
| - | Blind Spot Assist | F90 | 5 A |
| - | Exhaust gas aftertreatment, SCR control unit | F91 | 5 A |
| - | Fuel supply system control unit | F92 | 5 A |
| - | Pre-installation for radio | F93 | 7.5 A |
| - | Toll collection system, Japan (DSRC) | | |
| - | Pre-installation for mobile KD devices | F94 | 15 A |
| - | Glove box lamp | F95 | 5 A |

14 Fuses and relays in the co-driver footwell

| No. | Consumer | Fuses | Fuse rating |
|-----|--|-------|-------------|
| - | Rear window wiper, tailgate/rear window wiper, rear-end door, left | F96 | 15 A |
| - | PARKTRONIC/Active Parking Assist | F97 | 5 A |
| - | CBC control line signal acquisition and actuation module | F98 | 5 A |
| - | Tire pressure monitoring system | F99 | 5 A |
| - | Unassigned | F100 | - |
| - | Overhead control panel | F101 | 10 A |
| - | Unassigned | F102 | - |
| - | Basic wiring taxi, taximeter | F103 | 5 A |
| - | Pre-installation for left-hand rear screen | F104 | 5 A |
| - | Pre-installation for right-hand rear screen | F105 | 5 A |
| - | Camera for driver assistance systems | F106 | 5 A |
| - | Unassigned | F107 | -* |
| - | Dirt flap for rear view camera | F108 | 7.5 A |
| - | Air suspension control unit | F109 | 15 A |
| - | CBC 5 signal acquisition and actuation module | F110 | 30 A |


Relays in the co-driver footwell

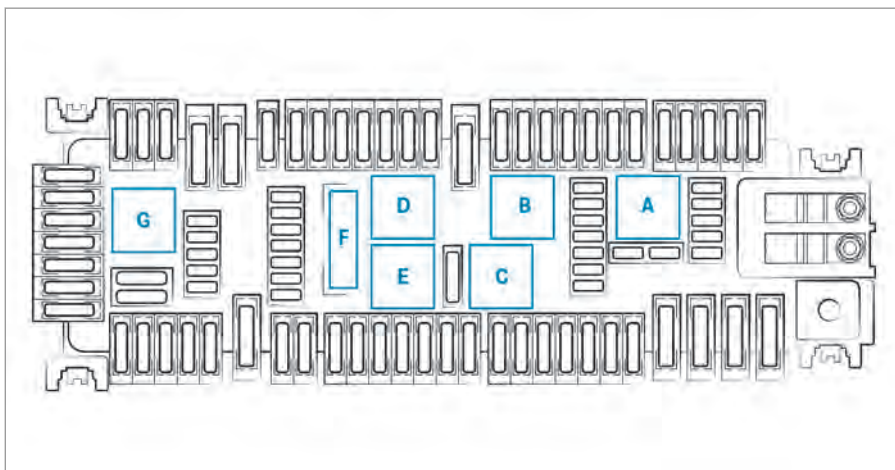

| No. | Function | Relays |
|-----|----------------------------------|--------|
| - | Terminal 15 relay | A |
| - | Rear window wiper | B |
| - | Terminal 15 R2 | C |
| - | Rear window heater | D |
| - | Terminal 15 R1 | E |
| - | Terminal 30 G reset | F |
| - | SCRCM exhaust gas aftertreatment | G |

Opening and closing the fuse box on the A-pillar

Opening the fuse box

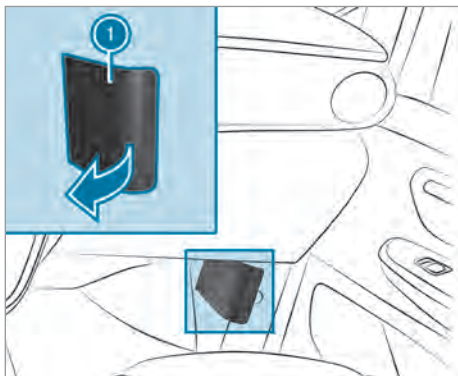


- ▶ Open the co-driver door.
- ▶ Open cover ① in the direction of the arrow and remove it.

Closing the fuse box

- ▶ Insert cover ① into the side trim panel on the left and push it shut.
- ▶ Close the co-driver door.

Fuses in the A-pillar

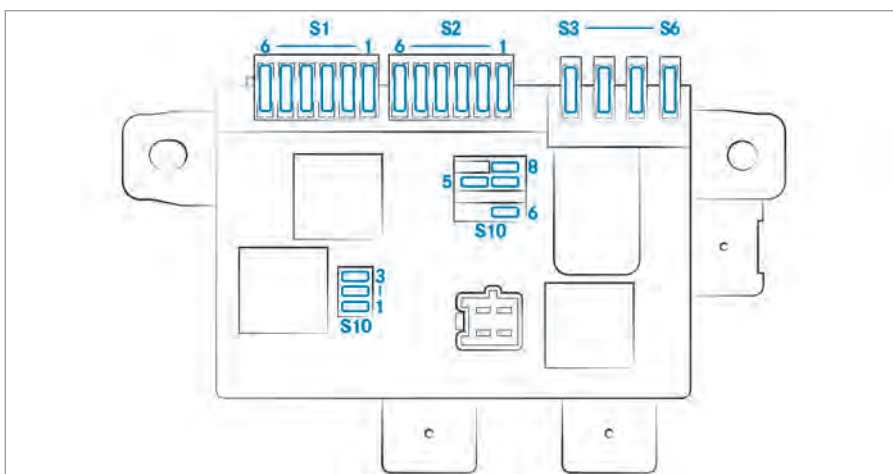

Fuse holder S1

| No. | Consumer | Fuses | Fuse rating |
|-----|--|-------|-------------|
| 1 | Rear seat heating/rear seat ventilation, row 1 left | F305 | 10 A |
| 2 | Rear seat heating/rear seat ventilation, row 1 right | F308 | 10 A |
| 3 | Rear seat heating/rear seat ventilation, row 2 left | F310 | 10 A |
| 4 | Rear seat heating/rear seat ventilation, row 2 right | F309 | 10 A |
| 5 | Digital timer for the stationary air heater | F316 | 5 A |
| 6 | Control unit for rear seat heating/rear seat ventilation | F317 | 5 A |

Fuse holder S2

| No. | Consumer | Fuses | Fuse rating |
|-----|--------------------------------------|-------|-------------|
| 1 | Parameterizable special module (PSM) | F303 | 25 A |
| 2 | Parameterizable special module (PSM) | F304 | 25 A |
| 3 | Center console refrigerator box | F306 | 10 A |
| 4 | Voltage converter | F312 | 30 A |
| 5 | Electric sliding door, left | F311 | 30 A |
| 6 | Onboard Logic Unit | F318 | 5 A |

Fuse holders S3 to S6

| No. | Consumer | Fuses | Fuse rating |
|-----|-------------------------------------|-------|-------------|
| S3 | Unassigned | F300 | - |
| S4 | Terminal 30 body manufacturer | F321 | 25 A |
| | Center console cup holder | | 10 A |
| S5 | Unassigned | F302 | - |
| S6 | Air heater (with auxiliary battery) | F323 | 5 A |


Fuse holder S8

| No. | Consumer | Fuses | Fuse rating |
|-----|------------|-------|-------------|
| 1 | Tachograph | F301 | 5 A |
| 2 | Unassigned | F307 | - |
| 3 | Tachograph | F315 | 7.5 A |

Fuse holder S9

| No. | Consumer | Fuses | Fuse rating |
|-----|-------------------------------|-------|-------------|
| 1 | Terminal 15 center console | F314 | 5 A |
| 2 | Terminal 61 body manufacturer | F319 | 15 A |
| 3 | Terminal 15 body manufacturer | F320 | 15 A |
| 4 | Unassigned | F322 | - |


Relays in the A-pillar

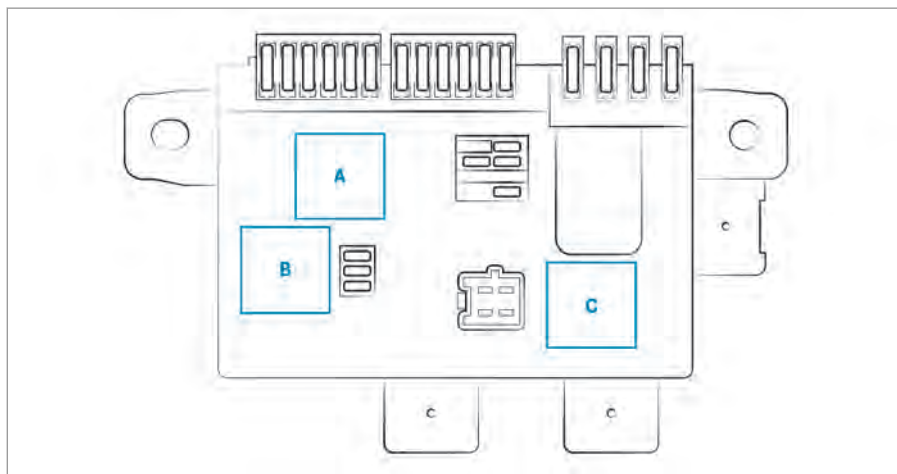

| No. | Function | Relays |
|-----|-------------------|--------|
| - | Terminal 15 relay | A |
| - | Unassigned | B |
| - | Unassigned | C |

Opening and closing the rear compartment fuse box

Opening the fuse box

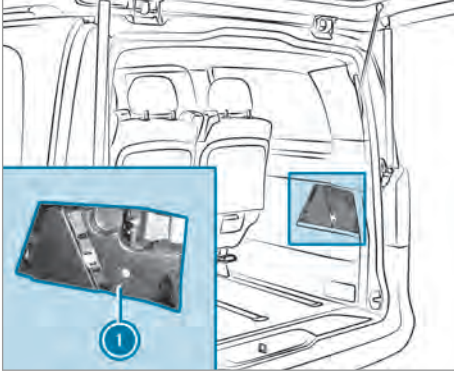


- ▶ Open the tailgate.
- ▶ Remove the vehicle tool kit from the storage compartment in the rear compartment (see the vehicle's Operating Instructions).

- ▶ Remove tool holder ① from the side trim.

Closing the fuse box

- ▶ Insert and engage tool holder ① in the storage compartment in the rear compartment.
- ▶ Close the tailgate.

Fuses and relays in the rear compartment

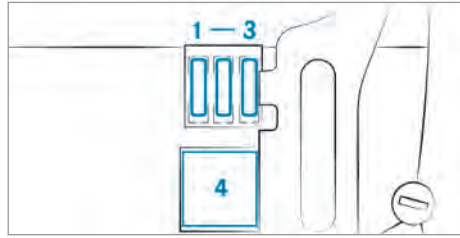

Fuse and relay holders behind the tool holder


Fuses

| No. | Consumer | Fuse | Fuse rating |
|-----|---|---------|-------------|
| 1 | 12 V socket, second row of seats, left | F 110 | 15 A |
| 2 | 12 V socket, second row of seats, right | F 110/1 | 15 A |
| 3 | 12 V socket, first row of seats, left | F 110/2 | 15 A |

Relays


| No. | Function | Relays |
|-----|--------------------------------------|--------|
| 4 | 12 V sockets in the rear compartment | K127 |

Pre-fuse box in the seat base of the right-hand front seat

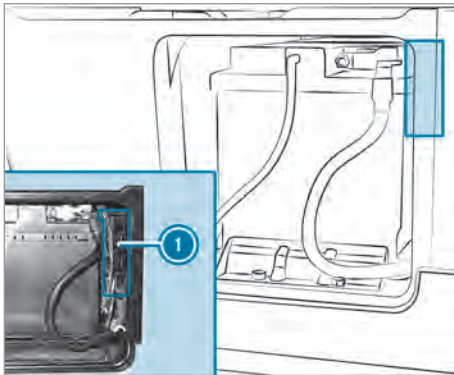

Pre-fuse box ① is located next to the starter battery in the seat base of the right-hand front seat. Always have the fuses in pre-fuse box ① replaced at a qualified specialist workshop.

Open battery compartment in the seat base of the right-hand front seat

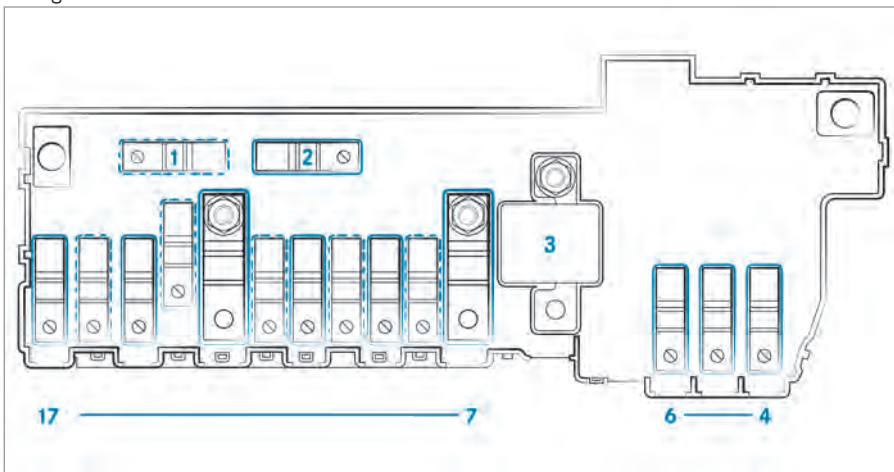


Fuses

| No. | Consumer | Fuse | Fuse rating |
|-----|--|------|-------------|
| 1 | Unassigned | A16 | - |
| 2 | Unassigned | A15 | - |
| 3 | Starter motor | A1 | Pyrofuse |
| 4 | Fuse box in the co-driver footwell on the A-pillar (PDC-F) | A8 | 150 A |
| 5 | Auxiliary battery | A12 | 150 A |

| No. | Consumer | Fuse | Fuse rating |
|-----|---|------|-------------|
| 6 | Control unit, pre-glow system | A2 | 100 A |
| 7 | Alternator | E2 | 350 A |
| 8 | Fan | A10 | 100 A |
| 9 | Air suspension compressor | A9 | 50 A |
| 10 | Fuse box in the engine compartment (PDC-E) | A7 | 150 A |
| 11 | Onboard Logic Unit | A14 | 40 A |
| 12 | Automatic transmission (NAG3) | A3 | 50 A |
| 13 | Fuse box in the co-driver footwell (PDC-P) | A6 | 250 A |
| 14 | CBC signal acquisition and actuation module | A13 | 40 A |
| 15 | ESP® 9.3 | A5 | 60 A |
| 16 | Electric steering | A11 | 100 A |
| 17 | Sockets in the rear compartment | A4 | 50 A |

Fuses at the back of the right seat base

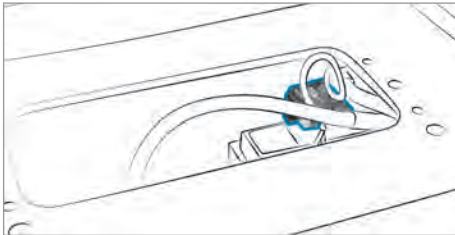

The fuse for the emergency P battery is on the side of the battery carrier.

Example: starter battery

Fuses

| No. | Consumer | Fuse | Fuse rating |
|-----|---|------|-------------|
| - | Support battery supply/emergency P battery supply, automatic transmission | F109 | 5 A |

Fuse box in the right seat base

9 way fuse box F55/2

| No. | Consumer | Fuse | Fuse rating |
|-----|-------------------------------------|------|-------------|
| - | Onboard Logic Unit, sensor | 10 | 10 A |
| - | Onboard Logic Unit; computing unit | 11 | 10 A |
| - | Onboard Logic Unit, connecting unit | 12 | 5 A |

22 Fuses in the seat base of the right-hand front seat

| No. | Consumer | Fuse | Fuse rating |
|-----|---|------|-------------|
| - | Unassigned | 13 | - |
| - | Unassigned | 14 | - |
| - | Unassigned | 15 | - |
| - | Unassigned | 16 | - |
| - | WVC starter battery charge (Marco Polo) | 17 | 25 A |
| - | Glass sliding sunroof (Marco Polo ACTIVITY/HORIZON) | 18 | 25 A |

F**Fuse box in the co-driver footwell**

| | |
|--------------------------|----|
| Fuse assignment..... | 9 |
| Opening and closing..... | 9 |
| Relay assignment..... | 14 |

Fuse box in the co-driver footwell on the A-pillar

| | |
|--------------------------|----|
| Fuse assignment..... | 16 |
| Opening and closing..... | 16 |
| Relay assignment..... | 18 |

Fuse box in the engine compartment

| | |
|--------------------------|---|
| Fuse assignment..... | 4 |
| Opening and closing..... | 4 |
| Relay assignment..... | 7 |

Fuse box in the rear compartment

| | |
|--------------------------|----|
| Fuses and relays..... | 19 |
| Opening and closing..... | 19 |

Fuse box in the right seat base..... 21**Fuses in the seat base of the right-hand front seat**

| | |
|---|----|
| Fuses at the back of the seat base..... | 21 |
| Fuses in the pre-fuse box..... | 20 |

N**Notes on fuses and relays..... 3****P****Preparing to replace a fuse..... 3**

