



# Sprinter MY2019 Emergency battery

Version 2/25/2019  
Mercedes-Benz Vans, LLC

Mercedes-Benz



# Notice

Mercedes-Benz USA, LLC does not warrant the accuracy of the information contained in this bulletin and reserves the right to modify or append this bulletin without prior notification. Mercedes-Benz disclaims all liability associated with the provision of this bulletin.

This bulletin is not intended to serve as a work instruction, but merely to provide some helpful information for upfitters to take into consideration before retrofitting or modifying a Mercedes-Benz or Freightliner Sprinter.

Prior to making any modification to or installing any equipment in or on a Mercedes-Benz or Freightliner Sprinter, you should review and insure compliance with all applicable laws and regulations, consult with Upfitter Management Vans for additional and updated information, and read the Body & Equipment Guidelines (BEG) for Sprinter Model Series 907.

## Upfitter Management Vans Contacts:

For information or upfitter inquiries  
please submit a request via our website:

[www.upfitterportal.com](http://www.upfitterportal.com)

# Sprinter MY2019 Disconnect main battery

In the needs to disconnect the main battery power, please ensure to do one of the following:

- Disconnect battery ground, shown in Picture 1
- Remove the battery connector pole, shown in Picture 2

If the main battery needs to be disconnected for more than an hour, please remove fuse 32 located in the driver fuse box, shown in Picture 3.



Note: If the above steps are not followed, the emergency battery will continue to provide power to the ignition unit.

Picture 1



OR

Picture 2

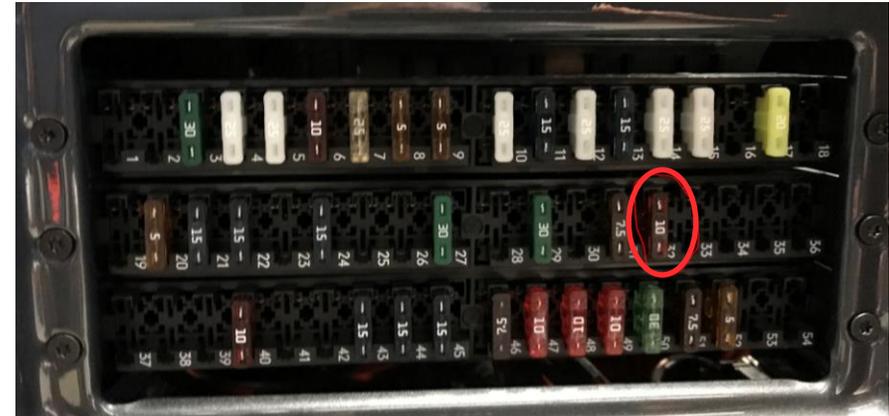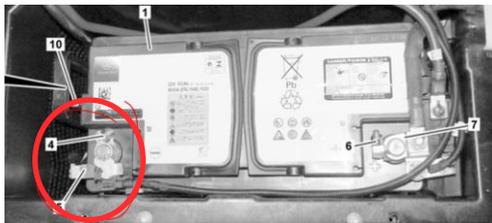

Picture 3

More information about removing or installing emergency battery is in WIS documents ar54.10-d-0120str