Your Operator's Manual



Vehicle document wallet in the vehicle
Here you can find information on operation, service work and the guarantee for your vehicle in printed form.



Order no. T907 0336 13 Part no. 907 584 97 08 Edition A-2022



# Sprinter

Operating Instructions

Mercedes-Benz



#### Co-driver's airbag warning





Airbag warning sticker for USA and Canada

**WARNING** Risk of injury or death if the codriver airbag is enabled

If the co-driver airbag is enabled, a child on the co-driver seat may be struck by the co-driver airbag during an accident.

NEVER use a rearward-facing child restraint system on a seat with an ENABLED FRONT AIRBAG; DEATH or SERIOUS INJURY to the CHILD can occur.

Observe the chapter "Children in the vehicle".

#### Publication details

#### Internet

Further information about Mercedes-Benz vehicles and about Mercedes-Benz AG can be found on the following websites:

https://www.mercedes-benz.com

https://www.mbusa.com (USA only)

https://www.mercedes-benz.ca (Canada only)

#### Documentation team

© Daimler VANS USA, LLC

<sup>®</sup> Mercedes-Benz AG: Not to be reprinted, translated or otherwise reproduced, in whole or in part, without written permission from Mercedes-Benz AG.

#### Vehicle manufacturer

Mercedes-Benz AG

Mercedesstraße 120

70372 Stuttgart

Germany

#### Vehicle dealers Daimler VANS USA, LLC

One Mercedes-Benz Drive

Sandy Springs, GA 30328

https://www.mbusa.com (USA only)

http://www.mbsprinterusa.com

Customer Assistance Center:

1-877-762-8267

#### Mercedes-Benz Canada, Inc.

98 Vanderhoof Avenue

Toronto, ON M4G 4C9

https://www.mercedes-benz.ca (Canada only)

Customer Relations Department:

1-800-387-0100

Daimler VANS USA, LLC and Mercedes-Benz Canada, Inc. are Daimler AG enterprises.

Canada only: "Authorized Sprinter Dealer" is defined as an authorized Mercedes-Benz Sprinter Dealer.

As at 04.12.20

#### Welcome to the world of Mercedes-Benz

Before you first drive off, read these Operating Instructions carefully and familiarize yourself with your vehicle. For your own safety and a longer vehicle life, follow the instructions and warning notices in these Operating Instructions. Disregarding them may result in damage to the vehicle or environment or in personal injury.

Vehicle damage caused by failure to observe the instructions is not covered by the New Vehicle Limited Warranty.

The standard equipment and product description of your vehicle may vary and depends on the following factors:

- Model
- Order
- · National version
- Availability

Mercedes-Benz reserves the right to introduce changes in:

- Design
- Equipment
- · Technical features

Therefore, the description may differ from your vehicle in some cases.

The following documents are integral parts of the vehicle:

- · Printed Operating Instructions
- · Maintenance Booklet
- Equipment-dependent supplements

Always keep these documents in the vehicle. If you sell the vehicle, always pass all documents on to the new owner.

Daimler VANS USA, LLC

Mercedes-Benz Canada, Inc.

A Daimler Company

9075849708

### 2 Contents

Symbols	. 4	Electrical step	59
		Side window	60 63
At a glance	. 6	•	
Cockpit		Coate and stayings	44
Instrument cluster		Seats and stowage	66
Overhead control panel	11	Notes on the correct driver's seat posi-	
Door control panel	16	tion	66
Emergencies and breakdowns	18	Seats	66
2		Steering wheel	78
		Stowage areas	78
General notes	20	Information about the bottle holder	79
Environmental protection	20	Cup holders	79
Mercedes-Benz Genuine Parts	20	Ashtray and cigarette lighter	
Notes about attachments, add-on		Sockets	80
equipment, installations and conver-		Wirelessly charging the mobile phone	
sions	21	and coupling with the exterior antenna	82
Operating Instructions	22	Installing or removing the floor mats	83
Service and vehicle operation	22	0 0	
Operating safety	23	Light and vision	84
Declarations of conformity and notes on	0.4	Exterior lighting	
driving in different countries	24	Adjusting the interior lighting	
Diagnostics connection	25	Changing bulbs	90
Notes on changes to the engine output	26	Windshield wipers	94
Qualified specialist workshop	26	Mirrors	
Vehicle registration	26		, 0
Correct use of the vehicle	27		
Multi-purpose vehicle	27	Climate control	98
Notes for persons with electronic medi-		Overview of climate control systems	-
cal aids	27	Operating climate control systems	99
Information on problems with your vehi-		Operating air vents	102
cle	27	Auxiliary heating	103
"Reporting safety defects"	27	Operating cargo compartment ventila-	100
Limited Warranty	28	tion	105
QR codes for rescue card	28	11011	103
Data storage	28		
Copyright	32	Driving and parking	106
Copyrigint	JZ	Driving	106
		Battery main switch	118
Occupant safety	33	Automatic transmission	119
Restraint system	33		
Seat belts	34	All-wheel drive	122
Airbags	37	Electronic level control	124
Automatic measures after an accident	39	Refueling	128
	39	Parking	135
Safely transporting children in the vehi-	20	Driving and driving safety systems	139
Cle	39	Work mode	163
Notes on pets in the vehicle	46	Trailer operation	163
Opening and closing	47	Instrument Display and on-board com-	
SmartKey	47	puter	169
Doors	49	Overview of Instrument Display	169
Sliding door	52	Overview of the buttons on the steering	107
Electric sliding door	53	wheel	170
Rear-end doors	56	Operating the on-board computer	170
Partition sliding door	58	operating the on-board computer	1/0

Overview of what is shown on the multi- function display	171 172 172
Mercedes me	176 176 178 179
MBUX multimedia system Overview and operation System settings Vehicle information Telephone Media Radio Sound	181 186 190 191 197 201 202
Transporting	203 203 204 204 206 206
Maintenance and care	<b>208</b> 208 208 216
Breakdown assistance  Emergency  Emergency Call System  Flat tire  Battery  Towing or tow-starting  Electrical fuses  Vehicle tool kit  Hydraulic jack	222 222 224 224 230 234 235 236
Wheels and tires	238
characteristics	238
and tires	238
tires	238 239 239 240

#### 4 Symbols

In these Operating Instructions, you will find the following symbols:

**DANGER** Danger due to not observing the warning notices

Warning notices draw your attention to hazards that may endanger your health or life, or the health or life of others.

Observe the warning notices.

ENVIRONMENTAL NOTE Environmental damage due to failure to observe environmental notes

Environmental notes include information on environmentally responsible behavior or environmentally responsible disposal.

Observe environmental notes.

I NOTE Damage to property due to failure to observe notes on material damage

Notes on material damage inform you of risks which may lead to your vehicle being damaged.

- Observe notes on material damage.
- These symbols indicate useful instructions or further information that could be helpful to you.

Instructions

(→ Further information on a topic page)


Display Display in the multifunction display/ media display

Highest menu level to be selected in the multimedia system

Corresponding submenus to be selected in the multimedia system

Indicates a cause



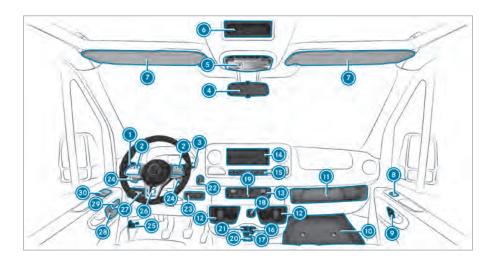

	Combination switch				12 V SOCKEL		80
	Turn signals	$\rightarrow$	85	17	230 V socket		
	High beam	$\rightarrow$	85		Opens and closes the electric	$\rightarrow$	53
	Windshield wipers	$\rightarrow$	94		sliding door		
	Rear window wiper	$\rightarrow$	95	19	Hazard warning light	$\rightarrow$	85
_	Steering-wheel buttons	$\rightarrow$	170	_	Vehicles with KEYLESS START: key slot	$\rightarrow$	107
3	DIRECT SELECT lever	$\rightarrow$	119	21	USB port	$\rightarrow$	78
4	Inside rearview mirror	$\rightarrow$	97	22	Start/stop button	$\rightarrow$	107
5	Overhead control panel	$\rightarrow$	87	23	Right-hand switch panel		
6	Device installation frame, e.g. for mounting a tachograph or the switch clock for the station-				Activates/deactivates all-wheel drive	$\rightarrow$	123
	ary heater				Engages/disengages LOW	$\rightarrow$	124
7	Sun visor				RANGE		
8	Front passenger window lifter	$\rightarrow$	60		Activates/deactivates DSR	$\rightarrow$	147
9	Central locking system	$\rightarrow$	50		Raises/lowers the vehicle level	$\rightarrow$	125
10	Storage compartment cover	$\rightarrow$	235		Engages/disengages power take-off		
1	Front passenger storage compartment or tachograph housing				Activates/deactivates working speed control (ADR)	$\rightarrow$	163
12	Cup holders				Activates/deactivates cargo	$\rightarrow$	105
13	Climate control system	$\rightarrow$	98		compartment ventilation		
14	MBUX multimedia system dis- play	$\rightarrow$	181		Activates/deactivates the beacon		
15	MBUX multimedia system control elements	$\rightarrow$	183	_	Steering wheel gearshift paddles	$\rightarrow$	121

#### At a glance - Cockpit


7

Opens the hood	$\rightarrow$	208	Adjusts the driver's seat	$\rightarrow$	68
Left-hand switch panel			Seat heating	$\rightarrow$	77
Sets the working speed (ADR)	$\rightarrow$	163	Central locking system	$\rightarrow$	50
Light switch			Driver's window lifter	$\rightarrow$	60
Headlamp range adjuster					



Instrument display (color display)		
1 Speedometer	$\rightarrow$	169
②   ☐  ☐  ☐  ☐  ☐  ☐  ☐  ☐  ☐  ☐  ☐  ☐  ☐	$\rightarrow$	305
3 A Distance warning	$\rightarrow$	311
Seat belt not fastened	$\rightarrow$	311
⑤ ♦ Turn signal lights	$\rightarrow$	85
6 Multifunction display	$\rightarrow$	305
Tire pressure loss warning lamp	$\rightarrow$	305
(3) Check Engine	$\rightarrow$	312
Preglow and malfunction in preglow system		
Tachometer	$\rightarrow$	169
(Canada) Parking brake applied (red)	$\rightarrow$	305
(Canada) Brakes (red)	$\rightarrow$	305

(3) Electrical malfunction	$\rightarrow$	312
Coolant temperature indicator and  coolant too hot	$\rightarrow$	312
(yellow) Electric parking brake	$\rightarrow$	305
Restraint system	$\rightarrow$	33
	$\rightarrow$	85
Low beam	$\rightarrow$	84
Parking lamps	$\rightarrow$	84
Fuel level indicator and fuel reserve with fuel filler cap location indicator	$\rightarrow$	312
Fog light	$\rightarrow$	84
	$\rightarrow$	84
3 Rrakes (yellow)	$\rightarrow$	305
ABS malfunction	$\rightarrow$	305
	$\rightarrow$	305

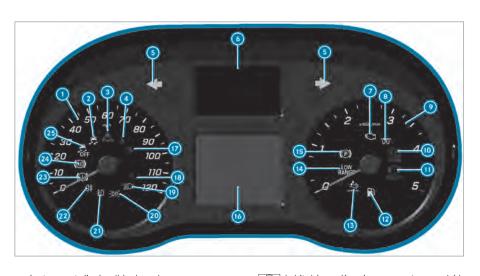


Instrument display (black and white display) with steering wheel buttons			(white) Lane Keeping Assist active and ready to issue warnings and (A) (red) Lane	$\rightarrow$	161
<ol> <li>Speedometer</li> </ol>	$\rightarrow$	169	Keeping Assist issuing a warn- ing		
② P ESP®	$\rightarrow$	305	Check Engine	$\rightarrow$	312
3 A Distance warning	$\rightarrow$	311	Preglow and malfunction		
4 Seat belt not fastened	$\rightarrow$	311	in preglow system		
⑤ ♦ Turn signal lights	$\rightarrow$	85	Tachometer		
<ul><li>Display of indicator and warning lamps</li></ul>			(Canada) Parking brake applied (red)	$\rightarrow$	305
At least one door is not completely closed			BRAKE and (①) (USA) or (①)     (Canada) Brakes (red)	<b>→</b>	305
(!) Tire pressure loss	$\rightarrow$	305	Reserve fuel	$\rightarrow$	312
<b>e</b> ! Electric power steering malfunction	$\rightarrow$	311	DEF supply low	$\rightarrow$	130
Electrical malfunction	$\rightarrow$	312	(4) RANGE active	$\rightarrow$	124
SOS emergency call system (Mercedes-Benz emergency			(yellow) (yellow)	$\rightarrow$	305
call system)			10 Multifunction display	$\rightarrow$	305
장물 Active Brake Assist switched off	$\rightarrow$	145	🕡 👺 Restraint system	$\rightarrow$	33
■OFF ATTENTION ASSIST	$\rightarrow$	158	⊞ High beam	$\rightarrow$	85
switched off				$\rightarrow$	84
Lane Keeping Assist inac-	$\rightarrow$	162	② → Parking lamps	$\rightarrow$	84
tive	<b>→</b>			$\rightarrow$	84
Highbeam Assist	<i>→</i>	86		$\rightarrow$	84

#### 10 At a glance - Instrument cluster

Brakes (yellow)	$\rightarrow$	305
ABS malfunction	$\rightarrow$	305
☑	$\rightarrow$	305

64

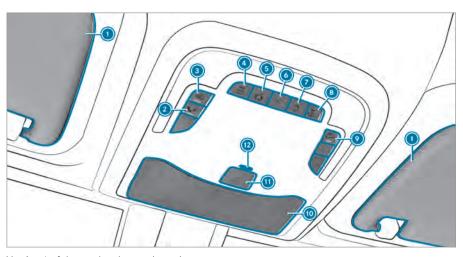

Version 1 of the overhead control panel

- 1 Sun visors
- Breakdown assistance call button (Mercedes PRO connect/ Mercedes me connect)
- (3) Activates/deactivates interior motion sensor

Activates/deactivates the bus interior lighting


- (5) Switches automatic light control on/off
- Switches the front interior lighting on/off

- Switches the rear interior lighting on/off
- 64 Switches the tow-away alarm on/off
  - Glasses compartment
  - (1) Sos Sos emergency call system
  - ATA indicator lamp

Version 2 of the overhead control panel


- Sun visors
- ② M Switches the left-hand reading light on/off
- Switches automatic light control on/off
- Switches the front interior lighting on/off
- Switches the rear interior lighting on/off
- Switches the right-hand reading light on/off

64

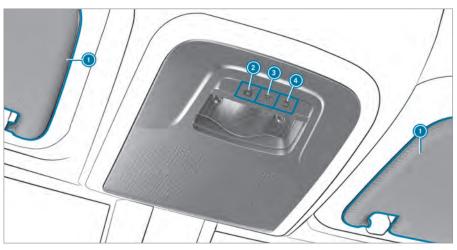

Version 3 of the overhead control panel


- Sun visors
- ② © Switches automatic light control on/off
- Switches the rear interior lighting on/off

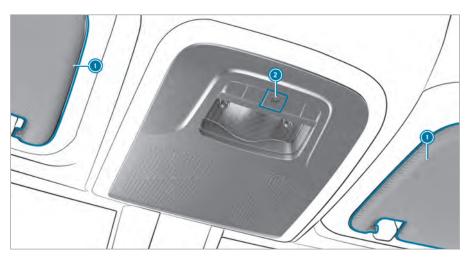

Version 4 of the overhead control panel

- ① Sun visors
- Switches the interior lighting on/off

87

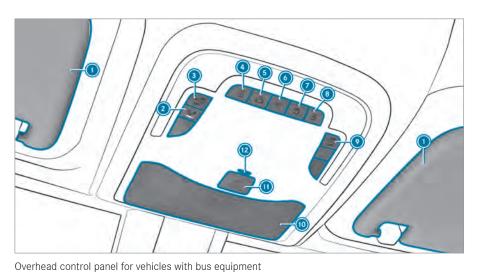

Sun visors
 Switches the front interior lighting on/off
 Switches the rear interior
 Switches the right-hand reading light on/off


reading light on/off

control on/off


Switches automatic light

Switches reading lights in the passenger compartment on/off

Glasses compartment

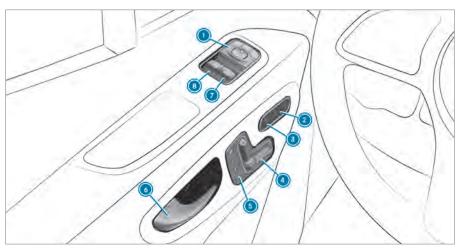


Door control panel of vehicles with e	lectrically	adjust	able seat		
<ul><li>To adjust the outside mirrors</li></ul>	$\rightarrow$	96 🥼	To operate the memory function	$\rightarrow$	71
② To unlock/lock the central lock-	$\rightarrow$	50 🥝	To open a door	$\rightarrow$	50
ing system		7	To open/close the right-hand	$\rightarrow$	60
To switch seat heating on/off	$\rightarrow$	77	side window		
<ul> <li>To adjust the front seats electronically</li> </ul>	$\rightarrow$	69 (8	To open/close the left-hand side window	$\rightarrow$	60

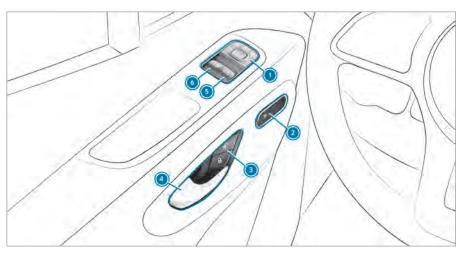

Door control panel of vehicles without electrically adjustable seat

To adjust the outside mirrors	$\rightarrow$	96
To switch seat heating on/off	$\rightarrow$	77
To unlock/lock the central locking system	$\rightarrow$	50
4 To open a door	$\rightarrow$	50


To open/close the right-hand side window  The side window	$\rightarrow$	60
To open/close the left-hand side window	$\rightarrow$	60

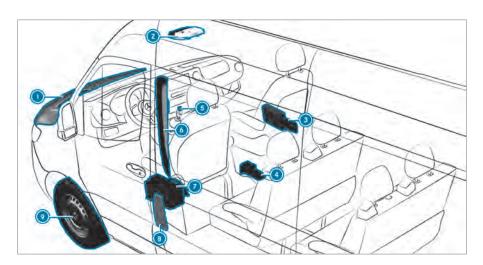

<ul><li>Checking and topping up operating fluids</li></ul>	$\rightarrow$	269
Starting assistance	$\rightarrow$	225
Buttons for the SOS emergency call system and roadside assis- tance	$\rightarrow$	223
3 Warning lamp	$\rightarrow$	222
Safety vest	$\rightarrow$	222
First-aid kit (soft sided)	$\rightarrow$	222
Vehicles with rear-wheel drive: hydraulic jack and tire-change	$\rightarrow$	236

tool kit

6 Hazard warning lights	$\rightarrow$	85
<ul> <li>QR code for accessing the rescue card</li> </ul>	$\rightarrow$	28
To disconnect the starter battery	$\rightarrow$	228
Tuel filler flap with instruction labels for tire pressure, fuel type and QR code for accessing the rescue card	$\rightarrow$	128
Flat tire	$\rightarrow$	224

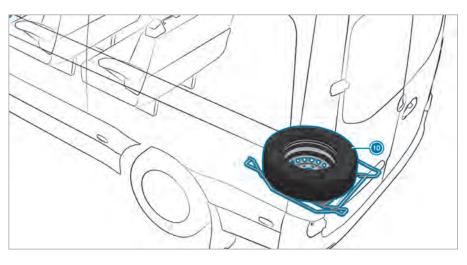

Spare wheel (example)

261

#### **Environmental protection**



**ENVIRONMENTAL NOTE** Environmental damage due to operating conditions and personal driving style

The pollutant emission of the vehicle is directly related to the vehicle's operation.

Operate your vehicle in an environmentally responsible manner to help protect the environment. Please observe the following recommendations on operating conditions and personal driving style.

#### Operating conditions:

- Make sure that the tire pressures are always correct.
- Do not transport any unnecessary weight (e.g. a roof rack which is no longer required).
- Observe the service intervals.
   A regularly serviced vehicle will contribute to environmental protection.
- Always have maintenance work carried out at a qualified specialist workshop.

#### Personal driving style:

- Do not depress the accelerator pedal when starting the engine.
- Do not warm up the engine while stationary.
- Drive carefully and maintain a sufficient distance to other vehicles.
- Avoid frequent, sudden acceleration and braking.
- Shift gears in good time and use each gear only up to ⅔ of its maximum engine speed.
- Switch off the engine when in stationary traffic for a prolonged time.
- Drive in a fuel-efficient manner. Pay attention to the ECO display for a fuelefficient driving style.

#### Environmental issues and recommendations

It is recommended to re-use and recycle substances instead of immediately disposing of them.

The relevant environmental guidelines and regulations serve to protect the environment and should be followed carefully.

#### Mercedes-Benz Genuine Parts



**ENVIRONMENTAL NOTE** Environmental damage due to not using recycled reconditioned components

Mercedes-Benz AG offers recycled reconditioned components and parts with the same quality as new parts. The same entitlement from the Limited Warranty is valid as for new parts.

- Use recycled reconditioned components and parts from Mercedes-Benz AG.
- NOTE The effectiveness of the restraint systems can be impaired by installing accessory parts, performing repairs or welding operations

Airbags, Emergency Tensioning Devices as well as control units and sensors for the restraint systems can be installed in the following areas of the vehicle:

- Door frames
- Roof frames
- Doors
- · Door pillars
- Door sills
- Seats
- Cockpit
- Instrument cluster
- Center console
- Do not install any accessories such as audio systems in these areas.
- Do not perform repairs or welding operations
- Have accessory parts installed at a qualified specialist workshop.

If you use parts, tires, wheels or safety-relevant accessories which have not been approved by Mercedes-Benz, the operating safety of the vehicle may be jeopardized. Safety-relevant systems, e.g. the brake system, may malfunction. Only use Mercedes-Benz Genuine Parts or parts of equal quality. Use only tires, wheels and accessories that are approved for your vehicle model.

Mercedes-Benz tests original parts, conversion parts and accessory parts that have been approved for your vehicle model for reliability, safety and suitability. Despite ongoing market research, we are unable to assess other parts. We therefore accept no responsibility for the use of such parts in Mercedes-Benz vehicles, even if they have been officially approved or independently approved by a testing center.

In some other countries, certain parts are only officially approved for installation or modification if they comply with legal requirements. All Mercedes-Benz Genuine Parts satisfy these requirements. Make sure that all parts are suitable for your vehicle.

Always specify the vehicle identification number (VIN) and the engine number when ordering Mercedes-Benz Genuine Parts (→ page 267).

### Notes about attachments, add-on equipment, installations and conversions

#### Notes on body/equipment mounting directives

For safety reasons, have add-on equipment produced and installed in accordance with the valid Mercedes-Benz body/equipment mounting directives. These body/equipment mounting directives ensure that the chassis and add-on equipment form one unit and that the greatest possible level of operational and driving safety is achieved.

Both vehicle manufacturers and body manufacturers must always ensure that the products they manufacture come into circulation only in a safe state and do not pose any risks to people. Otherwise, there may be consequences under civil, criminal or public law. All manufacturers are responsible for the products that they have manufactured. Manufacturers of attachments, add-on equipment, installations and conversions must guarantee compliance with Directive 2001/95/EC on general product safety.

Mercedes-Benz recommends the following procedure for safety reasons:

- · Do not make any other changes to the vehicle.
- Obtain approval from the dealer named on the inside title page in the event of deviations from the approved body/equipment mounting directives.

Acceptance tests performed by public test bodies or official approvals do not rule out safety risks.

Observe the information about Mercedes-Benz Genuine Parts ( $\rightarrow$  page 20).

i You can obtain further information at a qualified specialist workshop.

#### A

**WARNING** Risk of accident and injury in the event of improper conversions or changes to the vehicle

Conversions or changes to the vehicle can prevent systems or components from functioning properly and/or jeopardize the vehicle's operational safety.

Always have conversions or changes to the vehicle carried out at a qualified workshop.

If you intend to make changes to your vehicle, Mercedes-Benz strongly recommends that you contact the dealer. They will give you all the information you need. There may be a charge for this service.

If body manufacturers and dealers make modifications that affect the final inspection of the engine, vehicle or equipment, they must accept sole responsibility for the vehicle. This also applies to marking and documenting the vehicle parts affected by the changes that they make.

You are responsible for ensuring and providing evidence that the following conditions are met:

- The vehicle complies with all relevant standards and regulations that are affected by the modification.
- The modified vehicle still meets the vehicle safety standards and emissions laws and regulations
- The modification does not impair the safety of the vehicle.

Mercedes-Benz is not responsible for the final inspection, product liability or warranty claims resulting from modification. This applies to the following points:

- The modified components or systems
- The resultant violation of emissions laws and regulations or vehicle safety standards
- All consequences resulting from the modified, less safe or even faulty vehicle

Mercedes-Benz accepts no responsibility as final manufacturer or for the resultant product liability.

#### Notes on the radiator

Even seemingly minor changes to the vehicle, such as attaching a radiator grille in winter, are not permitted. Do not cover the radiator. Do not use any thermal mats, insect protection covers etc.

Otherwise, the values of the vehicle's diagnostic system will be distorted. Some of these values are prescribed by law and must be correct at all times.

#### Notes on the cargo compartment floor

The factory equips the vehicle with a wooden or plastic cargo compartment floor; this is an integral part of the vehicle structure. If you have the cargo compartment floor removed, the vehicle body may be damaged. Load securing will then be impaired and the maximum loading capacity of the tie-down points will no longer be guaranteed. Therefore, do not have the cargo compartment floor removed.

#### Notes on the partition

Without a partition, vehicles that are approved as commercial vehicles (N1, N2) do not fulfill ISO 27956, which describes the equipment for properly securing a load in delivery vehicles. If the vehicle is used to transport goods, retrofitting the partition is strongly recommended, as properly securing the load in vehicles without a partition will always be a complex operation.

#### Operating Instructions

These Operating Instructions describe all models, as well as standard and optional equipment of your vehicle that was available at the time of going to press. Country-specific differences are possible. Note that your vehicle may not be equipped with all functions described. This is also the case for systems and functions relevant to safety. Therefore, the equipment on your vehicle may differ from that in the descriptions and illustrations.

The original purchase agreement documentation for your vehicle contains a list of all the systems in your vehicle.

Should you have any questions concerning equipment and operation, consult an authorized Mercedes-Benz Center.

The Operating Instructions and Maintenance Booklet are important documents and should be kept in the vehicle.

### Note on vehicles which are equipped by body manufacturers

Always observe the body manufacturer's Operating Instructions. You could otherwise fail to recognize dangers.

#### Service and vehicle operation

#### Warranty

The Limited Warranty for your vehicle is in accordance with the warranty terms and conditions in the Service and Warranty Information booklet.

Your authorized Mercedes-Benz Center will replace and repair all factory-installed parts in accordance with the terms of the following warranty terms and conditions:

- · New Vehicle Limited Warranty
- Exhaust System Warranty
- Emission Systems Warranty
- California, Connecticut, Maine, Massachusetts, New York, Pennsylvania, Rhode Island and Vermont Emission Control System Warranty
- State Warranty Enforcement Laws ("Lemon Laws")

Replacement parts and accessories are covered by the Mercedes-Benz Parts and Accessories Warranties

These are available at any authorized Mercedes-Benz Center.

(i) Should you lose your Service and Warranty Information booklet, have an authorized Mercedes-Benz Center arrange for a replacement. The new Service and Warranty Information booklet will be posted to you.

#### Vehicle operation outside the USA or Canada

When you are traveling abroad with your vehicle, observe the following points:

- service points or replacement parts may not be available immediately.
- unleaded fuel for vehicles with a catalytic converter may not be available. Leaded fuel can cause damage to the catalytic converter.
- the fuel may have a considerably lower octane number. Unsuitable fuel can cause engine damage.

Certain Mercedes-Benz models are available in Europe through the European Delivery Program.

For more information, please consult an authorized Mercedes-Benz Center, or write to one of the following addresses:

#### In the USA:

Daimler VANS USA, LLC European Delivery Department One Mercedes-Benz Drive Sandy Springs, GA 30328

#### In Canada:

Mercedes-Benz Canada, Inc. European Delivery Department 98 Vanderhoof Avenue Toronto, Ontario M4G 4C9

#### Maintenance information

Your customer service advisor will record every service for you in the Service and Warranty Information booklet.

#### Information on Roadside Assistance

Roadside Assistance offers technical help in the event of a breakdown. Your calls to the toll-free Roadside Assistance Hotline are answered by our agents 24 hours a day, 365 days a year.

1-877-762-8267 (USA)

1-800-387-0100 (Canada)

You can find further information in the Roadside Assistance brochure (USA) or the "Roadside Assistance" section in the Service and Warranty booklet (Canada). You will find both in the vehicle document wallet.

#### Information on changing address or owner

In the event of a change of address, please send us the "Notification of Address Change" in the Service and Warranty Information booklet or simply call the Customer Assistance Center (USA) at the hotline number 1-877-762-8267 or Customer Service (Canada) at 1-800-387-0100. This way, if necessary, we can reach you in a timely fashion.

If you sell your Mercedes, please leave the entire literature in the vehicle so that it is available to the next owner. If you have purchased a used vehicle, please send us the "Notice of Purchase of Used Car" in the Service and Warranty Information booklet or call the Customer Assistance Center (USA) at the hotline number 1-877-762-8267 or Customer Service (Canada) at 1-800-387-0100.

### Possible danger due to substances hazardous to health

In compliance with Proposition 65 ("Prop65"), the following detachable label has been added to each vehicle sold in California:



#### WARNING



Operating, servicing and maintaining a passenger vehicle, pickup truck, van or off-road motor vehicle can expose you to chemicals including engine exhaust, carbon monoxide, phthalates, and lead, which are known to the State of California to cause cancer and birth defects or other reproductive harm. To minimize exposure, avoid breathing exhaust, do not title the engine except as necessary, service your vehicle in a well-ventilated area and wear gloves or wash your hands frequently when servicing your vehicle. For more information go to www.P65Warnings.ca.gov/passenger-vehicle.

#### Operating safety



**WARNING** Risk of accident due to malfunctions or system failures

To avoid malfunctions or system failures:

Always have the prescribed service and maintenance work as well any required repairs carried out at a qualified specialist workshop.



**WARNING** Risk of accident or injury due to incorrect modifications on electronic component parts

Modification of electronic components, their software or wiring could impair their function and/or the function of other networked component parts or safety-relevant systems.

This can endanger the operating safety of the vehicle.

- Never tamper with the wiring and electronic component parts or their software.
- You should have all work on electrical and electronic components carried out at a qualified specialist workshop.

Observe the "Vehicle electronics" section in "Technical data".



WARNING Risk of fire due to flammable materials on hot parts of the exhaust system

Flammable material such as leaves, grass or twigs may ignite if they come into contact with hot parts of the exhaust system.

- When driving on unpaved roads or offroad, regularly check the vehicle underside
- Remove trapped plants or other flammable material, in particular.

- If there is damage, consult a qualified specialist workshop immediately.
- NOTE Damage to the vehicle due to driving too fast and due to impacts to the vehicle underbody or suspension components

In the following situations, in particular, there is a risk of damage to the vehicle:

- The vehicle becomes grounded, e.g. on a high curb or an unpaved road
- The vehicle is driven too fast over an obstacle, e.g. a curb, speed bump or pothole
- A heavy object strikes the underbody or suspension components

In situations such as these, damage to the body, underbody, suspension components, wheels or tires may not be visible. Components damaged in this way can unexpectedly fail or, in the case of an accident, may no longer absorb the resulting force as intended.

If the underbody paneling is damaged, flammable materials such as leaves, grass or twigs can collect between the underbody and the underbody paneling. These materials may ignite if they come into contact with hot parts of the exhaust system.

 Have the vehicle checked and repaired immediately at a qualified specialist workshop.

or

If driving safety is impaired while continuing your journey, pull over and stop the vehicle immediately, while paying attention to road and traffic conditions, and contact a qualified specialist workshop.

Declarations of conformity and notes on driving in different countries

Radio operating permits for the roof antenna

#### Radio equipment approval number 920508A

Radio equipment approval number 320000A		
Country	Radio equipment approval information	
Ukraine	<b>(</b>	
	Supplier number: 16833352	

#### Radio equipment approval number 920508B

Country	Radio equipment approval information
Ukraine	<b>€</b>
	Supplier number: 16833352

#### Radio operating permit for wireless central locking

#### Radio equipment approval numbers 920510A

Country	Radio equipment approval information
Indonesia	60598/SDPPI/2019 Supplier number: 16833352 Radio frequency: 433.47 - 434.37 MHz
Pakistan	Approved by PTA TAC No. 9.287/2020
Serbia	И005 20
Vietnam	C0290181218AF04A2 Supplier number: 16833352 Radio frequency: 433.47 -

434.37 MHz

#### Radio operating permit for head unit

#### Radio equipment approval numbers for Connect 5

#### Country

### Radio equipment approval information

Indonesia

61671/SDPPI/2019/7163



Dilarang melakukan perubahan spesifikasi yang dapat menimbulkan gangguan fisik dan/atau elektromagnetik terhadap lingkungan sekitarnya



#### Radio operating permit of transmitter key

Radio equipment approval number DC12B and DC12K

#### Country

### Radio equipment approval information

Serbia

AA

DC12B: И005 20 20 P1620124700

DC12K: И005 20 P1620124800

#### vehicle installed radio components



USA: "The wireless devices of this vehicle comply with Part 15 of the FCC Rules. Operation is subject to the following two conditions: 1) These devices may not cause harmful interference, and 2) These devices must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment."

Kanada: "The wireless devices of this vehicle comply with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) These devices may not cause

interference, and (2) These devices must accept any interference, including interference that may cause undesired operation of the device".

USA: "Wireless charging system for mobile devices (Model: WMI2 Wireless Mobile Interface): This Device complies with Part 18 of the FCC Rules."

The name and address of the responsible party is: peiker acustic GmbH

Max-Planck-Str. 28-32 61381 Friedrichsdorf

Germany

#### Diagnostics connection

The diagnostics connection is a technical interface in the vehicle. It is used, for example, in the context of repair and maintenance work or for reading out vehicle data by a specialist workshop. Diagnostic devices should therefore only be connected by a qualified specialist workshop.

**WARNING** Risk of accident due to connecting devices to the diagnostics connection

If you connect devices to the diagnostics connection of the vehicle, the function of vehicle systems and operating safety may be impaired.

For safety reasons, we recommend that you only use and connect products approved by your authorized Mercedes-Benz Center.

**WARNING** Risk of accident due to objects in the driver's footwell

Objects in the driver's footwell may impede pedal travel or block a depressed pedal.


This jeopardizes the operating and road safety of the vehicle.

- Stow all objects in the vehicle securely so that they cannot get into the driver's footwell.
- Always install the floor mats securely and as prescribed in order to ensure that there is always sufficient room for the pedals.
- Do not use loose floor mats and do not place floor mats on top of one another.

 NOTE Battery discharging from using devices connected to the diagnostics connection

Using devices at the diagnostics connection drains the battery.

- Check the charge level of the battery.
- If the charge level is low, charge the battery, e.g. by driving a considerable distance.

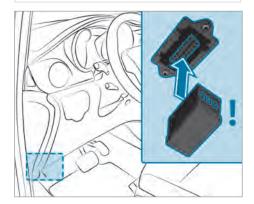

The connection and use of another device on the diagnostics connection can have the following effects:

- · Malfunctions in the vehicle system
- · Permanent damage to vehicle components

Please refer to the warranty terms and conditions regarding this.

In addition, connecting equipment to the diagnostics connection can lead to emissions monitoring information being reset, for example. This may lead to the vehicle failing to meet the requirements of the next emissions inspection during the main inspection.

#### Notes on changes to the engine output

Output increases can:

- · Change the emission values.
- · Lead to malfunctions.
- Result in consequential damage.

The operating safety of the engine is not guaranteed in all situations.

Any tampering with the engine management in order to increase the engine output will lead to the

loss of the New Vehicle Limited Warranty and other warranty entitlements.

If you sell the vehicle, inform the buyer of any alterations to the vehicle's engine output. This may constitute a punishable offense under national legislation.

#### Qualified specialist workshop

A qualified specialist workshop has the necessary special skills, tools and qualifications to correctly carry out any necessary work on your vehicle. This particularly applies to work relevant to safety.

Always have the following work on the vehicle carried out at a qualified specialist workshop:

- · Safety-relevant works
- · Service and maintenance work
- · Repair work
- Modifications as well as installations and conversions
- · Work on electronic components

Mercedes-Benz recommends that you use an authorized Mercedes-Benz Center for this purpose.

#### Vehicle registration

Mercedes-Benz may ask its service center to carry out technical inspections on certain vehicles. The quality or safety of the vehicle is improved as a result of the inspection.

Mercedes-Benz can only inform you about vehicle checks if it Mercedes-Benz has your registration data.

In the following cases your vehicle may not be registered to you yet:

- you did not purchase your vehicle at an authorised specialist dealer.
- your vehicle has not yet been inspected at an authorized Mercedes-Benz Center.

It is advisable to register your vehicle with an authorized Mercedes-Benz Center.

Inform Mercedes-Benz as soon as possible about any change in address or vehicle ownership.

You can do this, for example, at an authorized Mercedes-Benz Center.

#### Correct use of the vehicle

If you remove warning stickers, others may fail to recognize the dangers. Leave warning stickers in position.

Observe the following information in particular when operating the vehicle:

- Safety notes in these Operating Instructions
- · Technical data for the vehicle
- · Traffic rules and regulations
- Laws pertaining to motor vehicles and safety standards

#### Multi-purpose vehicle

**WARNING** Risk of accident when the center of gravity is too high

The vehicle may start to skid and rollover in the event of sudden steering maneuvers and/or when the vehicle's speed is not adapted to the road conditions.

Always adapt your speed and driving style to the vehicle's driving characteristics and to the prevailing road and weather conditions.

Utility vehicles have a significantly higher rollover rate than other types of vehicles.

Unsafe operation of the vehicle can result in an accident or rollover, as well as serious or even fatal injuries.

In a rollover crash, an unbelted person is significantly more likely to die than a person wearing a seat belt.

You and all vehicle occupants should always wear seat belts.

#### Notes for persons with electronic medical aids

Despite careful development, Mercedes-Benz AG cannot completely rule out the interaction of vehicle systems with electronic medical aids such as cardiac pacemakers.

In addition, there are components built into the vehicle that, regardless of the operating status of your vehicle, can generate magnetic fields on a par with permanent magnets. These fields can be found, for example, in the area around the multimedia and sound system or also in the seating area, depending on the vehicle equipment.

For this reason, the following can occur in isolated cases, depending on the aids used:

- · Medical aids malfunctioning
- · Adverse health effects

Observe the notes and warnings of the manufacturer of the medical aids; if in doubt, contact the device manufacturer and/or your doctor. If there is continuing uncertainty concerning the possibility of medical aids malfunctioning, Mercedes-Benz AG recommends using only a few electrical vehicle systems and/or maintaining an appropriate distance from the components.

Only have repairs and maintenance work in the area of the following components carried out by a qualified specialist workshop:

- · Vehicle components carrying live voltage
- · Transmission antenna
- Multimedia system and sound system

If you have any queries or suggestions, consult a qualified specialist workshop.

#### Information on problems with your vehicle

If you should experience a problem with your vehicle, particularly one that you believe may affect its safe operation, we urge you to contact an authorized Mercedes-Benz Center immediately to have the problem diagnosed and rectified.

If the problem is not resolved to your satisfaction, please contact an authorized Mercedes-Benz Center again or write to one of the following addresses.

#### In the USA:

Daimler VANS USA, LLC Customer Assistance Center One Mercedes-Benz Drive Sandy Springs, GA 30328

#### In Canada:

Mercedes-Benz Canada, Inc. Customer Relations Department 98 Vanderhoof Avenue Toronto, Ontario M4G 4C9

#### "Reporting safety defects"

#### USA only:

The following text is published as required of manufacturers under Title 49, Code of U.S. Federal

Regulations, Part 575 pursuant to the "National Traffic and Motor Vehicle Safety Act of 1966".

If you believe that your vehicle has a defect which could cause a crash or could cause injury or death, you should immediately inform the National Highway Traffic Safety Administration (NHTSA) in addition to notifying Mercedes-Benz USA, LLC.

If NHTSA receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However, NHTSA cannot become involved in individual problems between you, your dealer, or Mercedes\-Benz USA, LLC.

Für Übersetzung: To contact NHTSA, you may call the Vehicle Safety Hotline toll-free at 1-888-327-4236 (TTY: 1-800-424-9153); go to https://www.safercar.gov; or write to: Administrator, NHTSA, 400 Seventh Street, SW., Washington,

You can find more information on vehicle safety at: https://www.safercar.gov

#### Canada only:

DC 20590, USA.

The following text is published as required of manufacturers under subsection 18.4 (4) of the Motor Vehicle Safety Regulations.

If you believe that your vehicle has a defect which could cause a crash or could cause injury or death, you should immediately inform Transport Canada in addition to notifying Mercedes-Benz Canada Inc.

If Transport Canada received similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However, Transport Canada cannot become involved in individual problems between you, your dealer, or Mercedes-Benz Canada Inc.

To contact Transport Canada, you may call the Defect Investigations and Recalls Division toll-free in Canada at 1-800-333-0510 or 819-994-3328 in the Gatineau-Ottawa area or internationally; may also go to the following websites for more information:

English: www.tc.gc.ca/recallsFrench: www.tc.gc.ca/rappels

#### **Limited Warranty**

!

**NOTE** Damage to the vehicle arising from violation of these operating instructions.

Damage to the vehicle can arise from violation of these operating instructions.

Such damage is not covered by either the Limited Warranty or the new or used-vehicle warranty.

Observe the instructions in these operating instructions on proper operation of your vehicle as well as regarding possible vehicle damage.

#### QR codes for rescue card

The QR code stickers are affixed to the B-pillar on the driver's and co-driver's side. In the event of an accident, emergency services can use the QR code to quickly determine the corresponding rescue card for your vehicle. The current rescue card contains, in compact form, the most important information about your vehicle e.g. the routing of electric cables.

Further information can be obtained at https://www.mercedes-benz.de/gr-code.

#### Data storage

#### Data processing in the vehicle

#### Electronic control units

Electronic control units are installed in your vehicle. Control units process data which, for example, they receive from vehicle sensors, generate themselves or exchange between themselves. Some control units are required for the safe operation of your vehicle, some assist you when driving, such as driver assistance systems, while others enable comfort or infotainment functions.

The following provides you with general information regarding data processing in the vehicle. Additional information regarding exactly which data in your vehicle are collected, saved and transmitted to third parties, and for what purpose, can be found in the information directly related to the functional characteristics in question in their respective operating instructions. This information is also available online and, depending on the vehicle equipment, digitally.

#### Personal data

Every vehicle is identified by a unique vehicle identification number. Depending on the country, this vehicle identification number can be used by, for example, governmental authorities to determine the identity of the owner. There are other possibilities for using data collected from the vehicle to identify the owner or driver, such as the license plate number.

Therefore, data generated or processed by control units may be attributable to a person or, under certain conditions, become attributable to a person. Depending on which vehicle data are available, it may be possible to make inferences about, for example, your driving behavior, your location, your route or your use patterns.

### Legal requirements regarding the disclosure of data

If legally required to do so, manufacturers are, in individual cases, legally obliged to provide governmental entities, upon request and to the extent required, data stored by the manufacturer. For example, this may be the case during the investigation of a criminal offense.

Governmental entities are themselves, in individual cases and within the applicable legal framework, authorized to read out data from the vehicle. In the case of an accident, information that can help with an investigation can, therefore, be taken from the airbag control unit, for example.

#### Operational data in the vehicle

This is data regarding the operation of the vehicle, which have been processed by control units.

This includes the following data, for example:

- Vehicle status information such as the speed, longitudinal acceleration, lateral acceleration, number of wheel revolutions or the fastened seat belts display
- Ambient conditions, such as temperature, rain sensor or distance sensor

Generally, these are volatile data and will not be stored beyond the period of operation but will only be processed within the vehicle itself. Control units, vehicle keys for example, often contain data memories. Their use permits the temporary or permanent documentation of technical information about the vehicle's operating state, component loads, maintenance requirements and technical events or malfunctions.

Depending on the technical equipment, the following data are stored:

- Operating status of system components, such as fill levels, tire pressure or battery status
- Malfunctions or faults in important system components, such as lights or brakes
- System reactions in special driving situations, such as airbag deployment or the intervention of stability control systems
- Information on events in which the vehicle is damaged

In certain cases, it may be required to store data that would have otherwise been temporary. This may be the case if the vehicle has detected a malfunction, for example.

If you use services, such as repair services and maintenance work, stored operational data as well as the vehicle identification number can be read out and used. They can be read out by service network employees, such as workshops and manufacturers or third parties, such as breakdown services. The same is true in the case of warranty claims and quality assurance measures.

In general, the readout is performed via the legally prescribed port for the diagnostics connection in the vehicle. The operational data that are read out document technical states of the vehicle or of individual components and assist in the diagnosis of malfunctions, compliance with warranty obligations and quality improvement. To that end, these data, in particular information about component loads, technical events, malfunctions and other malfunctions may be transmitted along with the vehicle identification number to the manufacturer. In addition, the manufacturer is subject to product liability. For this reason, the manufacturer also uses operational data from the vehicle, for example, for recalls. These data can also be used to examine the customer's warranty and guarantee claims.

Malfunction memories in the vehicle can be reset by a service outlet or at your request as part of repair or maintenance work.

#### Convenience and infotainment functions

You can store convenience settings and individual settings in the vehicle and change or reset them at any time.

Depending on the vehicle equipment, this includes the following settings, for example:

- Seat and steering wheel positions
- Suspension and climate control settings
- Individual settings, such as interior lighting

Depending on the selected equipment, you can import data into vehicle infotainment functions yourself.

Depending on the vehicle equipment, this includes the following data, for example:

- · Multimedia data, such as music, films or photos for playback in an integrated multimedia system
- Address book data for use in an integrated hands-free system or an integrated navigation system
- Entered navigation destinations
- Data on the use of Internet services

These data for convenience and infotainment functions may be saved locally in the vehicle or they may be located on a device which you have connected to the vehicle, such as a smartphone, USB flash drive or MP3 player. If you have entered these data yourself, you can delete them at any time.

This data is transmitted from the vehicle to third parties only at your request. This applies, in particular, when you use online services in accordance with the settings that you have selected.

#### Smartphone integration (e.g. Android Auto or Apple CarPlay®)

If your vehicle is equipped appropriately, you can connect your smartphone or another mobile end device to the vehicle. You can then control them by means of the control elements integrated in the vehicle. The smartphone's picture and sound can be output via the multimedia system. Simultaneously, specific items of information are transferred to your smartphone. Depending on the type of integration, this includes position data, day/night mode and other general vehicle statuses. For more information, please consult the vehicle Operating Instructions/infotainment system.

This integration allows the use of selected smartphone apps, such as navigation or music player apps. There is no additional interaction between the smartphone and the vehicle, particularly active access to vehicle data. The type of additional data processing is determined by the provider of the app being used. Which settings you can make, if

any, depends on the specific app and the operating system of your smartphone.

#### Online services

#### Wireless network connection

If your vehicle has a wireless network connection, data can be exchanged between your vehicle and other systems. The wireless network connection is made possible by the vehicle's own transmitter and receiver or by a mobile end device that you have brought into the vehicle, for example, a smartphone. Online functions can be used via this wireless network connection. This includes online services and applications/apps provided to you by the manufacturer or by other providers.

#### Manufacturer's own services

Regarding the manufacturer's online services, the individual functions are described by the manufacturer in a suitable place, for example, in the Operating Instructions or on the manufacturer's website, where the relevant data protection information is also given. Personal identification data may be used to provide online services. Data is exchanged via a secure connection, e.g. the manufacturer's designated IT systems. Any personal data which are collected, processed and used, other than for the provision of services, is done so exclusively on the basis of legal permission. This is the case, for example, for a legally prescribed emergency call system, a contractual agreement or when consent has been given.

You can have services and functions, some of which are subject to a fee, activated or deactivated. This excludes legally prescribed functions and services, such as an emergency call system.

#### Services of third parties

If you use online services from other providers (third parties), these services are the responsibility of the provider in question and subject to that provider's data protection conditions and terms of use. As a general rule, the manufacturer has no influence on the content exchanged.

For this reason, when services are provided by third parties, please ask the service provider in question for information about the type, extent and purpose of the collection and use of personal data.

#### Onboard Logic Unit (OLU)

The Onboard Logic Unit (OLU) is available to commercial customers.

It contains control units, including antennas for connection via wireless networks, that permit the exchange of data between your vehicle and other systems. The control units can be used in conjunction with service provided by a third party. Under certain circumstances, these services may alter the basic configuration of the vehicle and could affect the performance of certain vehicle functions

For further information about specific services, read the operating instructions of the third-party provider. For further information about the Onboard Logic Unit, consult an authorized Mercedes-Benz Center.

If you, yourself, do not own and are not responsible for the vehicle, you may not know the current status of the Onboard Logic Unit. For further information concerning the services which are currently active, including any data which may be being processed as defined by the GDPR, please contact the person responsible for the vehicle.

#### Data protection rights

Depending on your country or the equipment and range of functions of your vehicle as well as the services you use and the services on offer, you are entitled to different data protection rights. Further information on data protection and your data protection rights can either be found on the manufacturer's website or you will receive this information as part of the various services and service offers. There, you will also find the contact information for the manufacturer and its data protection officer.

At a workshop, for example, with the support of a specialist and possibly for a fee, you can have data read out which is stored only locally in the vehicle.

#### **Event Data Recorders**

#### USA only:

This vehicle is equipped with an event data recorder (EDR). The main purpose of an EDR is to record, in certain crash or near crash-like situations, such as an air bag deployment or hitting a road obstacle, data that will assist in understanding how a vehicle's systems performed. The EDR is designed to record data related to vehicle dynamics and safety systems for a short period of time, typically 30 seconds or less.

The EDR in this vehicle is designed to record such data as:

- How various systems in your vehicle were operating;
- Whether or not the driver and passenger safety belts were buckled/fastened;
- How far (if at all) the driver was depressing the accelerator and/or brake pedal; and,
- · How fast the vehicle was traveling.

These data can help provide a better understanding of the circumstances in which crashes and injuries occur. NOTE: EDR data are recorded by your vehicle only if a non-trivial crash situation occurs; no data are recorded by the EDR under normal driving conditions and no personal data (e.g. name, gender, age and crash location) are recorded. However, other parties such as law enforcement could combine the EDR data with the type of personally identifying data routinely acquired during a crash investigation.

Access to the vehicle and/or the EDR is needed to read data that is recorded by an EDR, and special equipment is required. In addition to the vehicle manufacturer, other parties that have the special equipment, such as law enforcement, can read the information by accessing the vehicle or the EDR.

EDR data may be used in civil and criminal matters as a tool in accident reconstruction, accident claims and vehicle safety. Since the Crash Data Retrieval CDR tool that is used to extract data from the EDR is commercially available, Daimler Vans USA, LLC ("DVUSA") expressly disclaims any and all liability arising from the extraction of this information by unauthorized Mercedes-Benz personnel.

DVUSA will not share EDR data with others without the consent of the vehicle owners or, if the vehicle is leased, without the consent of the lessee. Exceptions to this representation include responses to subpoenas by law enforcement; by federal, state or local government; in connection with or arising out of litigation involving DVUSA or its subsidiaries and affiliates; or, as required by law.

Warning: The EDR is a component of the Restraint System Module. Tampering with, altering, modifying or removing the EDR component may result in a malfunction of the Restraint System Module and other systems.

State laws or regulations regarding EDRs that conflict with federal regulation are pre-empted. This means that in the event of such conflict, the federal regulation governs. As of December 2016, 17 states have enacted laws relating to EDRs.

#### Copyright

#### Information on free and open-source software

Information on license for free and open-source software used in your vehicle can be found on the data storage medium in your vehicle document wallet and with updates on the following website: https://www.mercedes-benz.com/opensource.

#### Information on registered trademarks

- Bluetooth® is a registered trademark of Bluetooth SIG Inc.
- DTS™ is a registered trademark of DTS, Inc.
- Dolby® and MLP™ are registered trademarks of DOLBY Laboratories.
- ESP® and PRE-SAFE® are registered trademarks of Daimler AG.
- HomeLink<sup>®</sup> is a registered trademark of Gentex Corporation.
- iPod® and iTunes® are registered trademarks of Apple Inc.
- Burmester<sup>®</sup> is a registered trademark of Burmester Audiosysteme GmbH.
- Microsoft® and Windows Media® are registered trademarks of Microsoft Corporation.
- SIRIUS<sup>®</sup> is a registered trademark of Sirius XM Radio Inc.
- HD Radio<sup>™</sup> is a registered trademark of iBiquity Digital Corporation.
- Gracenote<sup>®</sup> is a registered trademark of Gracenote, Inc.
- ZAGAT Survey<sup>®</sup> and related brands are registered trademarks of Zagat Survey, LLC.

#### Restraint system

#### Protection provided by the restraint system

The restraint system includes the following components:

- · Seat belt system
- Airbags
- · Child restraint system
- · Child seat securing systems

The restraint system can help prevent the vehicle occupants from coming into contact with parts of the vehicle interior in the event of an accident. In the event of an accident, the restraint system can also reduce the forces to which the vehicle occupants are subjected.

Only a seat belt which is worn correctly can provide the intended level of protection. Depending on the detected accident situation, seat belt tensioners and/or airbags supplement the protection offered by a correctly worn seat belt. Seat belt tensioners and/or airbags are not deployed in every accident.

Vehicles with a co-driver bench seat: the seat belt tensioner on the co-driver seat is triggered whether or not the seat belt tongue is engaged in the seat belt buckle.

In order for the restraint system to provide the intended level of protection, each vehicle occupant must observe the following information:

- · Fasten seat belts correctly.
- Sit in an almost upright seat position with their back against the seat backrest.
- Sit with their feet resting on the floor, if possible.
- Always secure persons under 5 ft (1.50 m) tall in an additional restraint system suitable for this vehicle.

However, no system available today can completely eliminate injuries and fatalities in every accident situation. In particular, the seat belt and airbag generally do not protect against objects penetrating the vehicle from the outside. It is also not possible to completely rule out the risk of injury caused by the airbag deploying.

## Limitations of the protection provided by the restraint system

A

**WARNING** Risk of injury or death due to modifications to the restraint system

Vehicle occupants may no longer be protected as intended if alterations are made to the restraint system.

- Never alter the parts of the restraint system
- Never tamper with the wiring or any electronic component parts or their software.

If it is necessary to adjust the vehicle to accommodate a person with disabilities, contact a Mercedes-Benz Service Centre for details.

USA only: contact our Customer Assistance Center at 1-877-762-8267.

#### Restraint system functionality

When the vehicle is switched on, a self-test is performed, during which the restraint system warning lamp lights up. It goes out no later than a few seconds after the vehicle is started. The components of the restraint system are then functional.

#### Restraint system malfunction

A malfunction has occurred in the restraint system in the following cases:

- The prestraint system warning lamp does not light up when the vehicle is switched on.
- The prestraint system warning lamp lights up continuously or repeatedly during a journey.

**WARNING** Risk of injury due to malfunctions in the restraint system

Components in the restraint system may be activated unintentionally or not deploy as planned in an accident.

 Have the restraint system checked and repaired immediately at a qualified specialist workshop.

#### Function of the restraint system in an accident

How the restraint system works is determined by the severity of the impact detected and the type of accident anticipated:

- · frontal impact
- rear impact
- · side impact
- overturning or rollover

The activation thresholds for the components of the restraint system are determined based on the evaluation of the sensor values measured at various points in the vehicle. This process is pre-emptive in nature. The triggering/deployment of the components of the restraint system should take place in good time at the start of the collision.

Factors which can only be seen and measured after a collision has occurred cannot play a decisive role in airbag deployment. Nor do they provide an indication of airbag deployment.

The vehicle may be deformed significantly without an airbag being deployed. This is the case if only parts which are relatively easily deformed are affected and the rate of vehicle deceleration is not high. Conversely, an airbag may be deployed even though the vehicle suffers only minor deformation. If very rigid vehicle parts, such as longitudinal members, are hit, the vehicle deceleration may be high enough for this to happen.

Depending on the detected deployment situation, the components of the restraint system can be activated or deployed independently of each other:


- Seat belt tensioner: frontal impact, rear impact, side impact<sup>1)</sup>, overturning, rollover
- Driver's airbag, front passenger airbag: frontal impact
- · Side airbag: side impact
- Window airbag: side impact, overturning, rollover, frontal impact

<sup>1)</sup> Only when the vehicle is fitted with a side airbag or window airbag.

**WARNING** Risk of burns from hot air bag components

The air bag parts are hot after an air bag has been deployed.

▶ Do not touch the air bag parts.



For your safety and that of your passengers, it is recommended that you have the vehicle towed to a qualified specialist workshop after an accident. Take this into account, particularly if a seat belt tensioner is triggered or an airbag deployed.

If the seat belt tensioners are triggered or an airbag is deployed, you will hear a bang, and a small amount of powder may also be released:

- the bang will not generally affect your hearing.
- in general, the powder released is not hazardous to health but may cause short-term breathing difficulties to persons suffering from asthma or other pulmonary conditions.

Provided it is safe to do so, leave the vehicle immediately or open the window in order to prevent breathing difficulties.

Airbags and pyrotechnic seat belt tensioners contain perchlorate material, which may require special handling or environmental protection measures. National guidelines regarding waste disposal must be observed. In California see https://dtsc.ca.gov/. You can use the search function to find information on perchlorate, for example.

#### Seat belts

#### Protection provided by the seat belt

Always fasten your seat belt correctly before starting a journey. Only a seat belt which is worn correctly can provide the intended level of protection.



**WARNING** Risk of injury or death due to incorrectly fastened seat belt

If the seat belt is not worn correctly, it cannot perform its intended protective function.

In addition, an incorrectly fastened seat belt can also cause injuries, for example, in the event of an accident or when braking or changing direction suddenly.

Always ensure that all vehicle occupants have their seat belts fastened correctly and are sitting properly.

Always observe the instructions about the correct driver's seat position and adjusting the seat  $(\rightarrow$  page 66).

In order for the correctly worn seat belt to provide the intended level of protection, each vehicle occupant must observe the following information:

- The seat belt must not be twisted and must fit tightly and snugly across the body.
- The seat belt must be routed across the center of the shoulder and as low down across the hips as possible.
- The shoulder section of the seat belt should not touch your neck nor be routed under your arm or behind your back.
- Avoid wearing bulky clothing, e.g. a winter coat.
- Push the lap belt down as far as possible across your hips and pull tight with the shoulder section of the belt. Never route the lap belt across your abdomen.

Pregnant women must also take particular care with this.

- Never route the seat belt across sharp, pointed, abrasive or fragile objects.
- Only one person should use each seat belt at any one time. Infants and children must never travel sitting on the lap of a vehicle occupant.
- Never secure objects with a seat belt if the seat belt is being used by one of the vehicle's occupants. Always observe the instructions for loading the vehicle when securing objects, luggage or loads (→ page 203).

Also ensure that no objects, e.g. a cushion, are ever placed between a person and the seat.

The seat belts on the following seats are equipped with a special seat belt retractor:

- · Co-driver seat
- · Rear seats

Activate or deactivate the special seat belt retractor of the seat belt ( $\rightarrow$  page 42).

If children are traveling in the vehicle, always observe the instructions and safety notes on "Children in the vehicle" ( $\rightarrow$  page 40).

### Limitations of the protection provided by the seat belt

### lack

**WARNING** Risk of injury or death due to an incorrect seat position

The seat belt does not offer the intended level of protection if you have not moved the seat backrest to an almost vertical position.

In particular, you could slip beneath the seatbelt and become injured.

- Adjust the seat properly before beginning your journey.
- Always ensure that the seat backrest is in an almost vertical position and that the shoulder belt is routed across the center of your shoulder.

# **WARNING** Risk of injury or death when additional restraint systems are not used for persons with a smaller stature

Persons under 5 ft (1.50 m) tall cannot wear the seat belt correctly without a suitable additional restraint system.

Always secure persons under 5 ft (1.50 m) tall in a suitable restraint system

## **WARNING** Risk of injury or death due to damaged or modified seat belts

Seat belts cannot provide protection in the following situations:

- The seat belt is damaged, has been modified, is extremely dirty, bleached or dyed
- The seat belt buckle is damaged or extremely dirty
- Modifications have been made to the Emergency Tensioning Device, seat belt anchorage or seat belt retractor

Seat belts may sustain non-visible damage in an accident, e.g. due to glass splinters.

Modified or damaged seat belts could tear or fail in the event of an accident, for example.

Modified Emergency Tensioning Devices could accidentally trigger or fail to function as intended.

Never modify the seat belt system, for example the seat belt, seat belt buckle,

- Emergency Tensioning Device, seat belt anchorage and seat belt retractor.
- Make sure that the seat belts are undamaged, not worn and clean.
- Always have the seat belts checked immediately after an accident at a qualified specialist workshop.

Only use seat belts which have been approved for your vehicle by the sales organization named on the inside front cover.

★ WARNING Risk of injury or death from deployed pyrotechnic Emergency Tensioning Devices

Pyrotechnic Emergency Tensioning Devices that have been deployed are no longer operational and are unable to perform their intended protective function.

Therefore, have deployed pyrotechnic Emergency Tensioning Devices immediately replaced at a qualified specialist workshop.

For your safety and that of your passengers, it is recommended that you have the vehicle towed to a qualified specialist workshop after an accident.


NOTE Damage caused by trapping the seat belt

If an unused seat belt is not fully retracted, it may become trapped in the door or in the seat mechanism.

Always ensure that an unused seat belt is fully retracted.

#### Fastening and adjusting seat belts

If the seat belt is pulled quickly or sharply, the seat belt retractor locks. The seat belt strap cannot be pulled out any further.

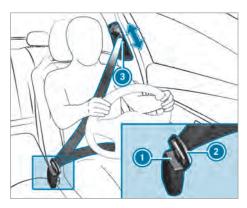

- Always engage seat belt tongue ② of the seat belt into seat belt buckle ① of the corresponding seat.
- Press and hold the seat belt outlet release and slide seat belt outlet (3) into the desired position.
- Let go of the seat belt outlet release and ensure that seat belt outlet (3) locks into position
- Only a seat belt which is worn correctly can provide the intended level of protection.
   Observe the notes on fastening the seatbelt (→ page 34).
- ! NOTE Deployment of components of the restraint system when the front passenger seat is unoccupied and a seat belt is buckled

When the front passenger seat is unoccupied and the seat belt tongue of the seat belt is engaged in the seat belt buckle, components of the restraint system may deploy unnecessarily on the front passenger side, e.g. the Emergency Tensioning Device.

- Only buckle the seat belts as intended.
- Observe the notes on stowage areas
   (→ page 203).
   Information on installing a child restraint system and on children traveling in the vehicle can be found in the "Children in the vehicle" section (→ page 41).

#### Releasing the seat belt

Press the release button in the seat belt buckle and guide the seat belt back with the seat belt tongue.

### Function of the seat belt warning system for driver and co-driver

The seat belt warning lamp in the Instrument Display reminds you that all vehicle occupants must fasten their seat belts correctly.

A warning tone may also sound.


After the vehicle is started, the seat belt warning goes out as soon as the driver's and the co-driver seat belts are fastened.

While driving, the seat belt warning lights up in the following cases:

- If the vehicle's speed is higher than 15 mph (25 km/h) and the driver's or co-driver's seat belt is not fastened
- If the driver or co-driver unfasten their seat belt during the journey

#### Airbags

#### Overview of airbags

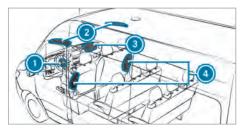

- Driver's airbag
- Window curtain airbag
- 3 Co-driver airbag
- Side airbag

An airbag's installation location is identified by the AIRBAG label.

When enabled, an airbag can provide additional protection for the respective vehicle occupant.

Possible protection of each airbag:

- Driver's airbag, co-driver airbag: head and ribcage
- · Window curtain airbag: head
- · Side airbag: ribcage and pelvis

**WARNING** Risk of injury or death if the codriver airbag is enabled

If the co-driver airbag is enabled, a child on the co-driver seat may be struck by the co-driver airbag during an accident.

NEVER use a rearward-facing child restraint system on a seat with an ENABLED FRONT AIRBAG; DEATH or SERIOUS INJURY to the CHILD can occur.

When installing a child restraint system on the codriver seat, observe the vehicle-specific information (→ page 44). Also be sure to observe the notes on rearward-facing or forward-facing child restraint systems on the co-driver seat.

#### Protection provided by the airbags

Depending on the accident situation, an airbag may supplement the protection offered by a correctly fastened seat belt.

**WARNING** Risk of injury or death due to an incorrect seat position

If you deviate from the correct seat position, the airbag cannot perform its intended protective function.

Each vehicle occupant must make sure of the following:

- Fasten seat belts correctly. Pregnant women must take particular care to ensure that the lap belt never lies across the abdomen.
- Adopt the correct seat position and keep as far away as possible from the airbags.
- Observe the following information.
- Always make sure that there are no objects between the airbag and vehicle occupant.

To avoid the risks resulting from the deployment of an airbag, each vehicle occupant must observe the following information in particular:

- Before starting your journey, adjust your seat correctly; both the driver's and co-driver seat should be moved as far back as possible.
  - When doing so, always observe the information on the correct driver's seat position  $(\rightarrow page 66)$ .
- Only hold the steering wheel by the steering wheel rim. This allows the airbag to be fully deployed.
- Always lean against the seat backrest when the vehicle is in motion. Do not lean forwards or against the door or side window. You may otherwise be in the deployment area of the airbags.
- Always keep your feet on the floor. Do not put your feet on the cockpit, for example. Your feet may otherwise be in the deployment area of the airbag.
- If children are traveling in the vehicle, observe the additional notes (→ page 40).
- · Always stow and secure objects correctly.

Objects in the vehicle interior may prevent an airbag from functioning correctly. Each vehicle occupant must always make sure of the following in particular:

- There are no people, animals or objects between the vehicle occupants and an airbag.
- There are no objects between the seat, door and door pillar (B-pillar).
- There are no hard objects, e.g. coat hangers, hanging on the grab handles or coat hooks.
- There are no accessory parts, such as mobile navigation devices, mobile phones or cup holders, attached to the vehicle within the deployment area of an airbag, e.g. on the cockpit, on the door, on the side window or on the side trim.
  - In addition, no connecting cables, tensioning straps or retaining straps must be routed or attached to the vehicle within the deployment area of an airbag. Always comply with the accessory manufacturer's installation instructions and, in particular, the notes on suitable places for installation.
- There are no heavy, sharp-edged or fragile objects in the pockets of your clothing. Store such objects in a suitable place.

#### Limitations of the protection provided by airbags

A

**WARNING** Risk of injury due to modifications to the cover of an airbag

If you modify the cover of an airbag or affix objects such as stickers to it, the airbag may no longer function correctly.

Never modify the cover of an airbag and do not affix objects to it.

An airbag's installation location is identified by the AIRBAG label ( $\rightarrow$  page 37).

A

**WARNING** Risk of injury or death due to the use of unsuitable seat covers

Due to unsuitable seat covers, the airbags cannot protect vehicle occupants as intended.

Only use seat covers that have been approved for your vehicle by the sales organization named on the inside front cover.

Α

**WARNING** Risk of injury due to malfunctioning sensors in the door

The function of the airbags can be impaired due to modifications or incorrect work performed on the doors or door trim, or if the doors are damaged.

- Never modify the doors or parts of the doors.
- Always have work on the doors or door trim carried out at a qualified specialist workshop.

Λ

**WARNING** Risk of injury due to deployed airbag

A deployed airbag no longer offers any protection.

Have the vehicle towed to a qualified specialist workshop in order to have the deployed airbag replaced.

Have deployed airbags replaced immediately.

#### Automatic measures after an accident

Depending on the type and severity of the accident, and depending on the vehicle's equipment, the following measures can be implemented, for example:

- Automatic braking (post-collision brake)
- · Activating the hazard warning lights
- Triggering an automatic emergency call
   (→ page 222)
- · Switching off the engine

To restart the vehicle, switch the ignition off and switch it back on ( $\rightarrow$  page 107). Depending on the type and severity of the accident, it may possible that the vehicle can no longer be started.

- · switching off the fuel supply
- · Unlocking the vehicle doors
- · Lowering the front side windows
- Switching on the interior lighting

#### Function of the post-collision brake

Depending on the accident situation, the post-collision brake can minimize the severity of a further collision or even avoid it.

If an accident has been detected, the post-collision brake can implement automatic braking. When the vehicle has come to a standstill, the electric parking brake is automatically applied.

The driver can cancel automatic braking by taking the following actions:

- · Braking more strongly than automatic braking
- Fully depressing the accelerator pedal with force

#### Safely transporting children in the vehicle

### Always observe when children are traveling in the vehicle

 Always observe the safety notes relevant to the situation. In doing so, you will be able to identify possible risks and avoid dangers when children are traveling in the vehicle (→ page 40).

#### Be diligent

Bear in mind that negligence when securing a child in the child restraint system may have serious consequences. Always be diligent and secure a child carefully before each journey. To improve protection for children younger than 12 years old or under 5 ft (1.50 m) in height, Mercedes-Benz recommends you always observe the following notes:

- Always secure the child in a child restraint system suitable for this Mercedes-Benz vehicle.
- The child restraint system must be appropriate to the age, weight and size of the child.
- The vehicle seat must be suitable for installing a child restraint system.

Accident statistics show that children secured on the rear seats are generally safer than children secured on the front seats. For this reason Mercedes-Benz strongly advises that you install a child restraint system on a rear seat.

#### The generic term child restraint system

The generic term child restraint system is used in this set of Operating Instructions. A child restraint system is, for example:

- · a baby car seat
- · a rearward-facing child seat
- · a forward-facing child seat
- a child booster seat with a backrest and seat belt guides

The child restraint system must be appropriate to the age, weight and size of the child.

#### Observe laws and regulations

Always observe the legal requirements when using a child restraint system in the vehicle.

#### Observe standards for child restraint systems

All child restraint systems must meet the following standards:

- U.S. Federal Motor Vehicle Safety Standards 213 and 225
- Canadian Motor Vehicle Safety Standards 213 and 210.2

Confirmation that the child restraint system complies with the standards can be found on an instruction label on the child restraint system. This confirmation can also be found in the installation instructions that are included with the child restraint system.

#### Detecting risks, avoiding danger

#### Securing systems for child restraint systems in the vehicle

Only use the following securing systems for child restraint systems:

- The LATCH-type (ISOFIX) securing rings
- The seat belt system of the vehicle
- The Top Tether anchorages

Installing a LATCH-type (ISOFIX) child restraint system is preferred.

Simply attaching to the securing rings on the vehicle can reduce the risk of installing the child restraint system incorrectly.

When securing a child with the integrated seat belt of the LATCH-type (ISOFIX) child restraint system, always comply with the permissible gross weight for the child and child restraint system  $(\rightarrow page 42)$ .

A booster seat may be necessary to achieve proper seat belt positioning for children over 40 lbs (18 kg) in weight or until they reach a height where a three-point seat belt can be fastened properly without a booster seat.

Mercedes-Benz recommends a child booster seat with a backrest and seat belt guides.

### Advantage of a rearward-facing child restraint sys-

It is preferable to transport a baby or a small child in a suitable rearward-facing child restraint system. In this case, the child sits in the opposite direction to the direction of travel and faces backwards.

Babies and small children have comparatively weak neck muscles in relation to the size and weight of their head. The risk of injury to the cervical spine during an accident can be reduced in a rearward-facing child restraint system.

#### Always secure a child restraint system correctly

**WARNING** Risk of injury or death due to incorrect installation of the child restraint system

The child can then not be protected or restrained as intended.

Be sure to comply with the manufacturer's installation instructions for the child restraint system and its correct use.

- Make sure that the entire base of the child restraint system always rests on the sitting surface of the seat.
- Never place objects (e.g. cushions) under or behind the child restraint sys-
- Use child restraint systems only with the original cover designed for them.
- Always replace damaged covers with genuine covers.

WARNING Risk of injury or death due to unsecured child restraint systems in the vehicle

If the child restraint system is incorrectly installed or not secured, it can come loose.

The child restraint system could be flung around and hit vehicle occupants.

- Always install child restraint systems correctly, even when not in use.
- Always comply with the child restraint system manufacturer's installation instructions.
- Always observe the child restraint system manufacturer's installation and operating instructions as well as the vehicle-specific informa-
  - Installing the LATCH-type (ISOFIX) child restraint system on the rear seat  $(\rightarrow page 42).$
  - Securing the child restraint system with the seat belt on the rear seat ( $\rightarrow$  page 44).
  - Securing the child restraint system with the seat belt on the co-driver's seat (→ page 44). Observe the specific instructions for the rearward-facing and forward-facing child restraint systems  $(\rightarrow page 44)$ .
- · Observe the warning labels in the vehicle interior and on the child restraint system.
- · Also secure Top Tether if present.

### Do not modify the child restraint system

WARNING Risk of injury due to modifications to the child restraint system

The child restraint system can no longer function properly. This poses an increased risk of injury.

- Never modify a child restraint system.
- Only affix accessories which have been specially approved for this child restraint system by the child restraint system's manufacturer.

#### Only use child restraint systems which are in proper working condition

WARNING Risk of injury or death caused by the use of damaged child restraint sys-

Child restraint systems or their retaining systems that have been subjected to stress in an accident may not be able to perform their intended protective function.

It may be the case that the child cannot be properly restrained.

- Always immediately replace child restraint systems that have been damaged or involved in an accident.
- Have the securing systems for the child restraint systems checked at a qualified specialist workshop before installing a child restraint system again.

#### Avoid direct sunlight

**WARNING** Risk of burns when the child seat is exposed to direct sunlight

If the child restraint system is exposed to direct sunlight or heat, parts could heat up excessively.

Children could suffer burns from these parts, particularly the metallic parts of the child restraint system.

- Always make sure that the child restraint system is not exposed to direct sunlight.
- Cover the child restraint system with a blanket, for example.
- If the child restraint system has been exposed to direct sunlight, allow it to cool before securing a child into it.
- Never leave children unattended in the vehicle.

#### Observe when stopping or parking

**WARNING** Risk of accident and injury due to children left unattended in the vehicle

If children are left unsupervised in the vehicle, they could, in particular:

- open doors, thereby endangering other persons or road users.
- get out and be struck by oncoming traffic.
- operate vehicle equipment and become trapped, for example.

In addition, the children could also set the vehicle in motion, for example by:

- releasing the parking brake.
- changing the transmission position.
- starting the vehicle.
- Never leave children unattended in the vehicle.
- ▶ When leaving the vehicle, always take the SmartKey with you and lock the vehicle.
- Keep the vehicle SmartKev out of reach of children.

#### Overview of suitable seats in the vehicle for installing a child restraint system

#### Left/right rear seat

Preferred securing system:

 $\bigcirc$  ISOFIX child seat anchor ( $\rightarrow$  page 42)

Also secure Top Tether if present  $(\rightarrow page 43)$ 

Alternative securing system:

Seat belt on vehicle seat

#### Co-driver seat

Securing system:

🚁 Seat belt on vehicle seat

#### Center rear seat

Securing system:

Seat belt on vehicle seat

Also secure Top Tether if present  $(\rightarrow page 43)$ 

### Activating or deactivating the special seat belt retractor of the seat belt



**WARNING** Risk of injury or death if a seat belt is unfastened while the vehicle is in motion

If the seat belt is released while the vehicle is in motion, the child safety lock is deactivated and the child restraint system is no longer correctly secured. The seat belt is drawn in slightly by the inertia reel and cannot be immediately closed again.

- Stop the vehicle immediately in accordance with the traffic conditions.
- Activate the special seal belt retractor again and correctly secure the child restraint system.

#### Requirements

When activated, the special seat belt retractor ensures that the seat belts of the co-driver seat and rear seats do not slacken once the child restraint system is secured.

The seat belts on the following seats are equipped with a special seat belt retractor:

- Co-driver seat
- · Rear seats

#### Installing a child restraint system

- When installing a child restraint system, always observe the manufacturer's installation and operating instructions for the child restraint system used, as well as the notes in these Operating Instructions.
- Pull the seat belt smoothly from the seat belt outlet.
- Engage the seat belt tongue in the seat belt buckle.

#### Activating the special seat belt retractor

- Extend the seat belt fully and then allow the inertia reel to retract the belt.
   When the special seat belt retractor is activated, you should hear a ratcheting sound.
- Push the child restraint system down until the seat belt is tight.

#### Deactivating the special seat belt retractor

- Press the release button of the seat belt buckle.
- Hold the seat belt tongue and guide back to the seat belt outlet.

### Installing a LATCH-type (ISOFIX) child restraint system on the rear seat

### Installing a LATCH-type (ISOFIX) child restraint system on the rear seat



**WARNING** Risk of injury or death if the permissible gross mass of the child and child restraint system together is exceeded.

Too much load may be placed on the LATCHtype (ISOFIX) child restraint system and the child may not be restrained correctly in the event of an accident, for example.

- If the child and the child restraint system together weigh more than the permissible gross mass of 73 lb (33 kg), only use a LATCH-type (ISOFIX) child restraint system with which the child is secured with the vehicle seat belt.
- Also secure the child restraint system with the Top Tether belt, if available.

Always comply with the information about the mass of the child restraint system:

- in the manufacturer's installation and operating instructions for the child restraint system used
- on a label on the child restraint system, if available

Check regularly that the permissible gross mass of the child plus the child restraint system is not exceeded.


When you install a child restraint system, observe the following:

- Always observe the correct use and suitability of the seats for attaching a child restraint system
- Always observe the manufacturer's installation and operating instructions for the child restraint system used.
- Make sure that the child's feet do not touch the front seat. If necessary, move the front seat slightly forwards.

When installing a LATCH-type (ISOFIX) child restraint system, also observe the following:

When using a Group 0/0+ baby car seat and a Group I rearward-facing child restraint system on a rear seat: adjust the rear seat and/or the front seat so that the seat does not touch the child restraint system.

- When using a Group I forward-facing child restraint system: the backrest of the child restraint system must, as far as possible, lie flat against the backrest of the seat.
- For certain child restraint systems in weight Group II or III, there may be restrictions on the maximum size setting, e.g. due to possible contact with the roof.
- Do not put the child restraint system under strain between the roof and the sitting surface and/or install it facing the wrong direction.
- ✓ Do not put the child restraint system under strain by the head restraint. Adjust the head restraints as appropriate.

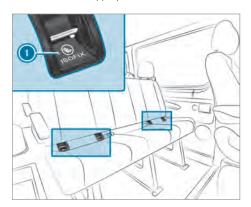

1 LATCH-type (ISOFIX) mounting brackets

Before every journey, make sure that the LATCHtype (ISOFIX) child restraint system is engaged correctly in both mounting brackets in the vehicle.

- I NOTE Damage to the seat belt for the center seat during installation of the child restraint system
- Make sure that the seat belt is not trapped.
- Attach the LATCH-type (ISOFIX) child restraint system to both mounting brackets in the vehicle.

#### **Securing Top Tether**


**WARNING** Risk of injury due to incorrect attachment of the Top Tether belt

If you attach the Top Tether belt incorrectly, the child restraint system is not properly secured and therefore cannot protect as intended

Attach the Top Tether hook only to the intended Top Tether anchorage.

If the child restraint system is equipped with a Top Tether belt:

The risk of injury can be reduced by Top Tether. The Top Tether belt enables an additional connection between the child restraint system attached with LATCH-type (ISOFIX) and the vehicle.

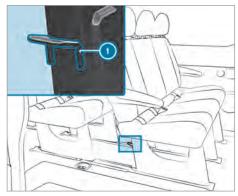

Top Tether anchorages 
 are located on the back of the rear bench seat on the bench seat legs.



- If necessary, move the head restraint upwards  $(\rightarrow \text{ page 76})$ .
- Install the LATCH-type (ISOFIX) child restraint system with Top Tether. Comply with the child restraint system manufacturer's installation instructions.

- Guide Top Tether belt (3) under the head restraint between the two head restraint bars.
- ► Hook Top Tether hook ② into Top Tether anchorage ① without twisting.
- Tension Top Tether belt (a). Comply with the child restraint system manufacturer's installation instructions.
- If necessary, slide the head restraint downwards (→ page 76). Make sure that you do not interfere with the correct routing of Top Tether belt ③.

### Securing the child restraint system with the seat belt

### Securing the child restraint system with the seat belt on the rear seat

When installing a belt-secured child restraint system, observe the following:

- Always observe the manufacturer's installation and operating instructions for the child restraint system used.
- When using a category 0/0+ baby car seat and a category I rearward-facing child restraint system on a rear seat: adjust the front seat so that the seat does not touch the child restraint system.
- When using a category I forward-facing child restraint system: remove the head restraint from the respective seat, if possible.

After the child restraint system has been removed, replace the head restraint immediately and adjust all head restraints correctly.

- The backrest of the forward-facing child restraint system must, as far as possible, be resting on the seat backrest of the rear seat.
- For certain child restraint systems in weight category II or III, there may be restrictions on the maximum size setting, e.g. due to possible contact with the roof.
- ▼ The child restraint system must not be put under strain between the roof and the seat cushion and/or be installed facing the wrong direction. Where possible, adjust the seat cushion inclination accordingly.
- The child restraint system must not be put under strain by the head restraint. Adjust the head restraints as appropriate.

Make sure that the child's feet do not touch the front seat. If necessary, move the front seat slightly forwards.

The seat belts on the following seats are equipped with a special seat belt retractor:

- Co-driver seat
- Rear seats

When activated, the special seat belt retractor ensures that the seat belts of the co-driver seat and rear seats do not slacken once the child restraint system is secured ( $\rightarrow$  page 42).

- Install the child restraint system. The entire base of the child restraint system must always rest on the sitting surface of the rear seat.
- Always make sure that the shoulder belt strap is correctly routed from the seat belt outlet of the vehicle to the shoulder belt guide on the child restraint system.

The shoulder belt strap must be routed forwards and downwards from the seat belt outlet.

#### Notes on rearward-facing child restraint systems

The co-driver airbag cannot be disabled. Always install a rearward-facing child restraint system on a suitable rear seat, but never on the co-driver seat. Observe the manufacturer's installation and operating instructions for the child restraint system used.

### Notes on child restraint systems on the co-driver seat

Accident statistics show that children secured on the rear seats are safer than children secured on the front seats. For this reason Mercedes-Benz strongly advises that you install a child restraint system on a rear seat.

### Securing the child restraint system with the seat belt on the co-driver seat

When installing a belt-secured child restraint system on the co-driver seat, always observe the following:

- ✓ Observe the notes on rearward-facing and forward-facing child restraint systems on the co-driver seat (→ page 44).
- Observe the child restraint system manufacturer's installation and operating instructions.
- The backrest of the forward-facing child restraint system must, as far as possible, be

resting on the seat backrest of the co-driver seat.

- For certain child restraint systems in weight category II or III, there may be restrictions on the maximum size setting, e.g. due to possible contact with the roof.
- ▼ The child restraint system must not be put under strain between the roof and the seat cushion and/or be installed facing the wrong direction.
- ▼ The child restraint system must not be put under strain by the head restraint. Adjust the head restraints as appropriate.
- Never place objects (e.g. cushions) under or behind the child restraint system.

The seat belt on the co-driver side is equipped with a special seat belt retractor.

When enabled, the special seat belt retractor ensures that the seat belt does not slacken once the child seat is secured ( $\rightarrow$  page 42).

- Set the co-driver seat as far back as possible and move the seat into the highest position possible.
- Fully retract the seat cushion length adjust-
- Set the seat cushion inclination in such a way that the front edge of the seat cushion is in the highest position and the back of the seat cushion is in the lowest position.
- Set the seat backrest to the most vertical position possible.
- Install the child restraint system. The entire base of the child restraint system must always rest on the sitting surface of the co-driver seat.
- Always make sure that the shoulder belt strap is correctly routed from the seat belt outlet of the vehicle to the shoulder belt guide on the child restraint system.
  - The shoulder belt strap must be routed forwards and downwards from the seat belt outlet.
- If necessary, adjust the seat belt outlet and the co-driver seat as appropriate.

#### Child safety locks

### Activating or deactivating child safety locks for the sliding doors

**WARNING** Risk of accident and injury due to children left unattended in the vehicle

If children are left unsupervised in the vehicle, they could, in particular:

- open doors, thereby endangering other persons or road users.
- get out and be struck by oncoming traffic.
- operate vehicle equipment and become trapped, for example.

In addition, the children could also set the vehicle in motion, for example by:

- releasing the parking brake.
- · changing the transmission position.
- starting the vehicle.
- Never leave children unattended in the vehicle.
- When leaving the vehicle, always take the SmartKey with you and lock the vehicle.
- Keep the vehicle SmartKey out of reach of children.

### **WARNING** Danger to life due to exposure to extreme heat or cold in the vehicle

If people, particularly children, are exposed to extreme temperatures over an extended period of time, there is a risk of serious injury or danger to life.

Never leave persons, children in particular, unattended in the vehicle.

**WARNING** Risk of accident and injury due to children left unattended in the vehicle

If children are traveling in the vehicle, they could, in particular:

- Open doors, thereby endangering other persons or road users
- Get out and be struck by oncoming traffic
- Operate vehicle equipment and become trapped, for example
- Always activate the child safety locks installed if children are traveling in the vehicle.


- Never leave children unattended in the vehicle.
- When leaving the vehicle, always take the SmartKey with you and lock the vehicle.

The following doors have child safety locks:

· Sliding doors

The child safety locks on the doors secure each door separately. The doors can no longer be opened from the inside (exception: electric sliding door). When the vehicle is unlocked, the door can be opened from the outside.

If the electric sliding door is secured, only the sliding door controls in the rear compartment are deactivated. The electric sliding door can be opened at any time using the switch in the center console.

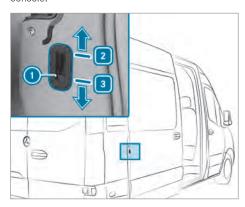

Example: sliding door child safety lock

- Slide child safety lock bolt 1 to position 2 (activate) or 3 (deactivate).
- Make sure that the child safety locks are working properly.

### Notes on pets in the vehicle

**WARNING** Risk of accident and injury due to animals left unsecured or unattended in the vehicle

If you leave animals in the vehicle unattended or unsecured, they could possibly press buttons or switches.

An animal may:

- Activate vehicle equipment and become trapped, for example
- Switch systems on or off and endanger other road users

Unsecured animals may be thrown around in the vehicle in the event of an accident or sudden steering and braking maneuvers and injure vehicle occupants in the process.

- Never leave animals in the vehicle unattended.
- Always correctly secure animals while driving, e.g. using a suitable animal carrier.

#### SmartKey

#### Notes on radio connections of the key

▲ DANGER Risk of fatal injury to persons with medical devices due to electromagnetic radiation when using the start/stop button


Persons with medical devices, e.g. pacemakers or defibrillators:

There is a radio connection between the key and the vehicle.

The function of a medical device can be impaired.

Before operating the vehicle, consult your doctor or the manufacturer of the medical device about any possible effects from such systems.

### Detection range of the KEYLESS-START function antenna

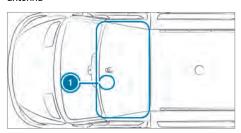

Position of the key holder when the detection range of the antenna is reduced

#### Overview of SmartKey functions


WARNING Risk of accident and injury due to children left unattended in the vehicle

If children are left unsupervised in the vehicle, they could, in particular:

- open doors, thereby endangering other persons or road users.
- get out and be struck by oncoming traffic.
- operate vehicle equipment and become trapped, for example.

In addition, the children could also set the vehicle in motion, for example by:

- · releasing the parking brake.
- changing the transmission position.
- starting the vehicle.
- Never leave children unattended in the vehicle.
- When leaving the vehicle, always take the SmartKey with you and lock the vehicle.
- ► Keep the vehicle SmartKey out of reach of children.
- I NOTE Damage to the SmartKey caused by magnetic fields
- Keep the SmartKey away from strong magnetic fields.

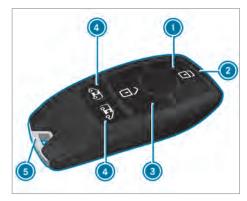

- To lock
- Battery check lamp
- To unlock
- To unlock the cargo compartment (sliding doors and rear-end doors)/to unlock and open/close the electric sliding doors
- 6 Emergency key

The SmartKey's factory setting enables you to centrally lock and unlock the following components:

- The driver's door and co-driver door
- · The sliding doors
- · The rear-end doors
- i If you do not open the vehicle within approximately 40 seconds of unlocking, the vehicle will lock again and anti-theft protection will be armed again.

Do not keep the SmartKey together with electronic devices or metallic objects. This can affect the SmartKey's functionality.

i) If the indicator lamp does not light up when you press the o button, the battery is discharged.

Replace the SmartKey battery ( $\rightarrow$  page 48).

#### Activating/deactivating the acoustic locking verification signal

Multimedia system:

→ 🖟 > Settings >> Vehicle

Activate or deactivate Acoustic Lock.

#### Changing the unlocking settings

The SmartKey has the following adjustable unlocking functions:

- · unlock centrally
- unlock the driver's door (vehicles without partition or with cab)
- unlock the driver's door and co-driver's door (vehicles with partition)
- To unlock the vehicle centrally when the unlocking function is selected for the driver's door or the driver's and co-driver's door: press the button a second time.

#### Reducing the energy consumption of the SmartKey


If you do not use the vehicle or a SmartKey for an extended period, you may deactivate the KEYLESS START function of the SmartKey.

- ➤ To deactivate: press the ☐ button on the SmartKey twice in quick succession. The battery check lamp on the SmartKey lights up twice quickly and once for longer.
- To activate: press any button on the SmartKey.

When starting the vehicle with the SmartKey in the slot in the shift console, the SmartKey functions are activated automatically.

#### Removing and inserting the emergency key

#### Removing

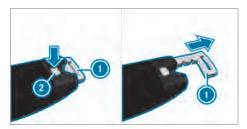

- Press release button ②.
   Emergency key ① is pushed slightly out.
- ▶ Pull emergency key ① out completely.

### Inserting

- Press release button 2.
- Slide emergency key in completely until it engages.

#### Replacing the key battery

**DANGER** Risk of fatal injuries due to swallowing batteries

Batteries contain toxic and corrosive substances. Swallowing batteries may cause severe internal burns to occur within two hours.

There is a risk of fatal injury.

- Keep batteries out of the reach of children.
- If the cap and/or the battery compartment does not close securely, do not use the SmartKey any longer and keep out of the reach of children.
- If batteries are swallowed, seek medical attention immediately.
- ENVIRONMENTAL NOTE Environmental damage due to improper disposal of batteries

Batteries contain pollutants. It is illegal to dispose of them with the household rubbish.

Dispose of batteries in an environmentally responsible manner. Take discharged batteries to a qualified specialist workshop or to a collection point for used batteries.

#### Requirements

A CR 2032 3 V cell battery

Mercedes-Benz recommends that you have the battery replaced by a qualified specialist workshop.

Remove the emergency key (→ page 48).



#### Example image

- Press release button ② down fully and slide cover ① forward.
- Remove battery compartment (3) and remove the discharged battery.
- Insert the new battery into battery compartment ③. Observe the positive pole marking in the battery compartment and on the battery.
- Insert battery compartment 3.
- Replace cover 1 so that it engages.
- Slide the emergency key in completely until it engages (→ page 48).

#### Rectifying problems with the SmartKey

### You cannot lock or unlock the vehicle any more

Possible causes:

- The SmartKey battery is weak or discharged.
- There is interference from a powerful source of radio waves.
- The SmartKey is faulty.
- Check the battery using the indicator lamp and replace it if necessary (→ page 48).


- Use the emergency key to unlock and lock the vehicle ( $\rightarrow$  page 48).
- Have the SmartKey checked at a qualified specialist workshop.

#### You have lost a SmartKey

- Have the SmartKey deactivated at a qualified specialist workshop.
- If necessary, have the mechanical locks replaced.

#### Doors


#### Unlocking and opening the door from inside

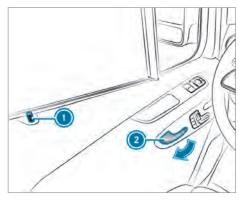

➤ To unlock and open the front door: pull door handle ②.

Safety pin ⑤ pops up when the door is

unlocked.

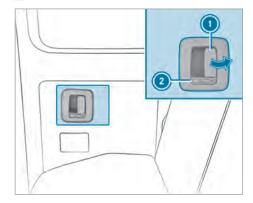

The symbol indicates that the rear door is unlocked.

➤ To unlock and open the rear door: pull opening lever ① and open the rear door.

When the door unlocks, latch ② moves forward.

The symbol is visible.

- To close: pull the rear door closed by the door handle.
- To lock: slide latch 2 back.
  The symbol is visible.

### Centrally locking and unlocking the door from the inside

**WARNING** Risk of accident and injury due to children left unattended in the vehicle

If children are left unsupervised in the vehicle, they could, in particular:

- open doors, thereby endangering other persons or road users.
- · get out and be struck by oncoming traffic.
- operate vehicle equipment and become trapped, for example.

In addition, the children could also set the vehicle in motion, for example by:

- releasing the parking brake.
- changing the transmission position.
- · starting the vehicle.
- Never leave children unattended in the vehicle.
- ► When leaving the vehicle, always take the SmartKey with you and lock the vehicle.
- Keep the vehicle SmartKey out of reach of children.


**WARNING** Danger to life due to exposure to extreme heat or cold in the vehicle

If people, particularly children, are exposed to extreme temperatures over an extended period of time, there is a risk of serious injury or danger to life.


Never leave persons, children in particular, unattended in the vehicle.

You can use the central locking buttons to centrally lock and unlock the entire vehicle from the inside.

The central locking buttons are located in the driver's and co-driver's doors.

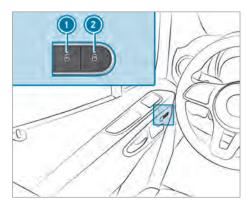

Central locking buttons (vehicles with electrically adjustable front seats)

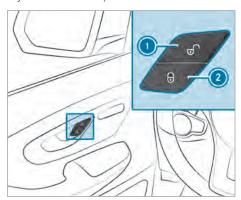

Central locking buttons (vehicles with manually adjustable front seats)

- To unlock: with the doors closed, press button


  ...
- To lock: with the doors closed, press button

### Activating/deactivating the automatic locking mechanism


#### Requirements:

- The power supply or the ignition is switched on.
- The doors are closed.

When the automatic locking mechanism is activated and the vehicle is traveling at a speed above 9 mph (15 km/h), the vehicle is locked automatically.

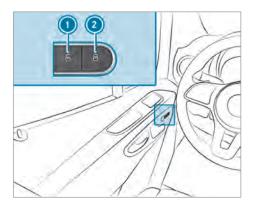

Central locking buttons (vehicles with electrically adjustable front seats)

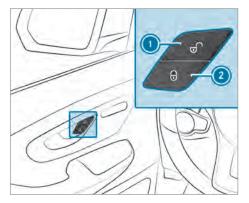


Central locking buttons (vehicles with manually adjustable front seats)

- If the vehicle is being tested on a roller dynamometer or is being tow-started or push-started, there is a risk of being locked out when the function is activated.
- To activate: press and hold button ② until you hear a tone.
- ➤ To deactivate: press and hold button until you hear a tone.

## Unlocking and locking the driver's door with the emergency key

i If you want to lock the vehicle completely with the emergency key, press the button for the locking mechanism from inside first with the driver's door open. Then lock the driver's door with the emergency key.

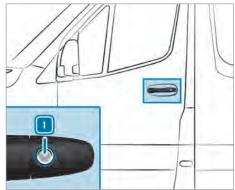

- To unlock: turn the emergency key counterclockwise to position 1.
- To lock: turn the emergency key clockwise to position 1.
- (i) Right-hand drive vehicles: turn the emergency key in the opposite direction for each case.

### Using the grab handles when getting into and out of the vehicle


**WARNING** Risk of injury due to excessive strain on the grab handle

If you apply your full body weight to the grab handle or pull it abruptly, the grab handle may be damaged or become loose from its anchorage.

Use the grab handles only to stabilize the seating position or to assist in getting in and out of the seat.

The entrances on buses are equipped with grab handles and steps. The grab handles to enter and exit the vehicle are at the front door and the sliding door.

- (i) To avoid risks:
  - When getting into and out of the vehicle, only use the grab handles and steps. Only they are designed for such a load.
  - Keep steps and entry sills free from dirt, e.g. mud, clay, snow and ice.

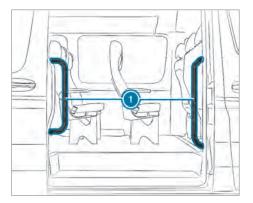

Getting into and out of the vehicle (example: sliding door)

- When getting into and out of the vehicle, use grab handles 
  and steps.
- (i) The grab handles on the sliding door are there to help people enter and exit the vehicle and can hold up to a maximum of 176 lbs (80 kg). Do not use the grab handle on the sliding door to secure a load (lashing down). Do not secure any objects to the easy entry and exit aids.

#### Sliding door

Opening and closing the sliding door

WARNING Risk of becoming trapped due to an open sliding door which is not engaged in place


On an incline, the sliding door can move by itself.


This can cause you or other people to become trapped.

- Always make sure that the open sliding door is engaged. To do so, open the sliding door to the stop.
- **WARNING** Risk of becoming trapped due to sliding door opening towards the rear

When you open the sliding door, the sliding door could hit other people as it moves towards the rear of the vehicle.

Only open the sliding door when traffic conditions permit.

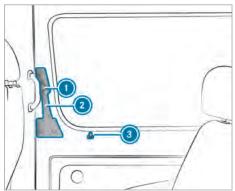

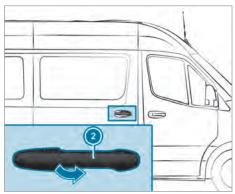

(i) Your vehicle may be equipped with a long sliding door with an intermediate catch. You can also lock the sliding door in place around half-way when opening and closing. If you do this, the door does not have to be opened fully when getting into or out of the vehicle. The sliding door is not fully engaged when in the intermediate catch.

#### Unlocking

Pull safety pin (a) upwards manually or use the central locking button to unlock the sliding door (→ page 50).

#### Opening

- Press button ① in and pull door handle ②.
- Push back the sliding door using door handlefully until it engages.
- Check the sliding door catch.

#### Closing

Press button 1 in and pull door handle 2.

Slide the sliding door firmly forwards by handle
 until it closes.

#### Locking

Push safety pin ⑤ downwards manually or use the central locking button to lock the sliding door (→ page 50).

#### Notes on electrical closing assist

If your vehicle is equipped with an electrical closing assist, you will require less force to close the sliding door.

#### Electric sliding door

#### Function of the electric sliding door

Your vehicle can be equipped with an electric sliding door on the left and/or right-hand side.

You can operate the electric sliding door in the following ways:

- by pressing the sliding door buttons on the center console
- by pressing the sliding door button on the door sill (B-pillar)
- using the door handle (inside or outside)
- · using the key

If the electric sliding door is obstructed while opening, it moves a few centimeters in the opposite direction and stops.

If the sliding door is obstructed during the closing procedure, it opens fully again.

If the electric motor of the sliding door is in danger of overheating, e.g. due to frequent opening and closing within a short period, the sliding door opens fully. The sliding door is then locked in place. The sliding door is operational again after approximately 30 seconds.

If there has been a malfunction or if the battery has been disconnected, you can use the release catch to disconnect the sliding door from the electric motor. Then you can open or close the door manually ( $\rightarrow$  page 55).

### Opening/closing the electric sliding door with the button

A

**WARNING** Risk of becoming trapped due to sliding door opening towards the rear

When you open the sliding door, the sliding door could hit other people as it moves towards the rear of the vehicle.

Only open the sliding door when traffic conditions permit.

**WARNING** Risk of injury despite the object detection function

The object detection function does not react to soft, light and thin objects, such as fingers. The object detection function cannot prevent someone from becoming trapped in these situations.

- When opening and closing the electric sliding door, make sure that no parts of the body are within the operating range of the sliding door.
- If someone becomes trapped, press the button again to stop the sliding door.

#### Object detection:


If an object obstructs the sliding door as it is closing, the sliding door will be stopped. Object detection is only an aid. It is not a substitute you having to pay attention.



 Opens and closes the sliding door on the right side of the vehicle



On vehicles with a partition, button **(3)** is located on the partition next to the doorway at the level of the inside door handle.

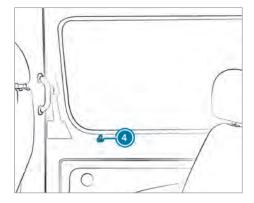

When the sliding door is locked, it can only be opened from the inside by manually unlocking locking pin (4).

- To open: briefly press button ①, ② or button ③.

The sliding door opens automatically.

When you open the door using button ① or ②, you will additionally hear two warning signals.

The indicator lamp at the top of button ① or ② will flash and button ③ will flash.

When the sliding door is completely open, the indicator lamp at the top of button ① or ② will light up.

To close: briefly press button ①, ② or button ③.

The sliding door closes automatically.

When you close the door using button ① or ②, you will additionally hear two warning signals.

The indicator lamp at the top of button ① or ② will flash and button ③ will flash.

When the sliding door is completely closed, the indicator lamp at the top of button ① or ② will go out.

➤ To stop automatic operation: briefly press button ① or ②.


The sliding door stops moving.


- To lock: push locking pin (a) downwards manually or use the central locking button to lock the sliding door (→ page 50).
- i When you stop automatic operation upon opening the door, the door closes when you press the button again.
- (i) In unfavorable operating conditions, e.g. frost or ice, or if the vehicle is very dirty, you can press and hold the corresponding button. The electric sliding door moves with increased force. Observe that, in such circumstances, the object detection function is less sensitive. To stop the movement, release the button.

## Opening/closing the electric sliding door with the key

- To unlock: briefly press the or button on the key.
- To open: press and hold the or button on the key for longer than 0.5 seconds. You will hear two acoustic signals and the sliding door will open automatically.
- To close: press and hold the or button on the key for longer than 0.5 seconds. You will hear two acoustic signals and the sliding door will close automatically.
- ➤ To interrupt automatic operation: briefly press the ☐ or ☐ button on the key. The sliding door stops moving.
- (i) When you stop automatic operation upon opening the door, the door closes when you press the button again.

### Opening/closing the electric sliding door with the door handle

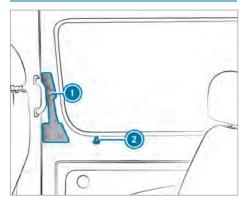

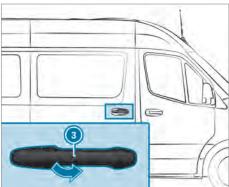

- To unlock: pull locking pin ② upwards manually or use the central locking button to unlock the sliding door (→ page 50).
- Press button ① or pull outside door handle
  ③.

The sliding door opens or closes.

Press button ① again or pull outside door handle ③.

The sliding door stops moving.

#### Unlocking the electric sliding door manually

### Disconnecting the sliding door from the electric motor

- Insert the emergency key into opening (1) of disconnect switch (2) in the "AUTO" position.
- Turn the emergency key 180° clockwise. The "MAN" position is set.


Open or close the sliding door with the outside or inside door handle.

### Establishing the connection between sliding door and electric motor


- Insert the emergency key into opening ① of disconnect switch ② in the "MAN" position.
- Turn the emergency key 180° counter-clockwise.

The "AUTO" position is set.

Adjust the sliding door (→ page 56).

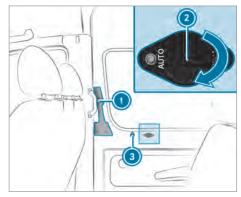

If there has been a malfunction or if the battery has been disconnected, you can use disconnect switch ② to disconnect the sliding door from the electric motor. Then you can open or close the door manually.

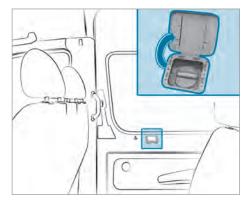

Cover in sliding door trim

Vehicles with sliding door trim: fold the cover of disconnect switch ② up.

The disconnect switch is accessible.

To disconnect the sliding door from the electric motor: turn disconnect switch 2 180° clockwise.

The "MAN" position is set.

#### Unlocking

- Pull safety pin (3) upwards manually or use the central locking button to unlock the sliding door ( $\rightarrow$  page 50).
- Press button ①.
- Open or close the sliding door with the outside or inside door handle.

#### Establishing the connection between sliding door and electric motor

Turn disconnect switch 2 180° counterclockwise.

The "AUTO" position is set.

- Adjust the sliding door (→ page 56).
- If it is not possible to rectify the malfunction. visit a qualified specialist workshop.

#### Resetting the electric sliding door



Sliding door button on the center console Sliding door button on the center console

Opens and closes the sliding door on the right side of the vehicle



Sliding door button on the door sill (B-pillar)

You must reset the sliding door if there has been a malfunction or a voltage supply interruption.

If the sliding door is open; press button 
on the center console or sliding door button (3) on the door sill (B-pillar) and hold until the door is closed.

٥r

- Close the sliding door with the door handle  $(\rightarrow page 55).$
- Then briefly press button 
  on the center console or sliding door button (3) on the door sill (B-pillar) once, or pull the door handle (→ page 55) to completely open the sliding door.

The sliding door is operational.

#### Rear-end doors

Opening and closing the rear-end doors from outside

WARNING Risk of injury due to the rearend door swinging open

When you open a rear-end door, the following can occur:

- You or another person can be injured.
- A person may be struck by oncoming traf-

This is particularly the case if you open the rear-end door more than 90° or if it opens in an uncontrolled manner.

Even rear-end doors which are properly closed can swing open when the vehicle parked is on an incline or it is windy.


- Only open a rear-end door when the traffic conditions and surroundings permit.
- Always make sure that the rear-end doors are properly closed.

NOTE Damage to the rear-end doors due to objects obstructing their range of movement

When the rear-end doors are opened, any objects obstructing the range of movement of the rear-end doors can be damaged as well as the vehicle.

Make sure that there is sufficient clearance when opening the rear-end doors.

#### Opening the right rear-end door

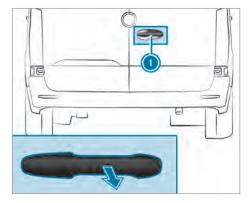

- Pull handle 1.
- Swing the rear-end door to the side until it engages.

#### Opening the left rear-end door



- Make sure that the right rear-end door is open and engaged.
- Pull release handle (1) in the direction of the arrow.

Swing the rear-end door to the side until it engages.

#### Opening the rear-end doors fully

- Open the a rear-end door outwards beyond the first detent (90°).
- Open the rear-end door fully.
  The rear-end door will stay in the stop position.

#### Closing the rear-end doors from outside

- Close the left rear-end door firmly from outside.
- Close the right rear-end door firmly from outside.

### Opening rear-end doors with door retainer more than 90°

**WARNING** Risk of injury due to the rearend door swinging open

When you open a rear-end door, the following can occur:

- You or another person can be injured.
- A person may be struck by oncoming traffic.

This is particularly the case if you open the rear-end door more than 90° or if it opens in an uncontrolled manner.

Even rear-end doors which are properly closed can swing open when the vehicle parked is on an incline or it is windy.

- Only open a rear-end door when the traffic conditions and surroundings permit.
- Always make sure that the rear-end doors are properly closed.
- I NOTE Damage to the rear-end doors due to objects obstructing their range of movement

When the rear-end doors are opened, any objects obstructing the range of movement of the rear-end doors can be damaged as well as the vehicle.

Make sure that there is sufficient clearance when opening the rear-end doors.



- Open the rear-end door to about 45°.
- Pull and hold the door retainer in the direction of the arrow.
- Open the rear door more than 90°, so that the door retainer cannot engage.
- Release the door retainer and open the rearend door fully.

### Opening/closing the rear-end doors from the inside

**WARNING** Risk of injury due to the rearend door swinging open

When you open a rear-end door, the following can occur:

- You or another person can be injured.
- A person may be struck by oncoming traffic.

This is particularly the case if you open the rear-end door more than 90° or if it opens in an uncontrolled manner.


Even rear-end doors which are properly closed can swing open when the vehicle parked is on an incline or it is windy.

- Only open a rear-end door when the traffic conditions and surroundings permit.
- Always make sure that the rear-end doors are properly closed.
- NOTE Damage to the rear-end doors due to objects obstructing their range of movement

When the rear-end doors are opened, any objects obstructing the range of movement of

the rear-end doors can be damaged as well as the vehicle.

Make sure that there is sufficient clearance when opening the rear-end doors.

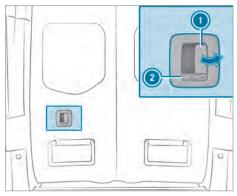

The symbol indicates that the rear-end door is unlocked.

- To unlock: slide latch ② to the left.
  The symbol is visible.
- ➤ **To open:** pull opening lever **(1)** and open the rear-end door.
- Swing the rear-end door to the side until it engages.
- ➤ To close: make sure that the left rear-end door is closed.
- Pull the right rear-end door firmly to by the door handle.
- To lock: slide latch ② to the right The 🕠 symbol is visible.

#### Partition sliding door


Opening and closing the partition sliding door

**WARNING** Risk of becoming trapped if the partition sliding door is not engaged


The partition sliding door may move on its own while the vehicle is in motion.

This can cause you or other people to become trapped.

Before every journey, close the partition sliding door and ensure that it is engaged.

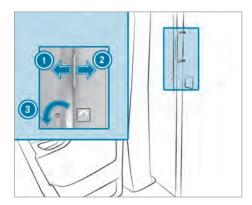

Partition from the cab

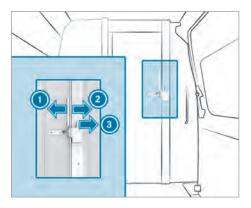


Partition from the cargo compartment

- ➤ To open: turn the key to the left ③ from the cab or push the lever to the right ⑤ from the cargo compartment.

  The sliding door is unlocked.
- Push the sliding door as far as it will go to the right from the cab or to the left from the cargo compartment.
- ➤ To close: push the sliding door to the left 
  from the cab or to the right 
  from the cargo compartment until it engages.
  You can lock the sliding door from the cab with the key.

#### **Electrical step**

#### Function of the electrical step

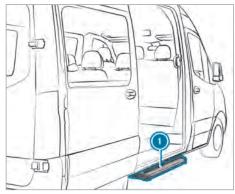

Your vehicle's sliding door may be equipped with an electrical step.

Electrical step ① automatically extends when the sliding door opens, and retracts after the sliding door closes. Electrical step ① is equipped with obstacle detection at the front. If the step meets an obstacle while extending, it stops. Once you have removed the obstacle, you must first close the sliding door then re-open it so that the step extends completely.

If the electrical step prevents loading, you can block it via obstacle detection when the sliding door opens. The electrical step then remains retracted and a fork-lift truck or other lifting vehicle can move closer to the cargo compartment.

The display shows the Step Not Extended See Operator's Manual message or the step not extended malfunction message.


When the ignition is switched off, a warning tone will sound if obstacle detection is blocked. The tone lasts for two minutes.


When the ignition is switched on, the warning tone will sound continuously.

If electrical step n is malfunctioning, the step may not extend or retract, or do so only partially. After a malfunction occurs, you must retract and lock electrical step n manually in order to continue your journey ( $\rightarrow$  page 60). Before passen-

gers exit the vehicle, inform them that electrical step (1) may be missing.


#### Releasing the electrical step in an emergency (manual retraction)

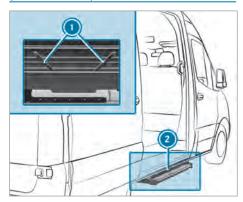

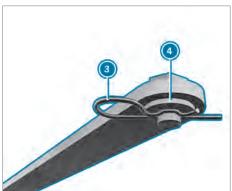


If the electrical step does not automatically retract, you must manually retract the step and lock it in order to continue driving.

- On the underside of step 2 on both bars 1 remove the spring cotters (3) from the pin.
- Remove the washers (4) and detach both bars.

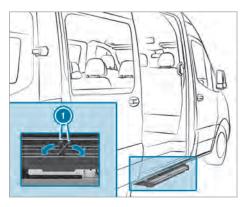

- Fold bars 1 into the step's housing.
- Slide the step into its housing.
- When securing the step for the first time, you must puncture a foil with the spring cotters.

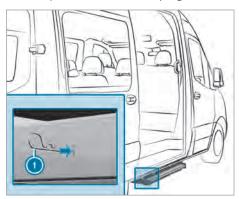

On both sides, insert spring cotters (1) through the housing's holes and into the step as far as they will go.

The step has been secured in its housing.

#### Side window

Opening and closing the side windows

WARNING Risk of entrapment when opening a side window

When opening a side window, parts of the body could be drawn in or become trapped between the side window and window frame.

When opening, make sure that nobody is touching the side window.

If someone is trapped, release the button immediately or pull it in order to close the side window again.

## **WARNING** Risk of becoming trapped when closing a side window


When closing a side window, body parts could be trapped in the closing area in the process.

- When closing, make sure that no body parts are in the closing area.
- If someone is trapped, release the button immediately or press the button in order to reopen the side window.

## **WARNING** Risk of becoming trapped when children operate the side windows

Children could become trapped if they operate the side windows, particularly when unattended

- Activate the child safety lock for the rear passenger compartment side windows.
- When leaving the vehicle, always take the SmartKey with you and lock the vehicle.
- Never leave children unattended in the vehicle.

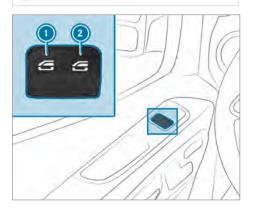

- To open manually: press and hold button or
- To close manually: pull and hold button or or

The windows in the front doors can also be operated automatically.

- To open completely: briefly press button ① or ② beyond the point of resistance. Automatic operation will start.
- To close completely: briefly pull button of or beyond the point of resistance.
   Automatic operation will start.
- ➤ To interrupt automatic operation: briefly press or pull button ① or ② again.
- (i) If an object blocks a side window during the automatic closing process, the side window will open again automatically. The automatic reversing function is only an aid and is not a substitute for your attentiveness.
- i If automatic operation of the side window does not work, there is no anti-entrapment function.

### Automatic reversing function of the side windows

If an object blocks a side window during the closing process, the side window will open again automatically. The automatic reversing function is only an aid and is not a substitute for your attentiveness.

During the closing process, make sure that no body parts are in the closing area.

▲ WARNING Risk of becoming trapped despite there being reversing protection on the side window

The reversing function will not react:

- · to soft, light and thin objects, e.g. fingers
- over the last ¼ in (4 mm) of the closing path
- during resetting
- when the side window is closed again manually immediately after automatic reversing

The reversing function cannot prevent someone from becoming trapped in these situations.

- During the closing process, make sure that no body parts are in the closing area.
- If someone becomes trapped, press the
   自 button to open the side window again.

### Ventilating the vehicle before starting a journey (convenience opening)

A

**WARNING** Risk of entrapment when opening a side window

When opening a side window, parts of the body could be drawn in or become trapped between the side window and window frame.

- When opening, make sure that nobody is touching the side window.
- Release the button immediately if somebody becomes trapped.

You can ventilate the vehicle before you start driving.

The "convenience opening" function can only be operated using the key. The key must be in close proximity to the driver's or co-driver door.

- Press and hold the button on the key.
  The following functions are performed:
  - · The vehicle is unlocked
  - The side windows are opened
- To interrupt convenience opening: release the button.

#### Closing the side windows from the outside (convenience closing)



**WARNING** Risk of entrapment due to not paying attention during convenience closing

When the convenience closing feature is operating, parts of the body could become trapped in the closing area of the side windows.

- When the convenience closing feature is operating, monitor the entire closing process and make sure that no body parts are in the closing area.
- Press and hold the button on the key.
  The following functions are performed:
  - · the vehicle is locked
  - · the side windows are closed
- To interrupt convenience closing: release the button.

#### Adjusting the side windows

The side windows must be readjusted after a malfunction or a voltage supply interruption.

- Switch on the power supply ( $\rightarrow$  page 106).
- Push both buttons on the power window and hold for approximately one second after the side window has closed.

#### Rectifying problems with the side windows

### A side window cannot be closed and you cannot see the cause

Check to see if there are any objects in the window guide.



**WARNING** Risk of becoming trapped or fatally injured if reversing protection is not activated

If you close a side window again immediately after it has been blocked, the side window will close with increased or maximum force. The reversing function is then not active and body parts may become trapped.

- Make sure that no parts of the body are in the closing area.
- To stop the closing process, release the button or press the button again to reopen the side window.

If a side window is obstructed during closing and reopens again slightly, you can proceed as follows:

Immediately after the window is obstructed, pull the corresponding button again until the side window has closed, and hold the button for an additional second.

The side window will be closed with increased force.

If the side window is obstructed again and reopens slightly, you can proceed as follows:

Repeat the previous step. The side window will be closed without the automatic reversing function.

### The side windows cannot be opened or closed using the convenience opening feature

Possible cause:

- The SmartKey battery is weak or discharged.
- Check the battery using the indicator lamp and replace it if necessary ( $\rightarrow$  page 48).

#### Anti-theft prevention

#### Function of the immobilizer

The immobilizer prevents your vehicle from being started without the correct key.

The immobilizer is automatically activated when the ignition is switched off, and deactivated when the ignition is switched on.

When leaving the vehicle, always take the key with you and lock the vehicle. If the key is left inside the vehicle, anyone can start the engine.

(i) In the event the engine does not start despite the vehicle's starter battery having sufficient charge, the immobilizer is defective. Contact a qualified specialist workshop or call 1-800-367-6372 (in the USA) or 1-800-387-0100 (in Canada).

#### ATA (Anti-Theft Alarm system)


#### Function of ATA (Anti-theft Alarm system)

If the ATA system is armed, a visual and audible alarm is triggered in the following situations:

- · a side door is opened
- · the rear-end door is opened
- the hood is opened
- the interior motion sensor is triggered
   (→ page 64)
- the tow-away alarm is triggered (→ page 64)

ATA is automatically armed after approximately five seconds in the following situation:

 after the vehicle has been locked with the SmartKey

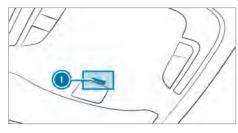

When the ATA system is armed, indicator lamp flashes in the overhead control panel.

ATA is automatically deactivated in the following situations:


- · After unlocking the vehicle with the SmartKey.
- After pressing the start/stop button with the SmartKey inside the vehicle.

#### Arming/disarming ATA (Anti-theft Alarm system)

If the alarm system is armed, a visual and audible alarm is triggered in the following situations:

- · A door is opened
- · The hood is opened
- The alarm will not be deactivated, even if you immediately close the open door that has triggered it, for example.

#### Switching on

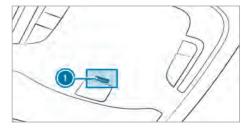

- Close all the doors.
- Lock the vehicle with the SmartKey.
  Indicator lamp (i) in the overhead control panel flashes.

#### Switching off

- Unlock the vehicle with the SmartKey. Indicator lamp (i) in the overhead control panel goes out.
- i The vehicle locks again automatically if you do not open a door within 40 seconds after unlocking the vehicle.

#### Stopping the alarm

Press the or button on the Smart-Key.

or

 Press the Start/Stop button with the SmartKey inside the vehicle.
 The alarm stops.

#### Function of the tow-away alarm

#### Function of the tow-away alarm

A visual and audible alarm is triggered if the inclination of the vehicle changes when the tow-away alarm is activated. This can be the case if the vehicle is raised on one side, for example.

#### Arming/disarming the tow-away alarm


#### Arming/disarming

- Lock the vehicle with the key. The tow-away alarm is automatically armed after about 40 seconds:
- Open the vehicle with the key. The tow-away alarm is deactivated.

The tow-away alarm is only armed when the following components are closed:

- the driver's door and the front-passenger door
- the side doors
- the rear-end doors

#### Deactivating

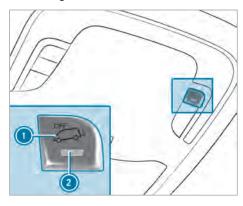

- Switch off the power supply ( $\rightarrow$  page 106).
- Press button ①.When the button is released, indicator lamp ②
  - When the button is released, indicator lamp (in the button lights up for approximately five seconds.
- Lock the vehicle with the key. The tow-away alarm is deactivated.

The tow-away alarm remains deactivated until you lock the vehicle again.

Deactivate the tow-away alarm when locking your vehicle in the following situations:

- when loading and/or transporting the vehicle on a ferry or car transporter, for example
- when parking the vehicle on a movable surface, such as a split-level garage

This will prevent false alarms.

#### Interior motion sensor

#### Function

If the activated the interior motion sensor detects motion in the vehicle interior, a visual and acoustic alarm is triggered. This can happen if someone reaches into the vehicle interior, for example.

#### Activating/deactivating the interior motion sensor

#### Activating

- Close the side windows.
- Make sure that nothing (such as mascots or coat hangers) is hanging on the inside rearview mirror or on the grab handles on the headliner. This will prevent false alarms.
- Lock the vehicle with the key. The interior motion sensor is activated after approximately 30 seconds.


The interior motion sensor is only activated when the following components are closed:

- · the driver's door and the co-driver door
- the side doors
- the rear-end doors

#### Deactivating

 Unlock the vehicle with the key.
 The interior motion sensor automatically switches off.

### Deactivating

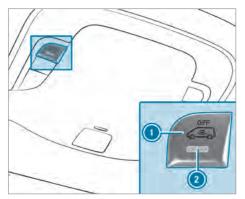

- Switch off the power supply ( $\rightarrow$  page 106).
- Press button ①.

  When the button is released, indicator lamp ② in the button lights up for about five seconds.
- Lock the vehicle with the key.

  The interior motion sensor is deactivated.

The interior motion sensor remains deactivated until you lock the vehicle again.

Deactivate the interior motion sensor when locking your vehicle in the following situations:

- if there are people or animals remaining inside
- if the side windows remain open
- when transporting the vehicle on a ferry or car transporter, for example

This will prevent false alarms.

#### Notes on the correct driver's seat position

A

**WARNING** Risk of accident due to adjusting the vehicle settings while the vehicle is in motion

You could lose control of the vehicle in the following situations in particular:

- If you adjust the driver's seat, the head restraint, the steering wheel or the mirror while the vehicle is in motion
- If you fasten your seat belt while the vehicle is in motion
- Before starting the engine: In particular, adjust the driver's seat, head restraint, steering wheel and mirror, and fasten your seat belt.



Ensure the following when adjusting steering wheel (3), seat belt (2) and driver's seat (1):

- You are sitting as far away from the driver's airbag as possible.
- · You are sitting in an upright position.
- Your thighs are gently supported by the seat cushion.
- Your legs are not fully extended and you can reach the pedals easily.
- The back of your head is supported at eye level by the middle part of the head restraint
- You can hold the steering wheel with your arms slightly bent.
- You can move your legs without any restrictions.
- · You can see all of the instrument displays well.

- You have a good overview of the traffic conditions.
- Your seat belt sits snugly against your body and passes across the center of your shoulder and across your hips in the pelvic area.

#### Seats

Adjusting the front seats mechanically (without Seat Comfort Package)



**WARNING** Risk of becoming trapped if the seats are adjusted by children

Children could become trapped if they adjust the seats, particularly when unattended.

- When leaving the vehicle, always take the SmartKey with you and lock the vehicle.
- Never leave children unattended in the vehicle.



**WARNING** Risk of becoming trapped when adjusting the seat

When you adjust a seat, you or other vehicle occupants could become trapped, e.g. on the seat guide rail.

When adjusting a seat, make sure that no one has any part of their body within the sweep of the seat.

Observe the safety notes on "Airbags" and "Children in the vehicle".



**WARNING** Risk of accident due to the driver's seat not being engaged

The driver's seat may move unexpectedly while driving.

This could cause you to lose control of the vehicle.

Always make sure that the driver's seat is engaged before starting the vehicle.

WARNING Risk of accident due to adjusting the vehicle settings while the vehicle is in motion

You could lose control of the vehicle in the following situations in particular:

- If you adjust the driver's seat, the head restraint, the steering wheel or the mirror while the vehicle is in motion
- If you fasten your seat belt while the vehicle is in motion
- Before starting the engine: In particular, adjust the driver's seat, head restraint, steering wheel and mirror, and fasten your seat belt.

## **WARNING** Risk of becoming trapped if the seat height is adjusted carelessly

If you adjust the seat height carelessly, you or other vehicle occupants could be trapped and thereby injured.

Children in particular could accidentally press the electrical seat adjustment buttons and become trapped.

- While moving the seats, make sure that hands or other body parts do not get under the lever assembly of the seat adjustment system.
- ▲ WARNING Risk of injury due to head restraints not being installed or being adjusted incorrectly

If head restraints have not been installed or have not been adjusted correctly, there is an increased risk of injury in the head and neck area, e.g. in the event of an accident or when braking.

- Always drive with the head restraints installed.
- Before driving off, make sure for every vehicle occupant that the center of the head restraint supports the back of the head at about eye level.

Do not interchange the head restraints of the front and rear seats. Otherwise, you will not be able to set the height and inclination of the head restraints to the correct position.

Using the head restraint fore-and-aft adjustment, adjust the head restraint so that it is as close to the back of the head as possible.

### **WARNING** Risk of injury or death due to an incorrect seat position


The seat belt does not offer the intended level of protection if you have not moved the seat backrest to an almost vertical position.

In particular, you could slip beneath the seatbelt and become injured.

- Adjust the seat properly before beginning your journey.
- Always ensure that the seat backrest is in an almost vertical position and that the shoulder belt is routed across the center of your shoulder.
- I NOTE Damage to the seats when moving the seats back

The seats may be damaged by objects when moving the seats back.

When moving the seats back, make sure that there are no objects in the footwell, under or behind the seats.

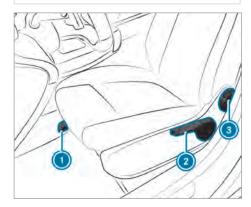

- Seat fore-and-aft position
- Seat height
- Seat backrest inclination
- To adjust the seat fore-and-aft position: lift lever and slide the seat into the desired position. Ensure that the seat is engaged.
- To set the seat height: keep on pressing or pulling lever (2) until the required seat height has been reached.
- To adjust the seat backrest inclination: rotate handwheel forwards and backwards until the desired position has been reached.

#### Adjusting the front seats mechanically (with Seat Comfort Package)



**WARNING** Risk of becoming trapped if the seats are adjusted by children

Children could become trapped if they adjust the seats, particularly when unattended.

- When leaving the vehicle, always take the SmartKey with you and lock the vehicle.
- Never leave children unattended in the vehicle.

WARNING Risk of becoming trapped when adjusting the seat

When you adjust a seat, you or other vehicle occupants could become trapped, e.g. on the seat guide rail.

When adjusting a seat, make sure that no one has any part of their body within the sweep of the seat.

Observe the safety notes on "Airbags" and "Children in the vehicle".



▲ WARNING Risk of accident due to the driver's seat not being engaged

The driver's seat may move unexpectedly while driving.

This could cause you to lose control of the vehicle.

Always make sure that the driver's seat is engaged before starting the vehicle.



▲ WARNING Risk of accident due to adjusting the vehicle settings while the vehicle is in motion

You could lose control of the vehicle in the following situations in particular:

- If you adjust the driver's seat, the head restraint, the steering wheel or the mirror while the vehicle is in motion
- · If you fasten your seat belt while the vehicle is in motion
- Before starting the engine: In particular, adjust the driver's seat, head restraint, steering wheel and mirror, and fasten your seat belt.

WARNING Risk of becoming trapped if the seat height is adjusted carelessly

If you adjust the seat height carelessly, you or other vehicle occupants could be trapped and thereby injured.

Children in particular could accidentally press the electrical seat adjustment buttons and become trapped.

While moving the seats, make sure that hands or other body parts do not get under the lever assembly of the seat adjustment system.

**WARNING** Risk of injury due to head restraints not being installed or being adjusted incorrectly

If head restraints have not been installed or have not been adjusted correctly, there is an increased risk of injury in the head and neck area, e.g. in the event of an accident or when braking.

- Always drive with the head restraints installed.
- Before driving off, make sure for every vehicle occupant that the center of the head restraint supports the back of the head at about eye level.

Do not interchange the head restraints of the front and rear seats. Otherwise, you will not be able to set the height and inclination of the head restraints to the correct position.

Using the head restraint fore-and-aft adjustment, adjust the head restraint so that it is as close to the back of the head as possible.



**WARNING** Risk of injury or death due to an incorrect seat position

The seat belt does not offer the intended level of protection if you have not moved the seat backrest to an almost vertical position.

In particular, you could slip beneath the seatbelt and become injured.

- Adjust the seat properly before beginning your journey.
- Always ensure that the seat backrest is in an almost vertical position and that the shoulder belt is routed across the center of your shoulder.

! NOTE Damage to the seats when moving the seats back

The seats may be damaged by objects when moving the seats back.

When moving the seats back, make sure that there are no objects in the footwell, under or behind the seats.



Example image of comfort suspension seat

- Seat cushion length
- Seat backrest inclination
- Seat height
- Seat cushion inclination
- Seat fore-and-aft position
- Seat suspension
- Vibration limiting
- ➤ To adjust the seat cushion length: lift lever ① and slide the front part of the seat cushion forwards or backwards.
- ➤ To adjust the seat backrest inclination: rotate handwheel ② forwards and backwards until the desired position has been reached.
- To adjust the seat height: pull or push lever (3) until the desired position has been reached.
- ➤ To adjust the seat cushion inclination: rotate handwheel oforwards and backwards until the desired position has been reached.
- ➤ To adjust the seat fore-and-aft position: lift lever ⑤ and slide the seat into the desired position.
- Ensure that the seat is engaged.
- To adjust the seat suspension: take your weight off the seat.

- Using handwheel ⊚, set the body weight (88 lbs (40 kg) to 265 lbs (120 kg)) so that the seat suspension works optimally. If you set a higher weight, the seat suspension will become firmer. The seat will then not vibrate as much. If the seat vibrates often and significantly, you can engage it in the lower area.
- To engage vibration limiting: turn lever upwards.

The next time the seat vibrates, it will engage.

➤ To release vibration limiting: turn lever ② to the right.

The seat can vibrate.

#### Adjusting the front seat electrically

**WARNING** Risk of becoming trapped if the seats are adjusted by children

Children could become trapped if they adjust the seats, particularly when unattended.

- When leaving the vehicle, always take the SmartKey with you and lock the vehicle.
- Never leave children unattended in the vehicle.

The seats can be adjusted while the ignition is off.

**WARNING** Risk of becoming trapped when adjusting the seats

When you adjust a seat, you or other vehicle occupants could become trapped, e.g. on the seat guide rail.

When adjusting a seat, make sure that no one has any body parts in the sweep of the seat.

Observe the safety notes on "Airbags" and "Children in the vehicle".

**WARNING** Risk of accident due to the driver's seat not being engaged

If the driver's seat is not engaged, it could move unexpectedly while the vehicle is in motion.

This could cause you to lose control of the vehicle.

Always make sure that the driver's seat is engaged before starting the vehicle.

WARNING Risk of injury from adjusting the vehicle settings while the vehicle is in motion

You could lose control of the vehicle in the following situations:

- · if you adjust the driver's seat, the head restraint, the steering wheel or the mirror while the vehicle is in motion
- if you fasten your seat belt while the vehicle is in motion
- ▶ Before starting the engine: adjust the driver's seat, the head restraint, the steering wheel or the mirror and fasten vour seat belt.

**WARNING** Risk of becoming trapped if the seat height is adjusted carelessly

If you adjust the seat height carelessly, you or other vehicle occupants could be trapped and thereby injured.

Children in particular could accidentally press the electrical seat adjustment buttons and become trapped.

While moving the seats, make sure that hands or other body parts do not get under the lever assembly of the seat adjustment system.

**WARNING** Risk of injury due to head restraints which are not installed or are adjusted incorrectly

If head restraints are not installed or are adjusted incorrectly, the head restraints cannot provide protection as intended.

There is an increased risk of injury in the head and neck area, e.g. in the event of an accident or when braking.

- Always drive with the head restraints installed.
- Before driving off, make sure for every vehicle occupant that the center of the head restraint supports the back of the head at about eye level.

Do not interchange the head restraints of the front and rear seats. Otherwise, you will not be able to set the height and inclination of the head restraints to the correct position.

Using the head restraint fore-and-aft adjustment, adjust the head restraint so that it is as close to the back of the head as possible.



WARNING Risk of injury or death due to incorrect seat position

The seat belt does not offer the intended level of protection if you have not moved the seat backrest to an almost vertical position.

When braking or in the event of an accident, you could slide underneath the seat belt and sustain abdominal or neck injuries, for exam-


- Adjust the seat properly before beginning your journey.
- Always ensure that the seat backrest is in an almost vertical position and that the shoulder section of your seat belt is routed across the center of your shoul-



**NOTE** Damage to the seats when moving the seats back


The seats may be damaged by objects when moving the seats back.

When moving the seats back, make sure that there are no objects in the footwell, under or behind the seats.

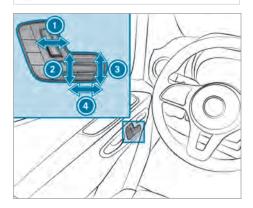

- Seat backrest inclination
- Seat height
- Seat cushion inclination
- Seat fore-and-aft position
- Save the settings with the memory function  $(\rightarrow page 71)$ .

## Setting 4-way lumbar support

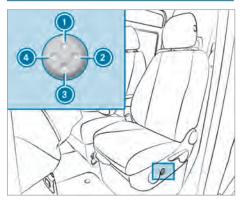

- Higher
- Weaker
- 3 Lower
- 4 Stronger
- Use buttons 1 to 2 to adjust the backrest curvature individually to your spine.

## Operating the memory function

**WARNING** Risk of an accident if the memory function is used while driving

If you use the memory function on the driver's side while driving, you could lose control of the vehicle as a result of the adjustments being

- Only use the memory function on the driver's side when the vehicle is stationary.
- ▲ WARNING Risk of entrapment when adjusting the seat with the memory function

When the memory function adjusts the seat, you and other vehicle occupants – particularly children – could become trapped.

- During the adjustment process of the memory function, make sure that no one has any body parts in the sweep of the seat.
- If somebody becomes trapped, immediately release the memory function position button.
  - The adjustment process is stopped.

**WARNING** Risk of entrapment if the memory function is activated by children


Children could become trapped if they activate the memory function, particularly when unattended.

- Never leave children unattended in the vehicle.
- When leaving the vehicle, always take the key with you and lock the vehicle.

The memory function can be used when the ignition is switched off.

## Storing seat settings

Seat settings for up to three people can be stored and called up using the memory function. You can adjust the seat and the backrest.

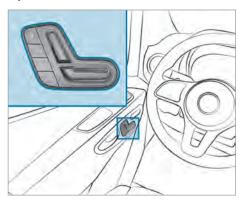

- Adjust the seat into the desired position.
- Press memory button M together with one of the preset position buttons 1, 2 or 3. An acoustic signal sounds. The settings are stored.
- ➤ To call up: press and hold the relevant preset position button 1, 2 or 3 until the front seat is in the stored position.

## Rotating the front seats

**WARNING** Risk of injury or fatal injuries due to the driver's seat and front passenger seat not being engaged

In this situation, the restraint systems cannot perform their intended protective function.

- Engage the driver's seat- and front passenger seat in the direction of travel before starting the engine.
- WARNING Risk of accident due to adjusting the vehicle settings while the vehicle is in motion

You could lose control of the vehicle in the following situations in particular:

- If you adjust the driver's seat, the head restraint, the steering wheel or the mirror while the vehicle is in motion
- If you fasten your seat belt while the vehicle is in motion
- Before starting the engine: In particular, adjust the driver's seat, head restraint, steering wheel and mirror, and fasten your seat belt.



You can rotate the driver's and front passenger seats by 50° and 180°. The seats engage both in and opposite to the direction of travel as well as at 50° towards the exit.

- Ensure that the parking brake is applied and the brake lever is down as far as it will go (→ page 136).
- When rotating the seat, open the respective front door in order to avoid scraping against the door trim.
- Adjust the steering wheel in such a way that there is sufficient clearance to rotate and adjust the driver's seat (→ page 78).
- Slide the front passenger seat forward before rotating it (→ page 66).

- ➤ To rotate the seat: push lever towards the door and rotate the seat slightly inwards.

  The turning device will be unlocked.
- Release lever (1) again.
- Rotate the seat outwards or inwards into the required position.

## Folding the co-driver bench seat cushion forwards and backwards




- To fold the seat cushion forwards: lift the seat cushion out of front anchorage (1).
- Pull the seat cushion out of rear anchorage and move it slightly forwards.
- Fold the rear edge of the seat cushion upwards.
- (i) You can stow individual objects in the stowage space beneath the co-driver bench seat.
- To fold the seat cushion backwards: fold the rear edge of the seat cushion downwards.
- Slide the seat cushion under the seat backrest into rear anchorage ②.
- Push the front seat cushion downwards until it engages in front anchorage (1).

## Folding the folding seat up or down

**WARNING** Risk of injury when using the folding seat due to inserted key

When the key is in the lock of the partition sliding door, it can come into contact with the person on the folding seat. Always remove the key from the partition sliding door before a person sits on the folding seat.

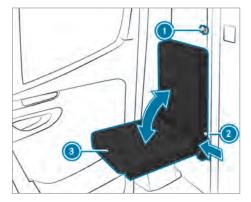

- Remove key ① from the partition sliding door.
- Press the push button on catch ② and fold seat cushion ③ up or down.
- Release push button on catch ② when seat cushion ③ reaches its end position.
- Move seat cushion (3) until it has locked. The push button on catch (2) must be completely flush with the seat frame.

#### Installing and removing the rear bench seat

**WARNING** Risk of injury due to incorrect installation of the rear bench seat

If the rear seat is unsuitable, the seat belts may not perform their intended protective function.

- Install the rear seat bench as described and only in the direction of travel.
- Installation of the rear bench seat in a face-to-face position is not permitted.
- Use only rear bench seats that have been approved by Mercedes-Benz for your vehicle.
- **WARNING** Risk of injury if the rear bench seat is not locked in place

If the rear seat is not stable, it may tip over during a journey.

Before setting off, ensure that the rear bench seat is engaged. The red indicator

- tabs must not be visible on the release handle.
- If the red indicator tabs are visible on the release handle, re-engage the rear bench seat.

## **WARNING** Risk of injury when installing and removing the rear bench seat

When you install or remove the rear bench seat, body parts such as feet may become trapped when the rear bench seat is tipped.

- When installing and removing the rear bench seat, ensure that there are no body parts between the rear bench seat and the floor.
- NOTE Damage to the rear bench seat rollers due to misuse

If the rear bench seat is used improperly or removed incorrectly, the rear bench seat rollers may be damaged.


- If the rear bench seat is in the seat shell, do not pull it towards the rear-end door. Roll the rear seat only beside the seat shells.
- Do not roll or use the rear bench seat as a means of transport when removed.

## Installation position of three-person and four-person rear bench seat with strut

The three-person rear bench seat is available with or without a strut. The four-person rear bench seat is available only with a strut.


The strut is located on the back of the rear bench seat.

Install the three-person rear bench seat with strut only in the third row of seats (above the rear axle). Install the four-person rear bench seat only on the last row of seats.

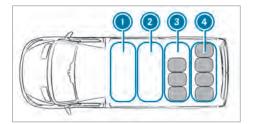

Vehicles with four rows of seats


- First row of seats
- Second row of seats
- 3 Third row of seats: three-person rear bench seat with strut
- Fourth row of seats: four-person rear bench seat with strut
- Install the three-person rear bench seat on the third row of seats 3.
- Install the four-person rear bench seat on the fourth row of seats (4).

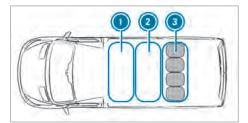

Vehicles with three rows of seats

- First row of seats
- Second row of seats
- Third row of seats: four-person rear bench seat with strut
- Install the four-person rear bench seat on the third row of seats (3).

## Removing the rear bench seat

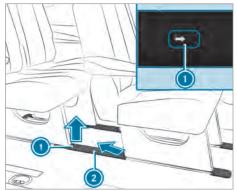


Perform these tasks carefully with the assistance of a second person.

To remove the covers of the seat shells: push retaining clip (i) in the direction of the arrow and detach cover (2) by pushing it up and back at an angle.



- Push release handle for the bench seat all the way down and hold it there. At the same time, tilt the bench seat backwards slightly using the release handle and pull it slightly backwards.
- ► Let go of the release handle.

  The locks on the bench seat legs will be unlocked and red indicator tabs ③ on the housing of release handle ② will be visible.
- Hold the unlocked bench seat by grab handles (i) and pull backwards slightly.

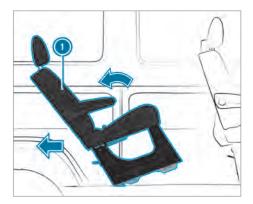


- Tilt bench seat backwards and pull it out of the seat shells.
- i If the bench seat cannot be pulled out of the seat shells, the bench seat may be wedged in the seat anchorage. This can happen if the bench seat is tilted too far backwards.

If the seat cannot be pulled out of the seat shells, proceed as follows:

- Tilt the bench seat forwards without engaging it.
- Pull the bench seat backwards again using release handle ②.
- ➤ Tilt the bench seat slightly backwards and pull it out of the seat shells.
- To remove or store the bench seat, place it next to the seat shells and roll it towards the rear-end doors.

or

- Lift the bench seat out from the side to store it.
- i It may be necessary for the bench seats in front or behind to be removed.

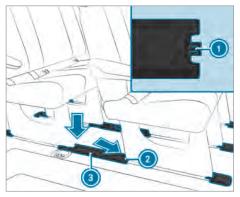

- ➤ To attach the covers of the seat shells: hold cover ③ such that retaining lug ⑥ is pointing towards rear seat anchorage ②.
- Insert cover (a) into rear seat anchorage (b) pushing it downwards at an angle and then clip it to the seat shell.
- After removing the rear bench seats, ensure that the rear bench seats stand firmly and cannot tip over when in storage.

Please note that the metallic seat support in the vehicle floor will heat up during a journey if the rear seating has been removed.

## Installing the rear bench seat




Warning notice on the rear bench seat

Secure engagement of the rear bench seat is guaranteed only if the seat anchorages are kept clean and free of objects.

 In vehicles registered as passenger vehicles, observe the maximum permitted number of seats.

- Remove the covers of the seat shells as described under "Removing the rear bench seat".
- Ensure that there are no objects in the seat anchorages and seat shells.
- Position the bench seat behind the installation position.
- Hold the bench seat by the grab handles and tilt it backwards.
- Roll the bench seat forwards on the level plastic carriers.
- Ensure that the rear legs of the bench seat are engaged.

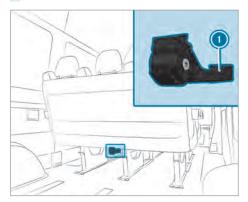

- ➤ Tilt the bench seat forwards firmly until the locks on the front legs of the bench seat engage audibly.
  - The locks on the front legs of the bench seat will now be locked and the red indicator tabs on the housing of release handle (1) should no longer be visible.
- i If the red indicator tabs on the release handle housing are visible, the bench seat is not correctly engaged.

If the bench seat is not correctly engaged, you can rectify this situation as follows:

- Unlock the bench seat again and tilt it forwards firmly until the locks on the bench seat front legs engage audibly.
- Attach the covers of the seat shells as described under "Removing the rear bench seat".

## Adjusting the seat backrest of the rear bench seat



- (i) If a partition is installed: the rear bench seat must not come into contact with the partition at any time.
- Move the seat backrest to the desired position.

#### Head restraints

## Adjusting the head restraint mechanically

**WARNING** Risk of accident due to adjusting the vehicle settings while the vehicle is in motion

You could lose control of the vehicle in the following situations in particular:

- If you adjust the driver's seat, the head restraint, the steering wheel or the mirror while the vehicle is in motion
- If you fasten your seat belt while the vehicle is in motion
- Before starting the engine: In particular, adjust the driver's seat, head restraint, steering wheel and mirror, and fasten your seat belt.
- ★ WARNING Risk of injury due to head restraints not being installed or being adjusted incorrectly

If head restraints have not been installed or have not been adjusted correctly, there is an increased risk of injury in the head and neck area, e.g. in the event of an accident or when braking.

Always drive with the head restraints installed.

Before driving off, make sure for every vehicle occupant that the center of the head restraint supports the back of the head at about eye level.

Do not interchange the head restraints of the front and rear seats. Otherwise, you will not be able to set the height and inclination of the head restraints to the correct position.

Using the head restraint fore-and-aft adjustment, adjust the head restraint so that it is as close to the back of the head as possible.



Head restraint (example of luxury head restraint on the driver's seat)

- ➤ To raise: pull the head restraint upwards into the desired position and ensure that it engages.
- i Use the head restraint only when it is engaged.
- ➤ To lower: press release button ②, slide the head restraint downwards into the desired position and ensure that it engages.
- i Use the head restraint only when it is engaged.
- ➤ To move forwards: press release button and pull the head restraint forwards until it engages in the desired position.
- ➤ To move backwards: press release button 
  and slide the head restraint backwards into the desired position.
- ► To remove: press release button ② and pull the head restraint up and out.
- To install: press the head restraint with detent into the holes on the left-hand side when

viewed in the direction of travel until it engages.

## Switching the seat heating on and off

**WARNING** Risk of burns due to repeatedly switching on the seat heating

Repeatedly switching on the seat heating can cause the seat cushion and seat backrest padding to become very hot.

The health of persons with limited temperature sensitivity or a limited ability to react to high temperatures may be affected or they may even suffer burn-like injuries.

Do not repeatedly switch on the seat heating.

To protect against overheating, the seat heating may be temporarily deactivated after it is switched on repeatedly.


NOTE Damage to the seats caused by objects or documents when the seat heating is switched on

When the seat heating is switched on, overheating may occur due to objects or documents placed on the seats, e.g. seat cushions or child seats. This could cause damage to the seat surface.

Make sure that no objects or documents are on the seats when the seat heating is switched on.

## Requirements:

• The power supply has been switched on.

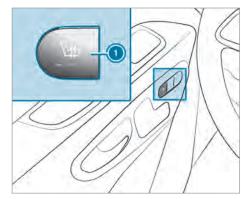

- ➤ To switch on: press button ①.
  All indicator lamps on the button light up.
- ➤ To lower the level: press button ① until the required heating level is reached.

  Depending on the heating level, one to three indicator lamps light up.
- ➤ To switch off: press button **(1)** until all indicator lamps are off.
- i The seat heating automatically switches back out of the three heating levels after 8, 10 and 20 minutes until the seat heating switches off.

## Steering wheel

## Adjusting the steering wheel

▲ WARNING Risk of accident due to adjusting the vehicle settings while the vehicle is in motion

You could lose control of the vehicle in the following situations in particular:

- If you adjust the driver's seat, the head restraint, the steering wheel or the mirror while the vehicle is in motion
- If you fasten your seat belt while the vehicle is in motion
- Before starting the engine: In particular, adjust the driver's seat, head restraint, steering wheel and mirror, and fasten your seat belt.
- **WARNING** Risk of entrapment for children when adjusting the steering wheel

Children could injure themselves if they adjust the steering wheel.

- Never leave children unattended in the vehicle.
- When leaving the vehicle, always take the SmartKey with you and lock the vehicle.

## Adjusting the steering wheel



- Lever
- Steering column height
- 3 Steering column fore-and-aft adjustment
- To unlock: swing lever to down as far as it will go.

The steering wheel is unlocked.


➤ To lock: pull lever ① up as far as it will go. The steering wheel is locked.

## Stowage areas

Overview of the front stowage compartments

## Overview of the front storage compartments Observe the notes on loading the vehicle


Observe the notes on loading the vehicle ( $\rightarrow$  page 203).

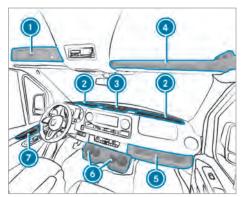

- Lockable compartment above windshield (subject to a maximum load of 4 lb (2 kg))
- Windshield storage compartment with two cup holders/ashtray storage space

- Storage compartment with cover, depending on specification
- © Center console storage compartment with USB port, charging interface, NFC interface and 12 V socket
- Storage compartment above windshield (subject to a maximum load of 5 lb (2.5 kg))
- (a) Co-driver side storage compartment (subject to a maximum load of 11 lb (5 kg))
- $\bigcirc$  Cup holders ( $\rightarrow$  page 79)
- Storage compartment in the doors

## Information about the bottle holder

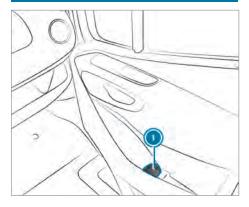

Bottle holder in the front doors (example: front passenger door)

### Cup holders

## Overview of cup holders in the center console

★ WARNING - Risk of accident or injury when using the cup holder while the vehicle is moving

The cup holder cannot secure containers while the vehicle is moving.

If you use a cup holder while the vehicle is moving, the container may be flung around and liquids may be spilled. The vehicle occupants may come into contact with the liquid and if it is hot, they could be scalded. You could be distracted from traffic conditions and you may lose control of the vehicle.

Only use the cup holder when the vehicle is stationary.

- Only use the cup holder for containers of the right size.
- Close the container, particularly if the liquid is hot.



The cup holders for the driver and co-driver are in the center console.


Key holder ① for vehicles with a reduced antenna detection range (KEYLESS-START) is located in the driver's cup holder. With manual transmission, the key holder is located in the co-driver's cup holder.

## Opening the cup holder in the rear passenger compartment

**WARNING** Risk of injury when getting out, due to extended cup holder

If the cup holder in the rear passenger compartment is extended when you are getting out, you may bump into it.

Before getting out, slide the cup holder back under the rear bench seat.

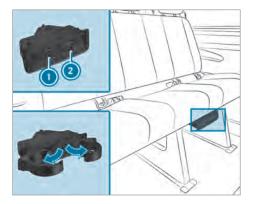

- To open: press cup holder 1 or 2.
- Fold out the cup holder.
- To close; slide cup holder ① or ② back in until it engages.

## Ashtray and cigarette lighter

## Using ashtrays

- To use the ashtray: place the closed ashtray in a cup holder in the windshield storage compartments.
- Check that the ashtray is seated securely.
- i Do not place the ashtray in the center console cup holders. It cannot sit securely here.

## Using the cigarette lighter in the center console

**WARNING** - Risk of fire and injury from hot cigarette lighter

You can burn yourself if you touch the hot heating element or the socket of the cigarette lighter.

In addition, flammable materials may ignite if:

- · you drop the hot cigarette lighter
- a child holds the hot cigarette lighter to objects, for example
- Always hold the cigarette lighter by the knob.
- Always make sure that the cigarette lighter is out of reach of children.
- Never leave children unattended in the vehicle.

## Requirements:

The ignition is switched on



Press in cigarette lighter ①.
The cigarette lighter will pop out when the heating element is red-hot.


## Sockets

## Using the 12 V sockets

### Requirements:

Only devices with a maximum power consumption of 180 W (15 A) may be connected.

### 12 V socket in storage compartment

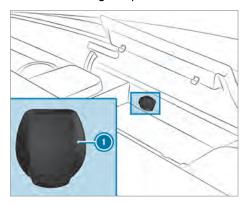

- Open the lid of the storage compartment in the center console.
- Fold up cover 1 of the socket.
- Insert the plug of the device.

- i Depending on the vehicle equipment, the vehicle has additional 12 V sockets:
  - In the lower control panel in the front center console
  - · In the driver's seat
  - · In the cargo compartment

## Using the 115 V socket in the lower control panel

**DANGER** Risk of fatal injury due to damaged connecting cables or sockets

If a suitable device is connected, the  $115\ V$  socket will be carrying a high voltage. If the connecting cable or the  $115\ V$  socket is pulled out of the trim or is damaged or wet, you could receive an electric shock.

- Only use dry and damage-free connecting cables.
- ► When the ignition is switched off, ensure that the 115 V socket is dry.
- If the 115 V socket is damaged or gets pulled out of the paneling, immediately have the socket checked or replaced at a qualified specialized workshop.
- Never plug the connecting cable into a 115 V socket that is damaged or has been pulled out of the trim.

**A** DANGER Risk of fatal injury due to incorrect handling of the socket

You could receive an electric shock:

- · if you reach into the socket.
- if you insert unsuitable devices or objects into the socket.
- Do not reach into the socket.
- Only connect suitable devices to the socket.

## Requirements:

- The devices must be equipped with a suitable plug which conforms to the standards specific to the country you are in.
- Only devices up to a maximum of 150 watts are permitted.
- · Do not use multiple socket outlets.




- Open flap 3.
- Insert the plug of the device into 115 V socket

  1.

When the on-board electrical system voltage is sufficient, indicator lamp ② lights up.

If you will not be using the 115 V power socket, keep the flap closed.

## Charging a mobile phone using the USB socket in the rear

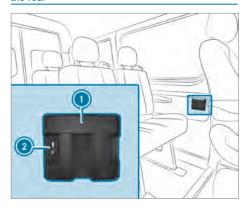

Place the mobile phone in stowage compartment and connect it to USB port to charge.

Wirelessly charging the mobile phone and coupling with the exterior antenna

Notes on wirelessly charging the mobile phone

**WARNING** Risk of injury due to objects being stowed incorrectly

If objects in the vehicle interior are stowed incorrectly, they can slide or be thrown around and hit vehicle occupants. In addition, cup holders, open storage spaces and mobile phone receptacles cannot always retain all objects within.

There is a risk of injury, particularly in the event of sudden braking or abrupt changes in direction.

- Always store objects such that they cannot be thrown around in such situations.
- Always make sure that objects do not protrude from storage spaces, parcel nets or storage nets.
- Close the lockable storage spaces before starting a journey.
- Stow and secure objects that are heavy, hard, pointed, sharp-edged, fragile or too large in the cargo compartment.

Comply with the instructions for loading the vehicle ( $\rightarrow$  page 203).

**WARNING** Risk of fire from placing objects in the mobile phone storage compartment

Placing other objects in the mobile phone storage compartment could constitute a fire hazard.

- Apart from a mobile phone, do not place any other objects in the mobile phone storage compartment, especially those made of metal.
- NOTE Damage to objects caused by placing them in the mobile phone storage compartment

If objects are placed in the mobile phone storage compartment, they may be damaged by electromagnetic fields.

Do not place credit cards, data storage devices, ski passes or other objects sensitive to electromagnetic fields in the mobile phone storage compartment. NOTE Damage to the mobile phone stowage compartment caused by liquids

If liquids enter the mobile phone stowage compartment, the compartment may be damaged.

Ensure that no liquids enter the mobile phone stowage compartment.

Observe the following notes on wireless charging:


- The charging function is only available when the drive system has been started.
- In some cases, it may not be possible to charge small mobile phones at every position of the mobile phone compartment.
- It may not be possible to charge large mobile phones that do not rest in the mobile phone receptacle.
- The mobile phone can warm up during the charging process. This depends on the applications (apps) currently running.
- For more efficient charging, the protective case should be removed from the mobile phone. Protective cases designed for wireless charging are an exception.
- When charging, the mat should be used if possible.

## Charging the mobile phone in the front wirelessly

## Requirements:

 The mobile phone must be suitable for wireless charging. A list of compatible mobile phones can be found at:

https://www.mercedes-benz.com/connect

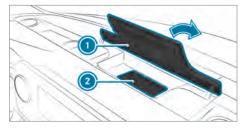

 Open the flap of storage compartment ① above the media display. Place the mobile phone as centrally as possible with the display facing upwards on the marked surface of mat ②.

When the charging symbol is shown in the multimedia system, the mobile phone is being charged.

Malfunctions during charging are shown in the multimedia system display.

i The mat can be removed for cleaning, e.g. with clean, lukewarm water.


## Installing or removing the floor mats

**WARNING** Risk of accident due to objects in the driver's footwell

Objects in the driver's footwell may impede pedal travel or block a depressed pedal.

This jeopardizes the operating and road safety of the vehicle.

- Stow all objects in the vehicle securely so that they cannot get into the driver's footwell.
- Always install the floor mats securely and as prescribed in order to ensure that there is always sufficient room for the pedals.
- Do not use loose floor mats and do not place floor mats on top of one another.

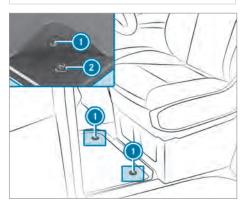

- To install: press pushbuttons onto holders
- To remove: pull the floor mats off holders 2.

## **Exterior lighting**

## Notes on changing the lights when driving abroad


Vehicles with halogen or static LED headlamps: Changing the headlamps is not necessary. The legal requirements will also be fulfilled in countries with left and right-hand traffic.

## Information about lighting systems and your responsibility

The vehicle's various lighting systems are only aids. The vehicle driver is responsible for adjusting the vehicle's lighting to the prevailing light, visibility, statutory conditions and traffic conditions.

## Light switch

## Operating the light switch

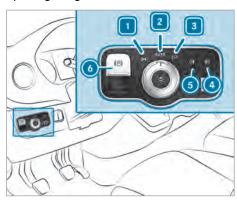

- 1 2005 Activates or deactivates parking lamps and license plate and instrument lighting.
- 2 Auto Activates or deactivates automatic driving lights/daytime running lamps (preferred light switch position).
- Activates or deactivates low beam/ high beam.
- Activates or deactivates fog lamp.
- ► ⑤ 0‡ Activates or deactivates rear fog lamp.
- Applies or releases the electric parking brake (→ page 137).
- (i) If you hear a warning tone when exiting the vehicle, the lights may still be on.

- The turn signal light, the high beam and the high-beam flasher are operated with the combination switch (→ page 85).
- Leaving the parking lamps on for several hours drains the battery.

  If the battery charge is very low, the parking lamps will switch off automatically to enable the next vehicle start.

## Automatic driving lights function

**WARNING** Risk of accident when the low beam is switched off in poor visibility

When the light switch is set to AUTO, the low beam may not be switched on automatically if there is fog, snow or other causes of poor visibility such as spray.

In such cases, turn the light switch to

The automatic driving lights are only an aid. Responsibility for vehicle lighting rests with you. Turn the light switch from AUTO to D immediately in the event of fog, snow or spray. Otherwise, the driving light is temporarily interrupted.

To switch the automatic driving lights on:

Turn the light switch to the AUTO position.
 Switch the power supply on: the parking lamps will automatically switch on or off depending on the brightness of the ambient light.

The daytime running lamps are switched on when the engine is running. The parking lamps and the low beam also switch on or off depending on the brightness of the ambient light.

When the low beam is switched on, the indicator lamp on the instrument cluster will also switch on.

### Activating/deactivating the fog lamps


#### Requirements:

- The light switch is in the ☑ or ▲UTO position.
- The power supply or the engine has been switched on.
- To switch the fog lamp on or off: press button

  o
- To switch the rear fog lamp on or off: press button 6.

Comply with the country-specific regulations for using the rear fog lamp.

## Operating the combination light switch

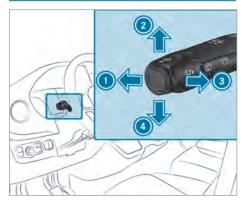

- High beam
- Right turn signal light
- 3 Headlamp flashing
- Left turn signal light
- Use the combination switch to activate the desired function.

## Switching on high beam

- Switch on the low beam (→ page 84).
- ► Push the combination switch forwards ①. The ⑤ indicator lamp on the instrument cluster will light up. The combination switch will return to its starting position.
- (i) The high beam switches to the Auto position only in darkness and when the engine is running.
- ➤ To switch off: push combination switch forwards or briefly pull it in the direction of arrow other action for headlamp flashing switches high beam off).

  The indicator lamp on the instrument cluster will go out. The combination switch will return to its starting position.
- Vehicles with Highbeam Assist: when Highbeam Assist is active, it controls the activation and deactivation of the high beam
   (→ page 86).

### Headlamp flashing


Briefly pull the combination switch in the direction of arrow 3.

## Turn signal light

➤ To signal a turn: push the combination switch in the required direction ② or ④ until it

- engages. In the case of larger steering movements, the combination switch will automatically switch back.
- To signal a turn briefly: press the combination switch briefly in the required direction ② or
   The corresponding turn signal lamp will flash three times.

## Switching the hazard warning light system on/off

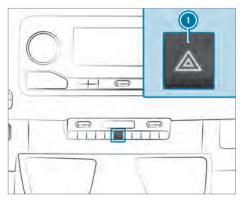

Press button ①.

If you operate a turn signal indicator while the hazard warning light system is switched on, only the turn signal lamps on the relevant side of the vehicle will light up.

i The hazard warning light system will work even when the vehicle has been switched off.

## Cornering light function



The cornering light improves the illumination of the roadway over a wide angle in the turning direction, e.g. enabling better visibility in tight bends.

The function is active under the following conditions:

- The speed is less than 37 mph (60 km/h) and the indicator has been switched on or the steering wheel is turned.
- The speed is between 37 mph (60 km/h) and 50 mph (80 km/h) and the steering wheel is turned.

The cornering light may still light up for a short time but is switched off automatically after a maximum of three minutes.

(i) When reverse gear is engaged, the lighting switches to the opposite side.

## **Highbeam Assist**

## Adaptive Highbeam Assist function

**WARNING** Risk of accident despite Adaptive Highbeam Assist

Adaptive Highbeam Assist does not react to:

- Road users without lights, e.g. pedestrians
- Road users with poor lighting, e.g. cyclists
- Road users whose lighting is obstructed, e.g. by a barrier

On very rare occasions, Adaptive Highbeam Assist may fail to recognize other road users with their own lighting, or may recognize them too late.

In these, or in similar situations, the automatic high beam will not be deactivated or will be activated despite the presence of other road users.

Always observe the road and traffic conditions carefully and switch off the high beam in good time.

The Adaptive Highbeam Assist automatically switches between the following settings:

- · Low beam
- High beam

The system detects that vehicle lights are approaching in the opposite direction or driving ahead of the vehicle.

At speeds greater than 19 mph (30 km/h), the system will switch to the following setting:

 If no other road users are detected, high beam will switch on automatically.

At speeds lower than 16 mph (25 km/h) or if there is sufficient street lighting, the system will switch to the following setting:

· High beam will automatically switch off.

### System limits

Adaptive Highbeam Assist cannot take the road, weather or traffic conditions into consideration.

The detection of obstacles may be restricted if:

- visibility is poor, e.g. in fog, heavy rain or snow.
- · the sensors are dirty or covered.

Adaptive Highbeam Assist is only an aid. You are responsible for ensuring correct vehicle lighting in accordance with the prevailing light, visibility and traffic conditions.

The system's optical sensor is located behind the windshield near the overhead control panel.

## Switching Highbeam Assist on/off

#### Requirements

- The light switch is in the AUTO position.
- To switch on: switch on high beam using the combination switch.

If high beam is automatically switched on in darkness, the bindicator lamp on the multifunction display will light up.

To switch off: switch off high beam using the combination switch.

### Setting the exterior lighting switch-off delay time

### Requirements:

• The light switch is in the AUTO position.

Multimedia system:

→ 🔝 >> Settings >> Light

>> Exterior Lighting Delay

Set a switch-off delay time.

When the vehicle engine is switched off, the exterior lighting will be activated for the set time.


## Activating and deactivating the surround lighting

Multimedia system:

Activate or deactivate the function.

The exterior lighting will remain on for 40 seconds after the vehicle is unlocked. When you start the vehicle, the surround lighting will be deactivated and the automatic driving lights activated.

## Adjusting the interior lighting Adjusting the interior lighting

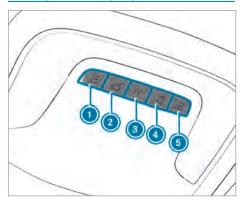


Versions 1 to 4

- ▶ ⑥ 盃 Switches the front-left reading lamp on/off
- To switch off the automatic interior lighting control: press the button.

The interior lighting will switch on automatically if you:

- · Unlock the vehicle
- Open a door
- Switches the (front) interior lighting on/off.
- Switches the rear passenger compartment/cargo compartment lamp on/off.
- ▶ ⑤ 盃 Switches the front-right reading lamp on/off

## Adjusting the interior lighting for body manufacturer add-on equipment

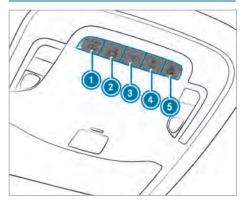

Variants 1 and 2 combined


- Switches the front left reading lamp on/off
- Activates/deactivates automatic interior lighting control
- Switches the front interior lighting on/off
- Switches the body manufacturer lamps on/off
- ⑤ ★ Switches the front right reading lamp on/off
- To switch the front left reading lamp on/off: press button .
- ► To deactivate automatic interior lighting control: press button ②.

Interior lighting control will switch on automatically if you do the following, for example:

- · Unlock the vehicle
- · Open a door
- To switch the front interior lighting on/off: press button 3.
- To switch body manufacturer lamps on/off: press button 4.
  - Your vehicle may be equipped with a functional feedback system: will light up in red if the body manufacturer lamps are switched on.
  - If the body manufacturer lamps have been activated manually, they will remain active for an extended period of time after locking.

- (i) This period of time is shortened if there is undervoltage in the starter battery.
- i The body manufacturer lamps can be switched on only when the battery voltage is stable.
- To switch the front right reading lamp on/off: press button (5).

## Adjusting interior lighting on bus equipment

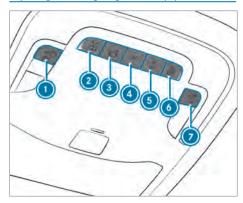

- Activates/deactivates the bus function
- ② Switches the front left reading lamp on/off
- Activates/deactivates automatic interior lighting control
- Switches the front interior lighting on/off
- Switches passenger compartment lighting on/off
- Switches the front right reading lamp on/off
- Activates/deactivates reading lighting in the passenger compartment
- To activate the bus function: press button 
  The LED will light up.

The bus function will be in one of the following modes:

### · Stop mode

If the vehicle comes to a standstill at a stop, for example, and the passenger door opens, the passenger compartment will be illuminated (undimmed).

#### · Driving mode

If all doors are closed and the vehicle is traveling faster than walking pace, the passenger compartment will be illuminated (dimmed).

#### · Automatic off mode

If automatic interior lighting control (a) is deactivated, thereby activating automatic off mode, the passenger compartment will be continuously illuminated (dimmed).

When the bus function is activated, the modes can be selected via button (s) that switches passenger compartment lighting on/off. Passenger compartment lighting will then be deactivated completely. When button (s) is pressed again to switch passenger compartment lighting on/off, the bus function will again be in one of the modes.

- If automatic off mode was not previously activated, either driving or stop mode will be active.
- i The bus function can be operated independently of button in that switches passenger compartment lighting on/off. The passenger compartment lighting must not be switched on beforehand.
- To deactivate the bus function: press button

  o
  .
- The LED will not light up.
- To switch the front left reading lamp on/off: press button ②.
- To deactivate automatic interior lighting control: press button 3.

Interior lighting control will switch on automatically if you do the following, for example:

- · Unlock the vehicle
- · Open a door
- To switch the front interior lighting on/off: press button 4.
- To switch passenger compartment lighting on or off: press button (5).
- To switch the front right reading lamp on/off: press button 3.
- To activate reading lighting in the passenger compartment: press button <a>⊙</a>.
  The LED will light up.

Passengers will be able to switch the reading lamps on and off.


To deactivate reading lighting in the passenger compartment: press button (7).

The LED will not light up.

Passengers will no longer be able to operate the reading lamps.

## Switching the reading lamp above the passenger seat on and off (bus equipment)

## Rear interior lighting

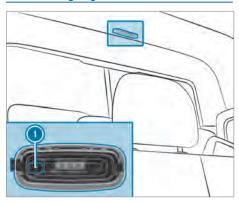

Switches rear compartment/cargo compartment lamp on or off

#### Motion detector


**WARNING** Risk of injury due to laser beam of the motion detector

The motion detector emits non-visible radiation from LEDs that are classified as class 1 M lasers.

This may damage the retina in the following situations:

- If you look directly into the unfiltered laser beam of the motion detector for an extended period.
- If you look directly into the laser beam of the motion detector with optical instruments, such as glasses or magnifying glasses.
- Never look directly into the motion detector.

The motion detector is located in the cargo compartment behind the partition, in the center of the roof.

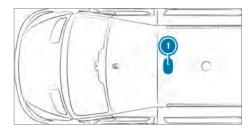

Position of motion detector

If the vehicle is equipped with a motion detector, the cargo compartment lighting is also activated via the motion detector.

If the motion detector detects movement in the cargo compartment while the vehicle is stationary, the cargo compartment lighting will switch on for approximately two minutes.

The cargo compartment lighting will be switched on via the motion detector in the following situations:

- The vehicle is stationary, the parking brake is applied and you are not depressing the brake pedal.
- Vehicles with automatic transmission: the selector lever is in position P and you are not depressing the brake pedal.
- The vehicle has not been locked from the outside using the SmartKey.

If no change to the vehicle, such as a door opening, is detected over several hours, the motion detector will automatically switch off. This prevents the battery from discharging.

## Switching the interior lighting switch-off delay time on/off

Multimedia system:

Switch the switch-off delay time on or off. When this function is active, the interior lighting switches on automatically when the engine is unlocked or switched off.

## Changing bulbs

## Notes about replacing light sources



**WARNING** Risk of burns from hot component parts whilst replacing a bulb

Bulbs, lamps and plug connectors can become very hot during operation.

When replacing a bulb, you could burn yourself on these component parts.



Allow the component parts to cool down before replacing the bulbs.

## Important safety notes

- · Before changing the bulbs, switch off the vehicle's lighting system. This will prevent a short circuit.
- Use only spare bulbs of the same type and with the correct voltage.
- · Use bulbs only in enclosed lamps that have been designed for them.
- Do not use any light source that has been dropped or has scratches on its glass tube. Otherwise, the light source may explode.
- · The light source may explode under the following conditions:
  - If it is hot and you touch it
  - If you drop it
  - If you scratch it
- · Stains on the glass tube will reduce the service life of the light source. Do not touch the glass tube with your bare hands. If necessary, clean the glass tube with alcohol or spirits while it is cold and wipe it down with a lint-free cloth.
- Protect light sources from moisture and do not bring them into contact with liquids.

Always ensure the bulbs are firmly secured.

If your vehicle is equipped with LED modules, you can check this as follows: the light cone will move from top to bottom and back again when the vehicle starts. For this to work, low beam needs to have been switched on before the vehicle is started.


Bulbs and lamps are major elements in vehicle safety. Therefore, ensure that they are always working. Have the headlamp setting checked regu-

If the new light source also does not light up, consult a qualified specialist workshop.

## Replacing front light bulbs (vehicles with halogen headlamps)

#### Overview of front light source types

You can replace the following light sources.

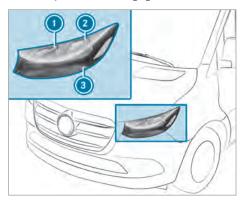

Halogen headlamps

- High beam/daytime running lamps: H15 55 W/15 W
- 2 Low beam/perimeter light: H7 55 W/W 5 W
- Turn signal light: 3457 NAK 28 W

## Replacing halogen headlamps

## Requirements:

- Low beam: bulb type H7 55 W
- High beam/daytime running lamps: bulb type H15 55 W/15 W
- Perimeter lights: bulb type W 5 W
- Turn signal lights: bulb type 3457 NAK 28 W




- Low beam/perimeter light housing cover
- High beam/daytime running lamps housing cover
- Turn signal light socket
- Switch off the lighting system.
- **Low beam/perimeter light:** remove housing cover (1) towards the rear.
- Pull out the socket towards the rear.
- Remove the bulb from the socket.
- Insert the new bulb into the socket such that the base of the bulb rests fully against the base of the socket.
- Align and insert the socket.
- Attach housing cover ①.
- ► High beam/daytime running lamps: remove housing cover ② towards the rear.
- Turn the socket counter-clockwise and pull it out.
- Remove the bulb from the socket.
- Insert the new bulb into the socket such that the base of the bulb rests fully against the base of the socket.
- Insert the socket and turn it clockwise.
- Attach housing cover 2.
- Turn signal light:
- Turn socket (3) counter-clockwise and remove it.
- Gently turn the bulb counter-clockwise and take it out of the socket.
- Insert the new bulb into the socket and turn it clockwise.
- Insert socket (3) and turn it clockwise.

## Additional turn signal light

## Requirements:

 Additional turn signal light (all-wheel drive vehicles): bulb type P 21 W

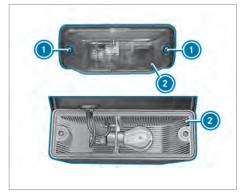


- Switching off the lighting system.
- Unscrew screws 1 and remove lens 2.
- Gently turn the bulb counter-clockwise and take it out of the socket.
- Insert the new bulb into the socket and turn it clockwise.
- Place lens in position and tighten the screws.

## Replacing rear light bulbs (Cargo Van and Passenger Van)

## Overview of rear bulb types (Cargo Van and Passenger Van)


You can replace the following bulbs.

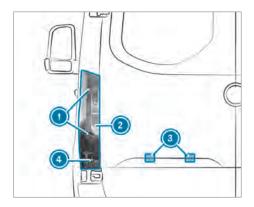



- Brake light/tail light/perimeter light: P 21 W
- Backing up light: P 21 W
- 3 License plate lamp: W 5 W
- Rear fog light: P 21 W

You can replace the following bulbs.

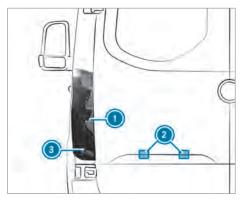

Vehicles with partial LED tail lamps

- Backing up light: P 21 W
- License plate lamp: W 5 W
- Rear fog light: P 21 W


# Changing the tail lamps (Cargo Van and Passenger Van)


## Requirements:

- Brake lights/tail lights/perimeter lights: bulb type P 21 W
- Backing up lights: bulb type P 21 W
- Rear fog lights: bulb type P 21 W



- Brake light/tail light/perimeter light
- Backing up light
- Rear fog light
- Switch off the lighting system.
- Open the rear-end door.

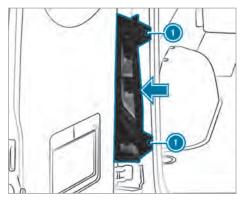

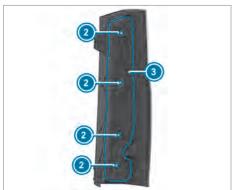

- ➤ To remove: loosen screws and pull out the tail lamp in the direction of the arrow.
- Remove the plug from bulb mount 3.
- Loosen screws ② and remove bulb mount ③ from the tail lamp.
- Gently turn the bulb counter-clockwise and take it out of the socket.
- Insert the new bulb into the socket and turn it clockwise.
- ➤ To install: set bulb mount ③ on the tail lamp and screw in screws ②.
- Press the plug into bulb mount 3.
- Insert the tail lamp and screw in screws (1).

## License plate lamp

## Requirements:

• License plate lamp: light bulb type W 5 W




- Switch off the lighting system.
- Place a screwdriver, for example, at opening ② between lamp ③ and panel ① and carefully pry off lamp ③.
- Remove lamp (3) from panel (1).
- Rotate the bulb holder by around 45° and detach it from the lamp.
- Remove the light bulb.
- Insert the new bulb into the bulb holder.
- Insert the bulb holder into the lamp and rotate it by around 45°.
- Insert the lamp into the panel opening until it engages.

## Replacing rear light bulbs (chassis)

## Overview of rear light source types (chassis)

You can replace the following light sources.

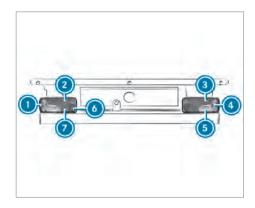


Vehicles with standard tail lamps

- Clearance lamp: R 5 W
- 2 Tail light: R 5 W
- Brake light: P 21 W
- 4 Turn signal lights: PY 21 W
- Backing up light: P 21 W
- Rear fog light (driver's side): P 21 W
- License plate lamp: R 5 W

## Replacing the tail lamps on the chassis

#### Requirements:

- Rear fog lights: bulb type P 21 W
- License plate lighting: bulb type R 5 W
- Backing up lights: bulb type P 21 W
- Turn signal lights: bulb type PY 21 W
- Clearance lamps: bulb type R 5 W
- Brake lights: bulb type P 21 W
- Tail lights: bulb type R 5 W

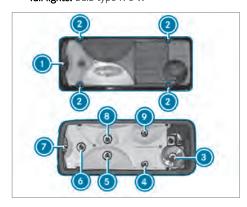

- Light lens
- Screws


- Rear fog light
- 4 License plate lamp
- Backing up light
- Turn signal light
- Clearance lamp
- Brake light
- Tail light
- Switch off the lighting system.
- Unscrew screws ② and remove light lens ①.
- Remove the plug from the bulb mount.
- Gently turn the bulb counter-clockwise and take it out of the socket.
- Insert the new bulb into the socket and turn it clockwise.
- Position light lens (1) and tighten screws (2).

## Replacing interior light bulbs

## Replacing rear interior lamps

## Requirements:

i For the standard bulb failure indicator function to work correctly, only lights bulbs must be used that are the same type and power as those installed during production.

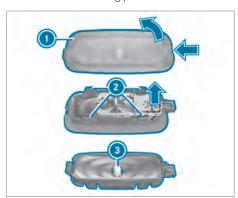


- Switch off the interior lighting.
- Press in catch spring of lens with a suitable object e.g. a screwdriver, and then lever off the lens with the lamp housing.
- To pull back lens from the lamp housing: press the lugs of lens ② inwards.
- Remove light bulb (3) from the lamp housing.
- Insert the new light bulb.

- Insert the lens in the lamp housing until it engages.
- Place the lens with the lamp housing in position and engage it.

## Windshield wipers

## Switching the windshield wipers on and off

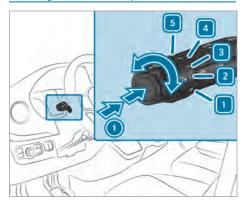

- Single wipe/wiping with washer fluid
- 1 0 Windshield wipers off
- Intermittent wiping, normal

  Vehicles with rain sensors: automatic wiping, normal
- 3 •••• Intermittent wiping, frequent
  Vehicles with rain sensors: automatic wiping,
  frequent
- Continuous wiping, slow
- 5 Continuous wiping, fast
- Turn the combination switch to the corresponding position 1 5.
- Single wipe/washing: press the button on the combination switch in the direction of arrow
  - Single wipe
  - Wiping with washer fluid

## Switching the rear window wiper on/off



- 1 Single wipe/wash
- 2 Intermittent wiping
- ➤ **Single wipe:** press button **1** to the point of resistance.
- Wiping with washer fluid: press button 
  beyond the point of resistance.
- To switch intermittent wiping on or off: press button ②.

If the rear window wiper is switched on, the Symbol will appear on the instrument display.

## Replacing the windshield wiper blades


**WARNING** Risk of becoming trapped if the windshield wipers are switched on while wiper blades are being replaced

If the windshield wipers begin to move while you are changing the wiper blades, you can be trapped by the wiper arm.

- Always switch off the windshield wipers and the ignition before changing the wiper blades.
- ▲ WARNING Risk of injury from using the windshield wipers while the engine hood is open

When the engine hood is open and the windshield wipers are set in motion, you can be trapped by the wiper linkage.

 Always switch off the windshield wipers and ignition before opening the engine hood. i If the wiper blades are worn out, they will not wipe the windshield properly. Replace the wiper blades twice a year, preferably in spring and fall.

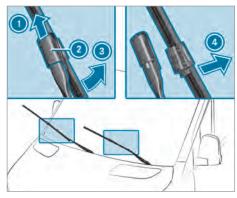

- Fold wiper arm (3) away from the windshield.
- Hold wiper arm (a) and turn the wiper blade away from wiper arm (a) in the direction of the arrow as far as it will go.
- Slide catch ② upwards in the direction of the arrow until it engages.
- Fold back the wiper blade onto the wiper arm.
- Remove wiper blade (1) from wiper arm.
- Insert new washer blade (1) in the holder on wiper arm (3).

When doing so, take into account the different lengths of the wiper blades:

- Driver's side: long wiper blade
- Front-passenger side: short wiper blade
- Slide catch ② downwards until it engages.
- Fold wiper arm 3 back onto the windshield.

## Replacing the windshield wiper blades (WET WIPER SYSTEM)


WARNING Risk of becoming trapped if the windshield wipers are switched on while wiper blades are being replaced

If the windshield wipers begin to move while you are changing the wiper blades, you can be trapped by the wiper arm.

 Always switch off the windshield wipers and the ignition before changing the wiper blades. **WARNING** Risk of injury from using the windshield wipers while the engine hood is

When the engine hood is open and the windshield wipers are set in motion, you can be trapped by the wiper linkage.

- Always switch off the windshield wipers and ignition before opening the engine hood.
- i If the wiper blades are worn out, they will not wipe the windshield properly. Replace the wiper blades twice a year, preferably in spring and fall.

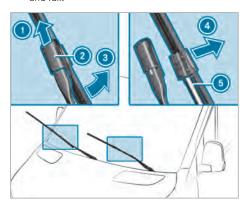


- Fold wiper arm (3) away from the windshield.
- ► Hold wiper arm ③ and turn the wiper blade away from wiper arm ⑤ in the direction of the arrow as far as it will go.
- Slide catch ② upwards in the direction of the arrow until it engages.
- Remove wiper blade from the wiper arm in the direction of arrow .
- Carefully remove hose (5) from the wiper blade.
- Attach hose (5) to the new wiper blade.
- Insert new washer blade 1 in the holder on wiper arm 3.

When doing so, take into account the different lengths of the wiper blades:

- Driver's side: long wiper blade
- front-passenger side: short wiper blade
- Slide catch 2 downwards until it engages.
- Fold back the wiper blade onto the wiper arm.

Fold wiper arm (3) back onto the windshield.

## Replacing the rear window wiper blade

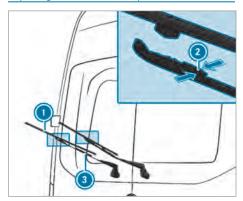

- Fold wiper arm (3) away from the rear window.
- Press both retaining clips ② together in the direction of the arrow and swivel the wiper blade away from the wiper arm.
- Pull wiper blade ① upwards out of the holder on wiper arm ③.
- Insert new wiper blade 
  in the holder on wiper arm 
  in.
- Push new wiper blade onto wiper arm until the retaining clips engage.
- Fold wiper arm 3 back onto the rear window.

#### Mirrors

## Operating the outside mirrors

WARNING Risk of accident due to adjusting the vehicle settings while the vehicle is in motion

You could lose control of the vehicle in the following situations in particular:

- If you adjust the driver's seat, the head restraint, the steering wheel or the mirror while the vehicle is in motion
- If you fasten your seat belt while the vehicle is in motion
- Before starting the engine: In particular, adjust the driver's seat, head restraint, steering wheel and mirror, and fasten your seat belt.

WARNING Risk of accident due to misjudgment of distance when using the front-passenger mirror


The outside mirror on the front passenger side reflects objects on a smaller scale. The objects in view are in fact closer than they appear.

Therefore, always look over your shoulder to check the actual distance between you and the road users traveling behind you.

## Adjusting the outside mirrors manually

- Adjust the outside mirrors to the correct position manually.
- To engage an outside mirror that has been pushed out of position: push the outside mirror into position manually.

## Adjusting the outside mirrors electrically

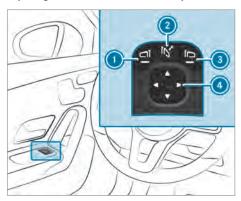

### Example image

! NOTE Damage to the electric outside mirrors

If you fold or unfold the electric outside mirrors by hand, you may damage the outside mirrors and the outside mirrors will not engage properly.

If the outside mirrors are not folded in when washing the vehicle in an automatic car wash, the brushes may forcibly fold in and damage the outside mirrors.

- Only fold the outside mirrors in and out electrically.
- Fold in the outside mirrors before washing the vehicle in an automatic car wash.

- Before driving off, switch on the power supply or the ignition.
- To fold in or out: briefly press button 2.
- ► To adjust: use button or to select the outside mirror to be adjusted.
- Set the position of the mirror glass using button (4).
- To engage an outside mirror that has been pushed out of position: press and hold button

You will hear a click and the mirror will audibly engage in position. The outside mirror is set in the correct position.

## Heating the outside mirrors

- Vehicles without a rear window heater: at low temperatures, the mirror heater will switch on automatically once the engine has been started.
- ➤ Vehicles with a rear window heater: at low temperatures, the mirror heater will switch on automatically once the engine has been started. The mirror heater can also be switched on together with the rear window heater using the rear window heater button.

## Dimming the inside rearview mirror



Fold anti-glare lever in the direction of the arrow.


## Overview of climate control systems

## Heating system overview



- Adjusts the temperature
- REAR Switches the rear-compartment heating on/off
- Switches the rear window heater on/off (→ page 102)
- Switches footwell air distribution on/off
- Switches windshield defrosting on/off (→ page 101)
- Sets the airflow
- (i) The indicator lamps on the buttons signal that the function in question has been activated.

## Overview of dual-zone or 3-zone automatic climate control

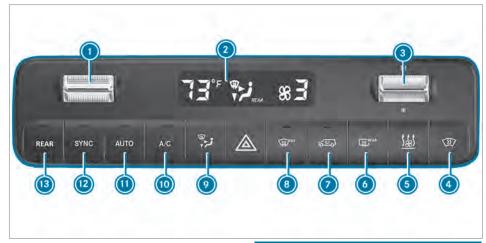

- ② Display
- 3 Sets the airflow
- Wehicles with windshield heating: switches the windshield heating on/off (→ page 101)

- Switches air-recirculation mode on/off(→ page 101)
- Switches windshield defrosting on/off (→ page 101)
- Sets the air distribution (→ page 101)
- Sets climate control to automatic mode, front (→ page 100) and rear (→ page 100)
- REAR Vehicles with dual-zone climate control systems: adjusts the rear-compartment cli- mate control/heating (indicator lamp flashes) (→ page 99)
- i The indicator lamps on the buttons signal that the function in question has been activated.

## Operating climate control systems

## Switching the climate control system on/off

- To switch on: set the airflow to 1 or higher on the front-compartment menu.
- To switch off: set the airflow to 0 or OFF on the front-compartment menu. OFF will appear on the climate control system display.
- When the climate control system is switched off, the windows may fog up more quickly. Switch the climate control system off only briefly.
- (i) If the front-compartment system has already been switched on and the rear-compartment system has been switched off, you can switch it on by turning up the blower on the rear-compartment menu. If the front-compartment system is switched on, the rear-compartment system will automatically switch on as well.

### Setting the rear-compartment climate control

#### Requirements:

 The climate control system has been switched on (→ page 99).

## Setting the temperature and airflow with dual-zone and 3-zone automatic climate control:

Press the REAR button.
The indicator lamp on the REAR button and the REAR symbol on the climate control system display will flash.

The display will switch to the temperature and the blower on the rear menu.

- Use the ▼▲ and ※ rocker switches to set the required temperature and airflow on the rear-compartment menu.
- If there are significant differences between the temperature settings of the front and rear systems, these cannot be regulated accurately.
- i If the rear-compartment climate control has been switched off, you can switch it on automatically by pressing the SYNC button.

Depending on the vehicle equipment, climate control will switch on the roof-mounted air conditioning system or rear-compartment heating as required:

- Vehicles with a roof-mounted air conditioning system: the rear compartment can only be cooled.
- Vehicles with rear-compartment heating: the rear compartment can only be heated.

## Switching off rear-compartment climate control via dual-zone and 3-zone automatic climate control:

- Press the REAR button.
- If the indicator lamp on the REAR button and the REAR symbol on the climate control system display flash, set the airflow to 0 on the rearcompartment menu.
- (i) Indicator lamp on: rear-compartment climate control has been switched on.
  Indicator lamp off: rear-compartment climate control has been switched off.
  Indicator lamp flashes: the setting mode of the rear-compartment climate control is active.

### Switching the A/C function on/off

#### Requirements:

 The climate control system has been switched on (→ page 99).

The A/C function controls the climate and dries the air inside the vehicle.

- Press the A/c button.
- (i) Switch off the A/C function only briefly. Otherwise, the windows could fog up more quickly.
- (i) Condensation may leak from the underside of the vehicle in cooling mode. This is not a sign of a malfunction.

## Automatically regulating climate control

## Requirements:

 The climate control system has been switched on (→ page 99).

## Switching on automatic climate control

In automatic mode, the temperature, airflow and air distribution are regulated and kept constant.

Press the AUTO button.

The display will show the temperature. The airflow and air distribution will disappear from the display.

If the rear compartment climate control has been switched on, the setting for the rear compartment will be carried over.

### Switching off automatic climate control

The other setting will remain unaffected by the change.

## Automatically controlling climate control in the rear compartment

#### Requirements:

 Rear-compartment climate control has been switched on (→ page 99).

In automatic mode, the temperature, airflow and air distribution are regulated and kept constant.

- Press the REAR button.
- Press the AUTO button.
- (i) Even if the front-compartment system is in automatic mode, the rear-compartment system can exit automatic mode if you adjust the blower on the rear-compartment menu.
- i If the air is cooled and the driver's, front passenger or sliding door is opened, the rear air conditioning system blower will be turned down after around 15 minutes.

  When all doors have been closed again, the blower will be reset to the previous setting after around one minute.

### Information on the air distribution settings

The symbols on the display indicate the vents through which the air is being directed.

Automatic climate control

- Defroster and center air vent
- All vents نز:
- Center air vent
- Center and footwell vents

3-zone automatic climate control

- Defroster vent
- Defroster and center air vent
- انځ All vents
- Defroster and footwell vents
- Center air vent
- Center and footwell vents
- Footwell vents

## Setting the air distribution

## Requirements:

- · The climate control system is switched on.
- Press the button repeatedly until the desired air distribution appears in the air conditioning system display.

## Switching the synchronization function on/off

## Requirements:

· The climate control system has been switched on ( $\rightarrow$  page 99).

The synchronization function controls the climate control function centrally. The settings for the temperature and airflow in the front zone are automatically adopted for the rear zone.

- Press the SYNC button.
- (i) If the rear-compartment climate control has been switched off, you can switch it on automatically by pressing the **SYNC** button.

#### Defrosting the windows

#### Condensation on the inside of windows

- Press the www button. When windshield defrosting is switched on, the temperature and airflow cannot be adjusted.
- In vehicles with a heating system and a manual air-conditioning system, also close the side and center air vent ( $\rightarrow$  page 102) as well as the air vents for the rear compartment ( $\rightarrow$  page 103).

- Vehicles with dual-zone or 3-zone automatic climate control: press the A/c button and, if necessary, use the button to direct the air onto the windshield .
- Increase the airflow as necessary and close all air vents ( $\rightarrow$  page 102).
- If the windows remain fogged up: press the www button. When windshield defrosting is switched on, the temperature and airflow cannot be adjusted. or no symbol will appear on the climate control system display.
- Vehicles with a windshield heater: press the 😰 button.
- Close the center air vent ( $\rightarrow$  page 102) and air vents for the headroom (→ page 102) and rear compartment ( $\rightarrow$  page 103).

#### Condensation on the outside of windows

Switch on the windshield wipers (→ page 94).

## Switching air-recirculation mode on/off

Press the 🔊 button. The interior air will be recirculated.

Air-recirculation mode will switch off automatically.

(i) When air-recirculation mode is switched on. the windows may fog up more quickly. Switch on air-recirculation mode only briefly.

Air-recirculation mode will automatically switch on in the following cases:

- At high outside temperatures
- While the vehicle is driving through a tunnel (vehicles with 3-zone automatic climate control only)
- When the windshield wipers are switched on  $(\rightarrow page 94)$

The indicator lamp on the Dutton will not light up in this case. After a maximum of 30 minutes, outside air will automatically be introduced again.

### Switching the windshield heater on and off

- (i) In the event of high outside temperatures, the windshield heater may not switch on.
- Press the 😰 button. If the indicator lamp on the button lights up, the windshield heater has switched on.

- (i) The windshield heater switches off automatically after a few minutes.
- i If the battery voltage is too low, it may not be possible to switch the windshield heater on. If the battery voltage becomes too low while the windshield heater is in operation, the windshield heater will switch off automatically.

## Switching the rear window heater on or off

Press the work button.

If the indicator lamp lights up, the rear window heater is switched on.

## Operating air vents


## Adjusting the front-compartment air vents

**WARNING** - Danger of burns or frostbite due to being too close to the air vents


Very hot or very cold air can flow from the air vents.

This could result in burns or frostbite in the immediate vicinity of the air vents.

- Make sure that all vehicle occupants always maintain a sufficient distance to the air vents.
- If necessary, direct the airflow to another area of the vehicle interior.

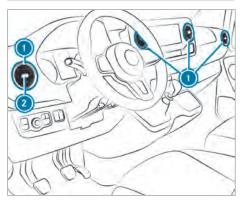

- To open or close: hold center of air vent of and turn it to the left or right as far as it will go.
- ➤ To set the air direction: hold center ② of air vent ③ and swivel it upwards, downwards, to the left or to the right.

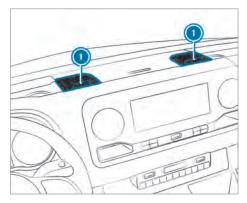

- To open or close: turn the adjustment wheels on the high-power air vents to the left or right as far as they will go.
- (i) Cooled air will flow out of the high-power air vents. Heating will not be possible. Open the high-power air vents only in summer during cooling mode and keep them closed in winter.

## Adjusting air vents in the roof air duct



In vehicles with a rear compartment air conditioning system, adjustable air vents have been integrated in the roof air duct.

- To adjust the airflow: if necessary, open or close the air flaps in air vents 1.
- ➤ To adjust the air distribution: turn air vents to the required position.


## Information about air vents in the rear compartment

WARNING - Danger of burns or frostbite due to being too close to the air vents

Very hot or very cold air can flow from the air vents.

This could result in burns or frostbite in the immediate vicinity of the air vents.

- Make sure that all vehicle occupants always maintain a sufficient distance to the air vents.
- If necessary, direct the airflow to another area of the vehicle interior.

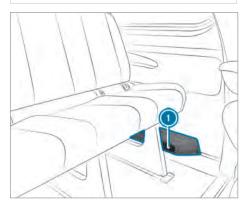

Depending on the vehicle equipment, there will be an air duct or a heater with additional air vents in the rear compartment footwell on the left-hand side 1. No objects may be placed there. Occupants must maintain a sufficient distance due to the warm air flow and air intake.

## Auxiliary heating

## Notes about auxiliary heating

DANGER Risk of fatal injury due to poisonous exhaust gases

If the tailpipe is blocked or sufficient ventilation is not possible, poisonous exhaust gases such as carbon monoxide may enter the vehicle. This is the case in enclosed spaces or if the vehicle gets stuck in snow, for example.

Always switch the stationary heater off in enclosed spaces without an air extraction systems, e.g. in garages.

- Keep the tailpipe and the area around the vehicle free from snow when the engine or the stationary heater are running.
- Open a window on the windward side of the vehicle to ensure an adequate supply of fresh air.
- WARNING Risk of fire due to hot stationary heater components and exhaust gases

Flammable materials such as leaves, grass or twigs may ignite.

- When the stationary heater is switched on, make sure that:
  - Hot vehicle parts do not come into contact with flammable materials.
  - The exhaust gas can flow out of the stationary heater exhaust pipe unhindered.
  - The exhaust gas does not come into contact with flammable materials.
- NOTE Damage to the auxiliary heating

If the auxiliary heating is not used for a long time, it may be damaged.

Switch on the auxiliary heating at least once a month for about ten minutes.

NOTE Damage to the auxiliary heating due to overheating

If the flow of hot air is blocked, the auxiliary heating may overheat and switch off.

- Do not block the flow of hot air.
- (i) Vehicles with modified fuel displays: if an externally operated consumer is connected via the cable for the auxiliary heating, this is not taken into consideration on the "remaining range" display of the on-board computer. In this case, observe the fuel display. The fuel display reflects the actual fill level.

If you are transporting hazardous materials, comply with the relevant safety regulations. Place objects a sufficient distance from the auxiliary heating outlet opening.

Auxiliary heating works independently of the engine and complements the climate control system in the vehicle. Auxiliary heating heats the air inside the vehicle to the set temperature.

## Hot-water auxiliary heater

## Function of the hot-water auxiliary heater

The hot-water auxiliary heater complements your vehicle's climate control system, and has a heater booster, auxiliary heating and auxiliary ventilation function. In addition, the auxiliary heating system heats the engine coolant to protect the engine and save fuel during the warming-up phase. The auxiliary heating heats the air inside the vehicle to the set temperature. It is not dependent on the heat output of the running engine. The auxiliary heating is operated directly using the vehicle's fuel. For this reason, the fuel tank must have been filled above the reserve fuel level so that the auxiliary heating can work. The auxiliary heating automatically adapts its operating mode to the outside temperature and weather. It is therefore possible that the auxiliary heating may switch from ventilation to heating mode or from heating to ventilation mode. When the engine is running, auxiliary ventilation is not active. Auxiliary heating automatically switches itself off after a maximum of 50 minutes. You cannot use the "auxiliary ventilation" operating mode to cool the air inside the vehicle to below the outside temperature. Auxiliary heating helps to heat up the vehicle while the engine is running and at low outside temperatures.

Operating the hot-water auxiliary heater draws power from the vehicle battery. Therefore, drive a reasonably long distance after heating or ventilating the vehicle twice in succession at most.

Auxiliary heating can be activated only at temperatures below 40 °F (4.5 °C).

## Switching the hot-water auxiliary heater on/off with the button

## Requirements:

- The fuel tank is filled above the reserve level.
- To switch the auxiliary heating on and off: press the switch button.
- To activate the specified temperature: switch on the ignition and press the switch.
- ➤ To deactivate the specified temperature: press the ₩ button.
- ➤ Set the temperature using the ▼▲ button and press the 🚻 button.

#### Colors of the indicator lamp:

- Blue: stationary ventilation has been switched on.
- Red: the stationary heater has been switched on.
- Yellow: a departure time has been preselected.

The stationary heater or ventilation switches off after a maximum of 50 minutes.

- To activate heater booster mode: switch on the ignition and press the switch button.
- ► To switch off heater booster mode: press the 📆 button.

Heater booster mode will be switched on as necessary when the outside temperature is lower than 32°F (0°C).

## Setting the hot-water auxiliary heater using the onboard computer

#### Requirements:

- The fuel tank is filled above the reserve level.
- · The ignition is switched on.

On-board computer:

¬→ Settings → Heating

## Setting the switch-on time

- Select Settings.
- Select the desired departure time.

## Activating the departure time

- Activate the departure time by ticking the box.
- (i) Ensure that A, B and C each correspond to a programmed departure time.
- (i) The programmed time remains set only until the next time the engine is started.

### Selecting a programmed time

- Set the required programmed time A, B or C.
- (i) The required programmed time A, B or C will appear only if the box to activate the departure time is ticked.
- Select the required programmed time by swiping left or right, e.g. A, B or C.

## Rectifying problems with the hot-water auxiliary heater

## FAIL (m) appears on the remote control display

Possible cause:

- · Signal transmission between transmitter and receiver is malfunctioning.
- Change your position in relation to the vehicle, moving closer if necessary.

## FAIL appears on the remote control display

Possible cause:

- · The starter battery is not sufficiently charged.
- Charge the starter battery.

Possible cause:


- The fuel tank is not filled up to the reserve level.
- Refuel at the nearest gas station.

## FAIL appears on the remote control display

Possible cause:

- · The auxiliary heating has malfunctioned.
- Have the auxiliary heating checked at a qualified specialist workshop.

## Operating cargo compartment ventilation

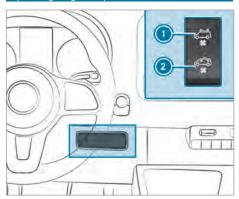

If your vehicle is equipped with a roof ventilator, you can admit fresh air to the cargo compartment, or extract air from it as well.

Switch on the ignition.

To switch on and extract: press switch (1) at the top. The roof ventilator removes used air from the cargo compartment.

- To switch on and admit fresh air: press switch 2 at the bottom.
  - The roof ventilator feeds fresh air into the cargo compartment.
- To switch off: set the switch to the center posi-

## Driving

Switching on power supply or ignition with the start/stop button

WARNING Risk of accident and injury due to children left unattended in the vehicle

If children are left unsupervised in the vehicle, they could, in particular:

- Open doors, thereby endangering other persons or road users.
- Get out and be struck by oncoming traffic.
- Operate vehicle equipment and become trapped, for example.

In addition, the children could also set the vehicle in motion, for example by:

- · Releasing the parking brake.
- · Changing the transmission position.
- · Starting the vehicle.
- Never leave children unattended in the vehicle.
- When leaving the vehicle, always take the SmartKey with you and lock the vehicle.
- Keep the vehicle SmartKey out of reach of children.
- **DANGER** Risk of death caused by exhaust gases

Combustion engines emit poisonous exhaust gases such as carbon monoxide. Inhaling these exhaust gases is hazardous to health and leads to poisoning.


- Never leave the engine or, if present, the auxiliary heating running in an enclosed space without sufficient ventilation.
- ▲ WARNING Risk of fire due to flammable material in the engine compartment or the exhaust system

Flammable materials may ignite.

Therefore, check regularly that there are no flammable materials in the engine compartment or on the exhaust system.

#### Requirements:

- The key is in detection range of the antenna (→ page 47) and the key battery is not discharged.
- In addition, the following applies for vehicles with a reduced detection range: the key is located in the key holder provided in the driver's cup holder (→ page 79).

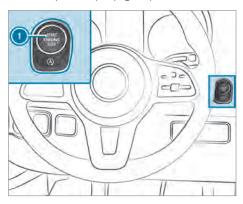

To switch on the power supply: press button once.

You can switch on the windshield wipers, for example.

The power supply is switched off again when one of the following conditions is met:

- The driver's door is open.
- You press button (1) twice.

cluster.

➤ To switch on the ignition: press button 
twice.
The indicator lamps appear in the instrument

The ignition is switched off again when one of the following conditions is met:

- You do not start the vehicle within 15 minutes.
  - You press button (1) once.

#### Starting the engine

#### Starting the vehicle with the start/stop button

**WARNING** Risk of accident and injury due to children left unattended in the vehicle

If children are left unsupervised in the vehicle, they could, in particular:

- · Open doors, thereby endangering other persons or road users.
- Get out and be struck by oncoming traffic.
- Operate vehicle equipment and become trapped, for example.

In addition, the children could also set the vehicle in motion, for example by:

- · Releasing the parking brake.
- Changing the transmission position.
- Starting the vehicle.
- Never leave children unattended in the vehicle
- When leaving the vehicle, always take the SmartKey with you and lock the vehicle.
- Keep the vehicle SmartKey out of reach of children.

WARNING Risk of accident and injury due to animals left unsecured or unattended in the vehicle

If you leave animals in the vehicle unattended or unsecured, they could possibly press buttons or switches.

An animal may:


- Activate vehicle equipment and become trapped, for example
- · Switch systems on or off and endanger other road users

Unsecured animals may be thrown around in the vehicle in the event of an accident or sudden steering and braking maneuvers and injure vehicle occupants in the process.

- Never leave animals in the vehicle unattended.
- Always correctly secure animals while driving, e.g. using a suitable animal carrier.

#### Requirements

- The key is in detection range of the antenna  $(\rightarrow page 47)$  and the key battery is not discharged.
- In addition, the following applies for vehicles with a reduced detection range: the key is located in the key holder provided in the driver's cup holder ( $\rightarrow$  page 79).

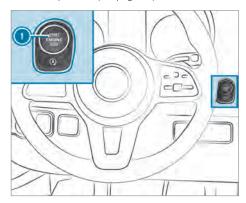

- Vehicles with automatic transmission: shift the transmission to position  $\mathbf{P}$  or  $\mathbf{N}$ .
  - Depress the brake pedal and press button (1)
- If the vehicle does not start: switch off unnecessary consumers and press button ① once.
- If the vehicle still does not start and the display messagePlace Key in Marked Space See Operator's Manual also appears in the multifunction display: start the vehicle in emergency operation mode.

#### Starting the vehicle in emergency operation mode

WARNING Risk of accident and injury due to children left unattended in the vehicle


If children are left unsupervised in the vehicle, they could, in particular:

- · open doors, thereby endangering other persons or road users.
- get out and be struck by oncoming traffic.
- operate vehicle equipment and become trapped, for example.

In addition, the children could also set the vehicle in motion, for example by:

- · releasing the parking brake.
- changing the transmission position.
- starting the vehicle.
- Never leave children unattended in the vehicle.
- When leaving the vehicle, always take the SmartKey with you and lock the vehicle.
- Keep the vehicle SmartKey out of reach of children.

If the vehicle does not start and the display message Place Key in Marked Space See Operator's Manual appears in the multifunction display, you can start the vehicle in emergency operation mode.

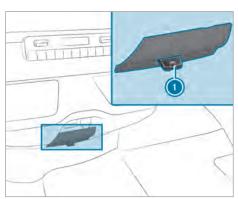

- Remove key 1 from your key ring.
- Insert key into the slot.
  The vehicle is started after a brief time.
- Leave the key inserted during the entire journey.
  - If you pull key ① out of the slot, the engine continues to run.
- Have key ① checked at a qualified specialist workshop.

#### If the vehicle does not start:

- Leave key ① in the marked space.
- Depress the brake pedal.
- Start the vehicle with the start/stop button.
- (i) You can also switch on the power supply or the ignition with the start/stop button.

#### Breaking-in notes

Protect the engine during the first 1,000 miles (1,500 km) by:

- Driving at varying road and engine speeds.
- Shifting to the next highest gear at the very latest when the needle reaches the last third before the red area in the tachometer.
- Avoiding stress on the vehicle such as driving at full throttle.
- Not shifting manually to a lower gear to brake.
- After 1,000 miles (1,500 km), gradually increasing the engine speed and accelerating the vehicle up to full speed.
- Vehicles with automatic transmission: not depressing the accelerator pedal beyond the pressure point (kickdown).

This also applies if the engine or parts of the drivetrain have been replaced.

Also observe the following breaking-in notes:

- After the vehicle has been delivered or after repairs, the sensor system of the ESP® driving safety system adjusts itself automatically after the vehicle has been driven a certain distance. Full system effectiveness is not reached until the end of this teach-in process.
- New and replaced brakepads, brake discs and tires only reach their optimal braking effect and traction after approximately 100 miles. Until then, compensate for the reduced braking effect by applying greater pressure to the brake pedal.

#### **Driving tips**

#### Notes on driving

A

WARNING Risk of accident due to objects in the driver's footwell

Objects in the driver's footwell may impede pedal travel or block a depressed pedal.

This jeopardizes the operating and road safety of the vehicle.

- Stow all objects securely in the vehicle so that they do not get into the driver's footwell.
- When using floor mats or carpets, make sure that they are properly secured so that they do not slip or obstruct the pedals.

Do not lay multiple floor mats or carpets on top of one another.

#### WARNING Risk of accident due to incorrect footwear

Incorrect footwear includes, for example:

- · Shoes with platform soles
- Shoes with high heels
- Slippers

There is a risk of an accident.

Always wear suitable footwear so that you can operate the pedals safely.

#### WARNING Risk of accident if the ignition is switched off while driving

If you switch off the ignition while driving, safety functions are restricted or no longer available.

This may affect the power steering system and the brake force boosting, for example.

You will need to use considerably more force to steer and brake, for example.

▶ Do not switch off the ignition while driv-

#### **DANGER** Risk of death caused by exhaust gases

Combustion engines emit poisonous exhaust gases such as carbon monoxide. Inhaling these exhaust gases is hazardous to health and leads to poisoning.

Never leave the engine or, if present, the auxiliary heating running in an enclosed space without sufficient ventilation.

#### **DANGER** Risk of fatal injury due to poisonous exhaust gases

If the tailpipe is blocked or sufficient ventilation is not possible, poisonous exhaust gases such as carbon monoxide may enter the vehicle. This is the case when the vehicle becomes stuck in snow, for example.

► Keep the tailpipe and the area around the vehicle free from snow when the engine or the stationary heater are running.

Open a window on the side of the vehicle facing away from the wind to ensure an adequate supply of fresh air.

#### WARNING Risk of accident and injury due to being under the influence of alcohol and drugs while driving

Drinking and driving and/or taking drugs and driving are very dangerous combinations. Even a small amount of alcohol or drugs can affect your reflexes, perceptions and judgment.

The possibility of a serious or even fatal accident are greatly increased when you drink or take drugs and drive.

Do not drink or take drugs and drive or allow anyone to drive who has been drinking or taking drugs.

#### WARNING Risk of accident and injury from operating mobile communications equipment

If you operate mobile communication equipment when driving, you will be distracted from the traffic situation. This could also cause you to lose control of the vehicle.

The probability of a serious or even fatal accident increases greatly if you operate mobile communication equipment when driving.

Only operate mobile communication equipment when the vehicle is stationary.

For your own safety, always observe the following points when operating mobile communications equipment:

- Observe the legal requirements for the country in which you are driving.
- · While driving, only operate mobile communications equipment when the traffic conditions permit it. You may otherwise be distracted from the traffic conditions and cause an accident, injuring yourself and others.

#### WARNING Risk of accident due to overheated brake system

If you rest your foot on the brake pedal during while driving, the brake system may overheat. This increases the braking distance and the brake system may even fail.

Never use the brake pedal as a footrest.

Do not press the brake pedal and accelerator pedal simultaneously while driving.

On long and steep downhill gradients, you should change down to a lower gear in good time. Take particular note of this when driving a laden vehicle. By doing so, you will make use of the engine's braking effect. This will take some of the strain off the brake system and prevent the brakes from overheating and wearing too quickly.

- I NOTE Wearing out the brake linings by continuously depressing the brake pedal
- Do not depress the brake pedal continuously whilst driving.
- To use the braking effect of the engine, shift to a lower gear in good time.
- NOTE Damage to the drivetrain and engine when pulling away
- Do not warm up the engine while the vehicle is stationary. Pull away immediately.
- Avoid high engine speeds and driving at full throttle until the engine has reached its operating temperature.
- I NOTE Damage to the catalytic converter due to non-combusted fuel

The engine is not running smoothly and is mis-

Non-combusted fuel may get into the catalytic converter.

- Only depress the accelerator pedal slightly.
- Have the cause rectified immediately at a qualified specialist workshop.
- NOTE Damage to the vehicle due to not observing the maximum permitted head-room clearance

If the vehicle height is greater than the maximum permitted headroom clearance, the roof and other parts of the vehicle may be damaged.

 Observe the signposted headroom clearance.

- If the vehicle height is greater than the permitted headroom clearance, do not enter.
- Observe the changed vehicle height with add-on roof equipment.

#### Exhaust emission monitoring

Specific engine systems are designed to keep poisonous components of exhaust gases within legal limits.

These systems only work optimally if they are maintained exactly according to manufacturer's specifications. It is for this reason that all work on the engine should only be performed by qualified and authorized Mercedes-Benz Center technicians.

Under no circumstances should engine settings be changed. In addition, all specific maintenance work must be performed at regular intervals and in compliance with the service regulations of the dealer named in the imprint. Refer to the Maintenance Booklet for details.

#### Notes on short-distance trips

If the vehicle is predominantly used for short-distance driving, fuel may accumulate in the engine oil and cause engine damage.

If you mainly drive short distances, you should drive on a freeway or go for a country drive for 20 minutes every 480 km (300 miles). This facilitates the regeneration of the diesel particulate filter.

#### Notes on the limit speed

★ WARNING Risk of injury through exceeding the specified tire load-bearing capacity or the permissible speed rating

Exceeding the specified tire load rating or the permissible speed rating may lead to tire damage and to the tires bursting.

- Therefore, only use tire types and sizes approved for your vehicle model.
- Observe the tire load rating and speed rating required for your vehicle.

You must find out about the maximum permissible speed for the tires, i.e. tire and tire pressure. Observe the legal requirements for tires for the country in which you are staying.

(i) Vehicles with tachograph: due to the different certification requirements for the tachograph and instrument cluster, the displayed speeds may differ. Please keep to the speed display in the instrument cluster. You can permanently limit the speed of your vehicle.

Mercedes-Benz recommends a qualified specialist workshop for programming the limit speed.

Note that you cannot exceed a programmed limit speed when overtaking.

On downhill gradients, the limit speed may be exceeded. Apply the brakes if necessary.

Display messages indicate that you are approaching the limit speed.

(i) For buses, the speed is limited to 60 mph (100 km/h) at the factory. When overtaking, bear in mind that the limit speed cannot be exceeded.

#### Information about driving abroad

#### Service

An extensive Mercedes-Benz service is also available abroad. Nevertheless, please remember that services facilities or spare parts may not be available immediately. The relevant workshop directories are available from an authorized Mercedes-Benz Center.

#### Fuel

In some countries, only fuels with an increased sulfur content are available.

Mercedes-Benz recommends installing a fuel filter with a water separator for countries with an increased water content in diesel.

Unsuitable fuel can cause engine damage. Information about fuel can be found in the "Fuel" section ( $\rightarrow$  page 270).

#### Information about transport by rail

Transporting your vehicle by rail may be subject to certain restrictions or require special measures to be taken in some countries due to varying tunnel heights and loading standards.

You can obtain information about this from any authorized Mercedes-Benz Center.

#### Information on brakes

WARNING Risk of skidding and of an accident due to shifting down on slippery road surfaces

If you shift down on slippery road surfaces to increase the engine braking effect, the drive wheels may lose traction.

Do not shift down on slippery road surfaces to increase the engine braking effect.

WARNING Risk of accident due to the brake system overheating

If you leave your foot on the brake pedal when driving, the brake system may overheat.

This increases the braking distance and the brake system can even fail.

- Never use the brake pedal as a footrest.
- Do not depress the brake pedal and the accelerator pedal at the same time while driving.
- **NOTE** Wearing out the brake linings by continuously depressing the brake pedal
- Do not depress the brake pedal continuously whilst driving.
- To use the braking effect of the engine, shift to a lower gear in good time.

#### Downhill gradients

On long and steep downhill gradients you should observe the following instructions:

- · In vehicles with an automatic transmission, shift down to shift ranges 2 or 1 in good time so that the engine is running at a medium to high engine speed ( $\rightarrow$  page 121).
- (i) Change the shift range in good time when cruise control is activated. Observe the driving tips ( $\rightarrow$  page 108).

You thereby make use of the braking effect of the engine and do not have to brake as often to maintain the speed. This relieves the load on the service brake and prevents the brakes from overheating and wearing too quickly.

#### Heavy and light loads

If the brakes have been subjected to a heavy load, do not stop the vehicle immediately. Drive on for a short while. The brakes cool down more quickly in the airflow.

If the brakes have been used only moderately, you should occasionally test their effectiveness. To do this, brake more firmly from a higher speed while paying attention to the traffic conditions. The brakes will grip better as a result.

#### Wet road surfaces

If you have been driving for a long time in heavy rain without braking, there may be a delayed response when you first apply the brakes. This may also occur after driving through a car wash or deep water. You must depress the brake pedal more firmly. Maintain a greater distance to the vehicle in front.

While paying attention to the traffic conditions, you should brake the vehicle firmly after driving on a wet road surface or through a car wash. This heats the brake discs so that they dry more quickly, which protects them against corrosion.

Limited braking effect on salt-treated roads:

- A layer of salt on the brake discs or brakepads can increase braking distances considerably, or braking may happen on only one side
- Maintain an especially large safe distance to the vehicle in front

To remove the layer of salt:

- · Apply the brakes from time to time, paying attention to traffic conditions
- Carefully depress the brake pedal at the end of a journey and after the start of a new journey

#### Checking the brakepad thickness

In addition to monitoring using the brakepad wear sensor, regularly monitor and check all of the brakepads by performing a visual inspection to look for material wear on the pads.

If you are unable to check the brakepad wear on the inside of the wheels, remove the wheels if you possess the required skills, or visit a qualified specialist workshop.

If the brakepad material thickness is less than 0.12 in (3 mm), have the brakepads checked and replaced at a qualified specialist workshop, if necessary.

Do not solely rely on the brakepad wear sensor.

It is also strongly recommended that you have the brakepads checked at a qualified specialist workshop, not only at every service displayed by the maintenance interval display, but also prior to long journeys and whenever the wheels are removed.

In the following situations, check the brake pads:

- · At every service according to maintenance interval
- Before long journeys

- Every time a tire is replaced
- During regular visual inspections for your own safety

#### New brake discs and brakepads

New brakepads and brake discs only reach their optimal braking effect after a few hundred miles (a few hundred kilometers).

Until then, compensate for the reduced braking effect by applying greater pressure to the brake pedal. For safety reasons, Mercedes-Benz recommends that you only have brakepads and brake discs which are approved by Mercedes-Benz installed on your vehicle.

Other brake discs or brakepads may compromise the safety of your vehicle.

Always replace all brake discs and brakepads on an axle at the same time. Always install new brakepads when replacing brake discs.

#### Parking brake

**WARNING** Risk of skidding or an accident by braking with the parking brake

If you have to brake your vehicle with the parking brake, the braking distance is considerably longer and the wheels may lock. There is an increased risk of skidding and/or accident.

- Only brake the vehicle with the parking brake if the service brake has failed.
- In this case, do not apply the parking brake with too much force.
- If the wheels lock, immediately release the parking brake as much as required for the wheels to turn again.

#### Vehicles with a manual parking brake

When driving on wet roads or dirt-covered surfaces, road salt or dirt may get into the parking brake. This causes corrosion and a reduction of braking force.

In order to prevent this, drive with the parking brake lightly applied from time to time.

When doing so, drive for a distance of approximately 300 ft at a maximum speed of 13 mph (20 km/h).

The brake lights do not light up when you brake the vehicle with the parking brake.

### Information about driving on wet roads Hydroplaning

**WARNING** Risk of aquaplaning because tire tread is too low

Depending on the depth of the water on the roadway, aquaplaning can occur despite sufficient tire tread depth and low speed.

Avoid tire ruts and brake carefully.

Therefore, in heavy rain or other conditions in which hydroplaning can occur, drive as follows:

- · Reduce your speed
- · Avoid tire ruts
- Brake carefully

#### Driving on flooded roads

Bear in mind that vehicles traveling in front or in the opposite direction create waves. This may cause the maximum permissible depth of water to be exceeded. These notes must be observed under all circumstances. Otherwise, you can damage the engine, electrics and transmission.

If you have to drive on stretches of road on which water has collected, please bear in mind the following:

- The water level of standing water may not be above the lower edge of the front bumper.
- You may drive no faster than walking pace.

Observe the notes on fording while off-road for allwheel drive vehicles ( $\rightarrow$  page 113).

#### Information about driving in winter

#### DANGER Risk of fatal injury due to poisonous exhaust gases

If the tailpipe is blocked or sufficient ventilation is not possible, poisonous exhaust gases such as carbon monoxide may enter the vehicle. This is the case when the vehicle becomes stuck in snow, for example.

- ► Keep the tailpipe and the area around the vehicle free from snow when the engine or the stationary heater are running.
- Open a window on the side of the vehicle facing away from the wind to ensure an adequate supply of fresh air.

WARNING Risk of skidding and of an accident due to shifting down on slippery road surfaces

If you shift down on slippery road surfaces to increase the engine braking effect, the drive wheels may lose traction.

Do not shift down on slippery road surfaces to increase the engine braking effect.

Vehicles with automatic transmissions are permitted to roll when in neutral [N] for only a short time. Allowing the wheels to roll for longer, e.g. when towing, causes transmission damage.

If the vehicle threatens to skid, or cannot be brought to a standstill when traveling at a low speed, you can stabilize the vehicle using the following measures:

- Shift the automatic transmission to neutral N.
- · Try to maintain control of the vehicle using corrective steering.

Drive particularly carefully on slippery roads. Avoid sudden acceleration, steering and braking maneu-

Have your vehicle winterized at a qualified specialist workshop in good time at the onset of winter.

Observe the notes on snow chains ( $\rightarrow$  page 239).

Regularly check the vehicle and remove snow or ice when traveling in wintry conditions.

An accumulation of snow and ice, particularly when frozen, in the area around the air intake, moving parts, the axles, and the wheel wells may cause the following problems:

- · Obstruction of the air intake
- Damage to vehicle parts
- Malfunctions due to restriction of the mobility intended by the design (e.g. reduced steering movement)

If there is any damage, inform a qualified specialist workshop.

#### Information about driving off-road



WARNING Risk of accident if you do not keep to line of fall on inclines

If you drive at an angle or turn on an incline, the vehicle could slip sideways, tip and rollover. Always drive on inclines in the line of fall (straight up or down) and do not turn.

### **WARNING** Risk of injury from acceleration forces during off-road driving

You could be thrown from your seat, for example.

Always wear your seat belt even when driving off-road.

### **WARNING** Risk of injury to the hands when driving over obstacles

If you drive over obstacles or in tire ruts, the steering wheel may whip around.

- The steering wheel must always be held securely with both hands.
- Always hold the steering wheel so that your thumbs are on the outer rim of the steering wheel.
- When driving over obstacles, expect increased steering forces at short notice.

# **WARNING** Risk of fire due to flammable materials on hot parts of the exhaust system

Flammable material such as leaves, grass or twigs may ignite if they come into contact with hot parts of the exhaust system.

- When driving on unpaved roads or offroad, regularly check the vehicle underside.
- Remove trapped plants or other flammable material, in particular.
- If there is damage, consult a qualified specialist workshop immediately.

### NOTE Damage to the vehicle after driving off-road

Foreign bodies, such as stones and branches, could become trapped on the vehicle underside or on wheels and tires while you are driving and cause damage to the vehicle.

Foreign bodies could cause the following damage:

- Damage the suspension, the fuel tank or the brake system
- · Cause imbalances and thus vibrations

- Regularly remove any trapped foreign bodies, e.g. stones and branches.
- After driving off-road, check carefully whether there is any damage to the vehicle.
- If there is damage, have the vehicle checked at a qualified specialist workshop.

When driving off-road or on unpaved surfaces, check the vehicle underside, wheels and tires regularly at regular intervals. In particular, remove any trapped foreign bodies, e.g. stones and branches.

Observe the following notes regarding foreign bodies of this kind:

- They may damage the suspension, the fuel tank or the brake system.
- They may disturb the balance and cause vibrations.
- They may be flung out from the vehicle when you continue driving.

If there is any damage, inform a qualified specialist workshop.

When driving off-road on steep inclines, you must make sure that the DEF tank is sufficiently filled. Therefore, ensure a level of at least ten liters before off-road driving.

When driving off-road and on construction sites, sand, mud and water, also mixed with oil, can get into the brakes. This may lead to a reduction in braking effect or total brake failure, also as a result of increased wear. The braking characteristics will vary depending on the material that has got into the system. Clean the brakes after driving off-road. If you then notice a reduced braking effect or hear scraping noises, have the brake system checked immediately at a qualified specialist workshop. Adjust your driving style to the changed braking characteristics.

Driving off-road or on construction sites increases the possibility of vehicle damage which may in turn lead to the failure of certain major assemblies and systems. Adapt your driving style to the off-road driving conditions. Drive carefully. Have any vehicle damage rectified at a qualified specialist workshop as soon as possible.

When driving on rough cross-country terrain, do not shift the transmission to neutral and do not disengage the clutch. You could lose control when attempting to brake the vehicle with the service

brake. If your vehicle cannot manage an uphill incline, drive back down in reverse gear.

When loading your vehicle for off-road driving or on a construction site, keep the vehicle's center of gravity as low as possible.

#### Checklist before off-road driving

- Check the fuel and DEF levels (→ page 169) and refill if necessary ( $\rightarrow$  page 128).
- Engine: check the oil level and add oil if necessary ( $\rightarrow$  page 211). Before driving up or down extreme inclines or slopes, fill the oil to the maximum level.
- (i) If you drive up or down extreme inclines or slopes, the symbol may appear in the multifunction display. The engine operating safety is not put at risk if you have filled the engine oil to the maximum level before the journey.
- Vehicle tool kit: check that the jack is working  $(\rightarrow page 256)$ .
- Make sure that a lug wrench ( $\rightarrow$  page 256), a wooden underlay for the jack, a sturdy tow rope, a folding spade and a wheel chock (depending on equipment) are carried in the vehicle.
- Tires and wheels: check the tire tread depth  $(\rightarrow)$  page 238) and the tire pressure  $(\rightarrow page 245)$ .

#### Rules for off-road driving

Always be aware of the ground clearance of the vehicle and avoid obstacles such as deep tire ruts.

Obstacles can damage the following parts of the vehicle, for example:

- Suspension
- Drivetrain
- · Fuel and operating fluid reservoirs

Therefore, always drive slowly when off-road. If you must drive over obstacles, have the co-driver instruct you.

- (i) Mercedes-Benz recommends that you additionally carry a shovel and a recovery rope with a shackle in the vehicle.
- · Make sure that loads and items of luggage are securely stored or lashed down ( $\rightarrow$  page 203).
- · Before driving off-road, stop the vehicle and engage a low gear.
- . Vehicles with DSR: activate DSR when you are driving downhill ( $\rightarrow$  page 147).

- All-wheel drive vehicles with engine OM642 or engine OM651: activate all-wheel drive  $(\rightarrow)$  page 123) and, if necessary, activate the LOW RANGE transmission ratio ( $\rightarrow$  page 124).
- If the surface requires, temporarily deactivate ESP® when pulling away ( $\rightarrow$  page 142).
- · Only drive off-road with the engine running and a gear engaged.
- Drive slowly and smoothly. It may often be necessary to drive at walking pace.
- · Avoid spinning the drive wheels.
- Ensure that the wheels remain in contact with the ground.
- As a precaution, get out of the vehicle to take a look at the route to be taken first. Exercise the utmost caution when driving across unfamiliar, unpredictable terrain.
- · Look out for obstacles (e.g. rocks, holes, tree stumps and tire ruts).
- · Avoid edges where the surface could crumble or break away.

#### Rules for off-road fording

- · Observe the safety notes and general notes on driving off-road.
- · Check the depth and characteristics of the body of water before fording.
- · The climate control system is switched off  $(\rightarrow page 99).$
- · The stationary heater is switched off  $(\rightarrow page 104)$ .
- All-wheel drive vehicles with engine OM642 or engine OM651: activate all-wheel drive (→ page 123) and activate in vehicles with LOW RANGE transmission ratio ( $\rightarrow$  page 124).
- Restrict the shift range to 1 or 2.
- · Avoid high engine speeds.
- Drive slowly and smoothly at no more than a walking pace.
- Ensure that no wave at the front of the vehicle forms while driving.
- · After fording, dry the brakes.

After driving through a body of water deeper than 19.7 in (50 cm):

- · Check all vehicle fluids for any signs of water penetration.
- Have the oil changed by a specialist workshop.

Check all vehicle fluids for any signs of water penetration.

#### Checklist after driving off-road

Driving over rough terrain places greater demands on your vehicle than normal road operation. Check your vehicle after driving on rough terrain. This allows you to detect damage promptly and reduce the risk of an accident for yourself and other road users. Clean your vehicle thoroughly before driving on public roads.

If you find damage to the vehicle after off-road driving, have the vehicle checked at a qualified specialist workshop immediately.

Observe the following points after driving off-road, on construction sites and before driving on public roads:

- Vehicles with DSR: deactivate DSR
   (→ page 147).
- All-wheel drive vehicles with engine OM642 or engine OM651: deactivate all-wheel drive (→ page 123).
- Activate ESP<sup>®</sup> (→ page 142).
- Clean the exterior lighting, particularly the headlamps and tail lamps, and check them for damage.
- Clean the front and rear license plate.
- Clean the windshield, windows and outside mirrors
- Clean the steps, entrances and grab handles. This will make your footing safer.
- Clean the wheels and tires, wheel wells and the underbody of the vehicle with a water jet.
   This increases road adhesion, especially on wet roadways.
- Check the wheels and tires and wheel wells for trapped foreign objects and remove them.
   Trapped foreign objects can damage the wheels and tires or may be flung out from the vehicle when continuing the journey.
- Check the underbody for trapped branches or other parts of plants and remove them.
- Clean the brake discs, brakepads and axle joints, particularly after operation in sand, mud, grit and gravel, water or similarly dirty conditions.
- Check the entire floor assembly, the tires, wheels, bodywork structure, brakes, steering, suspension and exhaust system for any damage.

- Check the service brake for operating safety, e.g. carry out a brake test.
- If you notice strong vibrations after driving offroad, check the wheels and drivetrain for foreign objects again. Remove any foreign objects which can lead to imbalances and thus cause vibrations. In the event of damage to the wheels and the drive train, visit a qualified specialist workshop immediately.

#### Function of the ECO display

The ECO display summarizes your driving characteristics from the start of the journey to its completion and assists you in achieving the most economical driving style.

An economical driving style means that the ECO display will feature a star or a shine effect.

You can influence consumption as follows:

- · Anticipate road and traffic conditions.
- · Observe the gearshift recommendations.



Instrument display with color display

The segment's lettering lights up brightly, the outer edge lights up and the segment is filled when the vehicle is driven with the following characteristics:


- ACCELERATION: moderate acceleration
- 2 CONSTANT: consistent speed
- OASTING: gentle deceleration and rolling

The segment's lettering is gray, the outer edge is dark and the segment is emptied when the vehicle is driven with the following characteristics:

- **1** ACCELERATION: sporty acceleration
- CONSTANT: speed fluctuations
- ③ COASTING: heavy braking

You have driven in an economical manner if:

- The three segments have been completely filled simultaneously.
- The edge of all three segments lights up.

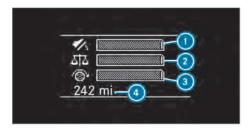

Instrument display with black and white display

The bars will fill up when the vehicle is driven with the following characteristics:

- Moderate acceleration
- Consistent speed
- Gentle deceleration and rolling

The bars will empty when the vehicle is driven with the following characteristics:

- Sporty acceleration
- Speed fluctuations
- 3 Heavy braking

The display will also show additional range (4) Bonus XXX mi From Start or XXX mi From Start that you have achieved with your driving style compared with a driver with a very sporty driving style. The range displayed does not indicate a fixed reduction in consumption.

#### Diesel particulate filter

#### Notes on regeneration

(i) The regeneration of the diesel particulate filter is special equipment and not installed as standard.

## **DANGER** Risk of death caused by exhaust

Combustion engines emit poisonous exhaust gases such as carbon monoxide. Inhaling these exhaust gases is hazardous to health and leads to poisoning.

Never leave the engine or, if present, the auxiliary heating running in an enclosed space without sufficient ventilation.

#### WARNING Risk of fire caused by hot exhaust system parts

Flammable materials such as leaves, grass or twigs may ignite.

- Park the vehicle so that no flammable material can come into contact with hot vehicle components.
- In particular, do not park on dry grassland or harvested grain fields.

#### NOTE Damage due to hot exhaust gases

Very hot exhaust gases are emitted from the tailpipe during regeneration.

- During regeneration, maintain a minimum distance of 7 ft (2 m) to other objects, e.g. parked vehicles.
- Carry out regeneration only on concrete or asphalt surfaces.
- Do not carry out regeneration in the immediate vicinity of people.
- Carry out regeneration in the open air and not in closed halls or rooms.
- Make sure that there are no flammable materials or objects in the area of the exhaust system.

Regeneration without interruption takes approx. 20-25 minutes.

If the vehicle is predominantly used for short distance driving or extended non-operational times, this could lead to a malfunction in the automatic cleaning function for the diesel particulate filter. As a result, permanent blocking of the diesel particulate filter may occur, and fuel may also accumulate in the engine oil and cause engine failure.

If you mainly drive short distances, you should drive on a freeway or go for a country drive for 20 minutes every 500 km (300 miles). This facilitates the diesel particulate filter's burn-off process.

#### Starting and canceling regeneration

#### Requirements:

- · All system conditions are fulfilled.
- · The load condition of the diesel particulate filter is at least 100%.
- The vehicle is stationary.
- · The engine is running.
- If the vehicle has a transmission-mounted power take-off, the latter is deactivated.
- If the vehicle has a parameterizable special module, the rpm request is deactivated.

On-board computer:

- ► Service ➤ Particle Filter
- To request regeneration: select OK.
- To observe the vehicle surroundings: Make sure that no injuries or damage due to the hot exhaust gases can occur in the vehicle surroundings. Confirm for three seconds with OK. Regeneration starts. The engine speed increases and the message Regeneration Active appears.
- (i) The duration of regeneration depends on the load condition of the diesel particulate filter (approx. 20-25 minutes).

  After successful regeneration, the engine speed is reduced again.
- ➤ To cancel regeneration: switch off the engine or depress the clutch (for manual transmission) or brake (for automatic transmission).

  Regeneration is canceled.

Regeneration cannot be requested again until the load condition of the diesel particulate filter is at least 100%.

#### Displaying the load

On-board computer:

→ Service → Consumption Info

The load of the diesel particulate filter is displayed.



Load display at 75% load

To exit the display: press the back button on the left-hand side of the steering wheel.

Bear in mind the following related topic:

Operating the on-board computer(→ page 170)

#### Battery main switch

Notes on the battery main switch

I NOTE Damage to the electrical system

If you remove the battery main switch, it could lead to the electrical system becoming damaged.

Make sure that the ignition is switched off and that at least 20 minutes have passed before removing the battery main switch. Otherwise, electrical system components could be damaged.

You can use the battery main switch to disconnect the current to all your vehicle's consumers. This will prevent uncontrolled battery discharge caused by quiescent current consumers.


If your vehicle is equipped with an auxiliary battery in the engine compartment or in the base of the co-driver seat, you must disconnect both batteries. Only then is the electrical system fully disconnected from the power supply.

- (i) Only disconnect the vehicle from the power supply using the battery main switch in the following situations:
  - The vehicle is stationary for a long time
  - It is absolutely necessary to disconnect the vehicle from the power supply

After switching on the power supply, you will need to reset the side windows ( $\rightarrow$  page 60) and the electric sliding door ( $\rightarrow$  page 56).

#### Switching the power supply on/off

#### Switching off the power supply

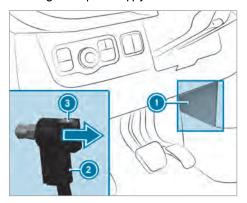

#### Battery main switch

- (i) Note the remaining time before the next service due date (→ page 208)and oil change (→ page 211). The time recording is also disrupted if the power supply is disconnected.
- Switch off the ignition and wait at least 15 minutes.
- Remove cover ①. To do this, take hold of the cover at the upper edge, move it outwards in the direction of the driver's door and lift it off.
- Press and hold button 3.
- Pull plug 2 out of the earth pin.
- Push plug 2 as far as possible in the direction of the arrow so that it cannot make contact with the earth pin.

All starter battery consumers are disconnected from the power supply.

#### Switching on the power supply

- Press plug 2 onto the earth pin until you feel it engage and plug 2 is in full contact with the earth pin.
  - All starter battery consumers are reconnected to the power supply.
- Fasten cover ①. To do this, place the cover on from above.
- Press the cover into the neighboring switching console on the right hand side.

#### Automatic transmission

#### DIRECT SELECT lever

#### Function of the DIRECT SELECT lever

WARNING Risk of accident and injury due to children left unattended in the vehicle

If children are left unsupervised in the vehicle, they could, in particular:

- open doors, thereby endangering other persons or road users.
- get out and be struck by oncoming traffic.
- operate vehicle equipment and become trapped, for example.

In addition, the children could also set the vehicle in motion, for example by:

- · releasing the parking brake.
- changing the transmission position.
- starting the vehicle.
- Never leave children unattended in the vehicle
- When leaving the vehicle, always take the SmartKey with you and lock the vehicle.
- Keep the vehicle SmartKey out of reach of children.


#### WARNING Risk of accident due to incorrect gearshifting

If the engine speed is higher than the idle speed and you engage the transmission position D or R, the vehicle may accelerate sharply.

If you engage the transmission position **D** or **R** when the vehicle is at a standstill, always depress the brake pedal firmly and do not accelerate at the same time.


You use the DIRECT SELECT lever to switch the transmission position. The current transmission position appears in the multifunction display  $(\rightarrow page 171).$ 

The shifting characteristics of the automatic transmission is designed for comfortable and economical handling. For this reason, the multifunction display shows, in addition to the transmission position display, the c for Comfort.

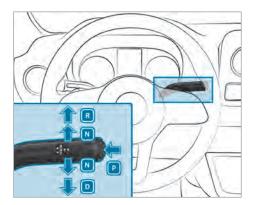

- P Park position
- R Reverse gear
- Neutral
- **D** Drive position

#### Engaging reverse gear R

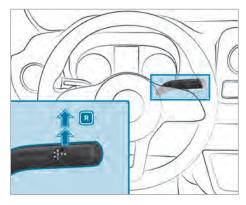

Depress the brake pedal and push the DIRECT SELECT lever upwards past the first point of resistance.

Transmission position display **R** is shown in the multifunction display.


#### Selecting neutral N

**WARNING** Risk of accident and injury when neutral position is engaged

If you park the vehicle with the transmission in neutral position [N] and the parking brake is not engaged, the vehicle may roll away.

There is a risk of accident and injury.

Before parking the vehicle, apply the parking brake.

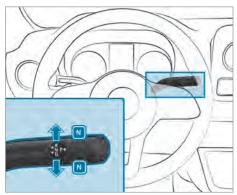

 Press the brake pedal and the DIRECT SELECT lever upwards or downwards to the first point of resistance.


Transmission position display  $\boxed{\mathbf{N}}$  is shown in the multifunction display.

Releasing the brake pedal will allow you to move the vehicle freely, for example, to push it or tow it.

# If the automatic transmission should also stay in neutral N when the ignition is switched off, carry out the following:

- Start the vehicle.
- Depress the brake pedal and engage neutral **N**.
- Release the brake pedal.
- Switch off the ignition.
- i if you then leave the vehicle and the key is still in the vehicle, the automatic transmission will stay in neutral **N** from then on.

#### Engaging park position P

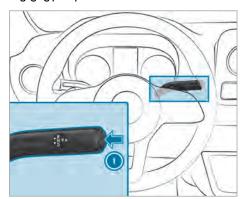


Press button ①. Transmission position display P is shown in the multifunction display.

Park position **P** is engaged automatically when one of the following conditions is met:

- · you switch off the engine in transmission position **D** or **R**.
- · you open the driver's door when the vehicle is stationary or when driving at a very low speed and in transmission position **D** or **R**.

#### Engaging drive position D

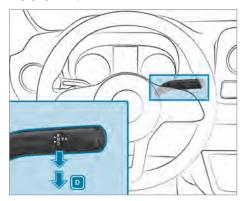

Depress the brake pedal and push the DIRECT SELECT lever downwards past the first point of resistance.

Transmission position display **D** is shown in the multifunction display.


The automatic transmission shifts through the individual gears automatically when it is in transmission position D. This is determined by the following factors:

- position of the accelerator pedal
- · driving speed

#### Restricting the shift range

#### Requirements:

Transmission position **D** is engaged  $(\rightarrow page 121).$ 

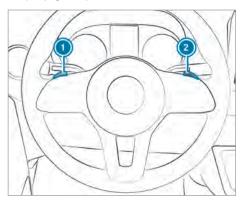

To restrict the shift range: briefly pull steering wheel gearshift paddle 1.

The automatic transmission shifts to the next lower gear, depending on the gear currently engaged. The shift range is also restricted.

The shift range selected is shown in the multifunction display. The automatic transmission shifts only as far as the selected gear.

Pull and hold steering wheel gearshift paddle **1** 

The automatic transmission will change to a shift range which allows easy acceleration and deceleration. To do this, the automatic transmission shifts down one or more gears and restricts the shift range.

The shift range selected is shown in the multifunction display. The automatic transmission shifts only as far as the selected gear.

(i) The automatic transmission does not shift down if you pull steering wheel gearshift paddle 1 whilst traveling at too high a speed.

For vehicle with engine OM642, OM651: the automatic transmission does not shift up if the shift range is restricted and the maximum engine speed of the restricted shift range has been reached.

For vehicles with engine M274: if the maximum engine speed for the restricted shift range is reached and you continue to depress the accelerator pedal, the automatic transmission will shift up automatically.

➤ To de-restrict the shift range: briefly pull steering wheel gearshift paddle ②.
The automatic transmission shifts to the next

The automatic transmission shifts to the next gear up, depending on the gear currently engaged. This de-restricts the shift range at the same time.

The shift range selected is shown in the multifunction display. The automatic transmission shifts only as far as the selected gear.

To de-restrict the shift range: pull and hold steering wheel gearshift paddle 2.

ΟI

Engage transmission position  $\boxed{\mathbf{p}}$  again  $(\rightarrow)$  page 121).

The automatic transmission shifts up one or more gears depending on the gear currently engaged. Simultaneously, the shift range restriction is deactivated and the transmission position appears in the multifunction display  $\boxed{\textbf{D}}$ .

Recommended shift ranges for the following driving conditions:

- **3** Use the engine's braking effect.
- Use the engine's braking effect on downhill gradients and when driving on steep roads, in mountainous areas as well as under arduous operating conditions.
- Use the engine's braking effect on extremely steep downhill gradients and on long downhill stretches.

#### Using kickdown

- For maximum acceleration: depress the accelerator pedal beyond the pressure point.
- Ease off the accelerator pedal once the desired speed is reached.

#### All-wheel drive

#### Notes on all-wheel drive

All-wheel drive ensures permanent drive for all four wheels, and together with ESP® it improves the traction of the vehicle.

With the OM651 and OM642 engines, the all-wheel drive must be switched on ( $\rightarrow$  page 123). With the OM654 engine, there is intelligent closed-loop control of the drive torque between the front and rear axles.

The traction control of the all-wheel drive also takes place via the brake system. Therefore, the

brake system can overheat during extreme off-road use. In this case, ease off the accelerator pedal or stop to allow the brake system to cool down.

If a driven wheel spins due to insufficient traction, observe the following notes:

- When pulling away, make use of the traction control integrated in ESP®. Depress the accelerator pedal as far as necessary.
- Take your foot off the accelerator pedal, slowly, while the vehicle is in motion.

In wintry driving conditions, always use winter tires (M+S tires) and, if necessary, snow chains ( $\rightarrow$  page 239). Only in this way can the maximum effect of all-wheel drive be achieved.

Use DSR (Downhill Speed Regulation) when driving downhill off-road ( $\rightarrow$  page 146).

If you fail to adapt your driving style or if you are inattentive, the all-wheel drive system can neither reduce the risk of an accident nor override the laws of physics. The all-wheel drive system cannot take road, weather and traffic conditions into account. The all-wheel drive system is only an aid. You are responsible for maintaining a safe distance from the vehicle in front, for vehicle speed, for braking in good time and for staying in lane.

**NOTE** Risk of damage to the drivetrain and the brake system

If you operate vehicles with all-wheel drive on a one-axle test stand, you may damage the drive-train or the brake system.

- A function or performance test should only be carried out on a two-axle test stand.
- If you wish to operate the vehicle on such a test stand, please consult a qualified specialist workshop in advance.

**NOTE** Risk of damage to the transfer case

If you tow the vehicle with a raised axle, the transfer case can get damaged. Such damage is not covered by Mercedes-Benz Limited Warranty.

- Never tow the vehicle with a raised axle.
- Only tow the vehicle with all wheels on the ground or fully raised.
- Note the instructions on towing the vehicle with full contact with the ground for all wheels.

#### Engaging all-wheel drive

#### Conditions for engaging/disengaging

You can engage and deactivate the all-wheel drive when stationary or while driving slowly.

When stationary, observe the following:

- The engine is running.
- . The steering wheel in the straight-ahead posi-

If the all-wheel drive cannot be engaged when stationary:

Vehicles with automatic transmission: Shift the selector lever from N to D from D to N from  $\mathbb{N}$  to  $\mathbb{R}$  and back to  $\mathbb{N}$ . Engaging and disengaging the all-wheel drive can be made easier in this way.

Observe the following when driving slowly:

- The engine is running.
- The vehicle is not traveling faster than 6.2 mph (10 km/h).
- The vehicle is not being driven around a curve.

If it is not possible to engage all-wheel drive when the vehicle is rolling:


Vehicles with automatic transmission: Briefly move the selector lever to  $\mathbb{N}$ .

#### Engaging/disengaging all-wheel drive

NOTE Risk of damage to the transfer case

The transfer case may be damaged if you depress the accelerator pedal while engaging or disengaging the all-wheel drive.

Do not depress the accelerator pedal while the indicator lamp in the all-wheel drive switch is flashing.

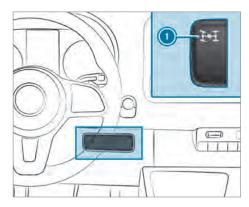

To engage/disengage: Press the upper section of switch 1.

The indicator lamp in switch (1) flashes while the all-wheel drive is engaged or disengaged.

The 👩 and 🐧 warning lamps light up in the instrument display. ESP® and ASR are deactivated for the duration of the shift operation. If the shift operation is successful, the and warning lamps in the instrument display go out and ESP® and ASR are reactivated.

As long as the indicator lamp in the switch 1 is flashing, you can cancel the shift operation by pressing switch 1 again. If the shift operation fails, the indicator lamp in switch 1 briefly flashes three times. One of the shift conditions was not met

If the indicator lamp in switch (1) lights up, allwheel drive is engaged.

(i) If the LOW RANGE transmission ratio is engaged, the all-wheel drive cannot be disengaged.

#### Function of the LOW RANGE gear reduction


The LOW RANGE gear reduction enables very slow driving in the respective gears. If you engage LOW RANGE, the engine's performance characteristics and the automatic transmission's shifting characteristics are adjusted accordingly. The transmission ratio from the engine to the wheels is around 40% lower than in the road position. The drive torque is increased correspondingly.

Conditions for engaging/disengaging

The following shifting conditions must be met in order to engage or disengage LOW RANGE:

- All-wheel drive is engaged (→ page 123).
- The engine is running.
- The vehicle is stationary.
- · You depress the brake pedal.
- Vehicles with automatic transmission: the selector lever is in position | P | or | N |.

#### Engaging and disengaging LOW range

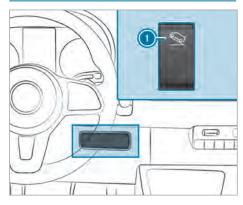

- Engaging and disengaging LOW range
- (i) On vehicles with DSR (Downhill Speed Regulation), switch (i) is replaced with the switch for DSR.
- ➤ To engage and disengage: press the upper section of switch ①.

The RANGE indicator lamp flashes in the instrument display for the duration of the shift operation.

- When the shift operation takes place and LOW RANGE is engaged, the LOW indicator lamp lights up.
- When the shift operation takes place and LOW RANGE is disengaged, the RANGE indicator lamp goes out.

As long as the indicator lamp NOW is flashing, you can cancel the shift operation by pressing button again. If the shift operation fails, the indicator lamp NAME briefly flashes three times. One of the shift conditions was not met.

#### Electronic level control

#### Function of ENR (electronic level control)

**WARNING** Risk of entrapment from vehicle lowering

When lowering the vehicle, people could become trapped if their limbs are between the vehicle body and the tires or underneath the vehicle.

Make sure no one is underneath the vehicle or in the immediate vicinity of the wheel arches when the vehicle is being lowered.

### **WARNING** Risk of injury due to tipping over of the jack

When you park a vehicle with air suspension, the air suspension can remain activated for up to one hour even if the ignition is switched off. If you then lift the vehicle with the jack, the air suspension tries to compensate for the vehicle level.

The jack can tip over.

Before lifting the vehicle, press the Service button on the air suspension remote control.

This prevents automatic adjustment of the vehicle level and manual raising or lowering.

### **WARNING** Risk of accident due to lowered or raised chassis frame

If the chassis frame is adjusted, the braking and driving characteristics can be severely impaired. You could also exceed the permissible vehicle height.

Adjust the driving level before driving off.

#### **WARNING** Risk of accident due to a malfunction of electronic level control

The vehicle level may be too high, too low or asymmetrical.

The driving and steering characteristics of the vehicle may be noticeably different.

- Adapt your driving style to the changed driving characteristics.
- Stop, paying attention to road and traffic conditions.
- Consult a qualified specialist workshop.

**NOTE** Risk of damage to the chassis from lowered vehicle level

If electronic level control is malfunctioning or readjusts while you are driving, the vehicle level may be lowered.

- Pay attention to the road conditions and ensure there is sufficient ground clearance.
- Drive carefully.

The level of the vehicle depends on vehicle load and the load distribution. Electronic level control adjusts the level of the rear axle automatically on vehicles with an air-sprung rear axle. The vehicle level is thereby always maintained at the driving level, regardless of vehicle load. Driving dynamics remain unaffected. The height difference between the sides of the vehicle may be up to 0.4 in (1 cm).

Electronic level control is not engine-dependent and is only operational when the ignition is switched on. The electronic level control compressor works audibly.

(i) If the compressor works constantly or starts up several times per minute, electronic level control is malfunctioning.

Depending on the vehicle's equipment, electronic level control switches between manual mode and automatic mode. This is dependent on the driving speed or the parking brake position.

If electronic level control switches depending on vehicle speed, manual operation is automatically activated when the vehicle is stationary. You may raise or lower the vehicle level. If you subsequently drive faster than 6 mph (10 km/h), manual mode is automatically deactivated and automatic mode sets the vehicle level.

If electronic level control switches depending on the parking brake position, manual mode is automatically activated when the parking brake is applied. You may raise or lower the vehicle level to load and unload. If you release the parking brake, manual mode is automatically deactivated and automatic mode sets the driving level.

When working on the vehicle or changing a wheel, you can deactivate electronic level control  $(\rightarrow page 125)$ .

If electronic level control is malfunctioning or the vehicle level is too high or too low, warning tone sounds.

The driving and steering characteristics of the vehicle will be noticeably different. Electronic level

control adjusts the vehicle level to the normal level as soon as possible. Drive on carefully until the warning tone stops. Only then is the vehicle at normal level.

To restore the vehicle level, automatic mode and electronic level control automatically switch on again depending on the option selected:

- · When the parking brake is released
- From speeds of approximately 6 mph  $(10 \, \text{km/h})$

If the electronic level control compressor threatens to overheat, e.g. due to repeated raising or lowering within a short period, electronic level control is deactivated. You can raise or lower the vehicle level again after a few minutes.


#### Raising and lowering the vehicle level

#### Certain special equipment enables other operation options:

- Ambulance: raising the vehicle level above the driving level (center position) is not possible. Only the lowest position and the driving level can be set.
- Speed signal: in order to operate electronic level control, the parking brake must not be applied. Electronic level control can be operated manually up to 6.2 mph (10 km/h). If this speed is exceeded, driving level will be set automatically.
- 30-minute run-on module: electronic level control can be operated up to 30 minutes after switching off the ignition.

#### Using the remote control

The remote control is located in a holder on the B-pillar on the driver's side. Remove the remote control from the holder before use.

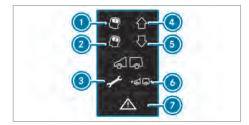

Electronic level control starts automatically if the ignition is switched on. Operation is only possible after the parking brake has been applied.

Electronic level control performs a self-check regularly when it is activated and while in use. Indicator lamp ② on the remote control lights up for about one second when you switch on the ignition.

There is a malfunction if indicator lamp **(2)** behaves in the following ways:

- The indicator lamp does not light up when you switch on the ignition
  - 01
- The indicator lamp then lights up again or flashes

In addition, a warning tone is emitted from the remote control for approximately 30 seconds. The malfunction that has been detected can be shown using the indicator lamps (signaling of malfunction codes).

- Park the vehicle, leaving the ignition switched on.
- Apply the parking brake.
- ➤ To raise or lower the vehicle level: press and hold button ③ or ⑤ until the vehicle level reaches the required height.

  The indicator lamp on button ④ or ⑤ flashes

as long as the vehicle level is being changed. When the vehicle level has been set, the indicator lamp on button (a) or (b) lights up.

- To lower automatically: briefly press button (5).

  Electronic level control automatically lowers the vehicle to the next lower position:
  - From the highest position to driving level
  - From driving level to the lowest position

The indicator lamp on button (3) flashes as long as the vehicle level is being changed. When the vehicle level has been set, the indicator lamp on button (3) lights up.

- i By pressing button 4 during the movement, the original position will be reset.
- ➤ To raise automatically: briefly press button ②.

  Electronic level control automatically raises the vehicle to the next higher position:
  - · From the lowest position to driving level
  - From driving level to the highest position

The indicator lamp on button (a) flashes as long as the vehicle level is being changed. When the vehicle level has been set, the indicator lamp on button (a) lights up.

- (i) By pressing button (5) during the movement, the original position will be reset.
- To raise or lower automatically to driving level (center position): press and hold button .

  Electronic level control automatically raises or lowers the vehicle to driving level.
- To save the set vehicle level: set the required vehicle level.
- Press and hold button o or until you hear a tone.

The vehicle level set has been saved on corresponding button (1) or (2).

- To call up the saved vehicle level: briefly press button or ②.
  - Electronic level control automatically raises or lowers the vehicle to the saved driving level.


The indicator lamp on button ① or ② flashes as long as the vehicle level is being changed. When the vehicle level has been set, the indicator lamp on button ① or ② lights up.

- Service mode may only be activated or deactivated at a qualified specialist workshop by trained personnel. In service mode, the air suspension system is deactivated for maintenance or error detection.
- To activate service mode: press button ③. Service mode is active and the indicator lamp in button ③ lights up continuously.
- ➤ To deactivate service mode: press button ⑤.

  Service mode is deactivated and the indicator lamp in button ⑥ goes out.
- ➤ To switch on automatic mode: drive at over 6.2 mph (10 km/h) or release the parking brake.

Electronic level control controls the vehicle level automatically.

#### Using the button in the switch panel

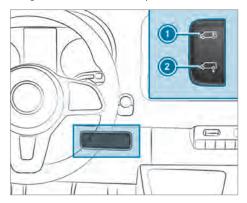

- Park the vehicle, leaving the ignition switched
- Apply the parking brake.
- To raise or lower the vehicle level: press and hold button 1 or 2 until the vehicle level reaches the required height.
- To lower automatically: briefly press the lower section of switch 2.

Electronic level control automatically lowers the vehicle to the next lower position:


- From the highest position to driving level
- · From driving level to the lowest position
- (i) By pressing button (1) during the movement, the original position will be reset.
- To raise automatically: briefly press the lower section of switch 1.

Electronic level control automatically raises the vehicle to the next higher position:

- From the lowest position to driving level
- From driving level to the highest position
- (i) By pressing button (2) during the movement, the original position will be reset.
- To switch on automatic mode: drive at over 6.2 mph (10 km/h) or release the parking brake.

Electronic level control controls the vehicle level automatically.

#### Using the button in the rear compartment

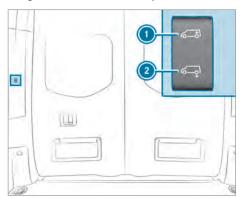

- Park the vehicle, leaving the ignition switched
- Apply the parking brake.
- To raise or lower the vehicle level: press and hold button 1 or 2 until the vehicle level reaches the required height.
- To lower automatically: briefly press the lower section of switch 2.

Electronic level control automatically lowers the vehicle to the next lower position:

- · From the highest position to driving level
- From driving level to the lowest position
- (i) By pressing button (1) during the movement, the original position will be reset.
- To raise automatically: briefly press the lower section of switch 1.

Electronic level control automatically raises the vehicle to the next higher position:

- From the lowest position to driving level
- From driving level to the highest position
- (i) By pressing button (2) during the movement, the original position will be reset.
- To switch on automatic mode: drive at over 6.2 mph (10 km/h) or release the parking brake.

Electronic level control controls the vehicle level automatically.


### Using electronic level control for charging with air in an emergency

#### ! NOTE Damage due to excess pressure

If the pressure in the air suspension bellows is too high, the compressed-air lines or the air suspension bellows can be damaged.

In doing so, do not exceed the maximum permissible operating pressure of 0.113 ksi (900 kPa (9 bar/130 psi)).

Only for vehicles with valves for electronic level control emergency charging: if electronic level control is malfunctioning and the vehicle is leaning, you can raise or lower the vehicle by connecting an external compressed-air source to one of the emergency valves (similarly to tire valves). If electronic level control is not operational, you can drive on carefully to the nearest qualified specialist workshop and have the malfunction remedied.

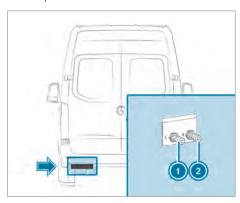

- Apply the parking brake.
- **Vehicles with automatic transmission:** shift the transmission to position **P**.
- Switch off the engine.
- Turn the valve cap of the corresponding valve (1) L = left, 2 R = right).
- Stand to the side of the vehicle when connecting the external compressed-air source.
- Raise or lower the vehicle level by charging or releasing compressed air until the driving level has been reached and the vehicle is in a horizontal position. While doing so, ensure you observe the maximum permissible operating pressure of 900 kPa (9 bar/130 psi).
- Disconnect the external compressed-air source.

- Tighten the valve cap on the valve ( L = left, 2 R = right).
- Drive on carefully to the nearest qualified specialist workshop.

### Rectifying problems with the electronic level control

### You cannot raise or lower the vehicle level when stationary

#### Possible cause:

- The compressor is in danger of overheating.
   After repeatedly raising and lowering the vehicle, electronic level control (play protection) is deactivated.
- Try to set the vehicle level manually again after approximately one minute.

#### or

#### Possible cause:

 Electric level control has been deactivated due to undervoltage. The battery may not be charging.

Handling and ride comfort may suffer.

- Start the engine.
- Consult a qualified specialist workshop as soon as possible.

#### Refueling

#### Refueling the vehicle

**WARNING** Risk of fire or explosion from fuel

Fuels are highly flammable.

- Fire, open flames, smoking and creation of sparks must be avoided.
- Switch off the ignition and, if available, the stationary heater, before and while refueling the vehicle.

#### **WARNING** Risk of injury from fuels

Fuels are poisonous and hazardous to your health.

- Do not swallow fuel or let it come into contact with skin, eyes or clothing.
- ▶ Do not inhale fuel vapor.
- Keep children away from fuel.

Keep doors and windows closed during the refueling process.

If you or other people come into contact with fuel, observe the following:

- Immediately rinse fuel off your skin with soap and water.
- If fuel comes into contact with your eyes, immediately rinse them thoroughly with clean water. Seek medical attention immediately.
- If you swallow fuel, seek medical attention immediately. Do not induce vomiting.
- Change immediately out of clothing that has come into contact with fuel.
- WARNING Risk of fire and explosion due to electrostatic charge

Electrostatic charge can ignite fuel vapor.

- Before you open the fuel filler cap or take hold of the pump nozzle, touch the metallic vehicle body.
- To avoid creating another electrostatic charge, do not get into the vehicle again during the refueling process.
- WARNING Risk of fire from fuel mixture

Vehicles with a diesel engine:

While the engine is running, component parts in the exhaust system may overheat without warning.

- Never refuel using gasoline.
- Never mix gasoline with diesel fuel.
- NOTE Do not use diesel to refuel vehicles with a gasoline engine

If you have accidentally refueled with the wrong fuel:

- · Do not switch the ignition on. Otherwise fuel can enter the engine.
  - Even small amounts of the wrong fuel could result in damage to the fuel system and the engine. The repair costs are high.
- Consult a qualified specialist workshop.
- Have the fuel tank and fuel lines drained completely.

NOTE Do not use gasoline to refuel vehicles with a diesel engine

If you have accidentally refueled with the wrong fuel:

- Do not switch the ignition on. Otherwise, fuel can enter the fuel system.
  - Even small amounts of the wrong fuel could result in damage to the fuel system and the engine. The repair costs are high.
- Consult a qualified specialist workshop.
- Have the fuel tank and fuel lines drained completely.
- **NOTE** Damage to the fuel system caused by overfilled fuel tanks
- Only fill the fuel tank until the pump nozzle switches off.
- NOTE Fuel may spray out when you remove the fuel pump nozzle
- Only fill the fuel tank until the pump nozzle switches off.
- **NOTE** Damage to painted surfaces due to fuel
- Do not spill any fuel on painted surfaces.
- **ENVIRONMENTAL NOTE** Environmental damage due to improper handling of fuel


If fuels are handled improperly, they pose a danger to persons and the environment.

▶ Do not allow fuels to run into the sewage system, the surface waters, the ground water or into the ground.

#### Requirements:

- The vehicle is unlocked
- The auxiliary heating is deactivated
- · The ignition is switched off
- The front left-hand door is open
- (i) Do not get back into the vehicle during the refueling process. Otherwise, electrostatic charge could build up again.

Observe the notes on operating fluids  $(\rightarrow page 269)$ .

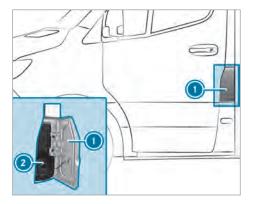

- Fuel filler flap
- 2 Fuel filler cap
- (i) The fuel filler flap is beside the front left-hand door when viewed in the direction of travel.

  The position of the fuel filler cap is also shown in the Instrument Display. The arrow on the filling pump specifies the side of the vehicle.
- Open fuel filler flap ①.
- Turn fuel filler cap ② counter-clockwise and remove it.
- Close all vehicle doors to prevent fuel vapors from entering the vehicle interior.
- Completely slide the filler neck of the pump nozzle into the tank, hook in place and refuel.
- Fill the fuel tank only until the pump nozzle switches off.
- Replace fuel filler cap ② and turn it clockwise.
   You will hear a click when the fuel filler cap is closed fully.
- Open the front left-hand door.
- Close fuel filler flap 1.
- Vehicles with a diesel engine and incorrect fueling protector against refueling with gasoline: the filler neck is designed for refueling at diesel filling pumps for passenger vehicles.
- (i) Vehicles with a diesel engine without an incorrect fueling protector: refueling preferred at diesel filling pumps for passenger vehicles. However, you can also refuel at a diesel filling pump for trucks.
- (i) If the fuel tank has been run completely dry, add at least 1.3 gal (5 l) of fuel.

(i) Vehicles that can use a mixture of fuels can be recognized by the sticker "Ethanol up to E85!" on the fuel filler flap.

#### Rectifying problems with the fuel and fuel tank

#### Fuel is leaking from the vehicle

Possible cause:

- The fuel line or the fuel tank is faulty.
- Apply the parking brake.
- Switch off the engine.
- Open the driver's door.
  The tow position is set to 0.
- Do not restart the engine under any circumstances.
- Consult a qualified specialist workshop.
- Take measures to contain leaked fuel.

#### The engine does not start

Possible cause:

- The fuel tank has been run completely dry.
- Refuel the vehicle with at least 1.3 gal (5 l) of fuel.
- Switch the ignition on for approximately ten seconds.
- Start the engine continuously for a maximum of ten seconds until it runs smoothly.

If the engine does not start:

- Switch the ignition on for approximately ten seconds.
- Start the engine continuously for a maximum of ten seconds until it runs smoothly.

If the engine does not start after three attempts:

Consult a qualified specialist workshop.

#### DEF

#### Notes on DEF

NOTE Irritation to skin, eyes and respiratory tract due to DEF

DEF can cause irritation if inhaled or ingested, or if it comes in contact with eyes or skin. When the tank is open, ammonia vapor can escape.

▶ Do not inhale or ingest DEF.

- Make sure DEF does not come into contact with your skin, eyes or clothing.
- Keep DEF away from children.
- Only fill the DEF tank in well-ventilated areas.

If a person comes into contact with DEF, observe the following:

- If you have ingested DEF, drink plenty of water and seek medical attention immediately.
- . If DEF has come into contact with your eyes, rinse them for 15 minutes, also beneath the eyelids.
- · Immediately rinse DEF off your skin with soap and water.
- **NOTE** Damage and malfunctions caused by impurities in DEF

Impurities in DEF result in the following:

- Higher emission values
- · Damage to the catalytic converter
- Engine damage
- · Malfunctions in the DEF exhaust gas aftertreatment system
- Avoid impurities in DEF.
- NOTE Soiling due to crystallized DEF residue

DEF residue crystallizes after some time.

- ► When refilling DEF, immediately rinse any surfaces that it comes into contact with and remove all DEF residue.
- ▶ DEF can also be removed with a damp cloth and cold water.
- If DEF has already crystallized, clean using a sponge and cold water.

#### **ENVIRONMENTAL NOTE** Soiling with DEF

DEF residue crystallizes after some time and stain the affected surfaces.

Immediately rinse surfaces that come in contact with DEF when filling with water or remove DEF with a damp cloth and cold water.

If DEF has already crystallized, clean using a sponge and cold water.

DEF is a liquid urea solution used for exhaust gas aftertreatment of diesel engines. In order for the exhaust gas aftertreatment to function properly. only use DEF in accordance with ISO 22241.

DEF has the following properties:

- Non-toxic
- Colorless and odorless
- Non-flammable

#### DEF availability:

- · You can have DEF refilled by fast service at a qualified specialist workshop, e.g. an authorized Mercedes-Benz Center
- DEF is available at numerous gas stations via DEF filling pumps.
- · Alternatively, DEF is available at qualified specialist workshops, e.g. an authorized Mercedes-Benz Center, and at numerous gas stations as a DEF refill canister or DEF refill
- (i) DEF freezes at a temperature of approximately 12.2 °F (-11 °C). The vehicle is equipped with a DEF preheating system at the factory. This means that winter operation is also ensured for temperatures below 12.2 °F (-11 °C). If you refill DEF at temperatures below 12.2 °F (-11 °C), the DEF level in the instrument cluster may not be displayed correctly. If the DEF is frozen, drive for at least 20 minutes and then park the vehicle for a minimum of 30 seconds, so that the level is correctly displayed. In extreme winter conditions, the time needed to detect the amount topped up may be considerably longer. Park the vehicle in a warm garage to speed up this process.
- i Ensure the connection between the refill container and vehicle filler neck does not drip.

#### Calling up the DEF level gauge

On-board computer:

- ¬→ Service
- Select DEF and confirm.
  - The DEF level appears.



Instrument Display with color display

DEF level



Instrument Display with black and white display

DEF level

#### Refilling DEF

- I NOTE Engine damage due to DEF being in the fuel
- ▶ DEF must not be used to fill the fuel tank.
- Only use DEF to fill the DEF tank.
- Do not overfill the DFF tank.
- NOTE Contamination of the vehicle interior due to DEF leakage
- After adding, carefully close the DEF refill container.
- Avoid carrying DEF refill containers permanently in the vehicle.

#### Requirements:

• The ignition is switched off.

The following messages that appear in succession in the multifunction display indicate that you need to refill the DEF tank:

• Refill Additive See Operator's Manual

The DEF level has fallen below the first warning threshold.

 Refill Additive (DEF) Starts until Emerg. Op.: XXX See Operator's Manual

The DEF level has fallen into the reserve range. After the message appears for the first time, the remaining DEF supply will last for approximately 1,200 mi (1,900 km) and you can start the engine a further 16 times. The number of remaining engine starts XX (16 to 1) is shown in the message every time the engine is started

 Refill Additive Emer. Op.: Max. XXX mph See Operator's Manual


You can only drive the vehicle at a maximum speed of 5 mph (8 km/h).

#### Refill quantity:

With a prompt in the display	at least 8 I
Without a prompt in the display	at least 2 l


You can also have the DEF level displayed  $(\rightarrow page 131)$ .


### Opening the DEF filler cap on filler caps that are not lockable

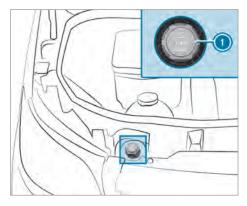

- Open the hood.
- ➤ Turn DEF filler cap **(1)** counter-clockwise and remove it.

#### Opening the DEF filler cap on lockable filler caps

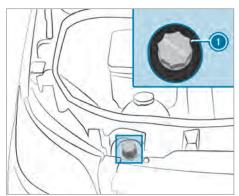

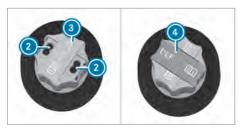

- Open the hood.
- Take tool 4 for unlocking DEF filler cap 1 from the vehicle tool kit.
- Pull cover 3 on DEF filler cap 1 up, turn 90° and release it.
- Insert tool 4 in holes 2 of DEF filler cap 1.
- Turn DEF filler cap (1) counter-clockwise and remove it.

#### Preparing the DEF refill canister



Variant 1




#### Variant 2

- Unscrew the cap on DEF refill canister ①.
- Screw disposable hose ② onto the opening of DEF refill canister (1) until hand-tight.

### Refilling DEF



Variant 1

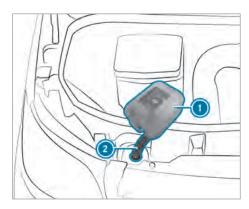

#### Variant 2


- Screw on hand-tight (variant 1) or insert (variant 2) disposable hose (2) into the filler neck of the vehicle.
- ➤ Lift up and tip DEF refill canister **①**. The filling process stops when the DEF tank is completely full.
  - DEF refill canister ① can be removed when it has been only partially emptied.
- Unscrew disposable hose 2 and close DEF and refill canister 1 in reverse order.
- Switch on the ignition for at least 60 seconds.
- Start the vehicle.
- i Avoid storing DEF containers permanently in the vehicle.

#### DEF refill bottle

Only screw the DEF refill bottle hand-tight onto the filler opening in the engine compartment. It may otherwise be damaged.



DEF refill bottles ① can be obtained at many gas stations or at a qualified specialist workshop. Refill bottles without a threaded cap offer no overfill protection. DEF may leak out as a result of overfilling. Mercedes-Benz offers special refill bottles with a threaded cap. You can obtain this from an authorized Mercedes-Benz Center.

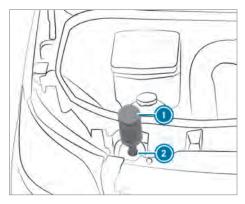

- Unscrew the protective cap from DEF refill bottle .
- Place DEF refill bottle (1) as shown on filler opening (2) and screw it on clockwise until hand-tight.
- Press DEF refill bottle 1 towards filler opening 2.


The DEF tank is filled. This could take up to one minute.

- (i) When the DEF refill bottle is no longer pressed down, filling stops. The bottle can be removed when it has been only partially emptied.
- Let go of DEF refill bottle 1.
- ➤ Turn DEF refill bottle (1) counter-clockwise and remove it.
- Screw the protective cap onto DEF refill bottle again.

### Filling procedure with the pump nozzle of an DEF filling pump


Insert the pump nozzle into the filler neck and add DEF. When doing so, do not overfill the DEF tank. You can also use a DEF filling pump for trucks.


#### Closing the DEF filler cap on filler caps that are not lockable

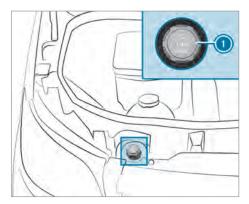

- After filling the DEF tank, place DEF filler cap on the filler neck and tighten it clockwise.
- Turn the DEF filler cap until the lettering is legible and horizontal.
  - The filler neck is only locked correctly when this is the case.
- Close the hood.

#### Closing the DEF filler cap on lockable filler caps

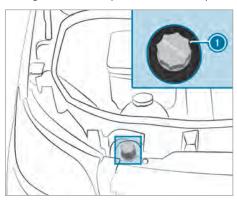

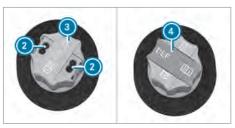

- After filling the DEF tank, place DEF filler cap on the filler neck and tighten it clockwise.
- Remove tool 4 from DEF filler cap 1 and store it in the vehicle tool kit.
- Pull cover 3 on DEF filler cap 1 up over holes 2 of DEF filler cap 1, turn and release.
- Turn DEF filler cap 1. If DEF filler cap 1 turns freely, the DEF tank is closed.

#### **Parking**

#### Parking the vehicle

WARNING Risk of fire caused by hot exhaust system parts

Flammable materials such as leaves, grass or twigs may ignite.

- Park the vehicle so that no flammable material can come into contact with hot vehicle components.
- In particular, do not park on dry grassland or harvested grain fields.

#### WARNING Risk of accident and injury due to children left unattended in the vehicle

If children are left unsupervised in the vehicle, they could, in particular:

- open doors, thereby endangering other persons or road users.
- · get out and be struck by oncoming traffic.
- operate vehicle equipment and become trapped, for example.

In addition, the children could also set the vehicle in motion, for example by:

- · releasing the parking brake.
- changing the transmission position.
- starting the vehicle.
- Never leave children unattended in the vehicle.
- When leaving the vehicle, always take the SmartKey with you and lock the vehicle.
- Keep the vehicle SmartKey out of reach of children.

- ! NOTE Damage to the vehicle or the drivetrain due to rolling away
- Always park your vehicle safely and according to legal requirements.
- Always properly secure the vehicle against rolling away.

Observe the following points to ensure that the vehicle is properly secured against rolling away unintentionally.

- Always apply the parking brake.
- Vehicles with automatic transmission: Engage transmission position P.
- On uphill or downhill inclines: Secure the rear axle with a chock or an object without sharp edges.
- You can operate the side windows for five minutes after you have switched off the vehicle

#### Manual parking brake

#### Applying or releasing the parking brake lever

**WARNING** Risk of skidding or an accident by braking with the parking brake

If you have to brake your vehicle with the parking brake, the braking distance is considerably longer and the wheels may lock. There is an increased risk of skidding and/or accident.

- Only brake the vehicle with the parking brake if the service brake has failed.
- In this case, do not apply the parking brake with too much force.
- ▶ If the wheels lock, immediately release the parking brake as much as required for the wheels to turn again.

### **WARNING** Risk of fire and an accident if the parking brake is not released

If the parking brake is not fully released when driving, the following situations can occur:

- The parking brake can overheat and cause a fire
- The parking brake can lose its holding function.
- Completely release the parking brake before driving off.

The brake lights do not light up when you brake the vehicle with the parking brake.



Generally, you may only apply the parking brake when the vehicle is stationary.


- ► To apply the parking brake: pull handbrake lever up as far as the last possible detent. When the engine is running, the PARK and (D) (USA) or (D) (Canada) indicator lamps in the Instrument Display light up. If the vehicle is in motion, a warning tone sounds.
- (i) In vehicles with a folding parking brake lever, you can then press parking brake lever (i) down as far as it will go.
- ➤ To release the parking brake: on vehicles with a folding handbrake lever, first pull handbrake lever ① up as far as it will go.
- Pull parking brake lever (1) slightly and press release knob (2).

### Folding the handbrake lever up or down (only in vehicles with a folding handbrake lever)

#### Requirements:

- The handbrake lever is applied.
- To fold down the handbrake lever: push the handbrake lever down as far as it will go.
- To raise the handbrake lever: pull the handbrake lever up as far as it will go.

#### Performing emergency braking with the handbrake lever

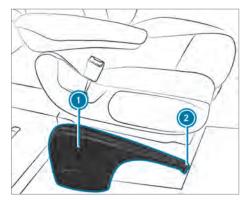

If, in exceptional cases, the service brake fails, you may use the parking brake to perform emergency braking.

Emergency braking: press and hold release button 2 and carefully pull brake lever 1.

#### Electric parking brake

#### Information on the electric parking brake

WARNING Risk of accident and injury due to children left unattended in the vehicle

If children are left unsupervised in the vehicle, they could, in particular:

- · open doors, thereby endangering other persons or road users.
- get out and be struck by oncoming traffic.
- operate vehicle equipment and become trapped, for example.

In addition, the children could also set the vehicle in motion, for example by:

- · releasing the parking brake.
- changing the transmission position.
- starting the vehicle.
- Never leave children unattended in the vehicle.
- When leaving the vehicle, always take the SmartKey with you and lock the vehicle.
- Keep the vehicle SmartKev out of reach of children.

For the automatic functions to work correctly, the driver must be seated in the correct seat position  $(\rightarrow page 66)$ .

The function of the electric parking brake is dependent on the on-board electrical system voltage. If the on-board electrical system voltage is low or there is a malfunction in the system, it may not be possible to apply the electric parking brake and the yellow (P) indicator lamp lights up.

In this case, park the vehicle in the following way:

- · Park the vehicle on level ground and secure it to prevent it from rolling away.
- · Vehicles with automatic transmission: shift the transmission to position P.
- (i) The electric parking brake is only actually applied when the red PARK and (USA) or (Canada) indicator lamps light up continuously.

It may not be possible to release a parking brake if the on-board electrical system voltage is low or if there is a malfunction in the system. Inform a qualified specialist workshop.


When the engine is switched off, the electric parking brake carries out a function test at regular intervals. Noises are normal in this process.

#### Automatically applying the electric parking brake Vehicles with automatic transmission:

The electric parking brake is automatically applied when the transmission is in position **P**.

In addition, at least one of the following conditions must be fulfilled:

- · the engine is switched off
- the driver is not sitting in the driver's seat
- the belt buckle is undone

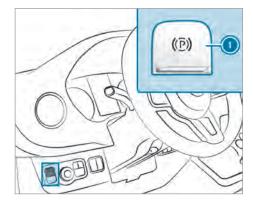

To prevent the electric parking brake from applying automatically, pull switch ①.

The electric parking brake is also automatically applied if Active Distance Assist DISTRONIC has brought the vehicle to a standstill.

In addition, at least one of the following conditions must be fulfilled:

- · the engine is switched off
- the driver is not sitting in the driver's seat
- · the belt buckle is undone
- there is a system malfunction
- · the power supply is insufficient
- · the vehicle is stationary for a long time

The red PARK and ( (USA) or ( (Canada) indicator lamp in the Instrument Display lights up. The electric parking brake is only actually applied when the red PARK and ( (USA) or ( (Canada) indicator lamps light up continuously.

### Releasing the electric parking brake automatically Vehicles with automatic transmission:

The electric parking brake of your vehicle is released when all of the following conditions are fulfilled:

- The driver is sitting in the driver's seat.
- · The driver is belted.
- The engine is running.
- The transmission is in position D or R and you depress the accelerator.

٥r

You switch from transmission position P to position D or R. You must also depress the accelerator if traveling on steep uphill gradients.

If the transmission is in position R, the rearend doors must be closed.

### Applying/releasing the electric parking brake manually

A

**WARNING** Risk of accident and injury due to children and animals left unattended in the vehicle

If you leave children and animals unattended in the vehicle, they may be able to set the vehicle in motion, for example by:

- · Releasing the parking brake
- Shifting the automatic transmission out of park position **P**.
- · Starting the engine

They could also operate vehicle equipment and become trapped.

- Never leave children and animals unattended in the vehicle.
- When leaving the vehicle, always take the key with you and lock the vehicle.
- To apply: press the switch when the vehicle is stationary.

When the electric parking brake is applied, the red PARK and ( USA) or ( Canada) indicator lamps light up in the instrument display. The electric parking brake is only actually applied when the red PARK and ( USA) or ( Canada) indicator lamps light up continuously.

It is also possible to apply the electric parking brake when the ignition is switched off.

➤ To release: pull the ( switch.

The red PARK and ( (USA) or ( (Canada) indicator lamps in the instrument display go out.

You may only release the electric parking brake if the ignition is switched on with the start/ stop button.

#### **Emergency braking**

In the event of an emergency, you can brake the vehicle while it is in motion with the electric parking brake.

While driving, press the switch of the electric parking brake.
The vehicle is braked as long as you keep the switch of the electric parking brake depressed.

The vehicle's brake lights light up.

The longer the switch of the electric parking brake is depressed, the greater the braking force.

During the braking procedure, you will receive the following feedback from the vehicle:

- A warning tone sounds.
- The Release Parking Brake message appears in the multifunction display.
- The red PARK and (P) (USA) or (Canada) indicator lamps flash in the multifunction display.

When the vehicle has been braked to a standstill. the electric parking brake is applied.

#### Parking the vehicle for an extended period

NOTE Starter battery damage due to leaving the vehicle standing idle for extended periods of time

If the vehicle is not moved for a prolonged period, quiescent current can lead to excessive discharge of the starter battery and cause battery damage.

- ► Charge the starter battery if the voltage is below 12.2 V, for example by driving a considerable distance.
- Charge the starter battery every six months, even if it has been disconnected or is in standby mode.
- Check the charge level every four weeks if no trickle charger is being used.
- If possible, connect a trickle charger to the jump-start connection point.
- Consult a qualified specialist workshop to disconnect the battery or if you have any questions.

#### Parking the vehicle for over four weeks

- Method 1: connect the batteries to a trickle charger via the jump-start connection.
- Method 2: interrupt the power supply by activating standby mode ( $\rightarrow$  page 139).
- Method 3: disconnect all batteries. For this. please contact a qualified specialist workshop.

#### Standby mode

#### Activating or deactivating standby mode

#### Requirements:

· The engine is switched off.

If standby mode is activated, energy loss will be minimized during extended periods of non-opera-

Standby mode is characterized by the following:

- The starter battery is preserved.
- The maximum non-operational time appears in the media display.
- The connection to online services is interrup-
- The ATA (anti-theft alarm system) is unavaila-
- The interior motion sensor and tow-away alarm functions are not available.

If the following conditions are fulfilled, standby mode can be activated or deactivated using the multimedia system:

- · The engine is switched off.
- · The ignition is switched on.

Exceeding the vehicle's displayed non-operational time may cause inconvenience, for example it cannot be guaranteed that the starter battery will reliably start the engine.

Charge the starter battery first in the following situations:

- In order to extend the vehicle's non-operational time.
- The Battery Charge Insufficient for Standby Mode message appears in the media display.
- Standby mode is automatically deactivated when the ignition is switched on.

On-board computer:

- ► Settings ► Vehicle ► Standby Mode
- To activate/deactivate: selectYes or No.
- (i) If the options are grayed out, the condition of charge of the battery is not sufficient for standby mode.


#### Driving and driving safety systems

Notes on driving systems and your responsibility

Your vehicle is equipped with driving systems which assist you in driving, parking and maneuvering the vehicle. The driving systems are only aids. These cannot replace your attention to the surroundings and do not release you from your responsibility under road traffic law. The driver is responsible for the distance to the vehicle in front, for vehicle speed, braking in good time and for staying in lane. Always pay attention to the traffic and intervene if necessary. Be aware of the limitations regarding the safe use of these systems.

If you fail to adapt your driving style, the driving systems can neither reduce the risk of accident nor override the laws of physics. The road and weather conditions as well as the traffic situation cannot always be taken into account.

#### Information about sensors

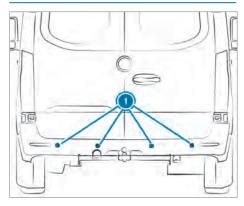

Certain driving and driving safety systems use sensors ① to monitor the area in front of, behind or next to the vehicle (depending on the vehicle's equipment).

Depending on the vehicle's equipment, the radar sensors are integrated behind the bumpers and/or behind the radiator grille. Keep these parts free of dirt, ice and slush ( $\rightarrow$  page 218). The sensors must not be covered, for example by bicycle racks, overhanging loads or stickers. After a collision, have the function of the radar sensors checked at a qualified specialist workshop as damage (both visible or non-visible) may have occurred to the bumper or radiator grille.

### Function of driving systems and driving safety systems

In this section, you will find information about the following driving systems and driving safety systems:

- ABS (Anti-lock braking system) (→ page 140)
- ASR (acceleration skid control) (→ page 141)
- BAS (Brake Assist System) (→ page 141)
- ESP<sup>®</sup> (Electronic Stability Program)
   (→ page 141)
- EBD (Electronic Brakeforce Distribution)
   (→ page 143)
- Active Brake Assist (→ page 143)
- Cruise control (→ page 145)
- Active Distance Assist DISTRONIC
   (→ page 148)
- Hill start assist (→ page 150)
- HOLD function (→ page 151)
- Parking Assist PARKTRONIC (→ page 152)
- Rear view camera (→ page 153)
- Surround view camera (→ page 155)
- ATTENTION ASSIST (→ page 157)
- Blind Spot Assist (→ page 158)
- Active Lane Keeping Assist (→ page 161)

#### Functions of ABS (Anti-lock Braking System)

Observe the important safety guidelines for the driving safety system.

ABS controls the brake pressure in critical situations:

- The wheels are prevented from locking when braking, e.g. during maximum full-stop braking or when there is insufficient tire traction
- The steerability of the vehicle in terms of physical possibilities is ensured when braking
- ABS is active from speeds of approx. 3 mph (5 km/h). On a slippery road surface, ABS intervenes even if you only brake gently.

#### System limits

If there is a malfunction and the yellow ABS warning lamp lights up continuously in the instrument display after starting the engine, ABS may be impaired or inoperative.

If ABS intervenes, you will feel a pulsing in the brake pedal. The pulsating brake pedal may be an

indication of hazardous road conditions and functions as a reminder to take extra care while driving.

If ABS intervenes: keep the brake pedal firmly depressed until the braking situation has passed.

To carry out maximum full-stop braking: depress the brake pedal with full force.

#### Function of BAS (Brake Assist System)

WARNING Risk of an accident caused by a malfunction in BAS (Brake Assist System)

If BAS is malfunctioning, the braking distance in an emergency braking situation is increased.

▶ Depress the brake pedal with full force in emergency braking situations. ABS prevents the wheels from locking.

BAS supports you with additional braking force in an emergency braking situation.

If you depress the brake pedal quickly, BAS is activated:

- . BAS automatically boosts the braking force of the brakes
- · BAS can shorten the braking distance
- · ABS prevents the wheels from locking

When you release the brake pedal, the brakes function as usual again. BAS is deactivated.

#### Functions of ASR (Acceleration Skid Control)

ASR can neither reduce the risk of an accident nor override the laws of physics if the driver does not pay attention when pulling away or accelerating. ASR is only an aid. Always adapt your driving style to suit the prevailing road and weather conditions.

If you activate or deactivate the all-wheel drive in a vehicle with this option, ASR will be deactivated for the duration of the activation/deactivation process.

Vehicles without steering wheel buttons: if ASR is malfunctioning, the 📻 indicator lamp lights up while the engine is running and the engine output may be reduced ( $\rightarrow$  page 26).

ASR improves traction, i.e. the transfer of power from the tires to the road surface, for a sustained period and thereby, also improves the driving stability of the vehicle. If the drive wheels start to spin, ASR brakes individual drive wheels and limits the engine torque. ASR thus significantly assists

you when pulling away and accelerating, especially on wet or slippery roads.

If traction on the road surface is not sufficient, even ASR will not allow you to pull away without difficulty. The type of tires and total weight of the vehicle as well as the gradient of the road also play a crucial role.

If ASR intervenes, the 📜 warning lamp in the Instrument Display flashes.

### Functions of ESP® (Electronic Stability Program)

WARNING Risk of skidding if ESP® is malfunctioning

If ESP® is malfunctioning, ESP® cannot carry out vehicle stabilization. In addition, other driving safety systems are switched off.

- Drive on carefully.
- Have ESP® checked at a qualified specialist workshop.

WARNING Risk of skidding if ESP® is deactivated

If you deactivate ESP®, ESP® cannot carry out vehicle stabilization.

ESP® should only be deactivated in the following situations.

If the surface requires, temporarily deactivate  $ESP^{\otimes}$  when pulling away ( $\rightarrow$  page 142).

Do not operate the vehicle on a roller dynamometer (e.g. for a performance test). If you have to operate the vehicle on a roller dynamometer, consult a qualified specialist workshop beforehand.

If you activate or deactivate the all-wheel drive in a vehicle with this option, ESP® will be deactivated for the duration of the activation/deactivation process.

If ESP® is malfunctioning or deactivated, the warning lamp lights up while the engine is running and the engine output may be reduced  $(\rightarrow page 26)$ .

(i) Only use wheels with the recommended tire sizes. Only then will ESP® function properly. ESP® can, within physical limits, monitor and improve driving stability and traction in the following situations:

- When pulling away on wet or slippery road surfaces
- · When braking
- If you are driving faster than 49.7 mph (80 km/h) in strong crosswinds

If the vehicle is deviating from the direction desired by the driver, ESP® can stabilize the vehicle by performing the following actions:

- · One or more wheels are braked
- The drive system performance is adapted depending on the situation

When ESP® is deactivated, the 👩 warning lamp in the Instrument Display lights up continuously:

- · Vehicle stabilization may be delayed
- · Crosswind Assist is still active
- The drive wheels may start to spin
- · ASR traction control is no longer active

If  $\ensuremath{\mathsf{ESP}}^\ensuremath{^{\otimes}}$  is deactivated,  $\ensuremath{\mathsf{ESP}}^\ensuremath{^{\otimes}}$  will still support you when braking.

If the 📳 warning lamp in the Instrument Display flashes, one or more tires have reached their tire traction limit:

- Adapt your driving style to suit the prevailing road and weather conditions
- Do not deactivate ESP® under any circumstances

## Activating/deactivating ESP® (Electronic Stability Program)

Multimedia system:

- (i) ESP® can only be activated and deactivated via quick access when at least one other function is available in quick access. Otherwise, you can find ESP® in the Assistance menu.
- Select ESP.
  A prompt appears.
- ► Select On or 🐉 Off.

If the  $\frak{\cite{1.5ex}} ESP^{\cite{1.5ex}} OFF$  warning lamp lights up constantly in the instrument cluster,  $ESP^{\cite{1.5ex}}$  is deactivated.

Observe the information on warning lamps and display messages which may appear in the instrument cluster.

#### Functions of ESP® Crosswind Assist

Crosswind Assist does not react under the following conditions:

- The vehicle is subjected to severe jolts and vibrations, e.g. as a result of uneven surfaces or potholes.
- The vehicle loses traction, e.g. on snow or ice or when hydroplaning.
- The driver is performing sudden and large steering movements.

Crosswind Assist is operational again as soon as the driving conditions return to normal.

Crosswind Assist detects strong crosswind gusts that can impair ability of your vehicle to drive straight ahead. Crosswind Assist intervenes depending on the direction and strength of the crosswind.

A stabilizing brake application helps you to keep the vehicle on track.

Information is shown in the instrument cluster in the event of a clearly discernible intervention by Crosswind Assist.

Crosswind Assist is active above a vehicle speed of 50 mph (80 km/h) when driving straight or slightly cornering.

#### Function of ESP® trailer stabilization



**WARNING** Risk of accident in poor road and weather conditions

In poor road and weather conditions, the trailer stabilization cannot prevent lurching of the vehicle/trailer combination. Trailers with a high center of gravity may tip over before ESP® detects this.

Always adapt your driving style to suit the current road and weather conditions.

ESP® trailer stabilization counteracts critical driving situations in good time and thereby provides considerable assistance when driving with a trailer. Trailer stabilization is part of ESP®.

If the sensor system and evaluation logic detect trailer swinging movements,  $\mathsf{ESP}^{\otimes}$  trailer stabilization initially brakes individual vehicle wheels in a

targeted manner. It thus counteracts swinging movements. If the swinging movements do not stop, the vehicle is braked until the vehicle/trailer combination is stabilized. If necessary, the vehicle's engine output is limited.

If your vehicle with trailer (vehicle/trailer combination) starts to swerve, you are able to stabilize the vehicle/trailer combination only by braking. ESP® trailer stabilization helps you to stabilize the vehicle/trailer combination in this situation.

ESP® trailer stabilization is active at speeds above approximately 40 mph (65 km/h).

If ESP® is deactivated because of a malfunction. trailer stabilization will not function.

## Function of EBD (electronic brake force distribution)

EBD has the following characteristics:

- monitoring and controlling the braking force on the rear wheels
- · improving driving stabilization when braking, especially on bends

#### **Functions of Active Brake Assist**

Active Brake Assist consists of the following functions:

- Distance warning function
- Autonomous braking function
- · Situation-dependent braking assistance

Active Brake Assist can help you to minimize the risk of a collision with vehicles or pedestrians or to reduce the effects of such a collision.

If Active Brake Assist has detected a risk of collision, you will be warned visually and acoustically.

If you do not react to the visual or acoustic warning, autonomous braking can be initiated in critical situations.

If there are pedestrians and cyclists crossing: in especially critical situations, Active Brake Assist can initiate autonomous braking directly. In this case, the visual and acoustic warning occurs simultaneously with the braking application.

If you apply the brake yourself in a critical situation, or apply the brakes during autonomous braking, situation-dependent braking assistance occurs. The brake pressure increases up to maximum full-stop braking if necessary. Situationdependent braking assistance only intervenes when the brakes are applied firmly; otherwise, it remains within the autonomous braking process.

WARNING Risk of accident caused by limited detection performance of Active Brake

Active Brake Assist cannot always clearly identify objects and complex traffic situations.

Due to the nature of the system, complex driving conditions may also cause Brake Assist to intervene or not intervene without reason. In such cases, and in the event of Active Brake Assist malfunctioning, the brake system will continue to be available with full brake boost and BAS.

- Always pay careful attention to the traffic situation; do not rely on Active Brake Assist alone. Active Brake Assist is only an aid. The driver of the vehicle is responsible for keeping a sufficiently safe distance to the vehicle in front, for vehicle speed and for braking in good time.
- Be prepared to brake or swerve if necessary.

Also observe the system limits of Active Brake

## The individual subfunctions are available in the following speed ranges: Distance warning function

The distance warning function warns you at speeds greater than approximately 4 mph (7 km/h), if your vehicle is critically close to a vehicle or pedestrian.

An intermittent warning tone sounds and the 🔼 distance warning lamp lights up in the instrument cluster.

Brake immediately or take evasive action, provided it is safe to do so and the traffic situation allows this.

# The distance warning function can aid you in the following situations with an intermittent warning tone and a warning lamp:

Vehicles traveling in front	Stationary vehi- cles	Crossing vehicles	Crossing pedes- trians/cyclists	Stationary pedes- trians
Up to approx. 155 mph (250 km/h)	Up to approx. 124 mph (200 km/h)	No reaction	Up to approx. 37 mph (60 km/h)	No reaction

#### Autonomous braking function

The autonomous braking function may intervene at speeds starting from approximately 4 mph (7 km/h) in the following situations:

Vehicles traveling in front	Stationary vehi- cles	Crossing vehicles	Crossing pedes- trians/cyclists	Stationary pedes- trians
Up to approx. 155 mph (250 km/h)	Up to approx. 124 mph (200 km/h)	No reaction	Up to approx. 37 mph (60 km/h)	No reaction

## Situation-dependent braking assistance

Situation-dependent braking assistance may intervene at speeds starting from approximately 4 mph (7 km/h) in the following situations:

Vehicles traveling in front	Stationary vehi- cles	Crossing vehicles	Crossing pedes- trians/cyclists	Stationary pedes- trians
Up to approx. 155 mph (250 km/h)	Up to approx. 50 mph (80 km/h)	No reaction	Up to approx. 37 mph (60 km/h)	No reaction

# Canceling a brake application of Active Brake Assist

You can cancel a brake application of Active Brake Assist at any time by:

- Fully depressing the accelerator pedal or with kickdown.
- Fully releasing the brake pedal (only during situation-dependent braking assistance).

Active Brake Assist may cancel the brake application when one of the following conditions is fulfilled:

- · You maneuver to avoid the obstacle.
- There is no longer a risk of collision.
- An obstacle is no longer detected in front of your vehicle.

## System limits

The system may be impaired or may not function in the following situations:

- The sensors are affected by snow, rain, fog or heavy spray.
- The sensors are dirty, fogged up, damaged or covered.
- The sensors are affected by interference from other radar sources, e.g. strong radar reflections in parking garages.
- If a loss of tire pressure or a faulty tire has been detected and displayed.
- Full system performance is not available for a few seconds after switching on the ignition or after driving off.

The system may not react correctly in the following situations:

- · In complex traffic situations, objects may not always be clearly detected.
- · Pedestrians or vehicles move quickly into the detection range of the sensors.
- Pedestrians are obscured by other objects.
- In curves with a narrow radius.

#### Setting Active Brake Assist

#### Requirements:

· The ignition is switched on.

Multimedia system:



The following settings are available:

- Early
- Medium
- Late
- Off
- i It is recommended that Active Brake Assist is always left activated.
- Select a setting.

The last active setting is selected automatically every time the engine is started.

Exception: if the last setting was Off, the Medium setting will be automatically activated the next time the engine is started.

#### Deactivating Active Brake Assist

- (i) It is recommended that Active Brake Assist is always left activated.
- Select Off. The distance warning function and autonomous braking function are deactivated.

The next time the engine is started, the Medium setting is automatically activated.

(i) When Active Brake Assist is deactivated, the স্কাল symbol appears in the status area of the multifunction display.

#### Cruise control

#### Function of cruise control

Cruise control accelerates and brakes the vehicle automatically in order to maintain a previously stored speed.

If you accelerate to overtake, for example, the stored speed is not deleted. If you remove your foot from the accelerator pedal after overtaking. cruise control will resume speed regulation back to the stored speed.

Cruise control is operated using the corresponding steering wheel buttons. You can store any speed above 15 mph (20 km/h).

If you fail to adapt your driving style, cruise control can neither reduce the risk of an accident nor override the laws of physics. It cannot take into account road, weather or traffic conditions. Cruise control is only an aid. You are responsible for the distance to the vehicle in front, for vehicle speed, braking in good time and for staying in your lane.

The status of cruise control and the stored speed are shown in the Instrument Display.



Display in the Instrument Display (color display)

- Cruise control is selected.
- Set speed gray: speed is stored, cruise control is deactivated.
- 3 Set speed green: speed is stored, cruise control is activated.

#### System limits

Cruise control may be unable to maintain the stored speed on uphill gradients. The stored speed is resumed when the gradient levels out.

On long and steep downhill gradients, you should change down to a lower gear in good time. Take particular note of this when driving a laden vehicle. By doing so, you will make use of the engine's braking effect. This will take some of the strain off the brake system and prevent the brakes from overheating and wearing too quickly.

Do not use cruise control in the following situations:

- In traffic situations where frequent speed changes are required, e.g. in heavy traffic or on winding roads.
- On slippery roads. Accelerating can cause the drive wheels to lose traction and the vehicle could then skid.
- If you are driving when visibility is poor.

## Operating cruise control


**WARNING** Risk of accident due to stored speed

If you call up the stored speed and this is lower than your current speed, the vehicle decelerates

Take into account the traffic situation before calling up the stored speed.

## Requirements:

- ESP® is activated, but may not intervene.
- The driving speed is at least 15 mph (20 km/h).

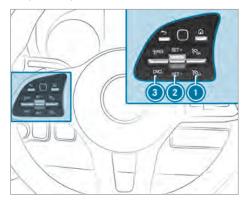

- To activate cruise control: push rocker switch up.
- Remove your foot from the accelerator pedal. The current speed is then saved and maintained by the vehicle.
- Push rocker switch ① up.
- To increase/reduce speed: push rocker switch up or down.

The stored speed is increased or reduced by 1 mph (1 km/h).

, , ,

Press rocker switch ② up or down and hold. The stored speed is increased or reduced in 1 mph (1 km/h) increments.

or

Push rocker switch beyond the pressure point.
 The stored speed is increased or reduced by 5 mph (10 km/h).

or

Push rocker switch beyond the pressure point and hold.
 The stored speed is increased or reduced in 5 mph (10 km/h) increments.

or

- Accelerate the vehicle to the desired speed.
- Push rocker switch 2 up.

If cruise control is activated and Traffic Sign Assist has detected a speed restriction sign with a maximum permissible speed and this appears in the instrument display:

To adopt the detected speed: push rocker switch (a) up.

The maximum permissible speed shown by the traffic sign is stored and the vehicle maintains this speed.

To deactivate cruise control: push rocker switch ③ (CNCL) down.

If cruise control is deactivated, it can be reactivated as follows:

- rocker switch (2) (SET+) or (SET-) stores the current speed and the vehicle maintains this speed
- rocker switch (3) (RES) calls up the last speed stored and the vehicle maintains this speed
- i If you brake, deactivate ESP® or if ESP® intervenes, cruise control is deactivated.
  When you switch off the vehicle, the last speed stored is cleared.

#### **DSR (Downhill Speed Regulation)**

## Notes on DSR

If you fail to adapt your driving style or you are inattentive, DSR can neither reduce the risk of accident nor override the laws of physics. DSR cannot take road, weather and traffic conditions into account. DSR is only an aid. You are responsible especially for a safe distance to the vehicle in front, for vehicle speed and for braking in good time.

or

DSR supports you when driving downhill. DSR maintains a set speed for you on downhill gradients by applying the brakes as required. Maintaining the speed is dependent on the road surface conditions and the downhill gradient and cannot therefore be guaranteed in all situations.


You can set the speed depending on the gear range to between 2 mph (4 km/h) and 11 mph (18 km/h) using the brake and accelerator pedals or the rocker switch on the steering wheel.

DSR automatically controls in the following situations:

- If the vehicle is stationary, or its speed is less than 2 mph (4 km/h), the speed is set to 2 mph (4 km/h) or it is set to the minimum speed for the respective gear range.
- If you drive faster than 11 mph (18 km/h) offroad, DSR switches to standby mode. DSR remains activated, but does not brake automat-
- If you drive downhill slower than 11 mph (18 km/h). DSR sets the speed to the previously set speed.
- If you drive faster than 28 mph (45 km/h). DSR switches off automatically.

#### Activating/deactivating DSR

#### Activating DSR

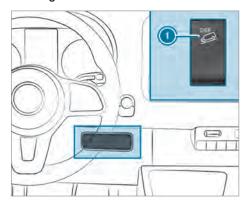

You can activate DSR when the vehicle is stationary or moving.

- Press the upper section of switch ①.
- Brake or accelerate the vehicle to the desired speed between 2 mph (4 km/h) and 11 mph (18 km/h).

Release the brake or accelerator pedal. The current speed is stored. When stationary, 2 mph (4 km/h) or the minimum possible speed for each gear range is stored. DSR maintains the stored speed on the downhill gradient and brakes automatically.

When DSR is activated and the vehicle pulls away. accelerates or brakes on an incline, the speed set corresponds to the speed at which the accelerator or brake pedal is released or the rocker switch is pressed during DSR regulation. This is only the case if you are not driving faster than 11 mph (18 km/h).

DSR status display in the on-board computer

#### DSR is activated:

DSR and the set speed appear in the status area of the on-board computer.

#### DSR is activated, but is not intervening:

- You are driving between 11 mph (18 km/h) and 28 mph (45 km/h).
- DSR and the speed 11 mph (18 km/h) appear in the status area of the on-board computer.


DSR is in standby mode.

#### DSR is inactive:

- You are exceeding a speed of 28 mph (45 km/h).
- DSR appears in the status area of the onboard computer. In addition, the DSR Off message appears.
- DSR - appears in the status area of the on-board computer.

## Setting the speed while driving downhill

You can set the speed to between 2 mph (4 km/h) and, depending on the gear range, up to 11 mph (18 km/h) using the brake and accelerator pedals or the rocker switch on the steering wheel.

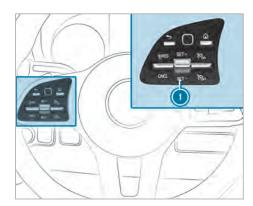

- Brake or accelerate the vehicle to the desired speed on the downhill gradient.
- Release the brake or accelerator pedal. The current speed is stored.


or

- Press rocker switch (1) up or down during a DSR regulation.
  - The last saved speed is increased or reduced.
- Release rocker switch ①.The current speed is stored.

or

- Press rocker switch ① up or down until desired speed is reached.
- Release rocker switch ①.
  The current speed is stored.
- i It may be a moment before the vehicle starts to brake to the set speed. Take this delay into account when setting the speed with rocker switch .

#### Deactivating DSR

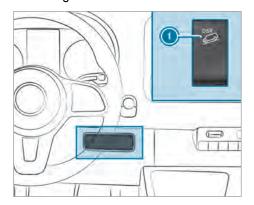

Press the upper section of switch ①.

or

Accelerate and drive faster than 28 mph (45 km/h).

DSR deactivates automatically in the following situations:

- You drive faster than 28 mph (45 km/h).
- There is a malfunction in the ESP® or ABS system.

#### Active Distance Assist DISTRONIC

#### Function of Active Distance Assist DISTRONIC

Active Distance Assist DISTRONIC maintains the set speed on free-flowing roads. If vehicles ahead are detected, the set distance is maintained, if necessary until the vehicle comes to a halt. The vehicle accelerates or brakes, depending on the distance to the vehicle in front and the set speed. Speed and distance are set and stored on the steering wheel. The speed can be set in the range between 15 mph (20 km/h) and 99 mph (160 km/h) or between 15 mph (20 km/h) and the vehicle's maximum speed.

Other features of Active Distance Assist DISTRONIC:

- Depending on the preselected distance, DISTRONIC intervenes either dynamically (short distance) or to save fuel (long distance).
- Depending on the vehicle mass detected, the dynamics of the DISTRONIC intervention are reduced.
- Rapid acceleration to the stored speed is initiated if the turn signal indicator is switched on to change to the overtaking lane.

Active Distance Assist DISTRONIC is only an aid. The driver is responsible for the distance to the vehicle in front, for vehicle speed and for braking in good time.

### System limits

The system may be impaired or may not function in the following instances, for example:

- The radar sensors are affected by snow, rain, fog, heavy spray, glare, direct sunlight or greatly varying ambient light.
- The radar sensors may malfunction in parking garages or on roads with steep uphill or downhill gradients.
- If the radar sensors are dirty or covered.

- · On icy or slippery roads, braking or accelerating can cause the drive wheels to lose traction and the vehicle could then skid.
- Stationary objects are not detected if these were not previously detected as moving.
- On curves, target vehicles may be lost or not recognized correctly. As a result, a target vehicle is not used to regulate the speed which may lead to unwanted acceleration.

Do not use Active Distance Assist DISTRONIC in these situations.

▲ WARNING Risk of accident from acceleration or braking by Active Distance Assist DISTRONIC

Active Distance Assist DISTRONIC may accelerate or brake in the following cases, for example:

- If the vehicle pulls away using Active Distance Assist DISTRONIC.
- If the stored speed is called up and is considerably faster or slower than the currently driven speed.
- If Active Distance Assist DISTRONIC no longer detects a vehicle in front or does not react to relevant objects.
- Always carefully observe the traffic conditions and be ready to brake at all times.
- ▶ Take into account the traffic situation before calling up the stored speed.

WARNING Risk of accident due to insufficient deceleration by Active Distance Assist DISTRONIC

Active Distance Assist DISTRONIC brakes your vehicle with up to 50% of the possible deceleration. If this deceleration is not sufficient. Active Distance Assist DISTRONIC alerts you with a visual and acoustic warning.

- Adjust your speed and maintain a suitable distance from the vehicle in front.
- Brake the vehicle yourself and/or take evasive action.

WARNING Risk of accident if detection function of Active Distance Assist DISTRONIC is impaired

Active Distance Assist DISTRONIC does not react or has a limited reaction:

- when driving on a different lane or when changing lanes
- to pedestrians, animals, bicycles or stationary vehicles, or unexpected obstacles
- to complex traffic conditions
- to oncoming vehicles and crossing traffic

As a result, Active Distance Assist DISTRONIC may neither give warnings nor intervene in such situations.

Always observe the traffic conditions carefully and react accordingly.


Active Distance Assist DISTRONIC may not detect narrow vehicles driving in front, e.g. motorcycles and vehicles not traveling in line with your vehicle.

## Operating Active Distance Assist DISTRONIC

#### Requirements:

- · The vehicle has been started.
- The parking brake has been released.
- ESP® is activated and is not intervening.
- The transmission is in position **D**.
- The driver's and the co-driver door are closed.
- The seat occupancy recognition on the driver's seat has detected that the driver has fastened the seat belt.
- The check of the radar sensor system has been successfully completed.

#### Activating Active Distance Assist DISTRONIC

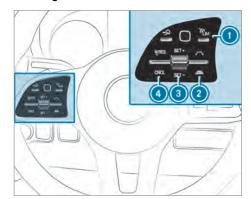

- Press button ①.
- ➤ To activate without a stored speed: press rocker switch ⑤ up (SET+) or down (SET-). The current speed is then saved and maintained by the vehicle.

or

- To activate with a stored speed: press rocker switch (4) up (RES).
- If rocker switch (a) is pressed up twice, Active Distance Assist DISTRONIC is activated with the speed restriction displayed in the instrument cluster.

# Adopting the displayed limit speed when Active Distance Assist DISTRONIC is active

Press rocker switch @ up (RES). The limit speed displayed in the instrument cluster is adopted as the stored speed. The vehicle adapts its speed to that of the vehicle in front, but only up to the stored speed.

# Pulling away again with Active Distance Assist DISTRONIC

- Remove your foot from the brake pedal.
- Press rocker switch 4 up (RES).

or

Depress the accelerator pedal briefly with force.

The functions of Active Distance Assist DISTRONIC continue to be carried out.

#### Deactivating Active Distance Assist DISTRONIC

WARNING Risk of an accident due to Active Distance Assist DISTRONIC being active when you leave the driver's seat

If you leave the driver's seat while the vehicle is being braked by Active Distance Assist DISTRONIC only, the vehicle can roll away.

- Always deactivate Active Distance Assist DISTRONIC and secure the vehicle to prevent it from rolling away before you leave the driver's seat.
- Press rocker switch 4 down (CNCL).
- Depress the brake pedal.

Active Distance Assist DISTRONIC is automatically deactivated in the following circumstances:

- The driver's seat belt buckle is open and the vehicle is traveling slower than 2 mph (3 km/h).
- · The driver's seat is not occupied.

- The transmission is not in position D.
- · The parking brake is applied.
- The driver or co-driver door is open.
- There is an internal error.

In addition to the deactivation of Active Distance Assist DISTRONIC, transmission position  $\boxed{\mathbf{P}}$  is automatically engaged if one of these conditions is met or if the vehicle is traveling very slowly.

### Increasing or reducing the speed

Push rocker switch (3) up (SET+) or down (SET-) to the pressure point. The stored speed is increased or reduced by 1 mph (1 km/h).

or

Press and hold rocker switch (a) up (SET+)/down (SET-) to the pressure point. The stored speed is increased or reduced in 1 mph (1 km/h) increments.

or

Push rocker switch beyond the pressure point.

The stored speed is increased or reduced by 5 mph (10 km/h).

or

Push rocker switch (3) beyond the pressure point and hold.
 The stored speed is increased or reduced in 5 mph (10 km/h) increments.

# Increasing or reducing the specified distance from the vehicle in front

- To increase the specified distance: press rocker switch (2) down ((2)).
- ➤ To reduce the specified distance: press rocker switch ② up ( ( ).

#### Information on Hill Start Assist

Hill Start Assist holds the vehicle for a short time when pulling away on a hill under the following conditions:

- Vehicles with automatic transmission: the transmission is in position  $\boxed{\textbf{D}}$  or  $\boxed{\textbf{R}}$ .
- The parking brake has been released.

This gives you enough time to move your foot from the brake pedal to the accelerator pedal and depress it before the vehicle begins to roll.

WARNING Risk of accident and injury due to the vehicle rolling away

After a short time, Hill Start Assist no longer holds the vehicle.

Swiftly move your foot from the brake pedal to the accelerator pedal. Do not leave the vehicle when it is being held by Hill Start Assist.

#### **HOLD** function

#### **HOLD function**

#### Requirements:

• The seat occupancy recognition on the driver's seat has detected that the driver has fastened the seat belt.

The HOLD function holds the vehicle at a standstill without requiring you to depress the brake pedal, e.g. when pulling away on steep slopes or when waiting in traffic. When you depress the accelerator pedal to pull away, the braking effect is canceled and the HOLD function is deactivated.

The HOLD function is only an aid. The responsibility for the vehicle safely standing still remains with the driver.

#### System limits

The HOLD function is only intended to provide assistance when driving and is not a sufficient means of safeguarding the vehicle against rolling away when stationary.

• The incline cannot be greater than 30%.

#### Activating/deactivating the HOLD function

#### Requirements:

- · The vehicle is stationary.
- · The engine is running or it has been automatically switched off by the ECO start/stop function.
- · The driver is seated and belted.
- The electric parking brake is released.
- · Vehicles with automatic transmission: the selector lever is in position D, R or N.
- · Active Distance Assist DISTRONIC is deactivated.

#### Activating the HOLD function



WARNING Risk of an accident due to the HOLD function being active when you leave the vehicle

If the vehicle is only braked with the HOLD function it could, in the following situations, roll

- If there is a malfunction in the system or in the power supply.
- If the HOLD function is deactivated by depressing the accelerator pedal or brake pedal, e.g. by a vehicle occupant.
- Always secure the vehicle against rolling away before you leave it.



NOTE Damage to the vehicle due to automatic braking

When the following functions are activated, the vehicle brakes automatically in certain situations:

- Active Brake Assist
- Active Distance Assist DISTRONIC
- · HOLD function

To avoid damage to the vehicle, deactivate these systems in the following or similar situations:

- When towing
- In a car wash
- Make sure that the activation conditions are
- Depress the brake pedal until the HOLD display appears in the multifunction display. The HOLD function is activated. You can release the brake pedal.
- (i) If depressing the brake pedal the first time does not activate the HOLD function, wait briefly and then try again.

#### Deactivating the HOLD function

- Vehicles with automatic transmission: depress the accelerator pedal when the automatic transmission is in position  $\boxed{\mathbf{D}}$  or  $\boxed{\mathbf{R}}$ .
- Depress the brake pedal again with sufficient pressure until the HOLD display in the multifunction display goes out.

 Vehicles with automatic transmission: the automatic transmission of your vehicle shifts to P after some time. This relieves the load on the service brake.

When the HOLD function is activated, the automatic transmission automatically shifts to  $\boxed{\textbf{P}}$  in the following situations:

- The driver leaves the driver's seat.
- The driver's door is opened.
- The engine is switched off without the ECO start/stop function.

#### Parking Assist PARKTRONIC

#### Function of Parking Assist PARKTRONIC

Parking Assist PARKTRONIC is an electronic parking assistance system with ultrasound. It monitors the area around your vehicle using six sensors on the front bumper and six sensors on the rear bumper. Parking Assist PARKTRONIC indicates visually and audibly the distance between your vehicle and an object.

Parking Assist PARKTRONIC is only an aid. It is not a substitute for your attention to the surroundings. The responsibility for safe maneuvering and parking remains with you. Make sure that there are no persons, animals or objects in the maneuvering area while maneuvering and parking in/exiting parking spaces.

In the standard setting, an intermittent warning tone sounds from a distance of approximately 1.3 ft (0.4 m) to an obstacle. A continuous tone sounds from a distance of approximately 1.0 ft (0.3 m). You can set the warning tone in the multimedia system so that it will sound earlier at a greater distance of approximately 3.3 ft (1 m) ( $\rightarrow$  page 152).

## Parking Assist PARKTRONIC display in the multimedia system

If the Parking Assist PARKTRONIC display in the multimedia system is not active and an obstacle is detected in the path of the vehicle, a pop-up window for Parking Assist PARKTRONIC appears in the multimedia system at speeds up to approximately 6 mph (10 km/h).

### System limitations

Parking Assist PARKTRONIC does not necessarily take into account the following obstacles:

- Obstacles below the detection range, e.g. persons, animals or objects.
- Obstacles above the detection range, e.g. overhanging loads, overhangs or loading ramps of trucks.

The sensors must be free of dirt, ice and slush. Otherwise, they may not function correctly. Clean the sensors regularly, taking care not to scratch or damage them.

Vehicles with trailer hitch: Parking Assist PARKTRONIC is deactivated for the rear zone when you establish an electrical connection between your vehicle and a trailer.

# Deactivating/activating Parking Assist PARKTRONIC

! NOTE Risk of an accident from objects at close range

Parking Assist PARKTRONIC may not detect certain objects at close range.

When parking or maneuvering the vehicle, pay particular attention to any objects which are above or below the sensors, e.g. flower pots or drawbars. The vehicle or other objects could otherwise be damaged.

### Multimedia system:

- → 😭 ➤ Settings ➤ Quick Access
- Select PARKTRONIC On.
   The function is activated or deactivated depending on the previous setting.
- i Parking Assist PARKTRONIC is automatically activated when starting the vehicle.

# Setting the warning tones of Parking Assist PARKTRONIC

Multimedia system:

- → Settings → Assistance
- ➤ Camera & Parking ➤ Set Warning Tones

#### Adjusting the volume of the warning tones

- Select Warning Tone Volume.
- Adjust the value.

### Adjusting the pitch of the warning tones

- Select Warning Tone Pitch. Adjust the value.
- Specifying the starting point for the warning tones You can specify whether the Parking Assist PARKTRONIC warning tones should commence when the vehicle is further away from an obstacle.
- Select Warn Early All Around.
- Activate or deactivate the function.


## Activating or deactivating audio fadeout

You can specify whether the volume of a media source in the multimedia system is to be reduced when Parking Assist PARKTRONIC gives a warning

- Select Audio Fadeout During Warning Tones.
- Activate or deactivate the function.

#### Rear view camera

#### Function of the rear view camera

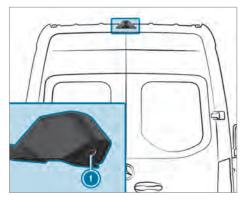

If you have activated the function in the multimedia system, the image from rear view camera 1 appears in the multimedia system when reverse gear is selected. Dynamic guide lines show the path the vehicle will take with the steering wheel in its current position. This helps you to orient yourself and to avoid obstacles when backing up.

The image from rear view camera (1) appears in the multimedia system when the following conditions are fulfilled:

- · The ignition is switched on.
- · Reverse gear has not been engaged.
- The rear-end doors are opened.

This means that the area behind the vehicle can be monitored.

When the rear-end doors are closed, the image from the rear view camera is switched off after approximately ten seconds.

The rear view camera is only an aid. It is not a substitute for your attention to the surroundings. The responsibility for safe maneuvering and parking remains with you. Make sure that there are no persons, animals or objects etc., in the maneuvering area while maneuvering and parking.

The rear view camera may show a distorted view of obstacles, show them incorrectly or not at all. The rear view camera cannot display all objects which are very near to or under the rear bumper. It will not warn you of a collision, people or objects.

You can select from the following views:

- Normal view
- Wide-angle view
- · Trailer view

The area behind the vehicle is displayed as a mirror image, as in the inside rearview mirror.

#### System limitations

The rear view camera will not function or will only partially function in the following situations:

- · There is heavy rain, snow or fog.
- The ambient light is poor, e.g. at night.
- The area is lit by fluorescent light (the display may flicker).
- · If there is a sudden change in temperature, e.g. when driving into a heated garage in win-
- The ambient temperature is very high.
- The camera lens is obstructed, dirty or fogged up. Observe the notes on cleaning the rear view camera (→ page 218).
- · The camera or rear of your vehicle is damaged. In this event, have the camera, its position and its setting checked at a qualified specialist workshop.

The field of vision and other functions of the rear view camera may be restricted due to additional accessories on the rear of the vehicle (e.g. a loading tailgate).

(i) The display contrast may be impaired due to incident sunlight or other light sources. In this case, pay particular attention.

- Have the display repaired or replaced if, for example, pixel errors considerably restrict its use.
- Objects that are not at ground level appear further away than they actually are. This includes, for example:
  - The bumper of a vehicle parked behind.
  - The drawbar of a trailer.
  - · The ball neck of a trailer coupling.
  - The rear end of a truck.
  - · Slanted posts.

Only use the guide lines of the camera image for orientation. Do not travel further than the lowest horizontal guide line when approaching objects. You may otherwise damage your vehicle and/or the object.

## Vehicles without Parking Assist PARKTRONIC

The following camera views are available in the multimedia system:



#### Normal view

- Yellow lane marking the course the tires will take at the current steering wheel angle (dynamic)
- Yellow guide line, vehicle width (driven surface) depending on the current steering wheel angle (dynamic)
- Marking at a distance of approximately 3.3 ft (1.0 m) (the rear-end doors can still be opened completely)
- Red guide line at a distance of approximately1.0 in (0.3 m) from the rear area
- Red guide line at a distance of approximately 8 in (0.2 m) from the rear area, vehicle width with outside mirror



Wide-angle view



View of trailer (if trailer hitch is installed)

- 1 Yellow guide line, locating aid
- Red guide line at a distance of approximately 1.0 in (0.3 m) from the ball head of the trailer hitch
- Ball head of the trailer hitch

#### Vehicles with Parking Assist PARKTRONIC

The following camera views are available in the multimedia system:



## Normal view

- Yellow lane marking the course the tires will take at the current steering wheel angle (dynamic)
- Yellow guide line, vehicle width (driven surface) depending on the current steering wheel angle (dynamic)
- Marking at a distance of approximately 3.3 ft (1.0 m) (the rear-end doors can still be opened completely)

- Red guide line at a distance of approximately 1.0 in (0.3 m) from the rear area
- Red guide line at a distance of approximately 8 in (0.2 m) from the rear area, vehicle width with outside mirror
- Orange warning display of Parking Assist PARKTRONIC: obstacles are a medium distance away (between approximately 1.3 ft (0.4 m) and 2.0 ft (0.6 m))
- Yellow warning display of Parking Assist PARKTRONIC: obstacles are at a distance of between approximately 2.0 ft (0.6 m) and 3.3 ft (1.0 m)
- i) If the distance to the obstacle is less than approx. 1.3 ft (0.4 m), the warning display of Parking Assist PARKTRONIC will be red.
- (i) If the entire system fails, the inner segments of the warning display are shown in red.

If the system fails at the rear, the display of the segments changes as follows:

- The rear segments are shown in red when backing up.
- The rear segments are hidden when driving forwards.

If Parking Assist PARKTRONIC is deactivated, the warning display fades out.



Wide-angle view



View of trailer (if trailer hitch is installed)

Yellow guide line, locating aid

- Red guide line at a distance of approximately 1.0 in (0.3 m) from the ball head of the trailer
- Ball head of the trailer hitch

#### Surround view camera

#### Function of the 360° Camera

The 360° Camera is a system that consists of four cameras. The cameras cover the immediate vehicle surroundings. The system assists you, e.g. when parking or at exits with reduced visibility.

The 360° Camera is only an aid. It is not a substitute for your attention to the surroundings. The responsibility for safe maneuvering and parking remains with you. Make sure that there are no persons, animals or objects etc., in the maneuvering area while maneuvering and parking.

The system evaluates images from the following cameras:

- Rear view camera
- Front camera
- Two side cameras in the outside mirrors

#### Views of the 360° Camera

You can select from different views:

#### Top view



- Yellow lane marking the course the tires will take at the current steering wheel angle (dynamic)
- Yellow guide line, vehicle width (driven surface) depending on the current steering wheel angle (dynamic)
- Marking at a distance of approximately 3.3 ft (1.0 m) (the rear-end doors can still be opened completely)
- Red guide line at a distance of approximately 1.0 in (0.3 m) from the rear area

- Red guide line at a distance of approximately 8 in (0.2 m) from the rear area, vehicle width with outside mirror
- Red warning display of Parking Assist PARKTRONIC: obstacles at a distance of approximately 1.3 ft (0.4 m) or less

When Parking Assist PARKTRONIC is operational and no object is detected, the segments of the warning display are shown in gray.

(i) If the entire system fails, the segments of the warning display are shown in red.

If the system fails at the rear, the display of the segments changes as follows:

- The rear segments are shown in red when backing up.
- The rear segments are hidden when driving forwards.

If Parking Assist PARKTRONIC is deactivated, the warning display fades out.

#### Guide lines

i The guide lines in the multimedia system display show the distances to your vehicle. The distances only apply to road level.

In trailer mode, the guide lines are shown at the level of the trailer hitch.

#### View of trailer (if trailer hitch is installed)




View of trailer (if trailer hitch is installed)

- 1 Yellow guide line, locating aid
- Red guide line at a distance of approximately 1.0 in (0.3 m) from the ball head of the trailer hitch
- 3 Ball head of the trailer hitch

#### Side view of the mirror cameras

The sides of the vehicle can be seen in this view.

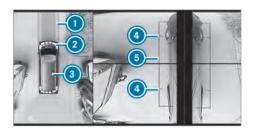

- Lane indicating the route the vehicle will take with the steering wheel in its current position
- Yellow warning display of Parking Assist PARKTRONIC: obstacles at a distance of approximately 3.3 ft (1.0 m) or less
- Your vehicle from above
- Marker of the wheel contact points
- Guide line of external vehicle dimensions with outside mirrors folded out

If the distance to the object lessens, the color of warning display ② changes.

#### System failure

If there is no operational readiness, the following message appears in the multimedia system:



#### System limitations

The 360° Camera will not function or will only partially function in the following situations:

- · The front doors are open.
- . The side mirrors are folded in.
- There is heavy rain, snow or fog.
- The ambient light is poor, e.g. at night.
- The area is lit by fluorescent light (the display may flicker).
- If there is a sudden change in temperature, e.g. when driving into a heated garage in winter
- The ambient temperature is very high.

- · The camera lens is obstructed, dirty or fogged up.
- · Cameras, or vehicle components in which the cameras are installed, are damaged. In this event, have the cameras, their positions and their setting checked at a qualified specialist workshop.

Do not use the 360° Camera under such circumstances. You could otherwise injure others or collide with objects when parking the vehicle.

On vehicles with height-adjustable suspension or if the vehicle is carrying a heavy load, leaving the standard height can result in inaccuracies in the guide lines and in the display of the generated images, depending on technical conditions.

The field of vision and other functions of the camera system may be restricted due to additional attachments on the vehicle (e.g. loading tailgate).

- (i) The contrast of the display may be impaired by abrupt direct sunlight or by other light sources, e.g. when driving out of a garage. In this case, pay particular attention.
- (i) Have the display repaired or replaced if, for example, pixel errors considerably restrict its

The image from the 360° Camera appears automatically in the multimedia system when the following conditions are fulfilled:

- · The ignition is switched on.
- · The rear-end doors are opened.

This means that the area behind the vehicle can be monitored.

When the rear-end doors are closed, the image from the rear view camera is switched off after approximately ten seconds.

See the notes on cleaning the 360° Camera  $(\rightarrow page 218).$ 

## Selecting a view for the surround view camera

#### Requirements:

- The Auto. Rear View Cam. is activated in the multimedia system.
- Engage reverse gear.
- Select the desired view in the multimedia system.

## Activating/deactivating maneuvering assistance Multimedia system:

- → 🔝 >> Settings >> Assistance >> Camera & Parking
- Activate or deactivate Maneuvering Assistance.
- (i) When maneuvering assistance is activated, the following functions are active:
  - Drive Away Assist (→ page 160)
  - Rear Cross Traffic Alert (→ page 160)

#### ATTENTION ASSIST

## Function of ATTENTION ASSIST

ATTENTION ASSIST can assist you on long, monotonous journeys, e.g. on highways and trunk roads. If ATTENTION ASSIST detects indicators of fatigue or increased lapses in concentration on the part of the driver, it suggests taking a break.

ATTENTION ASSIST is only an aid. It cannot always detect drowsiness or increased lapses in concentration in good time. The system is not a substitute for a well-rested and attentive driver. On long journeys, take regular and timely breaks that allow you to rest properly.

You can choose between two settings:

- Standard: normal system sensitivity
- Sensitive: higher system sensitivity. The driver is warned earlier and the attention level detected by the system is adapted accordingly.

If drowsiness or increasing lapses in concentration are detected, the ATTENTION ASSIST: Take a Break!warning appears in the Instrument Display. You can acknowledge the message and take a break where necessary. If you do not take a break and ATTENTION ASSIST continues to detect increasing lapses in concentration, you will be warned again after a minimum of 15 minutes.



Instrument Display (color display)

You can have the following status information for ATTENTION ASSIST displayed in the Assistance menu of the on-board computer:

- The journey length since the last break
- The attention level determined by ATTENTION ASSIST:
  - The fuller the circle is, the higher the detected attention level is
  - The circle in the center of the display empties from the outside inwards as attentiveness decreases



Instrument Display (black and white display)

You can have the following status information for ATTENTION ASSIST displayed in the Assistance menu of the on-board computer:

- · The journey time since the last break
- The attention level determined by ATTENTION ASSIST:
  - The fuller the bar is, the higher the detected attention level is
  - The bar empties as attentiveness decreases

If ATTENTION ASSIST cannot calculate the attention level and cannot issue a warning, the Attention Level message appears.

If ATTENTION ASSIST is deactivated, the symbol appears in the assistance graphic in the Instrument Display when the engine is running. ATTENTION ASSIST is activated automatically when the engine is re-started. The last selected sensitivity level remains stored.

#### System limits

ATTENTION ASSIST is active in the 37 mph (60 km/h) to 124 mph (200 km/h) speed range.

The functionality of ATTENTION ASSIST is restricted, and warnings may be delayed or not occur at all, in the following situations:

- The journey lasts less than approximately 30 minutes
- The road condition is poor (uneven road surface or potholes)
- The vehicle is subjected to a strong crosswind
- You have a sporty driving style (high cornering speeds or high rates of acceleration)
- · The time is set incorrectly
- You change lanes and vary your speed frequently in active driving situations

The ATTENTION ASSIST drowsiness or alertness assessment is deleted and restarted when continuing the journey in the following situations:

- · You switch off the engine
- You unfasten your seat belt and open the driver's door (e.g. to change drivers or take a break)

#### Setting ATTENTION ASSIST

Multimedia system:

→ Settings → Assistance → Attention Assist

#### Setting options

Select Standard, Sensitive or Off.

### **Blind Spot Assist**

#### Function of Blind Spot Assist with exit warning

Blind Spot Assist uses two lateral, rear-facing radar sensors to monitor the area directly next to and on the side behind the vehicle.

(i) USA only:

This device has been approved by the FCC as a "Vehicular Radar System". The radar sensor is intended for use in an automotive radar system only. Removal, tampering, or altering of the device will void any warranties, and is not permitted by the FCC. Do not tamper with, alter or use in any non-approved way. Any unauthorized modification to this device could void the user's authority to operate the equipment.

### WARNING Risk of accident despite Blind Spot Assist

Blind Spot Assist does not react to either stationary objects or vehicles approaching and overtaking you at a greatly different speed.

Blind Spot Assist cannot warn drivers in these situations.

Always pay careful attention to the traffic situation and maintain a safe distance at the side of the vehicle.

Blind Spot Assist is only an aid. It may fail to detect some vehicles and is no substitute for attentive driving. Ensure that there is sufficient distance to the side from other road users and obstacles. If a vehicle is detected above speeds of approximately 7.5 mph (12 km/h) and this vehicle subsequently enters the detection range directly next to your vehicle, the warning lamp in the outside mirror lights up red.

(i) When a trailer is connected, the radar sensor's field of vision may be impaired, thereby making limited monitoring possible. Always pay careful attention to the traffic situation and maintain a safe distance at the side of the vehicle.

If a vehicle is detected close to your vehicle in the lateral detection range and you switch on the turn signal indicator in the corresponding direction, a warning tone sounds. The red warning lamp in the outside mirror flashes. If the turn signal indicator remains switched on, all other detected vehicles are indicated only by the flashing of the red warning lamp.

If you overtake a vehicle quickly, no warning is given.

## Exit warning

The exit warning is an additional function of Blind Spot Assist and warns vehicle occupants when leaving the vehicle about any approaching vehicles.

## WARNING Risk of accident despite exit warning

The exit warning neither reacts to stationary objects nor to vehicles approaching you at a greatly differing speed.

The exit warning cannot warn drivers in these situations.

Always pay particular attention to the traffic situation when opening the doors

and make sure there is sufficient clearance.

(i) An exit warning is not issued for sliding doors and rear-end doors.

#### Overview

When the vehicle is stationary, an object is detected from behind in the detection range.	Red warning lamp in the outside mirror
When the vehicle is stationary, a door on the relevant side of the vehicle is opened. An object which is close to your vehicle is detected in the detection range.	Collision warning

(i) This additional function is only available when Blind Spot Assist is activated and up to a maximum of three minutes after the drive system has been switched off. The end of the availability of the exit warning function is indicated by a series of flashes in the outside mirror.

The exit warning function is only an aid and is no substitute for the attentiveness of the vehicle occupants. Responsibility lies with the vehicle occupants when opening doors and leaving the vehicle.

#### System limits

Blind Spot Assist and the exit warning function may be limited in the following situations:

- · if there is dirt on the sensors or the sensors are obscured
- if there is poor visibility, e.g. due to fog, heavy rain, snow or spray
- if narrow vehicles are within the detection range, e.g. bicycles
- on very wide lanes
- on very narrow lanes
- if vehicles are not driving in the middle of their
- (i) Stationary or slowly moving objects are not displayed.

Warnings may be issued in error when driving close to crash barriers or similar solid lane borders. Warnings may be interrupted when driving alongside long vehicles, for example trucks, for a prolonged time.

Blind Spot Assist is not operational when reverse gear is engaged.

The exit warning function may be limited in the following situations:

- when the sensor is blocked by adjacent vehicles in narrow parking spaces
- · when people are approaching

# Activating/deactivating Blind Spot Assist

Multimedia system:



Activate or deactivate Blind Spot Assist.

#### **Drive Away Assist**

#### Function of Drive Away Assist

i Drive Away Assist is only available for vehicles with automatic transmission.

Drive Away Assist can reduce the severity of an impact when pulling away. If an obstacle is detected in the direction of travel, the vehicle's speed is briefly reduced to approximately 1 mph (2 km/h). If a critical situation is detected, a symbol appears on the camera image of the multimedia system.

A

**WARNING** Risk of accident caused by limited detection performance of Drive Away Assist

Drive Away Assist cannot always clearly identify objects and traffic situations.

In such cases, Drive Away Assist might:

- Warn you without reason and limit the vehicle speed.
- Not warn you or not limit the vehicle speed.
- Always pay careful attention to the traffic situation; do not rely on Drive Away Assist alone.
- Be prepared to brake or swerve as necessary, provided the traffic situation permits and that it is safe to take evasive action.

Drive Away Assist is only an aid. It is not a substitute for your attention to the surroundings. You are always responsible for safe maneuvering, parking and exiting a parking space. Make sure that no

persons, animals or objects etc. are in the path of your vehicle.

A risk of a collision may arise in the following situations, for example:

- If the driver mixes up the accelerator and brake pedals.
- · If the wrong gear is selected.

The Drive Away Assist function is active under the following conditions:

- If Parking Assist PARKTRONIC is activated.
- Every time the gear is changed to R or D when the vehicle is at a standstill.
- If the detected obstacle is less than approximately 3.3 ft (1.0 m) away.
- If the maneuvering assistance function is activated in the multimedia system.

#### System limits

Drive Away Assist is unavailable on inclines and when driving with a trailer.

#### Rear Cross Traffic Alert

#### Function of Rear Cross Traffic Alert

The radar sensors in the bumper are used for the system. This way the area adjacent to the vehicle is continually monitored. If the radar sensors are obscured by vehicles or other objects, detection is not possible.

(i) Also read the notes on Blind Spot Assist (→ page 158).

Vehicles with Blind Spot Assist: drivers can also be warned of any crossing traffic when backing up out of a parking space. If a vehicle is detected, the warning lamp in the outside mirror on the corresponding side lights up red. If it detects a critical situation, a warning tone also sounds.

Vehicles with Blind Spot Assist and Parking Assist PARKTRONIC: drivers can also be warned of any crossing traffic when backing up out of a parking space. If a critical situation is detected, a warning symbol appears on the camera image of the multimedia system. If the driver does not respond to the warning, the vehicle's brakes can be applied automatically. In this case, a warning tone sounds.


The Rear Cross Traffic Alert function is active under the following conditions:

- · Blind Spot Assist is activated.
- Reverse gear is engaged or the vehicle is backing up at walking pace.
- If the maneuvering assistance function is activated in the multimedia system.

The Rear Cross Traffic Alert function is unavailable when driving with a trailer.

## Lane Keeping Assist and Active Lane Keeping Assist

## Function of Lane Keeping Assist

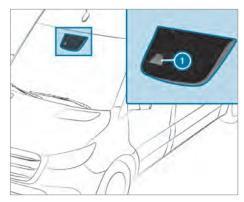

Lane Keeping Assist monitors the area in front of your vehicle with multifunction camera 1. It serves to protect you against unintentionally leaving your lane. You may also be warned by a noticeable vibration in the steering wheel or by a warning tone and by the status symbol flashing in the Instrument Display.

The function is available in the speed range between approximately 40 mph (60 km/h) and 100 mph (160 km/h).

The warning is issued when the following conditions are met at the same time:

- If Lane Keeping Assist detects lane markings.
- · If a front wheel drives over lane markings.
- (i) You may also be warned by a noticeable vibration in the steering wheel (4x2 model) or by a warning tone (4x4 model) and by the status symbol flashing in the Instrument Display.

You can activate and deactivate the Lane Keeping Assist warning.


If you fail to adapt your driving style, Lane Keeping Assist can neither reduce the risk of accident nor override the laws of physics. It cannot take into account road, weather or traffic conditions. Lane Keeping Assist is only an aid and is not intended to keep the vehicle in the lane without the driver's cooperation. You are responsible for the distance to the vehicle in front, for vehicle speed, braking in good time and for staying in your lane.

#### System limits

The system may be impaired or may not function in the following situations:

- If there is poor visibility, e.g. due to insufficient illumination of the road, if there are highly variable shade conditions or in rain, snow, fog or
- · Glare from oncoming traffic, direct sunlight or
- There is dirt on the windshield in the vicinity of the multifunction camera or the camera is fogged up, damaged or obscured.
- · No or several unclear lane markings are present for one lane, e.g. in a construction area.
- If the lane markings are worn away, dark or covered up.
- If the distance to the vehicle in front is too short and thus the lane markings cannot be
- The lane markings change quickly, e.g. lanes branch off, cross one another or merge.
- The road is very narrow and winding.

## Functions of Active Lane Keeping Assist

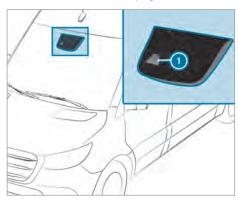

Active Lane Keeping Assist monitors the area in front of your vehicle by means of multifunction camera 1. It serves to protect you against unintentionally leaving your lane. You may also be warned by a noticeable vibration in the steering wheel or by a warning tone and by the status symbol flashing in the Instrument Display. In addition, you may be guided back into your lane by a lane-correcting brake application. A relevant message appears in the Instrument Display.

The warning is issued when the following conditions are met at the same time:

- · The driving system detects lane markings.
- If a front wheel drives over lane markings.

A lane-correcting brake application occurs when the following conditions are met:

- Active Lane Keeping Assist detects lane markings on both sides of the vehicle.
- A front wheel drives over a solid lane marking.

A relevant message appears in the Instrument Display.

The brake application is available in the speed range between approximately 40 mph (60 km/h) and 100 mph (160 km/h).

You can either deactivate the Active Lane Keeping Assist warning or switch off the system completely.

If you fail to adapt your driving style, Active Lane Keeping Assist can neither reduce the risk of an accident nor override the laws of physics. It cannot take into account road, weather or traffic conditions. The driving system is an aid for when you unintentionally leave or cross the lane and not a system for automatically keeping to the lane. You are responsible for the distance to the vehicle in front, for vehicle speed, braking in good time and for staying in your lane.



If a lane-correcting brake application from Active Lane Keeping Assist occurs, display (1) appears in the multifunction display.

### System limits

No lane-correcting brake application from Active Lane Keeping Assist occurs in the following situations:

- You clearly and actively steer, brake or accelerate.
- · You switch on the turn signal.
- A driving safety system intervenes, e.g. ESP<sup>®</sup> or Active Brake Assist.
- You have adopted a sporty driving style with high cornering speeds or high rates of acceleration.
- ESP® has been switched off.
- When driving with a trailer, the electrical connection to the trailer has been correctly established.
- If a loss of tire pressure or a faulty tire has been detected and displayed.

The system may be impaired or may not function in the following situations:

- If there is poor visibility, e.g. due to insufficient illumination of the road, if there are highly variable shade conditions or in rain, snow, fog or spray.
- Glare from oncoming traffic, direct sunlight or reflections.
- There is dirt on the windshield in the vicinity of the multifunction camera or the camera is fogged up, damaged or obscured.
- No or several unclear lane markings are present for one lane, e.g. in a construction area.
- If the lane markings are worn away, dark or covered up.
- The distance to the vehicle in front is too short and thus the lane markings cannot be detected.
- The lane markings change quickly, e.g. lanes branch off, cross one another or merge.
- The road is very narrow and winding.

# Activating/deactivating Lane Keeping Assist or Active Lane Keeping Assist

Multimedia system:



- Select Lane Keeping Assist or Active Lane Keeping Assist.
- Activate or deactivate the function.

To activate or deactivate the warning: activate or deactivate the Warning.

## Work mode

#### ADR (working speed control)

## Function of ADR (working speed control)


When activated, ADR automatically increases the engine speed to a preset speed or a speed you have set.

(i) After a cold start, the idle speed of the engine is increased automatically. If the preset working speed is lower than the increased idle speed, the working speed is only reached once the engine has completed the warm-up phase.

It is only possible to activate ADR with the vehicle stationary and the parking brake

On vehicles with automatic transmission, the selector lever must be in position P.

### Activating/deactivating ADR

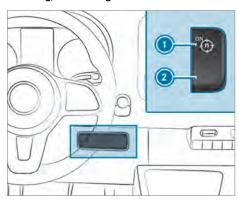

To activate: while the engine is running, press switch 1.


The Working Speed Governor Active message appears in the multifunction display.

To deactivate: while the engine is running, press switch 2.

ADR goes out automatically in the following situations:

- · You release the parking brake.
- You depress the brake pedal.
- · The vehicle moves.
- The control unit detects a malfunction.

## Adjusting ADR

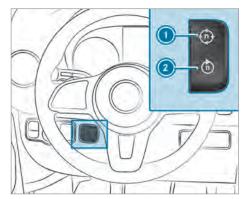

- Engage power take-off or activate ADR.
  - To increase: press switch ①.
- To reduce: press switch 2.

## Trailer operation

## Notes on trailer operation

**WARNING** Risk of accident and injury if the tongue weight is exceeded

The carrier system may detach from the vehicle, thereby endangering other road users.

Always comply with the permissible tongue weight when using a carrier.

**WARNING** Swerving of the vehicle/trailer combination due to increased speed

You could lose control of the vehicle/trailer combination.

The vehicle/trailer combination may even tip over.

- Under no circumstances should you try to straighten the vehicle/trailer combination by increasing the speed.
- Reduce your speed and do not countersteer.
- If necessary, apply the brakes.

WARNING Risk of accident due to the brake system overheating

If you leave your foot on the brake pedal when driving, the brake system may overheat.

This increases the braking distance and the brake system can even fail.

- Never use the brake pedal as a footrest.
- Do not depress the brake pedal and the accelerator pedal at the same time while driving.

# **WARNING** Risk of accident due to unsuitable ball neck

If you install an unsuitable ball neck, the trailer hitch and the rear axle may be overloaded.

This can significantly impair the driving characteristics and the trailer may become loose. There is a risk of fatal injury.

- Only install a ball neck that complies with the permissible dimensions and is designed for the requirements of trailer operation.
- Do not modify the ball neck or the trailer hitch.

You can find specifications regarding the ball neck on the trailer's identification plate. You can find specifications regarding the trailer on the towing vehicle's identification plate and in the technical data ( $\rightarrow$  page 278).

# **WARNING** Risk of accident and injury due to incorrectly installed ball neck

If the ball neck is not correctly installed and secured, it may become loose during a journey and endanger other road users. There is a risk of fatal injuries.

- Install and secure the ball neck as described in the ball neck manufacturer's installation instructions.
- If a ball neck is installed, ensure sure that it is properly secured before every journey.

## WARNING Risk of accident due to a ball neck that is not correctly installed or secured

If the ball neck is not correctly installed and secured, the trailer may come loose.

Install and secure the ball neck as described in the ball neck manufacturer's installation instructions.

- If a ball neck is installed, ensure sure that it is properly secured before every journey.
- I NOTE Wearing out the brake linings by continuously depressing the brake pedal
  - Do not depress the brake pedal continuously whilst driving.
- To use the braking effect of the engine, shift to a lower gear in good time.

Be sure to comply with the operating instructions of the manufacturer of the trailer coupling and the ball neck.

Place your vehicle/trailer combination on surfaces that are as even as possible and secure it against rolling away (→ page 135). Couple and uncouple the trailer carefully.

When backing up the towing vehicle, ensure that there is no-one between the vehicle and the trailer.

If you do not couple the trailer to the towing vehicle correctly, the trailer may become detached. Once it has been coupled and is roadworthy, the trailer must be in a horizontal position behind the towing vehicle.

Note the following regarding the tongue weight:

- Make full use of the maximum tongue weight, where possible.
- Never fall below a legally prescribed minimum tongue weight; the tongue weight must always be positive.
- Do not exceed or fall below the permissible tongue weights this must be observed during loading and unloading of the trailer.

Do not exceed the following values:

- Permitted braked or unbraked towing capacity
   The maximum permissible towing capacity for unbraked trailers is 1,653 lbs (750 kg).
- · Permissible rear axle load of the towing vehicle
- · Permissible gross weight of the towing vehicle
- Permissible gross weight of the trailer
- · Permissible gross combination weight
- Maximum permissible speed of the trailer

The relevant permitted values, which must not be exceeded, can be found in the following places:

- In your vehicle documents
- On the identification plate of the trailer hitch

- On the trailer's identification plate
- · On the vehicle identification plate

If there are discrepancies between the values, the lowest one shall apply.

Before driving off, ensure the following:

- The tire pressure on the rear axle of the towing vehicle has been set for the maximum load.
- The headlamps have been set correctly.

Values approved by the manufacturer can be found on the identification plates and in the section for the towing vehicle ( $\rightarrow$  page 241).

Your vehicle will behave differently with a trailer relative to without a trailer:

- The vehicle/trailer combination will be heavier.
- · The vehicle/trailer combination will be restricted in its acceleration and gradeability.
- The vehicle/trailer combination will have an increased braking distance.
- The vehicle/trailer combination will be more susceptible to crosswind gusts.
- The vehicle/trailer combination will require more sensitive steering.
- The vehicle/trailer combination will have a larger turning radius.

This may impair the vehicle's driving characteristics.

When driving with a vehicle/trailer combination, always adapt your speed to the current road and weather conditions. Drive carefully. Keep a sufficient safe distance.

Comply with the maximum permissible speed of 50 mph (80 km/h) or 62 mph (100 km/h), even in countries in which higher speeds are permitted for vehicle/trailer combinations.

Attach only an approved trailer hitch to your vehicle. Use only a ball neck that has been approved for your vehicle. Further information about availability and installation, including that of the trailer electrics, is available from any qualified specialist workshop.

The trailer hitch is one of the most important vehicle parts for road safety. Comply with the instructions on operation, maintenance and servicing in the manufacturer's operating instructions.

(i) Your vehicle's bumpers are not suitable for installing detachable trailer hitches.

Do not attach any rented trailer hitches or any other detachable trailer hitches to the bumpers.

- (i) During trailer operation, remember that PARKTRONIC is available only to a limited extent, if at all.
- (i) The height of the ball head will change depending on the vehicle's load. In this case, use a trailer with a height-adjustable drawbar.

#### Driving instructions

The maximum permissible speed for vehicle/trailer combinations depends on the type of trailer. Before setting off, consult the trailer's vehicle documents to find out the maximum permissible speed.

Your vehicle will behave differently with a trailer relative to without a trailer, and will consume more

On long and steep downhill gradients, you must select shift range 3, 2 or 1 in good time.

(i) This also applies if cruise control is switched on.

You will thereby make use of the engine's braking effect and will not have to brake as often to control the speed. This will take some of the strain off the brake system and prevent the brakes from overheating and wearing too quickly. If you need additional braking, depress the brake pedal intermittently rather than continuously.

Observe the notes on ESP® trailer stabilization  $(\rightarrow page 142).$ 

#### Driving tips

If the trailer sways, remember the following points:

- Do not accelerate under any circumstances.
- Do not countersteer.
- · If necessary, apply the brakes.
- (i) You can reduce the risk of the trailer swaying and rocking by retrofitting stabilizer bars or trailer stability programs. Further information is available from an authorized Mercedes-Benz Center.

When you are driving with a trailer, observe the following points:

- · Maintain a greater distance than when driving without a trailer.
- Avoid braking abruptly. If possible, brake gently first of all so that the trailer closes up behind your vehicle. Then, increase the braking force rapidly.
- · The values given for start-off gradeability refer to sea level. When driving in mountainous areas, note that engine output, and therefore

start-off gradeability, will decrease with increasing elevation.

## Coupling/uncoupling a trailer

### Coupling a trailer

NOTE Damage to the vehicle battery due to full discharge

Charging the trailer battery using the power supply of the trailer can damage the vehicle battery.

- Do not use the vehicle's power supply to charge the trailer battery.
- Shift the selector lever to position P.
- Apply the vehicle's parking brake.
- Close all the doors.
- Position the trailer on a level surface behind the vehicle.
- (i) The ball head height changes depending on the vehicle's load. In this case, use a trailer with a height-adjustable trailer drawbar.
- Couple up the trailer.
- Establish all electrical and other connections to the trailer.
- Remove objects or devices which prevent the trailer from rolling, e.g. wheel chocks.
- Release the trailer's parking brake.
- (i) The vehicle harness has a cable connection to the brake light indicator lamp.

Observe the maximum permissible trailer dimensions (width and length).

Most US states and all Canadian provinces prescribe the following points, and you are urgently recommended to comply with these:

· Safety chains between the towing vehicle and the trailer. The chains should be routed in a criss-cross pattern under the trailer drawbar. They must be connected to the trailer tow hitch and not to the bumper or to the vehicle axle.

Leave sufficient slack in the chains. This allows for even sharp cornering.

- A separate brake system is required for certain trailers.
- A safety feature is required for braked trailers. Determine the specific requirements according to the relevant laws.

If the trailer becomes detached from the towing vehicle, the safety feature triggers the trailer brakes and can thus reduce the danger.

#### Uncoupling a trailer

**WARNING** Risk of being crushed and becoming trapped when uncoupling a

When uncoupling a trailer with an engaged inertia-activated brake, your hand may become trapped between the vehicle and the trailer drawbar.

Do not uncouple trailers with an engaged overrun brake.

Do not uncouple a trailer with an overrun brake in a state of overrun. Otherwise, the rebound of the overrun brake can damage your vehicle.

- Shift the selector lever to position **P**.
- Apply the vehicle's parking brake.
- Close all the doors.
- Apply the trailer's parking brake.
- Secure the trailer against rolling away with a wheel chock or similar object.
- Remove the trailer cables and safety chains.
- Uncouple the trailer.

## Information about towing a trailer

Operating a trailer is subject to many statutory regulations such as speed restrictions.

Many states also require an auxiliary separate functional braking system when towing a weight that exceeds a certain limit. For your safety, it is recommended to use a separate functional braking system on any towed vehicle.

Make sure that your trailer combination meets local regulations. This not only applies to your place of residence, but also to your destination. Information on this can be obtained from the police and local authorities.

Comply with the following when driving with a trailer:

• Practice cornering, stopping and backing up in a traffic-free location. In this way, you will gain

driving experience and become accustomed to the new handling characteristics.

- · Before driving, check the following:
  - that the trailer tow hitch and ball coupling are secure
  - that the safety switch for braked trailers is functioning correctly
  - that the safety chains are secure and undamaged
  - that the electrical connections are secure
  - that the lights are functioning correctly
  - the wheels for damage and correct tire pressure ( $\rightarrow$  page 238)
- · Adjust the outside mirrors so that you have a clear view of the rear section of the trailer.
- · If the trailer is equipped with an individual braking system, check before each journey whether the brakes are functioning correctly.
- · If the trailer has electronically controlled brakes, pull away carefully with the vehicle/ trailer combination. Brake manually using the brake controller and check whether the brakes are functioning correctly.
- . Secure the load on the trailer in line with the requirements and rules for load-securing methods.
- · When driving with a trailer, check at regular intervals that the load is secure and that the lights and brakes are functioning correctly.
- Bear in mind that the handling characteristics are more unstable when towing a trailer than when driving without a trailer. Avoid sudden steering movements.
- The vehicle/trailer combination is heavier. accelerates more slowly, has a reduced climbing ability and an increased braking distance. It is more susceptible to side winds and requires careful steering.
- If possible, do not brake suddenly, but rather moderately at first so that the trailer can activate its brakes. Then increase the pressure on the brake pedal.
- If the automatic transmission shifts between gears on uphill or downhill gradients, restrict the shift range. Select shift range 4, 3, 2 or 1.
  - A lower gear and reduced speed decrease the risk of engine damage.
- · When driving on a downhill gradient, shift to a lower gear to use the engine's braking effect.

- Avoid constant braking, as this could cause the vehicle brakes and possibly also the trailer brakes to overheat.
- If the coolant temperature increases significantly when the air-conditioning system is switched on, switch the air-conditioning system off.
  - Coolant heat can also be dissipated by switching the airflow and the temperature of the heater or air conditioning to the maximum level. Open the windows if necessary.
- When overtaking, pay particular attention to the increased overtaking distance of your vehicle/trailer combination.
  - Due to the length of your vehicle/trailer combination you will require a longer stretch of road before switching back to the original lane.

## Permissible trailer loads and trailer drawbar noseweights

## Weight information

WARNING Risk of accident due to unbraked trailer with excessively high gross weight

If you tow a trailer without a separate functional braking system and a gross trailer weight (GTW) of more than 1635 lbs (750 kg), then the vehicle brake system may overheat.

This increases the braking distance and the brake system may even fail.

Always use a trailer with a separate functional braking system when towing a trailer with a gross trailer weight (GTW) of more than 1635 lbs (750 kg).

NOTE Damage to the drive train, transmission or trailer tow hitch due to excess gross combination weight

The permissible gross combination weight is exceeded.

The drive train, the transmission or the trailer tow hitch may be damaged.

Comply with the permissible gross combination weight.

For vehicles with a permissible gross vehicle weight of 11030 lbs (5003 kg), the permissible gross combination weight is less than the sum of the permissible gross vehicle weight plus the permissible trailer load. If either the vehicle or the trailer is fully laden, the permitted gross vehicle weight or the permitted trailer load values are reduced accordingly. In this case, you may only partially load the trailer or the vehicle.

The gross trailer weight (GTW) is calculated by adding the weight of the trailer to the weight of the load and equipment. If the trailer is equipped with a separate braking system, then the maximum gross trailer weight is 5000 lbs (2268 kg) or 7500 lbs (3402 kg).

The maximum permissible trailer drawbar nose-weight on the ball head is 500 lbs (227 kg) or 750 lbs (340 kg). However, the actual trailer drawbar noseweight must not exceed the value given on the trailer tow hitch or trailer identification plates. Where the values differ, the lowest value always applies.

The permissible gross weight for vehicle-trailer combinations (GCWR) is calculated by adding the gross weight of the trailer to the gross vehicle weight including a driver's weight of approximately 150 lbs (68 kg). The maximum permissible gross combination weight is vehicle-specific and equipment-dependent. When driving with a trailer, you should not exceed the maximum permitted permissible gross weight for vehicle-trailer combinations (GCWR).

The permissible values, which must not be exceeded, can be found in your vehicle documents and on the identification plates of the trailer tow hitch, the trailer and the vehicle. The values approved by the manufacturer can also be found in the "Technical data" section. Where the values differ, the lowest value always applies.

#### Loading the trailer

Use a drawbar noseweight that is as close as possible to the maximum permissible noseweight. Do not undershoot the minimum permissible noseweight. Otherwise, the trailer may become detached.

- Distribute the load over the vehicle and the trailer so as not to exceed either the maximum permissible values for the gross vehicle weight rating (GVWR) and gross trailer weight (GTW), the permissible gross weight for vehicle-trailer combinations (GCWR), nor the maximum permissible gross axle weight rating (GAWR) and trailer drawbar noseweight (TWR) of your vehicle.
- Add the rear axle load to the trailer drawbar noseweight of the trailer drawbar on the ball head (TWR). This will ensure that you do not

- exceed the permissible gross axle weight rating (GAWR).
- Add the vehicle load to the trailer drawbar noseweight of the trailer drawbar on the ball head (TWR). This will ensure that you do not exceed the permissible gross vehicle weight rating (GVWR).

### Checking the vehicle and trailer weight

- Make sure that the weights of the towing vehicle and the trailer comply with the maximum permissible values. Have the car/trailer combination weighed on a calibrated weighing machine. The car/trailer combination comprises the towing vehicle including driver, passengers and load as well as the laden trailer.
- Check the maximum permissible gross axle weight rating of the front and rear axles (GAWR), the gross trailer weight (GTW), the permissible gross weight for vehicle-trailer combinations (GCWR) and the trailer drawbar noseweight rating (TWR).

#### Trailer power supply

Incorrect cabling of the connector plug may interfere with other electronic systems in the vehicle. Mercedes-Benz therefore recommends that you have the cabling of the connector plug carried out at a qualified specialist workshop.

You can connect accessories up to a maximum of 240 W to the permanent power supply. Do not charge a trailer battery using the power supply.

Your vehicle may be equipped with a range of electrical equipment for trailer operation. Depending on your trailer, you may need an adapter for the electrical connection between the trailer and your vehicle.

The trailer socket of your vehicle is equipped with a permanent power supply at the factory.

The permanent power supply is supplied via trailer socket pin 4.

Note that the trailer's permanent power supply is not switched off when the vehicle's on-board electrical system voltage is low. This could completely discharge your vehicle's starter battery.

Further information on the electrical equipment currently installed on your vehicle and on installing the trailer electrics can be obtained at a qualified specialist workshop.

## Overview of Instrument Display

WARNING Risk of accident due to an instrument display malfunction

If the Instrument Display has failed or malfunctioned, you may not recognize function restrictions applying to safety relevant systems.

The operating safety of your vehicle may be impaired.

- Drive on carefully.
- Have the vehicle checked immediately at a qualified specialist workshop.

If you are uncertain regarding the operational safety of your vehicle, park the vehicle safely as soon as possible. Inform a qualified specialist workshop.


#### Instrument Display



Example: Instrument Display with color display

- Speedometer
- Multifunction display
- 3 Tachometer
- Coolant temperature display
- Fuel level and fuel filler flap location indicator

In normal driving mode, coolant temperature display (4) is permitted to rise to the red marking.

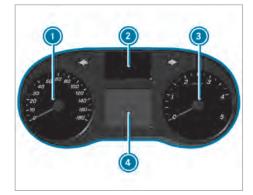

Example: Instrument Display with black and white display

- Speedometer
- Indicator lamps display
- Tachometer
- Multifunction display
- **NOTE** Engine damage due to excessively high engine speeds

The engine will be damaged if you drive with the engine in the overrevving range.

Do not drive with the engine in the overrevving range.


When the red marking in tachometer (3) is reached (overspeed range), the fuel supply will be interrupted in order to protect the engine.

WARNING Danger of burns when opening the hood

If you open the hood when the engine has overheated or during a fire in the engine compartment, you could come into contact with hot gases or other escaping operating fluids.

- Before opening the hood, allow the engine to cool down.
- In the event of a fire in the engine compartment, keep the hood closed and call the fire service.

## Overview of the buttons on the steering wheel

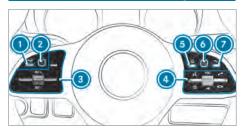

#### Variant 1


- Back button, left (on-board computer)
- 2 Touch Control, left (on-board computer)
- Button group for cruise control or Active Distance Assist DISTRONIC
- Button group:

  - Displays favorites (multimedia system)

VOL: using the \( \mathbb{A} \) control, increases/reduces the volume or switches off the sound

Makes/accepts a call

- Rejects/ends a call
- (5) Main menu button (multimedia system)
- Touch Control, right (multimedia system)
- Back button, right (multimedia system)

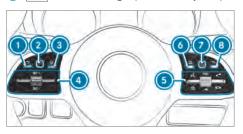

#### Variant 2

- 2 Touch Control, left (on-board computer)
- Main menu button (on-board computer)
- Button group for cruise control or Active Distance Assist DISTRONIC
- 6 Button group:
  - Voice-operated control
  - Displays favorites (multimedia system)

VOL: using the 🐧 control, increases/reduces the volume or switches off the sound

Makes/accepts a call

Rejects/ends a call

- Touch Control, right (multimedia system)
- Back button, right (multimedia system)

## Operating the on-board computer

▲ WARNING Risk of distraction due to information systems and communications equipment

If you operate information systems and communications equipment integrated in the vehicle when driving, you could be distracted from the traffic situation. This could also cause you to lose control of the vehicle.


- Only operate this equipment when the traffic situation permits.
- ▶ If you cannot be sure of this, stop the vehicle in accordance with the traffic conditions and operate the equipment with the vehicle stationary.

You must observe the legal requirements for the country in which you are currently driving when operating the on-board computer.

# Operating the on-board computer (vehicles with steering wheel buttons)


i The displays of the on-board computer appear on the multifunction display (→ page 171).

When the function is switched on, different signal tones will provide feedback while the on-board computer is being operated. These include a signal tone when the end of a list is reached or when a list is being scrolled through.

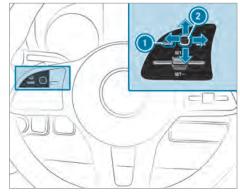

Variant 1

The on-board computer is operated using left-hand Touch Control 2 and back button on the left 1.

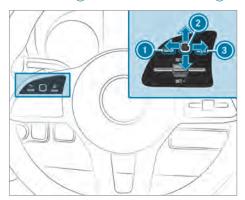

Variant 2

The on-board computer is operated using the following buttons:

- Back button on the left
- Left-hand Touch Control (2)
- Main menu button on the left (3)

The following menus are available depending on the equipment:

- Service
- Radio
- Media
- Phone
- DriveAssist
- Settings
- To call up the main menu: press main menu button on the left (3) or press back button on the left 1 repeatedly, or press and hold this once.
- (i) Vehicles without Active Distance Assist DISTRONIC: you can call up the main menu of the on-board computer with the 
  button.
- To browse through the menu bar: swipe to the left or right on the left-hand Touch Control 2.
- To call up a menu or confirm a selection: press the left-hand Touch Control 2.
- To browse through displays or lists in the menu: swipe upwards or downwards on lefthand Touch Control 2.
- To call up a submenu or confirm a selection: press the left-hand Touch Control 2.

To exit a submenu: press the back button on the left 1.

If you are in a submenu and press and hold back button on the left (1), the main menu will appear.

## Overview of what is shown on the multifunction display



Instrument Display with color display

- Outside temperature
- Transmission position
- Time
- Oisplay section



Instrument Display with black and white dis-

- Outside temperature
- ② Display section
- 3 Time
- Transmission position

Further displays on the multifunction display:

- Gearshift recommendation
- P*ij* Parking Assist PARKTRONIC switched
- Cruise control ( $\rightarrow$  page 145) (8)
- **=**83 Active Distance Assist DISTRONIC  $(\rightarrow page 148)$
- DSR DSR ( $\rightarrow$  page 146)
- HOLD HOLD function ( $\rightarrow$  page 151)

**■** 

Adaptive Highbeam Assist (→ page 86)

Fore

ATTENTION ASSIST switched off

A door is not fully closed.

Rear window wiper switched on  $(\rightarrow page 95)$ 

LOW RANGE

LOW RANGE active (→ page 123)

SOS NOT Emergency call system not active

**READY** 

**₽**°FF

Active Lane Keeping Assist switched off  $(\rightarrow page 161)$ 

-9;€-


Active Brake Assist switched off  $(\rightarrow page 143)$ 

OFF

Blind Spot Assist switched off

 $(\rightarrow page 158)$ 

## Setting the instrument lighting

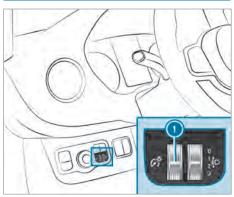

Turn brightness control 1 upwards or down-

The lighting on the instrument display and the control elements in the vehicle interior will be adjusted.

(i) In vehicles without brightness control (1), the instrument lighting can be adjusted via the onboard computer ( $\rightarrow$  page 175).

## Menus and submenus

Calling up functions on the service menu

On-board computer:

**→** Service

Select and confirm the required function.

The following functions are available on the service menu:


- Announcements: message memory (→ page 284)
- DEF: display the DEF fill level ( $\rightarrow$  page 131)
- Tires:
  - Check the tire pressure with the tire pressure monitoring system ( $\rightarrow$  page 245)
  - Restart the tire pressure monitoring system  $(\rightarrow page 246)$
- . ASSYST PLUS: call up the service due date (→ page 208)
- Engine Oil Level: measure the engine oil level

## Calling up the assistant display

On-board computer:

→ Assistance

Select the desired display and confirm.

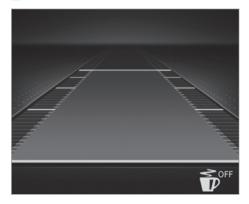

Instrument Display with color display

The following displays are available on the assistant display:

- Assistant display
- Attention level (→ page 157)
- Switch between the displays and confirm the selected display.

The following status displays are available on the assistant display:

- ATTENTION ASSIST switched off
- Active Distance Assist DISTRONIC specified distance (→ page 148)



Instrument Display with black and white display

The following status displays are available on the assistant display:

- · Lane markings solid and thick: Lane Keeping Assist on and ready to issue warnings
- · Lane markings solid and thin: Lane Keeping Assist on and not ready to issue warnings
- · Lane markings dotted: Lane Keeping Assist off
- ATTENTION ASSIST off
- Blind Spot Assist on and ready to issue warnings (lines of the radio waves solid)
- Blind Spot Assist on and not ready to issue warnings (lines of the radio waves bro-
- Blind Spot Assist off

## Calling up displays on the trip menu

On-board computer:

**¬→** Trip

Select the desired display and confirm.

The following displays are available on the trip menu:

- Standard display
- · Range and current fuel consumption With certain engines, a recuperation display is also shown. If only a small amount of fuel is left in the fuel tank, a vehicle being refueled will appear instead of the approximate range.
- ECO display (→ page 116)
- · Trip computer:
  - From Start
  - From Reset
- · Digital speedometer



Instrument Display with color display Standard display (example)

- Trip distance
- Total distance



Instrument Display with black and white display Standard display (example)

- Trip distance
- Total distance



Instrument Display with color display Trip computer (example)

- Distance covered (from start/from reset)
- Driving time (from start/from reset)
- Average speed (from start/from reset)
- Average fuel consumption (from start/from) reset)

Instrument Display with black and white display Trip computer (example)

- Distance covered (from start/from reset)
- ② Driving time (from start/from reset)
- 3 Average speed (from start/from reset)
- Average fuel consumption (from start/from reset)

# Resetting values on the on-board computer trip menu

On-board computer:



 The spelling of the displayed main menu may differ. Therefore, pay attention to the menu overview for the instrument display (→ page 170).

You can reset the values of the following functions:

- Trip Odometer:
  - Reset Trip Odometer?
- · Trip computer:
  - From Start
  - From Reset
- · ECO display
- Select the function for which the value is to be reset and confirm this selection.
- Confirm the Reset Values? prompt with Yes.

#### Selecting a radio station

On-board computer:

**¬→** Trip



- Frequency range
- Station
- Name of the track
- Artist's name

The following displays are available:

- Frequency range
- Station list
- Select the radio station's frequency or a radio station from the station list.
- Confirm the selection.

When you select a station in the station memory, the storage location appears beside the station name. When you select a saved station in the frequency range, a star appears beside the station name.

# Operating media playback with the on-board computer

On-board computer:

**¬→** Media



- Media source
- Current track and track number
- Artist's name
- Name of the album

The following displays are available on the media menu:

- · Media source selection list
- Current playback
- Select and confirm the media source.
- Select and confirm the required playback.
- This is how to select a station when TV is the media source.

# Dialing a telephone number using the on-board computer

▲ WARNING Risk of distraction from information systems and communications equipment

If you operate information and communication equipment integrated in the vehicle when driving, you will be distracted from the traffic situation. This could also cause you to lose control of the vehicle.

- Only operate this equipment when the traffic situation permits.
- If you cannot be sure of this, stop the vehicle whilst paying attention to road and traffic conditions and operate the equipment with the vehicle stationary.

When using the phone, you must observe the legal requirements for the country in which you are currently driving.

#### Requirements:

The mobile phone is connected to the multimedia system.

On-board computer:

## ¬→ Phone

Select one of the following options:

- · Previous calls
- · Phone book
- · Call status

Vehicles with MBUX multimedia system: the most recent telephone calls (dialed numbers, accepted and missed calls) are displayed on the Phone menu.

Select and confirm a telephone number. If only one telephone number has been saved for the entry: the telephone number is dialed. If several telephone numbers have been saved for the entry: select and confirm a telephone number.

The telephone number is dialed.

Instead of the selected telephone numbers, the following displays may appear:

- Please Wait: The application is currently starting. If no Bluetooth<sup>®</sup> connection to the mobile phone is established, the menu for authorizing and connecting a mobile phone will be displayed in the multimedia system
   (→ page 191).
- Updating Data...: The call list is being updated.
- Importing Contacts: The mobile phone's contacts, or a memory medium's contacts are being imported.

#### Accepting/rejecting a call

When you are called, the Incoming Call message appears on the display.

Press to accept the call or to reject it.

You can also accept or reject the call using the or buttons on the steering wheel.

### Calling up settings on the on-board computer

On-board computer:


#### **¬→** Settings

The following entries can be set on the Settings menu:

- Light
  - Setting Instr. Clust. Light.
- Vehicle
  - Switching Rain Sensor on and off
- · Setting Heating
- Display and Operation
  - Switching permanent Display additive (DEF) Level on and off
- Select an entry and confirm the selection.
- Make the necessary changes.

## Mercedes me calls

## Making a call via the overhead control panel

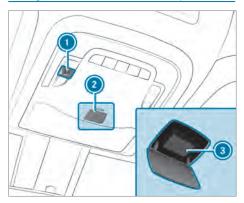

- Breakdown assistance call button
- 2 The cover for the Sos button (SOS button)
- (3) Sos button (SOS button)

## Making a breakdown assistance call

Press button ①.

#### Making an emergency call

- ► Briefly press the cover on Sos button ② to open it.
- Press and hold button for at least one second.

An emergency call can still be triggered when a breakdown assistance call is active. This has priority over all other active calls.

# Information about the Mercedes me call using the breakdown call button

A call has been made to the Mercedes-Benz customer center via the overhead control panel or the multimedia system using the breakdown call button ( $\rightarrow$  page 176).

You can reach the desired service via the voice dialog system:

- Accident and Breakdown Management
- Mercedes-Benz customer center for general information about the vehicle

You can find information on the following topics:

- · Activation of Mercedes me connect
- · Operating the vehicle

- Nearest authorized Mercedes-Benz Center
- Other products and services from Mercedes-Benz

Data is transmitted during the connection to the Mercedes-Benz customer center ( $\rightarrow$  page 177).

# Calling the Mercedes-Benz customer center using the multimedia system

#### Requirements:

- Access to a mobile phone network is available.
- The contract partner's mobile network coverage is available in the respective region.
- The ignition must be switched on so that vehicle data can be transferred automatically

Multimedia system:

→ 🔝 → Phone → 🏨

Call Mercedes me connect.

With your consent, the multimedia system sends the required vehicle data. The data transfer is shown in the media display.

Then, you can select a service and be connected to a contact at the Mercedes-Benz customer center

# Calling the Mercedes-Benz customer center after automatic accident or breakdown detection

## Requirements:

- The vehicle has detected an accident or breakdown situation.
- The vehicle is stationary.
- · The hazard warning light is switched on.

i This function is not available in all countries.

The vehicle can detect accident or breakdown sit-

The vehicle can detect accident or breakdown situations under limited conditions.

If an accident or breakdown is detected, the emergency guide shows safety instructions in the multimedia system display.

After quitting the emergency guide display on the multimedia system, a prompt appears asking whether you wish to get support from the Mercedes-Benz customer center.

#### Select Call.

 After your agreement, or if the Mercedes me connect service "Accident and Breakdown Management" is active, the vehicle

- data is transferred automatically  $(\rightarrow page 179)$ .
- The Mercedes-Benz customer center will take your call and organize breakdown and accident assistance.

You may be charged for these services.

- (i) Depending on the severity of the accident, an automatic emergency call can be made. This has priority over all other active calls.
- (i) In addition, if the "Telediagnosis" Mercedes me connect service is active, a similar query may appear at a later time in the event of a breakdown. If you are already in contact with the Mercedes-Benz customer center or have received help, this query can be ignored or rejected.
- (i) If you answer the prompt for support from the Mercedes-Benz customer center with Later the message will disappear and reappear at a later time.

The guery triggered by the "Telediagnosis" Mercedes me connect service can either be confirmed or rejected. After rejection, it is no longer displayed.

# Arranging a service appointment via Mercedes me

If you have activated the maintenance management service, relevant vehicle data is transferred automatically to the Mercedes-Benz customer center. You will then receive individual recommendations regarding the maintenance of your vehicle.

Regardless of whether you have consented to the maintenance management service, the multimedia system reminds you after a certain amount of time that a service is due. A prompt appears asking if you would like to make an appointment.

- To arrange a service appointment: select Call. After your confirmation, the vehicle data is sent and the Mercedes-Benz customer center deals with your appointment. The information is then sent to your desired service outlet.
  - They will contact you to confirm the appointment and, if necessary, to discuss the details.
- i) If you select Later after the service message appears, the message is hidden and reappears at a later time.

## Consenting to data transfer for a Mercedes me call

#### Requirements:

- There is an active Mercedes me call via the multimedia system or the buttons in the overhead control panel ( $\rightarrow$  page 176).
- (i) The prompt to confirm data transfer does not appear in all countries.
- Select Yes. Relevant identification data is transmitted automatically.

More information on Mercedes me: https:// www.mercedes.me

## Transferred data during a Mercedes me call

When you make a service call via Mercedes me, data is transmitted. This enables targeted advice and smooth service.

The following requirements must be met for data transmission:

- The ignition is switched on.
- · The necessary data transmission technology is supported by the mobile network provider.
- A sufficient mobile phone connection quality is provided.

Multi-stage transmission depends on the following factors:

- · Reason for the initiation of the call
- Available mobile radio transmission technology
- Activated Mercedes me connect services
- Selected service in the voice dialog system
- (i) A request for consent to data transmission is only made if the corresponding Mercedes me connect service has not been activated.

## Data transmission when Mercedes me connect services are not activated

If no Mercedes me connect services are activated and the data protection query has been confirmed, the following data will be transferred:

- · Vehicle identification number
- · Time of the call
- Reason for the initiation of the call
- · Confirmation of the data protection prompt
- · Vehicle country code

- · Set language for the multimedia system
- Call number of the communication platform installed in the vehicle

If a call is made for a service appointment via the service reminder, the following data is also transmitted:

· Current mileage and maintenance data

If a call was made via the multimedia system after automatic accident or breakdown detection, the following data is also transmitted:

- · Current mileage and maintenance data
- Current vehicle location

If the Accident and Breakdown Management selection has been made via the voice dialog system and no service has been activated, but the data protection query has been confirmed, the following data can be additionally requested from the vehicle by the Mercedes-Benz customer center:

· Current vehicle location

If the data protection request has been declined, the following data will be transferred to enable targeted advice and a smooth service:

- · Reason for the initiation of the call
- · Rejection of the data protection prompt
- Vehicle country code
- Set language for the multimedia system
- Call number of the communication platform installed in the vehicle

# Data transmission when Mercedes me connect services are activated

Only in the second step, only for the respective activated services, further case-specific data is transmitted in order to enable an optimal service.

An overview of the transmitted data can be found in the respective terms of use for Mercedes me connect services. These can be obtained in the Mercedes me portal: https://me.secure.mercedes-benz.com

## Data processing

The data transmitted as part of the call will be deleted from the transmitting systems once the call has been completed, provided they are not used for other activated Mercedes me connect services.

The case-related data will be processed and stored in the Mercedes-Benz customer center and, if necessary for case processing, forwarded to the

service partners commissioned by the Mercedes-Benz customer center. Please refer to the data protection information on the Mercedes me website at https://www.mercedes.me or in the recorded message immediately after the call to the Mercedes-Benz customer center has been set up.

i The recorded message is not available in every country.

## Mercedes me connect

## Information about Mercedes me/PRO connect

 Mercedes me connect and Mercedes PRO connect or individual Mercedes me connect services are not available in every country. Contact an authorized Mercedes-Benz Center to find out whether these functions are available in your country.

Mercedes me connect and Mercedes PRO connect consist of a variety of services.

Using the multimedia system or the overhead control panel, you can use the following services, for example:

- Accident and Breakdown Management (Breakdown call button or the situation-dependent display in the multimedia system)
- Emergency Call System (automatic emergency call and SOS button)

Mercedes me connect Accident and Breakdown Management and the Mercedes-Benz emergency call center are available to you around the clock.

You will find the breakdown call button and the SOS button in the vehicle's overhead control panel ( $\rightarrow$  page 176).

You can also call the Mercedes-Benz customer center using the multimedia system ( $\rightarrow$  page 176).

Please note that Mercedes me connect and Mercedes PRO connect are Mercedes-Benz services. In emergencies, call the national emergency services first using the standard national emergency service phone numbers. In emergencies, you can also use the Emergency Call System  $(\rightarrow page 222)$ .

Observe the conditions of use for Mercedes me connect and Mercedes PRO connect as well as other services. You can obtain these in the Mercedes me/PRO Portal: https://me.secure.mercedes-benz.com or https://www.mercedes.pro

Further information about Mercedes me connect services can be obtained in the Mercedes me Portal: https://me.secure.mercedes-benz.com

# Information on Mercedes me connect Accident and Breakdown Management

The Accident and Breakdown Management can, amongst others, include the following functions:

- Supplement to the Emergency Call System  $(\rightarrow page 222)$ 
  - If necessary, the contact person at the Mercedes-Benz emergency call center forwards the call to Mercedes me connect Accident and Breakdown Management, However, call forwarding is not possible in all countries.
- · Breakdown assistance on location by a technician and/or towing away of the vehicle to the nearest authorized Mercedes-Benz Center You may be charged for these services.
- · Supplement to the emergency guide after automatic accident or breakdown detection  $(\rightarrow page 176)$ 
  - In the event of a breakdown or accident, extended vehicle data is sent, enabling optimum support from the Mercedes-Benz customer center and the appointed service partner or breakdown mechanic.
- Supplement to the Mercedes me connect telediagnosis service
  - With the telediagnosis function, certain wear and failure messages, insofar as they can be clearly interpreted and are available by monitoring diagnosable components, are recorded by the service provider.
  - If your vehicle detects a breakdown or impending breakdown, you may be prompted via the multimedia system to contact the Mercedes-Benz customer center for further assistance. This prompt in the multimedia system only appears when the vehicle is stationary.
- (i) These services are subject to technical restrictions such as mobile coverage and mobile network quality and the interpretability of the transmitted data in the processing systems. Under certain circumstances, this may result in delays or omission of the message in the multimedia system.

Further information about Mercedes me connect services can be obtained in the Mercedes me Portal: https://me.secure.mercedes-benz.com

# Transmitted data with the Mercedes me connect call services

The data transferred during the Mercedes me connect call depends on:

- The reason for the initiation of the call
- The service selected in the voice dialog system
- · The activated Mercedes me connect services

You can find out which data is transferred during the services in the currently valid Mercedes me connect terms of use and the data protection information for Mercedes me connect. You can find these in your Mercedes me user account.

# Mercedes me and apps

#### Information about Mercedes me

When you log in with a user account to the Mercedes me Portal, then services and offers from Mercedes-Benz will be available to you.

Availability is country-dependent.

For more information consult an authorized Mercedes-Benz Center or visit the Mercedes me portal: https://me.secure.mercedes-benz.com

(i) Make sure that you always keep the Mercedes me apps up to date.

# Calling up a Mercedes me user account

Multimedia system:

→ 🔝 **>>** Apps

#### Vehicle is linked to user account

Select Mercedes me. Information about the linked user account appears.

# Vehicle is not yet linked to user account

- Select Mercedes me.
- Follow the instructions on the media display to create a user account and link the vehicle to it.
- (i) If the Mercedes me app is available on a mobile phone, the vehicle link can be made via the displayed QR code.

# Calling up Mercedes me services

#### Requirements:

The vehicle is connected with the user account.

# Multimedia system:



Select Services.

You will be shown the Mercedes me services that you have already purchased and those that you can also still purchase within the various categories.

To activate or deactivate the services, log in to the Mercedes me Portal with your user account.

# Removing the link between the user account and the vehicle

#### Requirements:


- The (vehicle) profile of the user account that was first linked to the vehicle is selected.
- The profile is synchronised.
- A PIN has been saved.

#### Multimedia system:

- Select Delete Vehicle Assignment.
- Enter the PIN of the linked user account.
- (i) Only the user whose user account was linked to the vehicle first can remove the link between all user accounts and the vehicle.

# Overview and operation

#### Overview of the MBUX multimedia system

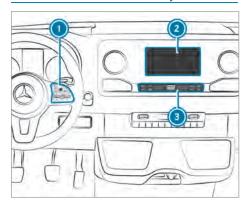

- Touch Control and multimedia system control panel
- Media display with touch functionality Opens/closes the center console storage compartment above the display
- Operating strip, calls up applications

In the center console storage compartment you can find the following ports and interfaces:

- Two USB ports or one USB port The USB port with the property symbol facilitates the connection of the mobile phone with the multimedia system using a suitable cable. This will enable you to use the functions of the mobile phone via Apple CarPlay® or Android Auto.
- Storage space with charging interface and NFC interface (if available)

# Notes on the media display

Observe the notes on caring for the interior  $(\rightarrow page 219).$ 

Automatic temperature-controlled switch-off feature: if the temperature is too high, the brightness is initially reduced automatically. The media display may then switch off completely for a while.

(i) If you are wearing polarized sunglasses, it may be difficult to read the media display.

# Anti-theft protection

This device is equipped with technical provisions to protect it against theft. Further information on protection against theft can be obtained from an authorized Mercedes-Benz Center.

# Notes on the media display

Observe the notes on caring for the interior  $(\rightarrow page 219).$ 

Automatic temperature-controlled switch-off feature: if the temperature is too high, the brightness is initially reduced automatically. The media display may then switch off completely for a while.

(i) If you are wearing polarized sunglasses, it may be difficult to read the media display.


#### Home screen overview



- On the home screen: displays the first three applications
  - In other displays: calls up the home screen
- Displays, for example network display, battery status of the mobile phone connected, signal strength of the mobile phone network, time Quickly switches driving systems on or off
- Number of applications and currently selected display area
- Calls up FAVORITES
- 6 Calls up an application using the symbol
- Name of the application, beneath the current selection or current display
- Quick-access (in the example: shows calls lists and searches for a contact)

#### **Touch Control**

# Operating Touch Control (multimedia system)

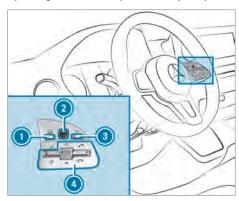

- 2 Touch Control
- Back button

Returns to the previous display

Turn the controller: adjusts the volume
Press the controller: switches sound off
Press the rocker switch up: makes or
accepts a call

Press the **a** rocker switch down: ends or declines a call

- To call up the home screen: press button ①.
  or
- Press and hold button 3.
- To open a menu or list: press Touch Control
- To close a menu or list: press button 3.
- ➤ To select a menu item: swipe up, down, left or right on Touch Control ②.
- ► Press Touch Control ②.

# Setting the sensitivity for the Touch Control Multimedia system:

→ 🔝 **>>** Settings **>>** System

- >> Controls >> Touch Control Sensitivity
- Select Fast, Medium or Slow.

# Switching acoustic operating feedback for the Touch Control on/off

Multimedia system:

→ 🔝 >> Settings >> System

Controls

The function is supported by the selection in a list.

- Select Acoustic Feedback.
- Set Normal, Loud or Off.

If the function is activated you will hear a clicking sound when scrolling in a list. When the beginning or end of the list is reached you will hear another clicking sound.

#### Touchscreen

# Operating the touchscreen

#### Requirements:

- For the map functions: an iPhone<sup>®</sup> is connected via Apple CarPlay<sup>®</sup> or a mobile phone is connected via Android Auto with the multimedia system.
- A navigation application is available on the mobile phone.

#### **Tapping**

- To select a menu item or entry: tap on a symbol or an entry.
- ➤ To increase the map scale: tap twice quickly with one finger.
- **To reduce the map scale:** tap with two fingers.
- To enter characters with the keyboard: tap on a button.

#### Single-finger swipe

To navigate in menus: swipe up, down, left or right.

# Touching, holding and moving

To set the volume on a scale: touch the touchscreen and move the finger to the left or right.

### Touching and holding

➤ To call up a global menu in the applications: touch the touchscreen and hold until the OPTIONS menu appears.

# Setting acoustic operation feedback for the touchscreen

Multimedia system:

→ Settings → System Controls


The function is supported by the selection in a list.

- Select Acoustic Operating Feedback.
- Set Normal, Loud or Off. If the function is activated you will hear a clicking sound when scrolling in a list. When the beginning or end of the list is reached you will hear another clicking sound.

#### Applications

# Calling up applications

#### Using buttons on the operating strip

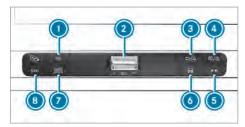

- TEL button Calls up the telephone
- Volume rocker switch Adjusts the volume(→ page 184)
- ③ 🛨 / 🕝 button Press briefly: returns to the previous display Press and hold: calls up the home screen
- 個 は / し button Press briefly: switches sound off Press and hold: activates or deactivates the multimedia system
- Quick-access button for media Calls up the control menu of the last active media source
- Vehicle button Sets vehicle functions
- RADIO button Pressing repeatedly calls up the desired audio source
- NAVI button

Calls up navigation

Requirement: the mobile phone is connected to the multimedia system via the USB port using a suitable cable. Via Apple Car-Play® or Android Auto the navigation application of the mobile phone can be used.

To access stations and music tracks quickly: press button 6.

The control menu appears for the audio source that was last selected.

- Swipe to the left or right. Radio: the previous or next station is set. Media source: the previous or the next music track is selected.
- To hide the control menu: press button (5).

#### Using the home screen

The home screen is shown in the media display when you start the vehicle.

- Select the application by swiping and tapping. or
- In any display: press the hatton on the Touch Control.

Tap on the symbol on the touchscreen. The applications are displayed.

Select the application by swiping and tapping.


# Changing the arrangement of applications on the home screen

- Call up the home screen
- Touch and hold an application on the touchscreen until symbols appear.
- Tap on or and move the application in the menu.
- Tap on 👩 .

or

# Switching sound on or off

# On the multifunction steering wheel

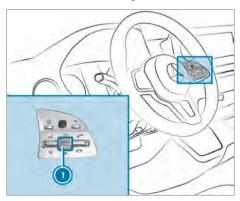

➤ **To mute:** press volume control **①**.

The 【★】 symbol appears in the status line of the multimedia system display.

You will also hear traffic announcements and navigation announcements even when the sound is muted.

To switch on: turn volume control or change the media source.

# On the multimedia system



➤ To switch off: briefly press button .

The 対 symbol appears in the status line of the multimedia system display.


You will also hear traffic announcements and

You will also hear traffic announcements and navigation announcements even when the sound is muted.

► To switch on: briefly press button ① or change the media source.

#### Adjusting the volume

#### On the multifunction steering wheel

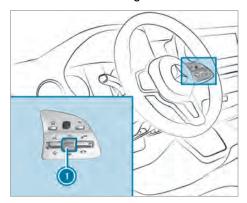

Turn volume control ①. The volume of the current radio or media source is set. The volume of other audio sources can be adjusted separately.

Adjust the volume in the following situations:

- · During a traffic announcement
- During a navigation announcement

The volume of the current media source changes in accordance with the volume of the navigation announcement.

The function is possible in the following cases:

- An iPhone<sup>®</sup> is connected via Apple Car-Play<sup>™</sup> or a mobile phone is connected via Android Auto with the multimedia system.
- A navigation application is available on the mobile phone.
- During a telephone call

# On the multimedia system



➤ To increase/reduce the volume in steps: briefly press rocker switch up or down.

To increase/reduce the volume continuously: press rocker switch 1 up or down until the desired volume is set.

#### **Favorites**

#### Overview of favorites

Favorites offer you quick access to frequently used applications. It is possible to create 20 favorites in

You can select favorites from categories or you add favorites directly from an application.

# Calling up favorites

- ► Tap 🞧.
  - The home screen is shown.
- Swipe up until FAVORITES is shown.

### Adding favorites

# Selecting favorites from categories

- Tap on 向 in the media display. The home screen is shown.
- Swipe up until FAVORITES is shown.
- Select + Create Favorite. The categories are displayed.
- Select the category. The favorites are displayed.
- Select a favorite. The favorite is stored at the next available posi-
- All positions in the favorites are taken: confirm the message shown with OK. A list shows all the favorites.
- Select a favorite which should be overwritten.

#### Adding a favorite from an application

Examples of adding from an application are:

- · Saving a contact.
- · Storing a radio station.
- · Adding a media source.
- To save a contact as a global favorite: select a contact ( $\rightarrow$  page 194). The details are displayed.
- Press on a phone number until the OPTIONS menu is shown.
- Select Save as Favorite. The contact is added as a favorite.
- To store a radio station as a global favorite: set a radio station ( $\rightarrow$  page 201).

- Press on the radio station until the OPTIONS menu is shown.
- Select Save as Favorite. The radio station is added as a favorite.

#### Renaming favorites

- Tap on  $\bigcirc$  in the media display. The home screen is shown.
- Swipe up until FAVORITES is shown.
- Press on a favorite until the OPTIONS menu is shown.
- Select Rename.
- Enter the name.
- Select OK.

#### Moving favorites

# Moving favorites in the favorites menu

- Tap on 向 in the media display. The home screen is shown.
- Swipe up until FAVORITES is shown.
- Press on a favorite until the OPTIONS menu is shown.
- Select Move.
- Move the favorite to the new position.
- Tap on 🕢 .

#### Deleting favorites

- Tap on 向 in the media display. The home screen is shown.
- Swipe up until FAVORITES is shown.
- Press on a favorite until the OPTIONS menu is shown.
- Select Delete.
- Select Yes.

#### Entering characters

### Using the character input function

**WARNING** Risk of distraction due to information systems and communications equipment

If you operate information systems and communications equipment integrated in the vehicle when driving, you could be distracted from the traffic situation. This could also cause you to lose control of the vehicle.

Only operate this equipment when the traffic situation permits.

If you cannot be sure of this, stop the vehicle in accordance with the traffic conditions and operate the equipment with the vehicle stationary.

You must observe the legal requirements for the country in which you are currently driving when operating the multimedia system.

Character entry can be carried out with these control elements:

- Touch Control
- · Touchscreen (media display)

Character entry takes place by cursor control when using the Touch Control.

Character input can be started with a control element and resumed with another.

When the keyboard is shown, enter the characters on the control element by swiping and pressing or by tapping (touchscreen).

or

Write the character on the touchscreen.

Examples of character entry:

- · Renaming a favourite
- Entering a telephone number

#### Entering characters on the touchscreen

# Using the keyboard



- 1 Input line
- Shows suggestions during entry (if available)
- O Deletes an entry
- 4 Deleting

Pressing briefly deletes the last character entered

Pressing and holding deletes the entry

- 6 Accepts an entry
- 6 Enters a space
- Changes the keyboard language
- Switches to digits and special characters (level 2)

ABC switches to letters (level 1)

 Pressing briefly switches between upper-case and lower-case letters

Pressing and holding switches to upper-case letters permanently

In level 2 with #+= switches to additional special characters (level 3)

- Call up the character entry to rename a favorite, for example (→ page 185).
  The keyboard is shown.
- Press briefly on a character key. The character is entered in input line ①. Suggestions are shown in ②.
- To select a suggestion: select one of the entries.
- If available, display additional suggestions with or .
- Resume character input.
- To enter an alternative character: press and hold a character.
- Select the character.
- To end character input: press the 5 button.
- i The available editing functions depend on the editing task, the language set and the character level.

# Setting the keyboard for character entry

Multimedia system:

- → Settings → System
- ➤ Controls ➤ Keyboards and Handwriting
- Confirm Select Keyboards.
  Select the keyboard language in the list.

### System settings

# Display

# Configuring display settings

Multimedia system:

→ 🙀 **>>** Settings **>>** System **>>** Display

#### Display brightness

- Select Display Brightness.
- Select a brightness value.

# Switching the display off/on

- Off: select Display Off.
- On: press a button, TEL, for example.

# Switching the temperature display on/off

- Select Temperature Display.
- Select Outside Temp. or Coolant Tempera-

The selected temperature is displayed in the instrument cluster.

### Time and date

# Setting the time and date automatically

Multimedia system:

- → 🙀 **>>** System **>>** Time and Date
- Deactivate Manual Time Adjustment. The time and date are set automatically for the selected time zone.
- (i) The correct time is required for the following functions:
  - · Route guidance with time-dependent traffic guidance.
  - · Calculation of expected time of arrival.

# Setting the time zone

Multimedia system:

→ 🙀 >> Settings >> System

>> Time and Date

#### Setting the time zone manually

Select Time Zone:.

The list of countries is displayed.

- (i) If there are several time zones available in a country, these will be shown after the country is selected.
- Select a country and, if required, a time zone. The time zone set is displayed after Time Zone:.

#### Setting the time zone automatically

Activate Automatic Time Zone.

#### Setting summer time

The Automatic Daylight Saving Time and Daylight Saving Time options cannot be selected in all countries.

### Multimedia system:

¬→ 🔝 >> Settings >> System

>> Time and Date

#### Automatically

Switch Automatic Daylight Saving Time on or off.

#### Manually

- Switch off Automatic Daylight Saving Time.
- Select Daylight Saving Time.

# Setting the time and date format

Multimedia system:

→ Settings → System

- >> Time and Date >> Set Format
- Set the date and time format •.

#### Setting the time and date manually

# Requirements:

- The Manual Time Adjustment function is switched on.
- For setting the date manually: no GPS is installed in the vehicle.

#### Multimedia system:

→ Settings → System

>> Time and Date

#### Setting the time (without time zone)

- Select Set Time.
- Set a time.

#### Setting the time (with time zone)

Select Set Time.

If a time zone is set the time is set automatically using the time zone. The time can be adjusted by a maximum of plus or minus 60 minutes.

Adjust the time using the slide control.

# Setting the date

- Select Set Date.
- Set the date.
- (i) In vehicles with GPS, a date cannot be set even with active manual time adjustments. The date is then set automatically through the selected time zone.

#### Connectivity

# Switching transmission of the vehicle position on/off

#### Requirements:

- A Mercedes me account or a Mercedes PRO account is available.
- At least one service is activated in the Mercedes me Portal or in the Mercedes PRO Portal which has access to the transmitted position data.
- The function is country-dependent. For more information, consult an authorized Mercedes-Benz Center.

Multimedia system:

- → 🙀 >> Settings >> System
- >> Wi-Fi & Bluetooth
- Select Transmit Vehicle Position.
- Activate or deactivate the function.
- (i) Vehicles with Mercedes PRO connect: If you use Mercedes PRO connect services, the vehicle position transmission function must be permanently on. You can switch the function on or off via your Mercedes PRO connect app on your smartphone.

# Bluetooth®

# Information about Bluetooth®

Bluetooth® technology is a standard for short-range wireless data transfer up to approximately 32.8 ft (10 m).

You can use Bluetooth® to connect your mobile phone to the multimedia system and use the following functions, for example:

- Hands-free system with access to the following options:
  - Call lists (→ page 194)
- · Internet connection
- Transferring business cards (vCards) into the vehicle

Bluetooth® is a registered trademark of Bluetooth Special Interest Group (SIG) Inc.

Internet connection via Bluetooth<sup>®</sup> is not available in all countries.

# Activating/deactivating Bluetooth®

Multimedia system:

Activate or deactivate Bluetooth.

#### Wi-Fi

#### Wi-Fi connection overview

The Wi-Fi network in your vehicle serves only for the use of Apple<sup>®</sup> CarPlay. You can only connect with the network using this application.

Further information about Apple<sup>®</sup> CarPlay  $(\rightarrow page 195)$ .

# Activating/deactivating Wi-Fi

Multimedia system:

→ Settings → System → Wi-Fi & Bluetooth

Switch Wi-Fi on or off.

If Wi-Fi is deactivated, communication via Wi-Fi to all devices is interrupted.

# Setting up a Wi-Fi hotspot

#### Requirements:

- To set up the Wi-Fi connection of the multimedia system with external hotspots: there is no communication module installed.
- The device to be connected supports at least one of the types of connection described.

Multimedia system:

# Activating/deactivating Wi-Fi

Select Wi-Fi.

# Connecting the multimedia system to an external hotspot via Wi-Fi

- (i) The connection procedure may differ depending on the device. Follow the instructions that are shown in the display. Further information can be found in the manufacturer's operating instructions.
- Select Internet Settings.
- Select Connect via Wi-Fi.
- Select Add Hotspot.
- Select the type of connection to be established on the multimedia system and on the device to be connected.

# Connecting using a security key

- Select the options \( \rightarrow \) of the desired Wi-Fi network.
- Select Connect Using Security Key.
- Have the security key displayed on the device to be connected (see the manufacturer's operating instructions).
- Enter this security key on the multimedia sys-
- Confirm the entry with **ok**.

#### Connecting using a WPS PIN

- Select the options \( \rightarrow \) of the desired Wi-Fi network.
- Select Connect via WPS PIN Input. The multimedia system generates an eight-digit PIN.
- Enter this PIN on the device to be connected.
- Confirm the entry.

#### Connecting using a button

- Select the options \( \rightarrow \) of the desired Wi-Fi network.
- Select Connect via WPS PBC.
- Select "Connect via WPS PBC" in the options on the device to be connected (see the manufacturer's operating instructions).
- Press the WPS button on the device to be connected.
- Select Continue in the multimedia system.

#### Activating automatic connection

- Select Connect via Wi-Fi.
- Select the options \( \rightarrow \) of the desired Wi-Fi network.
- Activate Permanent Internet Connection.

# Connecting with a known Wi-Fi

- Select Connect via Wi-Fi.
- Select a Wi-Fi network. The connection is established again.

# Configuring the multimedia system as a Wi-Fi hotspot for external devices

The type of connection established depends on the device to be connected. The function must be supported by the multimedia system and by the device to be connected.

- Select Vehicle Hotspot.
- Select Connect Device to Vehicle Hotspot.

Select the type of connection to be established on the multimedia system and on the device to be connected.

#### Connecting using WPS PIN generation

- Select Connect via WPS PIN Generation.
- Enter the PIN shown in the media display on the device to be connected and confirm.

# Connecting using WPS PIN entry

- Select Connect via WPS PIN Input.
- Enter the PIN that is shown on the external device's display on the multimedia system.

### Connecting using a button

- Select Connect via WPS PBC.
- Press the push button on the device to be connected (see the manufacturer's operating instructions).
- Select Continue.

# Connecting using a security key

- Select Connect Device to Vehicle Hotspot. A security key is displayed.
- Select the vehicle from the device to be connected. The vehicle is displayed with the **DIRECT-MBUX XXXXX** network name.
- Enter the security key which is shown in the media display on the device to be connected.
- Confirm the entry.

# Connecting using NFC

- Select Connect via NFC.
- Activate NFC on the mobile device (see the manufacturer's operating instructions).
- Hold the device to be connected at the vehicle's NFC interface.
- Select Finished.

The mobile device is now connected to the multimedia system hotspot via NFC.

#### Generating a new security key

- Select Vehicle Hotspot.
- Select Generate Security Key.
- Select New security key. A connection will be established with the newly created security key.
- To save a security key: select Save. When a new security key is saved, all existing Wi-Fi connections are then disconnected. If the

Wi-Fi connections are being re-established, the new security key must be entered.

#### System language

# Notes on the system language

This function allows you to determine the language for the menu displays. The selected language affects the characters available for entry.

#### Setting the system language

Multimedia system:

- → 🙀 ➤ Settings ➤ System
- Language
- Set the language.

# Setting the distance unit

Multimedia system:

- ¬→ 🙀 >> System >> Units
- Select km or mi.
- To show in the display section of the Instrument Display, switch on Additional Speedometer.

# Resetting the multimedia system (reset function)

**WARNING** Risk of accidents due to failure of multimedia display functions

While the multimedia system is being reset, its functions such as the rear view camera are not available.

Only reset the multimedia system when the vehicle is stationary.

Multimedia system:

→ 🔝 >> Settings >> System >> Reset

Personal data is deleted, for example:

- Station presets
- · Connected mobile phones

A query appears again asking if the system should really be reset.

Select Yes.

If PIN protection is activated, a prompt appears asking if you also wish to restore this to the factory settings during a reset.

Variant 1: select Yes.

- Enter the current PIN.
  - The PIN is reset.
- Variant 2: select No.
  - The current PIN stays the same after resetting.
- (i) If you have forgotten your PIN, an authorized Mercedes-Benz Center can deactivate the PIN protection for you.

A prompt appears again asking whether you really wish to reset.

Select Yes.

The multimedia system is reset to the factory settings.

### Resetting using a button

Press both the TEL and ☆ buttons at the same time until the multimedia system restarts (at least 15 seconds).

The multimedia system is restarted. No data is deleted during this process.

#### Vehicle information

### Displaying vehicle data

Multimedia system:

- ¬→ 🔝 >> Info
- Select Vehicle.
- The vehicle data is displayed.

#### Displaying engine data

Multimedia system:

- ¬→ 🔝 >> Info
- Select Engine.
  - The engine data is displayed.
- (i) The values for engine output and engine torque may deviate from the nominal values.

Items that can influence this are, for example:

- · Engine speed
- Sea level
- · Fuel grade
- · Outside temperature

# Calling up the fuel consumption indicator

Multimedia system:


- → 🔝 >> Info
- ▶ Select Consumption.

A display with current and average consumption figures is displayed.

# Telephone

# Telephony

### Telephone menu overview

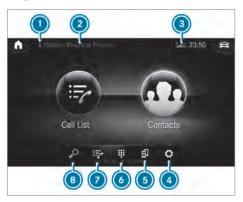

- Battery status of the connected mobile phone
- Bluetooth® device name of the connected mobile phone
- Signal strength of the mobile phone network
- Options
- Device manager
- Numerical pad
- Call list
- Contact search

Bluetooth® profile of the mobile phone: with the PBAP (Phone Book Access Profile) profile, contacts are shown automatically in the multimedia system.

# Notes on telephony

WARNING Risk of distraction from operating integrated communication equipment while the vehicle is in motion

If you operate communication equipment integrated in the vehicle when driving, you could be distracted from the traffic situation. This could also cause you to lose control of the vehicle.

- Only operate this equipment when the traffic situation permits.
- If you cannot be sure of this, stop the vehicle whilst paying attention to road and traffic conditions and operate the equipment with the vehicle stationary.

**WARNING** Risk of accident from operating mobile communication equipment while the vehicle is in motion

Mobile communication devices distract the driver from the traffic situation. This can also cause the driver to lose control of the vehicle.

- As a driver, only operate mobile communication devices when the vehicle is stationary.
- As a vehicle occupant, use mobile communication devices only in the designated area, e.g. in the rear passenger compartment.

You must observe the legal requirements for the country in which you are currently driving when operating mobile communication equipment in the vehicle.

Further information can be obtained from an authorized Mercedes-Benz Center or at: https:// www.mercedes-benz-mobile.com/

#### Information on telephony

The following situations can lead to the call being disconnected while the vehicle is in motion:

- · there is insufficient network coverage in the
- you move from one transmission/reception station to another and no communication channels are free
- the SIM card used is not compatible with the network available
- a mobile phone with "Twincard" is logged into the network with the second SIM card at the same time

The multimedia system supports calls in HD Voice® for improved speech quality. A requirement for this is that the mobile phone and the mobile phone network provider of the person you are calling support HD Voice®.

Depending on the quality of the connection, the voice quality may fluctuate.

# Connecting a mobile phone

# Requirements:

- Bluetooth® is activated on the mobile phone (see the manufacturer's operating instruc-
- Bluetooth<sup>®</sup> is activated on the multimedia system ( $\rightarrow$  page 188).

#### Multimedia system:

→ 🔝 >>> Phone

### Searching for a mobile phone

- ► Select 🗓 .
- Select Connect New Device.

# Connecting a mobile phone (authorization using Secure Simple Pairing)

- Select a mobile phone.
- A code is displayed in the multimedia system and on the mobile phone.
- If the codes match: confirm the code on the mobile phone.
- i For older mobile phone models, enter a one to sixteen-digit number code on the mobile phone and on the multimedia system for authorization.
- Up to 15 mobile phones can be authorized on the multimedia system.

  Authorized mobile phones are reconnected automatically.
- The connected mobile phone can also be used as Bluetooth<sup>®</sup> audio equipment (→ page 199).

#### Replacing a mobile phone

Multimedia system:

- → 🖟 >> Phone
- Select .
- No authorized mobile phone available: select Connect New Device.
- Select a mobile phone.
- Newly authorized mobile phone: confirm the number code on the mobile phone.

#### Switching mobile phones

- Select an authorized mobile phone. The selected mobile phone is connected to the multimedia system.
- (i) For iPhone<sup>®</sup>: you can switch between the Apple CarPlay<sup>®</sup> and Bluetooth<sup>®</sup> equipment connection variants.

### De-authorizing a mobile phone

Multimedia system:

- → 🔐 >> Phone
- ➤ Select 🗐 .
- ▶ Select ••• in the line of the mobile phone.
- Select Deauthorize.

#### Information on Near Field Communication (NFC)


NFC enables short-range wireless data transfer or (re)connection of a mobile phone with the multimedia system.

Further information can be obtained at: https://www.mercedes-benz-mobile.com/

# Using the mobile phone with Near Field Communication (NFC)

#### Requirements:

- NFC is activated on the mobile phone (see the manufacturer's operating instructions)
- The mobile phone's screen is switched on and unlocked (see the manufacturer's operating instructions)

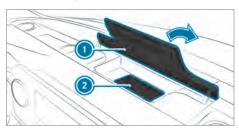

- Open the flap of storage compartment (1) above the media display.
- ➤ To connect a mobile phone: hold the NFC area of the mobile phone (see manufacturer's operating instructions) on mat ② or place the mobile phone on it.
- Follow the additional prompts on the media system display to connect the mobile phone (→ page 191).
- ➤ To replace a mobile phone: hold the NFC area of the mobile phone (see manufacturer's operating instructions) on mat ② or place the mobile phone on it.
- Follow the additional prompts on the media system display to replace the mobile phone.
- If required, confirm the prompts on your mobile phone (see the manufacturer's operating instructions).

If you want to charge a mobile phone without connecting it to the multimedia system, lay it on the mat without beforehand unblocking the screen.

Further information can be found at: https://www.mercedes-benz-mobile.com/

# Setting the reception and transmission volume

# Requirements:

A mobile phone is connected (→ page 191).

Multimedia system:

→ Phone

This function ensures optimal language quality.

- Select 🗓 .
- Select ••• in the line of the mobile phone.
- Select Reception Volume and Transmission Volume.
- Set the volume.

Further information on the recommended reception and transmission volume: https:// www.mercedes-benz-mobile.com/

# Starting/stopping mobile phone voice recognition

### Requirements:

· The mobile phone in the foreground is connected with the multimedia system ( $\rightarrow$  page 191).

### Starting mobile phone voice recognition

Press and hold the button on the multifunction steering wheel for more than one sec-

You can use mobile phone voice recognition.

#### Stopping mobile phone voice recognition

- Briefly press the button on the multifunction steering wheel.
- i If a mobile phone is connected via Smartphone Integration, the voice recognition of this mobile phone is started or stopped.

# Calls

# Telephone operation

Multimedia system:

→ 🔝 🕪 Phone

# Making a call by entering the numbers

- Enter a number.
- Select .
- The call is made.

#### Accepting a call

Select Accept.

#### Rejecting a call

Select Reject.

### Ending a call

Select <</p>

### Activating functions during a call

The following functions are available during a call:

End Call

Microphone Off

Numeric Keypad (show to send DTMF

Transfer to Phone (an active call in handsfree mode is transferred over to the telephone)

Select a function.

# Putting an active call on hold

- Tap on the contact or the call. The call will be put on hold.
- (i) The call on hold can be ended any time or reactivated by tapping again.

### Conducting calls with several participants

# Requirements:

- There is an active call (→ page 193).
- · Another call is being made.

# Switching between calls

Select the contact. The selected call is active. The other call is on hold.

#### Activating a call on hold

Select the contact of the call on hold.

#### Ending an active call

- Select End Call.
- (i) On some mobile phones, the call on hold is activated as soon as the active call is ended.

#### Accepting/rejecting a waiting call

# Requirements:

There is an active call (→ page 193).

If you receive a call while already in a call, a message is displayed.

Depending on the mobile phone and mobile network operator you will hear a call-waiting sound.

Select Accept. The incoming call is active. The previous call is on hold.

Select Reject.

 This function and behavior depends on your mobile phone network provider and the mobile phone (see the manufacturer's operating instructions).

#### Contacts

#### Information about the contacts menu

The contacts menu contains all contacts from existing data sources, e.g. mobile phone.

You can store up to 3000 contacts.

From the contacts menu you can use telephone functions such as call a contact, for example  $(\rightarrow page 194)$ .

If a mobile phone is connected to the multimedia system ( $\rightarrow$  page 191) and automatic calling up ( $\rightarrow$  page 194) is activated, the mobile phone's contacts are displayed in the address book.

# Downloading mobile phone contacts

Multimedia system:



Select Contacts & Recent Calls.

#### Automatically

Activate Synchronize Contacts Automatically

#### Manually

- Deactivate Synchronize Contacts Automatically.
- Select Synchronize Contacts.

#### Calling up contacts

Multimedia system:



The following options can be used to search for contacts:

- · Searching by initials
- · Searching by name
- · Searching by phone number
- Enter characters into the search field.
- Select the contact.
  Details for the contact are shown.

# Editing the format of a contact's name

Multimedia system:



Select Name Format.

The following options are available:

- · Last Name, First Name
- Last Name First Name
- First Name Last Name
- Select an option.

### Calling a contact

Multimedia system:



- Select Search for Contacts.
- Enter characters into the search field.
- Select the contact.
- Select the telephone number.
  The number is dialed.

### Deleting contacts

### Requirements:

The Synchronize Contacts Automatically function is switched off (→ page 194).

Multimedia system:



# Deleting all contacts

- Select 🙍 .
- Select Delete Contacts.

#### Call list

#### Overview of the call list

Depending on whether your mobile phone supports the PBAP Bluetooth<sup>®</sup> profile or not, this can have different effects on the presentation and functions of the call list.

If the PBAP Bluetooth® profile is supported, the effects are as follows:

- The call lists from the mobile phone are displayed in the multimedia system.
- When connecting the mobile phone, you may have to confirm the connection for the PBAP Bluetooth<sup>®</sup> profile.

If the PBAP Bluetooth® profile is not supported, the effects are as follows:

- The multimedia system generates a call list independently as soon as calls are made in the vehicle.
- The call list is not synchronized with the call lists in the mobile phone.

# Making a call from the call list

Multimedia system:

→ 🚡 🕪 Phone

Select : Recent Calls.

Select an entry. The call is made.

# Calling up additional options in the call list Multimedia system:

→ 🔝 >>> Phone

Select Recent Calls.

For previously stored contacts: select \( \) in the line of an entry. The search results are displayed.

#### Apple CarPlay®

# Overview of Apple CarPlay®

WARNING Risk of distraction due to information systems and communications equipment

If you operate information systems and communications equipment integrated in the vehicle when driving, you could be distracted from the traffic situation. This could also cause you to lose control of the vehicle.

- Only operate this equipment when the traffic situation permits.
- If you cannot be sure of this, stop the vehicle in accordance with the traffic conditions and operate the equipment with the vehicle stationary.

You must observe the legal requirements for the country in which you are currently driving when operating the multimedia system.

iPhone® functions can be used via the multimedia system using Apple CarPlay®. They are operated using the touchscreen, Touch Control or Siri® voice control. You can activate voice control by pressing and holding the to button on the multifunction steering wheel.

Only one mobile phone at a time can be connected via Apple CarPlay® to the multimedia system.

The availability of Apple CarPlay® may vary according to the country.

The service provider is responsible for this application and the services and content connected to it.

Apple CarPlay® is a registered trademark of Apple Inc.

# Information on Apple CarPlay®

When Apple CarPlay® is being used, the iPod® media source is not available for the respective iPhone®.

# Connecting an iPhone® via Apple CarPlay® (with

# Requirements:

- The multimedia system is equipped with the function.
- The current version of your device's operating system is being used (see the manufacturer's operating instructions).
- The full range of functions for Apple CarPlay<sup>®</sup> is only available with an Internet connection.
- Connect the iPhone® to the USB port on the multimedia system using a suitable cable  $(\rightarrow page 199)$ .
- If no other device is connected with the system via Bluetooth®: confirm the data protection provisions.
- If another device is connected via Bluetooth® or Apple CarPlay® (wireless) with the system: tap on the Tap here to start Apple CarPlay for: <Mobile phone> message.

or

Select the iPhone® in the device list under the application. The previous connection via Bluetooth® or Apple CarPlay® (wireless) is disconnected. The device newly connected via cable is active.

# Accepting/rejecting the data protection provisions A message with the data protection provisions appears.

Select Accept & Start.

### Exiting Apple CarPlay®

- Press the 命 button.
- i If Apple CarPlay® was not displayed full-screen before disconnecting, the application starts in the background when reconnected. You can call up Apple CarPlay® in the main menu.

# Calling up Apple CarPlay® sound settings

Multimedia system:

Select sound settings.

# Ending Apple CarPlay®

- To end the connection of Apple CarPlay® (cable): disconnect the connection via the connecting cable between the iPhone® and multimedia system.
- To end the connection of Apple CarPlay® (wireless): de-authorize the iPhone® in the device list under the application.
- Regardless of whether the connection is via cable or wireless, Mercedes-Benz recommends disconnection only when the vehicle is stationary.

#### **Android Auto**

#### Android Auto overview

▲ WARNING Risk of distraction due to information systems and communications equipment

If you operate information systems and communications equipment integrated in the vehicle when driving, you could be distracted from the traffic situation. This could also cause you to lose control of the vehicle.

- Only operate this equipment when the traffic situation permits.
- ► If you cannot be sure of this, stop the vehicle in accordance with the traffic conditions and operate the equipment with the vehicle stationary.

You must observe the legal requirements for the country in which you are currently driving when operating the multimedia system.

Mobile phone functions can be used with Android Auto using the Android operating system on the multimedia system. It is operated using the touchscreen or voice control. You can activate the voice control by pressing and holding the button on the multifunction steering wheel.

Only one mobile phone at a time can be connected via Android Auto to the multimedia system.

The availability of Android Auto and Android Auto apps may vary according to the country.

The service provider is responsible for this application and the services and content connected to it.

#### Information on Android Auto

While using Android Auto, various functions of the multimedia system, for example the media source Bluetooth® audio, are not available.

# Connecting a mobile phone via Android Auto (wired)

#### Requirements:

- The multimedia system is equipped with the function.
- The current version of your device's operating system is being used (see the manufacturer's operating instructions).
- There is an Internet connection for the full range of functions for Android Auto.

#### Multimedia system:

- Connect the mobile phone to the USB port on the multimedia system using a suitable cable (→ page 199).
- If no other device is connected with the system via Bluetooth® or Apple CarPlay® (wireless): confirm the data protection provisions.
- ► If another device is connected via Bluetooth®, Android Auto (wireless) or Apple CarPlay® (wireless) with the system: tap on the Tap here to start Android Auto for:<Mobile phone> message.

or

- Select the device in the device list under the application.
  - All existing device connections via USB, Bluetooth®, Android Auto (wireless) or Apple Car-Play® (wireless) are disconnected. The device newly connected via cable is active.
- i If an Android Auto application is active, you can call up this active application using the MAT or TEL application buttons.

#### Accepting/rejecting the data protection provisions

(i) The first activation of Android Auto on the multimedia system must be carried out when the vehicle is stationary for safety reasons.

For the initial start of the application: a message with the data protection provisions appears.

Select Accept & Start.

#### Returning to the main menu

- Press the 命 button.
- (i) If you use both the wired as well as wireless Android Auto function, observe that a wireless connection may be established when the device is next connected using Bluetooth® or after starting the multimedia system. If Android Auto was not displayed in the foreground before disconnecting, the application starts in the background when reconnected. You can call up Android Auto in the main menu.

# Calling up the Android Auto sound settings

Multimedia system:

→ 🔝 >> Smartphone >> Android Auto

Select sound settings.

# **Ending Android Auto**

Disconnect the connecting cable between the mobile phone and multimedia system. Mercedes-Benz recommends disconnecting the connecting cable only when the vehicle is stationary.

# Transferred vehicle data with Android Auto and Apple CarPlay®

#### Overview of transferred vehicle data

When using Android Auto or Apple CarPlay®, certain vehicle data is transferred to the mobile phone. This enables you to get the best out of selected mobile phone services. Vehicle data is not directly accessible.

The following system information is transmitted:

- Software release of the multimedia system
- System ID (anonymized)

The transfer of this data is used to optimize communication between the vehicle and the mobile phone.

To do this, and to assign several vehicles to the mobile phone, a vehicle ID is randomly generated.

This has no connection to the vehicle identification number (VIN) and is deleted when the multimedia system is reset ( $\rightarrow$  page 190).

The following vehicle status data is transmitted:

- · The gear engaged
- · The distinction between parked, standstill, rolling and driving
- The day/night mode of the instrument cluster

The transfer of this data is used to alter how content is displayed to correspond to the driving situation.

The following position data is transmitted:

- Coordinates
- Speed
- · Compass direction
- Acceleration direction

This data is only transferred while the navigation system is active, in order to improve it (e.g. so it can continue functioning when in a tunnel).

#### Media

Information about media mode

# Information about supported formats and data storage media

WARNING Risk of distraction when handling data storage media

If you handle a data storage medium while driving, your attention is diverted from the traffic conditions. This could also cause you to lose control of the vehicle.

Only handle a data storage medium when the vehicle is stationary.

#### The multimedia system supports the following formats and data media:

Permissible file systems	FAT32, exFAT, NTFS
Permissible data carriers	USB devices, iPod®/iPhone®, MTP devices, Bluetooth® audio equipment
Supported formats:	Audio: MP3, WMA, AAC, WAV


- The multimedia system supports a total of up to 50,000 files.
- Data storage media up to 2 TB are supported (32-bit address space).

# i Observe the following notes:

- Due to the wide range of USB devices available on the market, playback cannot be guaranteed for all USB devices.
- MP3 players must support Media Transfer Protocol (MTP).

### Information on copyright protection and trademarks

Audio files that you create or reproduce yourself for playback are generally subject to copyright protection. In many countries, reproductions, even for private use, are not permitted without the prior consent of the copyright holder. Make sure that you know about the applicable copyright regulations and that you comply with these.

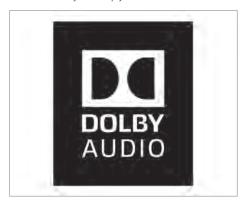

Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio and the double-D symbol are trademarks of Dolby Laboratories.




Gracenote, the Gracenote logo and logotype, "Powered by Gracenote", MusicID and Playlist Plus are either registered trademarks or trademarks of Gracenote, Inc. in the United States and/or other countries.



For DTS Patents, see https://patents.dts.com. Manufactured under license from DTS Licensing Limited. DTS, the Symbol, & DTS and the Symbol together are registered trademarks, and DTS Tru-Volume is a trademark of DTS, Inc. DTS, Inc. All Rights Reserved.

#### Overview of the media menu

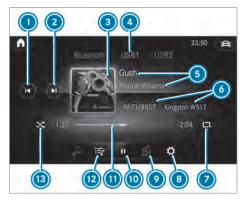

- Previous track or fast rewind
- Next track or fast forward
- 3 Album cover
- Active media source
- Track and artist
- Current track number/track in playback list and active data storage medium
- Repeat
- Settings
- O Device manager
- (iii) Controls playback
- Timeline
- Categories
- Random playback


# Connecting the data storage media to the multimedia system

#### Connecting USB devices

NOTE Damage caused by high temperatures

High temperatures can damage USB devices.

Remove the USB device after use and take it out of the vehicle.

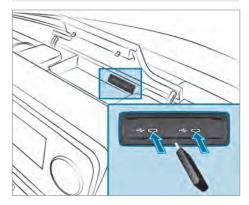

The multimedia connection unit is located at the top center of the storage compartment and has two type C USB ports.

- Connect the USB device to the USB port.
- (i) USB hubs are not supported by the multimedia system.
- (i) When connecting several Apple® devices simultaneously, pay attention to the order in which the devices are connected. The multimedia system only connects with the device that is connected first. Additional Apple® devices that are connected at the same time are only supplied with power.

# Searching for and authorizing a Bluetooth® audio device

### Requirements:

- Bluetooth® is activated on the multimedia system and audio equipment.
- The audio equipment supports the Bluetooth<sup>®</sup> audio profiles A2DP and AVRCP.
- . The audio equipment is "visible" for other devices.

Multimedia system:

→ 🕝 >> Media >> Bluetooth >> 🛪

# Authorizing a new Bluetooth® audio device

- Select Connect New Device.
  - Detected equipment is displayed in the device
- Select an audio device.

Authorization starts. A code is displayed on the multimedia system and on the mobile phone.

- If the codes are identical, confirm on the audio equipment.
- Select Only as Bluetooth Audio Device. The Bluetooth® audio equipment is connected with the multimedia system.

# Connecting previously authorized Bluetooth® audio equipment

Select a Bluetooth® audio device from the list. The connection is established.

## Starting media playback

A data storage medium is connected to the multimedia system.

Multimedia system:

- ¬→ 🔝 >> Media
- Select USB or Bluetooth as the media source.

# Controlling media playback

Multimedia system:

- → 🔝 **>>** Media
- To pause playback: select .
- To continue playback: select .
- To repeat a track: select 1.

For the repeat function there are the following settings:

- Select once: the active playlist is repeated.
- Select twice: the current track is repeated.
- . Select three times: the repeat function is deactivated.
- To play back tracks in random order: select **\*** .
- To wind a track forwards or backwards: tap on the desired point on the timeline.
- To select the next track: select .
- To select the previous track: select .

- To scroll through tracks quickly: press and hold or .
- ➤ To show the current track list; select the track image shown.

#### Additional options for setting media playback

Multimedia system:



# Calling up additional options

➤ Select ☆.

The additional options are shown.

The following options are available:

Surprise Mix

A playlist with randomly selected tracks is created.

• Add to Favorite Songs

The current track is added to the favorite songs.

Remove from Favorite Songs

The current track is removed from the favorite songs.

Select an option.

#### Media search

# Information about the search function in categories

Under [] you can search through all available media files. There are several categories available for selection. The categories shown depend on the connected device and data format.

Available categories with Bluetooth® audio equipment:

Current Tracklist

The folders and categories of the connected device are shown.

Available categories with audio files:

- Current Tracklist
- Playlists
- Folder
- Albums
- Artists
- Tracks
- Often Played
- Most Recently Added

- Music Genres
- Year
- Composers
- Podcasts (Apple<sup>®</sup> devices)
- Audiobooks (Apple<sup>®</sup> devices)
- The categories are available as soon as the entire media content has been read in and analyzed.

# Starting a search in categories

Multimedia system:



Select a category.

The media files are shown corresponding to the selected category, e.g. all albums will be shown for the Albums category.

# Sorting results shown or playing back all media found

- Select ••• .
- To play back all results found in the category: select Play All.

If, for example, the album category is active, all albums found by the desired artist will be played back.

- To sort results alphabetically: select Sort from A-7.
- ➤ To sort results in reverse alphabetical order: select Sort from Z-A.
- i The available options depend on the selected category and the connected device.

#### Using the keyword search

Multimedia system:



In the categories under [] you can use the keyword search with free text input to look for content.

- Select a category.
- Select Search.

A keyboard for character entry appears.

- ► Enter the term searched for.
- (i) The search begins with the first character entered. The more characters entered the more concrete the search results become.
- Select the desired entry from the result list. If the selected result is an album, song or a playback list then playback is started. If the

selected result is a new category then this is opened in the search.

# Radio

# Switching on the radio

Multimedia system:



Alternatively: press the RADIO button. The radio display appears. You will hear the last station played on the last frequency band selected.

#### Radio overview



- Active frequency band
- Station logo
- 3 Station name or set frequency
- Artist, title, album and radio text
- 6 HD radio logo
- Options
- Switches the HD radio function on or off
- Mute function
- Calls up the station list
- Search

#### Switching the HD radio function on/off

Multimedia system:

¬→ 🕝 >> Radio >> HD FM



- Switch HD on or off.
- (i) HD Radio Technology manufactured under license from iBiquity Digital Corporation. U.S. and Foreign Patents. For patents see DTS website. HD Radio and the HD, HD Radio, and "ARC" logos are registered trademarks or trademarks of iBiquity Digital Corporation in the United States and/or other countries.

### Setting the frequency band

Multimedia system:

¬→ 🚡 >> Radio

Select a frequency band.

# Selecting a radio station

Multimedia system:

→ 🞧 🕨 Radio

Swipe to the left or right on the control element.

#### Calling up the radio station list

Multimedia system:

¬→ 🔐 🕪 Radio

Select := .

The station list appears.

Select a station.

# Searching for radio stations using station names or direct frequency entry

Multimedia system:

¬→ 🔝 >> Radio

Select := .

- Select P.
- Enter a station name or frequency.
- Select a station.

### Storing radio stations

Multimedia system:

- ¬→ 🖟 → Radio
- Select a radio station.

### Memory slots are available in station presets

➤ Select 🛨 .

or

Press and hold on the radio station.

#### Replacing an entry in the station presets

- Press and hold on an entry in the station presets.
- Select Yes.

# **Editing station presets**

Multimedia system:



### Moving stations:

- Press and hold a stored station.
- Select Move.
- Move the station to the new position.

#### Deleting stations:

- Press and hold a station.
- Select Delete.

# Replacing a station:

- Press and hold a station.
- Select Replace Radio Station.

#### Displaying emergency messages

Multimedia system:

- → 🔝 >> Radio >> 🐧
- i The availability of the function is dependent on the country.
- Activate or deactivate Display Emergency Warnings.

#### Displaying radio text

Multimedia system:

- → Radio → General
- Activate or deactivate Display Radio Text Information.

#### Sound

# Sound settings

#### Information about the sound system

The sound system is available for all functions in the radio and media modes. The settings, for example for the equalizer, effect the playback of all media sources.

#### Calling up the sound menu

Multimedia system:

→ 🔝 **>>** Media **>>** 💿 **>>** Sound

The following functions are available:

- Equalizer
- Balance and Fader
- · Auto. Volume Adjustment
- Select a sound menu.

# Adjusting treble, mid-range and bass settings

Multimedia system:

- ¬→ 😭 → Media → 🐧 → Sound
- Set TREBLE, MID or BASS.

# Activating/deactivating automatic volume adjustment

Multimedia system:



Automatic volume adjustment compensates for differing volumes when changing between audio sources.

Activate or deactivate Auto. Volume Adjustment.

# Adjusting the balance/fader

The availability of this function depends on the vehicle equipment.

Multimedia system:

- → Media → Sound
- Adjust the balance and fader.

# Notes on loading guidelines

# **DANGER** Risk of poisoning from exhaust gases

Combustion engines emit poisonous exhaust gases, such as carbon monoxide. Exhaust gases can enter the vehicle interior if the rearend door is open when the engine is running, especially if the vehicle is in motion.

- Always switch off the engine before opening the rear-end door.
- Never drive with the rear-end door open.

# **WARNING** Risk of injury from unsecured objects in the vehicle

When objects are unsecured or inadequately secured, they can slip, tip over or be thrown about, striking vehicle occupants.

This also applies to:

- · Luggage or loads
- Seats which have been removed and are being transported in the vehicle in an exceptional case

There is a risk of injury, particularly in the event of braking maneuvers or abrupt changes in direction.

- Always stow objects in such a way that they cannot be tossed about.
- Before traveling, secure objects, luggage or load to prevent them slipping or tipping over.
- When a seat is removed, keep it preferably outside the vehicle.

# **WARNING** Risk of injury due to objects being stowed incorrectly

If objects in the vehicle interior are stowed incorrectly, they can slide or be thrown around and hit vehicle occupants. In addition, cup holders, open storage spaces and mobile phone receptacles cannot always retain all objects within.

There is a risk of injury, particularly in the event of sudden braking or abrupt changes in direction.

Always store objects such that they cannot be thrown around in such situations.

- Always make sure that objects do not protrude from storage spaces, parcel nets or storage nets.
- Close the lockable storage spaces before starting a journey.
- Stow and secure objects that are heavy, hard, pointed, sharp-edged, fragile or too large in the cargo compartment.

# **WARNING** Risk of burns from the tailpipe and tailpipe trims

The exhaust tailpipe and tailpipe trims can become very hot. If you come into contact with these parts of the vehicle, you could burn yourself.

- Always be particularly careful around the tailpipe and the tailpipe trims and supervise children especially closely in this area
- Allow vehicle parts to cool down before touching them.

If you are using a roof luggage rack, please note the maximum roof load and the maximum load capacity of the roof luggage rack ( $\rightarrow$  page 283).

Camera-based driving systems and the sensor functions of the inside rearview mirror may be impaired if you are transporting a load on the roof and it protrudes more than 16 in (40 cm) over the front edge of the roof. Therefore, make sure that the load does not overhang by more than 16 in (40 cm).

The handling characteristics of your vehicle are dependent on the load distribution.

Therefore, please observe the following notes when loading:

- When transporting a load, never exceed the permissible gross mass or the gross axle weight rating for the vehicle (including occupants). The values are specified on the vehicle identification plate on the B-pillar.
- The load must not protrude above the upper edge of the seat backrests.
- If possible, always transport the load in the cargo compartment.
- Fasten the load to the tie-down eyes and distribute the load evenly among them.
- Use tie-down eyes and fastening components which are suitable for the weight and size of the load.

#### Load distribution

NOTE Risk of damage to the floor covering

Excessive point loading on the cargo compartment floor or on the load area can negatively affect the driving characteristics and could damage the floor covering.

- Vehicles with rear-wheel drive: distribute the load uniformly. When doing so, ensure that the overall center of gravity of the load is always as low and close to the center as possible and between the axles near the rear axle.
- Vehicles with all-wheel drive: distribute the load uniformly. When doing so, ensure that the overall center of gravity of the load is always as low and close to the center as possible and between the axles.

For Cargo Vans, buses and Passenger Vans:

- · Always transport loads in the cargo compartment.
- · Always place the load against the seat backrests of the rear bench seat.
- Move large and heavy loads as far towards the front of the vehicle as possible in the direction of travel against the rear bench seat. Store loads flush with the rear bench seat.
- · Always additionally secure the load with suitable load securing aids or tie downs.
- · The load must not protrude above the upper edge of the seat backrests.
- · Transport loads behind seats that are not occupied.
- If the rear bench seat is not occupied, insert the seat belts crosswise into the seat belt buckle of the opposite seat belt.

# Securing loads

### Notes on load securing

**WARNING** Risk of accident and injury due to incorrect use of the lashing straps

The following can occur:

- The tie-down eyes may detach or the lashing strap may tear if the permissible load is exceeded
- · The load cannot be restrained

The load can slip, tip over or be flung about, striking vehicle occupants.

- Always tension the lashing straps in the proper manner and only between the described tie-down eyes.
- Always use lashing straps designed specifically for the loads.
- (i) Observe the information relating to the maximum loading capacity of the individual cargo tie-down point. If you combine various cargo tie-down points to secure a load, always take the maximum loading capacity of the weakest cargo tie-down point into account. During maximum full-stop braking, forces may act which can multiply the weight of the load. Always use several cargo tie-down points to distribute the load. Spread the load evenly between the cargo tie-down points or tie-down

Observe the Operating Instructions or the lashing strap manufacturer's instructions for the operation of the lashing strap.

Observe the information relating to the maximum loading capacity of the cargo tie-down points  $(\rightarrow page 282).$ 

As the driver, you are responsible for ensuring the following:

- The load is secured against slipping, tipping, rolling or falling off.
  - Take usual traffic conditions as well as swerving or full brake application and bad roads into
- The applicable requirements and guidelines relating to load-securing practices are met. If this is not the case, this may constitute a punishable offense, depending on local legislation and any ensuing consequences. Observe country-specific laws.

Make sure that the load is secure before every journey and at regular intervals during a long journev. Adjust the load securing as necessary. Information on how to secure loads correctly can be obtained from the manufacturers of the load securing aids or tie downs for load securing, for example.

When securing loads, observe the following:

- Fill spaces between the load and the cargo compartment walls or wheel wells. For this purpose, use rigid load securing aids, such as chocks, wooden fixings or padding.
- · Attach secured and stabilized loads in all directions

Use the cargo tie-down points or tie-down eyes and the loading rails in the cargo compart-

Only use tie downs, such as lashing rods, lock rods or lashing nets and lashing straps, which have been tested in accordance with current standards (e.g. DIN EN). Always use the cargo tie-down points closest to the load and pad sharp edges.

Loads, and heavy loads in particular, should preferably be secured using the tie-down eyes.


(i) You can obtain tie downs tested in accordance with current standards (e.g. DIN EN) from any specialist company or from a qualified specialist workshop.

# Notes on the partition

Without a partition, vehicles that are approved as commercial vehicles (vehicle category N1, N2) do not fulfill standard ISO 27956, which describes the equipment for properly securing a load in delivery vehicles. If the vehicle is used to transport goods, retrofitting the partition is strongly recommended, as properly securing the load in vehicles without a partition will always be a complex operation.

(i) Nothing may be stowed in the area between the rear side of the seats and the partition.

# Overview of cargo tie-down points

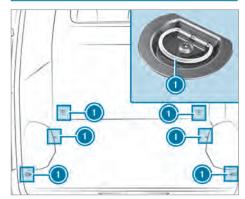

Cargo tie-down points (example: Cargo Van without loading rails)

Tie-down eves

Secure loose loads with an approved lashing net or

Always fasten the lashing net or tarp to all available cargo tie-down points. Make sure that the fastening hooks are secured against accidental opening.

If your vehicle is equipped with loading rails in the cargo compartment floor, you can place lashing rods directly in front of and behind the load. The lashing rods directly absorb the potential shifting forces.

Securing loads on the cargo compartment floor by lashing them down is only recommended for lightweight loads. Lay anti-slip mats under the load to assist in securing it.

### Installing and removing tie-down eyes

- To install: slide the tie-down eye through a recess in the loading rail close to the load until the locking mechanism engages in the recess.
- (i) When you pull the locking mechanism up and out of the recess, the tie-down eye is able to move within the loading rail. Make sure that the locking mechanism is always engaged in a
- Check the tie-down eye for firm seating.
- To remove: pull the locking mechanism up and pull the tie-down eye towards the locking mechanism and out of the loading rail through a recess.

# Carrier systems

# Information on the roof luggage rack

**WARNING** Risk of injury if maximum roof load is exceeded


The vehicle center of gravity and the usual driving characteristics as well as the steering and braking characteristics will change.

If you exceed the maximum roof load, the driving characteristics, as well as the steering and braking characteristics, will be greatly impaired.

- Always comply with the maximum roof load and adjust your driving style.
- I NOTE Vehicle damage due to failure to observe the maximum permissible clearance height

If the vehicle height is greater than the maximum permitted clearance height, the roof and other parts of the vehicle may be damaged.

- Observe the signposted clearance height.
- If the vehicle height is greater than the clearance height, do not enter.
- Note the changed vehicle height with roof mountings.

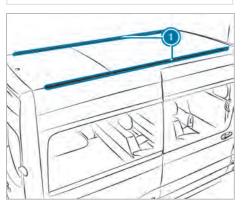

Mounting rails

Information about the maximum roof load can be found in the "Technical data" section  $(\rightarrow page 283)$ .

Observe the following points for installing roof luggage racks:

- Tighten the screws of the roof luggage rack to a torque of 6.0 lb-ft (8 Nm) - 7.4 lb-ft (10 Nm) in the designated sliding blocks.
- The tightened screws should not touch the rails.
- Ensure that the sliding blocks are not located in the areas around the plastic caps.
- The sliding blocks must have the right crosssection.
- The insides of the mounting rails must be free of dirt.
- Re-tighten the screws uniformly after around 300 miles (500 km).

Mercedes-Benz recommends that you use only roof luggage racks that have been tested and approved for Mercedes-Benz. These help to prevent vehicle damage.


Have mounting rails retrofitted only at a qualified specialist workshop. Otherwise, you could damage the vehicle.

If your vehicle is equipped with mounting rails on the roof, you can install a roof luggage rack on the roof. Special fasteners (sliding blocks) are available as accessories for this purpose.

These fasteners are available from any authorized Mercedes-Benz Center.

# Placing a load on the wheel arch

Comply with the important safety notes under "Notes on loading" ( $\rightarrow$  page 203).

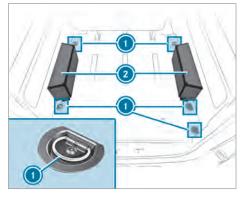

Place the objects on wheel arch 2 and lash them using tie-down eyes  $\bigcirc$  ( $\rightarrow$  page 205).

(i) A wheel arch may be subjected to a load of 330 lb (150 kg).

# ASSYST PLUS service interval display

# Function of the ASSYST PLUS service interval display

The ASSYST PLUS service interval display on the instrument display provides information on the remaining time or distance before the next service due date.

You can hide this service message by using the back button on the left-hand side of the steering wheel.

You can obtain further information concerning the servicing of your vehicle from a qualified specialist workshop, e.g. an authorized Mercedes-Benz Cen-

### Displaying the service due date

On-board computer:



The next service due date is displayed.

To exit the display: press the back button on the left-hand side of the steering wheel.

Bear in mind the following related topic:

· Operating the on-board computer( $\rightarrow$  page 170)

### Carrying out maintenance work regularly

**NOTE** Premature wear through failure to observe service due dates

Service work which is not carried out at the right time or incompletely can lead to increased wear and damage to the vehicle.

- Always observe the prescribed service intervals.
- Always have the prescribed service work carried out at a qualified specialist workshop.

#### Special service requirements

The prescribed service interval is based on normal vehicle use. Perform maintenance work more often than prescribed if the vehicle is operated under arduous operating conditions or increased loads.

Examples of arduous operating conditions:

- Regular city driving with frequent intermediate stops
- Mainly short-distance driving
- Frequent operation in mountainous terrain or on poor road surfaces
- When the engine is often left idling for long periods
- Operation in particularly dusty conditions and/or if air-recirculation mode is frequently

In these or similar operating conditions, have the interior air filter, air filter, engine oil and oil filter, for example, changed more frequently. If the vehicle is subjected to increased loads, check the tires more frequently. You can obtain further information at a qualified specialist workshop.

## Battery disconnection periods

The ASSYST PLUS service interval display can only calculate the service due date when the battery is connected.

Note down the service due date displayed on the Instrument Display before disconnecting the battery ( $\rightarrow$  page 208).

# Engine compartment

# Opening and closing the hood

WARNING Risk of accident if the engine hood is unlatched while driving

An unlocked engine hood may open up when the vehicle is in motion and block your view.

- Never unlatch the engine hood while driving.
- Before every trip, ensure that the engine hood is latched.

WARNING Danger of burns when opening the hood

If you open the hood when the engine has overheated or during a fire in the engine compartment, you could come into contact with hot gases or other escaping operating fluids.

Before opening the hood, allow the engine to cool down.

In the event of a fire in the engine compartment, keep the hood closed and call the fire service.

# **WARNING** Risk of injury due to moving parts

Certain components in the engine compartment may continue to move or suddenly move again even after the ignition has been switched off, e.g. the cooler fan.

Make sure of the following before performing tasks in the engine compartment:

- Switch the ignition off.
- Never touch the danger zone surrounding moving component parts, e.g. the rotation area of the fan.
- Remove jewelry and watches.
- Keep items of clothing and hair away from moving parts.

# **WARNING** Risk of injury from touching component parts under voltage

The ignition system and the fuel injection system work under high voltage. If you touch component parts which are under voltage, you could receive an electric shock.

Never touch component parts of the ignition system or the fuel injection system when the ignition is switched on.

Live components of the fuel injection system include the injectors, for example.

Live components of the ignition system include the following, for example:

- · Ignition coils
- · Spark plug connectors
- · Diagnostic socket

# **WARNING** Risk of burns from hot component parts in the engine compartment

Certain components in the engine compartment can be very hot, e.g. the engine, the radiator and parts of the exhaust system.


Allow the engine to cool down and only touch component parts described in the following. If you have to carry out any work in the engine compartment, touch only the following components:

- Hood
- · Engine oil filler opening cap
- Washer fluid reservoir cap
- Coolant expansion reservoir cap

WARNING Risk of injury from using the windshield wipers while the engine hood is open

When the engine hood is open and the windshield wipers are set in motion, you can be trapped by the wiper linkage.

Always switch off the windshield wipers and ignition before opening the engine hood.

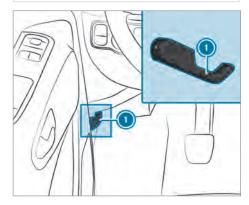

- Park the vehicle in a safe location and on a level surface if possible.
- Switch off the engine.
- Secure the vehicle against rolling away.


# **WARNING** Risk of injury when the hood is opened

When you open the hood, it may suddenly drop into the end position.

There is a risk of injury for anyone in the hood's range of movement.

- Before releasing the hood, ensure that the support is firmly seated in the holder.
- Open the hood only when there is no-one in the hood's range of movement.
- To open: pull handle 1 to release the hood.

- Reach into the gap and push the hood catch handle upwards.
- Open the hood and hold it up.

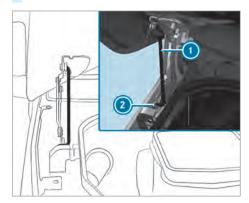

- Take support ① from the bracket on the hood and pull it downwards.
- Insert the support into the bracket below 2.
- **WARNING** Risk of fire due to flammable material in the engine compartment or the exhaust system

Cloths or other flammable materials left in the engine compartment by mistake could ignite upon coming into contact with hot sections of the engine or exhaust system.

- Ensure that there are no flammable external materials in the engine compartment or on the exhaust system after maintenance work has been conducted.
- **WARNING** Risk of accident and injury when opening and closing the engine hood

When opening or closing the engine hood, it may suddenly drop into the end position.

There is a risk of injury for anyone in the engine hood's range of movement.

- Only open or close the engine hood when there are no persons in the engine hood's range of movement.
- NOTE Damage to the hood

Pushing the hood closed with your hands could damage it.

To close the hood, let it drop from the specified height.

- To close: lift the hood slightly.
- Move support 1 to the bracket on the hood and apply light pressure to engage it.
- Lower the hood and let it drop from a height of approximately 0.5 ft (15 cm).
- If it is still possible to lift the hood a little, open the hood again and let it drop from a height of approximately 0.7 ft (20 cm) until it engages correctly.

# Engine oil

# Checking the engine oil level with the on-board computer

# Requirements:

- The vehicle is level during the measuring process.
- · The hood is closed.
- Depending on the driving profile, the oil level can be displayed only after a driving time of up to 30 minutes and only when the ignition is switched on.

#### On-board computer:

→ Service → Engine Oil Level

# You will see one of the following messages on the multifunction display:

- Measuring Engine Oil Level...: measurement of the oil level not yet possible. Repeat the query after driving for a maximum of 30 minutes.
- Engine Oil Level OK and the bar showing the oil level on the multifunction display is green and lies between "MIN" and "MAX": the oil level is OK.
- Engine Oil Level Drive until the engine is warm.: warm up the engine to operating temperature.
- Engine Oil Level Correct Measurement Only if Vehicle Is on Level Ground: park the vehicle on a level surface.
- Engine Oil Level Add 1,0 liq.gal. and the bar showing the oil level on the multifunction display is orange and lies below "MIN": add 1.0 US qt (1 I) of engine oil.
- Reduce Engine Oil Level and the bar showing the oil level on the multifunction display is orange and lies above "MAX": drain off excess engine oil.
  - Consult a qualified specialist workshop.

- For Engine Oil Level Switch Ignition On: switch on the ignition in order to check the engine oil level.
- Engine Oil Level System Inoperative: the sensor is defective or not connected. Consult a qualified specialist workshop.
- Engine Oil Level System Currently Unavailable: close the hood.
- (i) Vehicles with cold oil level displays: the oil level is automatically displayed on the multifunction display after the vehicle has been non-operational for an extended period. If it is not possible to measure the engine oil level, a message to that effect will appear.
- The result of the electronic measurement always takes precedence over other measurements.

# Checking the engine oil level with an oil dipstick


WARNING Risk of burns from hot component parts in the engine compartment

Certain component parts in the engine compartment can be very hot, e.g. the engine, the cooler and parts of the exhaust system.

- Allow the engine to cool down and only touch component parts described in the following.
- (i) For oil level measurement, Mercedes-Benz prioritizes electronic measurement while driving with the display in the instrument cluster. If there is a discrepancy between electronic oil level measurement and dipstick method, the result of the electronic oil level measurement is given precedence.
- (i) Your vehicle is equipped with an electronic oil level measurement. For this reason, the oil pipe is closed with a plug. The oil dipstick can be purchased from your authorized Service Partner as special equipment.

#### Requirements:

- · The vehicle is on a level surface.
- . The engine is turned off and the ignition key is kept out of range.
- The engine is at operating temperature.
- Wait five minutes after a short drive for the engine oil to drip off.

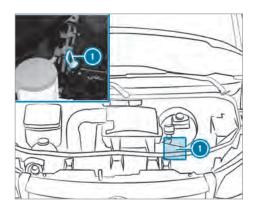

Oil dipstick (example, if purchased)

- Remove oil dipstick (1) and wipe it off.
- Slowly insert oil dipstick (1) into the dipstick guide tube as far as it will go and pull it out after three seconds.
  - · Oil level OK: the oil level is between the MIN and the MAX mark
  - . Oil level too low: the oil level is at the MIN mark or below.
- If the oil level is too low, add approx. 1.0 US qt (1 liter) engine oil.
- If the oil level is too high, drain off excess engine oil. Consult a qualified specialist workshop.

#### Adding engine oil

**WARNING** Risk of burns from hot component parts in the engine compartment

Certain component parts in the engine compartment can be very hot, e.g. the engine, the cooler and parts of the exhaust system.

Allow the engine to cool down and only touch component parts described in the following.

# WARNING Risk of burns when opening the hood

If you open the hood when the engine has overheated or when there is a fire in the engine compartment, the following situations may occur:

- You could come into contact with hot gases.
- You could come into contact with other hot, escaping operating fluids.
- Before opening the hood, allow the overheated engine to cool down.
- In the event of a fire in the engine compartment, keep the hood closed and call the fire service.

If you have to carry out any work in the engine compartment, touch only the following components:

- Hood
- Engine oil filler opening cap
- · Washer fluid reservoir cap
- Coolant expansion reservoir cap

# **WARNING** Risk of fire and injury from engine oil

If engine oil comes into contact with hot component parts in the engine compartment, it may ignite.

- Make sure that no engine oil is spilled next to the filler opening.
- Allow the engine to cool off and thoroughly clean the engine oil from component parts before starting the vehicle.
- ! NOTE Engine damage due to incorrect oil filter, incorrect oil or additive
- Do not use engine oil or an oil filter with specifications deviating from those required for the prescribed service intervals.


Mercedes-Benz recommends using original or tested replacement and service parts.

- Do not change the engine oil or oil filter in order to set change intervals longer than those prescribed.
- ▶ Do not use any additive.


- Follow the instructions on the service interval display for changing the engine oil.
- I NOTE Damage caused by refilling too much engine oil

Too much engine oil can damage the engine or the catalytic converter.


Have excess engine oil removed at a qualified specialist workshop.

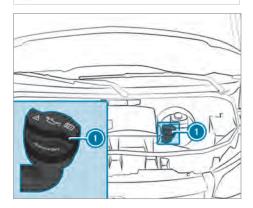

OM651 engine

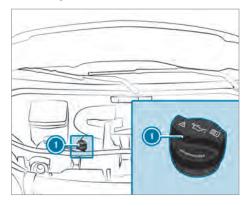

OM642 engine

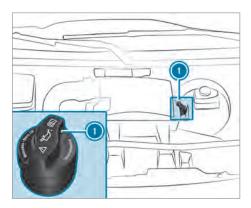

#### M274 engine

- Turn cap (1) counter-clockwise and remove it.
- Add engine oil.
- Replace cap 1 and turn it clockwise until it engages.
- Check the oil level again. Check using the onboard computer (→ page 210), check with the oil dipstick ( $\rightarrow$  page 211).

# Checking the coolant level

WARNING Risk of burns from hot component parts in the engine compartment

Certain components in the engine compartment can be very hot, e.g. the engine, the radiator and parts of the exhaust system.

Allow the engine to cool down and only touch component parts described in the following.

If you have to carry out any work in the engine compartment, touch only the following components:

- Hood
- · Engine oil filler opening cap
- · Washer fluid reservoir cap
- Coolant expansion reservoir cap

WARNING Danger of burns when opening the hood

If you open the hood when the engine has overheated or during a fire in the engine compartment, you could come into contact with hot gases or other escaping operating fluids.

- Before opening the hood, allow the engine to cool down.
- In the event of a fire in the engine compartment, keep the hood closed and call the fire service.

# WARNING Risk of scalding from hot cool-

The engine cooling system is pressurized, particularly when the engine is warm. If you open the cap, you could be scalded by hot coolant spraying out.

- Let the engine cool down before opening the cap.
- When opening the cap, wear protective gloves and safety glasses.
- Open the cap slowly to release pressure.


Allow the engine and the engine cooling system to cool down before checking the coolant level or refilling coolant.

#### NOTE Paintwork damage due to coolant

If coolant gets on painted surfaces, the paintwork can be damaged.

- Add coolant carefully.
- Remove spilled coolant.

# Checking the coolant level

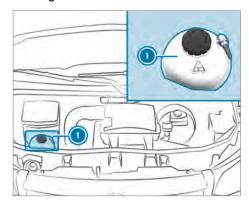

Example: coolant expansion reservoir

- Park the vehicle on an even surface.
- Open the hood ( $\rightarrow$  page 208).

- Slowly turn coolant expansion reservoir cap
   half a turn counter-clockwise and allow excess pressure to escape.
- Turn coolant expansion reservoir cap (1) further and remove it.
- Check the coolant level. There is enough coolant in coolant expansion reservoir if the coolant reaches the MAX mark.

#### Adding coolant

Refill the coolant to the MAX mark on the coolant expansion reservoir.

Only use coolant approved by Mercedes-Benz to avoid damaging the engine cooling system.

- Replace coolant expansion reservoir cap and tighten in a clockwise direction.
- Start the engine.
- After approximately five minutes, switch off the engine again and allow it to cool down.
- Check the coolant level again and add coolant if necessary.
- Observe additional coolant information (→ page 276).

# Filling up the windshield washer system

**WARNING** Risk of burns from hot component parts in the engine compartment

Certain components in the engine compartment can be very hot, e.g. the engine, the radiator and parts of the exhaust system.

Allow the engine to cool down and only touch component parts described in the following.

If you have to carry out any work in the engine compartment, touch only the following components:

- Hood
- Engine oil filler opening cap
- Washer fluid reservoir cap
- · Coolant expansion reservoir cap

**WARNING** Danger of burns when opening the hood

If you open the hood when the engine has overheated or during a fire in the engine compartment, you could come into contact with hot gases or other escaping operating fluids.

- Before opening the hood, allow the engine to cool down.
- ► In the event of a fire in the engine compartment, keep the hood closed and call the fire service.

# **WARNING** - Risk of fire and injury from windshield washer concentrate


Windshield washer concentrate is highly flammable. It could ignite if it comes into contact with hot engine component parts or the exhaust system.

- Make sure that no windshield washer concentrate spills out next to the filler opening.
- NOTE Damage to the exterior lighting due to unsuitable windshield washer fluid

Unsuitable windshield washer fluid may damage the plastic surface of the exterior lighting.

Only use windshield washer fluids that are also suitable for use on plastic surfaces, e.g. MB SummerFit or MB WinterFit.

# Adding washer fluid

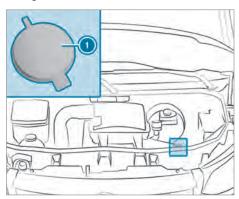

Washer fluid reservoir (example)

- Pre-mix the washer fluid in the correct mixing ratio in a container.
- Park the vehicle on a level surface and secure it against rolling away (→ page 135).
- $\rightarrow$  Open the hood ( $\rightarrow$  page 208).
- Pull the cap of the washer fluid container 
  upwards by the tab.
- Pour in the pre-mixed washer fluid.

- Press cap ① onto the filler opening until it audibly engages.
- Close the hood (→ page 208).
- (i) Mix the washer fluid with windshield washer concentrate all year round. Comply with the information about windshield washer fluid in the technical data ( $\rightarrow$  page 276).
- (i) Comply with the further information about windshield washer fluid ( $\rightarrow$  page 276)

### Cleaning the water drain valve of the air intake box

WARNING Risk of injury due to moving parts

Certain components in the engine compartment may continue to move or suddenly move again even after the ignition has been switched off, e.g. the cooler fan.

Make sure of the following before performing tasks in the engine compartment:


- Switch the ignition off.
- ▶ Never touch the danger zone surrounding moving component parts, e.g. the rotation area of the fan.
- Remove jewelry and watches.
- Keep items of clothing and hair away from moving parts.
- **WARNING** Risk of burns from hot component parts in the engine compartment

Certain components in the engine compartment can be very hot, e.g. the engine, the radiator and parts of the exhaust system.

Allow the engine to cool down and only touch component parts described in the following.

If you have to carry out any work in the engine compartment, touch only the following components:

- Hood
- · Engine oil filler opening cap
- · Washer fluid reservoir cap
- · Coolant expansion reservoir cap

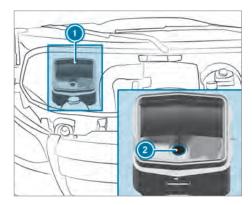

- Open the hood ( $\rightarrow$  page 208).
- Remove dirt from water drain valve 2 of air intake box 1.

### Draining the fuel filter

**WARNING** Danger of fire and explosion due to fuel

Fuels are highly flammable.

- It is essential to avoid fire, open flames, smoking and creating sparks.
- Before filling up, switch off the engine, and, if applicable, the auxiliary heating.
- WARNING Risk of fire and explosion due to fuel


Fuels are highly flammable. There is a risk of fire and explosion due to contact with hot component parts.

- Allow the engine and the exhaust system to cool down.
- NOTE Engine damage due to delayed drainage of the fuel filter


Vehicles with a diesel engine: delayed drainage of the fuel filter can lead to engine damage. If the indicator lamp lights up, drain the

fuel filter immediately.

- **ENVIRONMENTAL NOTE** Environmental pollution due to disposal in a non-environmentally responsible manner
- Dispose of the water/fuel mixture in an environmentally responsible manner.

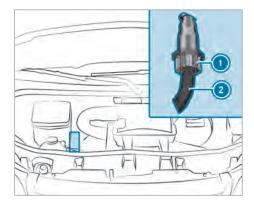

Engine OM642

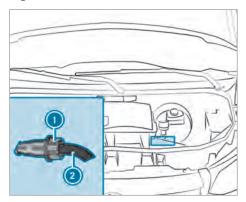

Engine OM651 rear wheel drive

- Park the vehicle in a safe location and secure it against rolling away.
- Switch off the auxiliary heating ( $\rightarrow$  page 104).
- Switch off the engine.
- $\triangleright$  Open the hood ( $\rightarrow$  page 208).
- Place a suitable collecting pan beneath drain hose ②.
- Switch on the ignition.
- ▶ Open drain screw ① until the water/fuel mixture emerges from drain hose ②.
- Close drain screw as soon as around 0.2 qt (0.2 liter) of the water/fuel mixture has been collected.
  - After 30 seconds, the electrical fuel pump automatically stops the discharge of the water/fuel mixture.
- After draining, switch off the ignition.

- Dispose of the collected water/fuel mixture in an environmentally responsible manner, e.g. at a qualified specialist workshop.
- Check that drain screw (1) has been closed. If the engine is running while drain screw (1) is open, you will lose fuel through drain hose (2).
- ightharpoonup Close the hood (ightharpoonup page 208).
- The indicator lamp does not go out after draining: drain the fuel filter again.
- The indicator lamp does not go out after the second draining: consult a qualified specialist workshop.

Mercedes-Benz recommends that you have the fuel filter drained at a qualified specialist workshop.

# Cleaning and care

Notes on washing the vehicle in an automatic car wash

**WARNING** Risk of accident due to reduced braking effect after washing the vehicle

The braking effect is reduced after washing the vehicle.

- After the vehicle has been washed, brake carefully while paying attention to the traffic conditions until the braking effect has been fully restored.
- ! NOTE Risk of damage to the paintwork and plastic components

If you wash your vehicle in Touchless Automatic Car Wash systems that use special cleaning agents, the cleaning agents used can damage the paintwork or plastic components of the vehicle.

Do not wash the vehicle in Touchless Automatic Car Wash systems that use special cleaning agents.

Make sure that the automatic car wash is suitable for the size of the vehicle.

Before washing the vehicle in an automatic car wash, fold in the outside mirrors and remove any additional antennas. Otherwise, the outside mirrors, antennas or the vehicle itself could be damaged.

Make sure any additional antennas are re-installed and that the outside mirrors are fully folded out again when you leave the automatic car wash.

To avoid damage to your vehicle, observe the following before using an automatic car wash:

- the side windows and the sliding window are completely closed.
- · the blower for ventilation and heating is switched off.
- the windshield wiper switch is in position **0**.

If the vehicle is very dirty, wash off excess dirt before cleaning the vehicle in an automatic car wash.

(i) Removing the wax from the windshield and the wiper rubbers after washing the vehicle, will help avoid smearing and reduce wiper noise.

# Notes on use of a power washer

WARNING Risk of an accident when using power washers with round-spray nozzles

The water jet can cause externally invisible damage.

Components damaged in this way may unexpectedly fail.

- Do not use a power washer with roundspray nozzles.
- Have damaged tires or chassis parts replaced immediately.

Never use a power washer in the vehicle interior. The pressurized water created by the power washer and the associated spray could cause considerable damage to the vehicle.

To avoid damage to your vehicle, observe the following when using a power washer:

- · Maintain a minimum distance of 11.8 in (30 cm) to the vehicle when using 25° flatspray nozzles and concentrated-power jets or 27.6 in (70 cm) when using round-spray nozzles and observe the information in the equipment manufacturer's operating instructions.
- · Do not direct the nozzle of the power washer directly at sensitive parts such as tires, gaps, electrical components, batteries, light bulbs and ventilation slits.
- Maintain a minimum distance of 19.7 in (50 cm) for a rear view camera.

## Washing the vehicle by hand

Observe the legal requirements, e.g. in a number of countries, washing by hand is only permitted in specially designated wash bays. In this case, make sure that a specially designated wash bay is used for washing by hand.

- Use a mild cleaning agent, e.g. car shampoo.
- Wash the vehicle with lukewarm water and a soft car sponge. When doing so, do not expose the vehicle to direct sunlight.
- Carefully spray the vehicle with water and dry off with a leather cloth. Be careful not to point the water jet directly towards the air inlet grilles. The blower should be switched off while doing so.
- Do not let the cleaning agent dry on the paintwork.

At the onset of winter, remove all traces of road salt deposits carefully and as soon as possible.

# Notes on care of paint and matte finish



NOTE Paintwork damage and corrosion due to inadequate care

Failure to promptly and thoroughly remove dirt from bird droppings or other residue could result in paintwork damage and corrosion at a later date.



Clean dirt off paint and matte finish thoroughly and as soon as possible.

Observe the notes on cleaning and care to avoid paintwork damage.

#### Paint

- · Insect remains: soak with insect remover and then wash off.
- Bird droppings: soak with water and then wash
- Tree resin, oils, fuels and greases: remove by rubbing gently with a cloth soaked in petroleum ether or lighter fluid.
- Coolant and brake fluid: remove with a moist cloth and clean water.
- Tar stains: use tar remover.
- Wax: use silicone remover.
- Do not affix stickers, films or similar.
- · Remove dirt as soon as possible.

#### Matte finish

- Only use care products approved for Mercedes-Benz.
- · Do not polish the vehicle and alloy wheels.
- Use only automatic car washes that meet current technological standards.
- Do not use a wash program that ends with a hot wax treatment in automatic car washes.
- Do not use paint cleaners, buffing or polishing products, or gloss preservers, e.g. wax.
- Always have paintwork repairs carried out at a qualified specialist workshop.

## Notes on the care of vehicle parts

▲ WARNING Risk of entrapment if the windshield wipers are switched on while the windshield is being cleaned

If the windshield wipers are set in motion while you are cleaning the windshield or wiper blades, you can be trapped by the wiper arm.

Always switch off the windshield wipers and the ignition before cleaning the windshield or wiper blades.

**WARNING** Risk of burning from the tailpipe or tailpipe trim

The tailpipe and tailpipe trim can become very hot. If you come into contact with these car parts, you could burn yourself.

- Always be particularly careful when in the vicinity of the tailpipe and tailpipe trims and supervise children very closely when in this area.
- Before any contact, allow the car parts to cool down.

# Observe the following notes:

	Notes on cleaning and care	Preventing damage to the vehicle
Wheels/rims	Use water and acid-free wheel cleaner.	<ul> <li>Do not use acidic wheel cleaners to remove brake dust. Otherwise, wheel bolts and brake components may be damaged.</li> <li>To avoid corrosion of brake discs and brakepads, drive for a few minutes after cleaning before parking the vehicle. The brake discs and brakepads warm up and dry out.</li> </ul>
Windows	Clean windows inside and outside with a damp cloth and with a cleaning agent recommended for Mercedes-Benz .	Do not use dry cloths or abrasive or solvent-based cleaning agents to clean the inside of windows.
Wiper blades	Carefully clean the folded-away wiper blades with a damp cloth.	Do not clean the wiper blades too often.
Exterior light- ing	Clean the lenses with a wet sponge and mild cleaning agent, e.g. car shampoo.	Only use cleaning agents or cloths suitable for plastic lenses.
Sensors	Clean the sensors in the front and rear bumper and in the radiator grill with a soft cloth and car shampoo.	When using a power washer, keep a minimum distance of 11.8 in (30 cm).
Rear view camera and 360° Camera	Use clean water and a soft cloth to clean the camera lens.	Do not use a power washer.

	Notes on cleaning and care	Preventing damage to the vehicle
Trailer hitch	<ul> <li>Remove traces of rust on the ball, e.g. with a wire brush.</li> <li>Remove dirt with a lint-free cloth.</li> <li>After cleaning, lightly oil or grease the ball head.</li> <li>Observe the notes on care in the trailer hitch manufacturer's operating instructions.</li> </ul>	Do not clean the ball neck with a power washer or solvent.
Sliding door	<ul> <li>Remove foreign objects from the vicinity of the contact plates and contact pins of the sliding door.</li> <li>Clean the contact plates and contact pins with a mild cleaning agent and a soft cloth.</li> </ul>	Do not oil or grease the contact plates and the contact pins.
Steps	<ul> <li>Clean the electrically operated steps and their housing with a power washer.</li> <li>After cleaning, spray the lateral guides with silicone spray.</li> <li>Clean the steps in the bumper with a power washer.</li> </ul>	Do not use oil or grease as a lubricant.
Aluminum dropsides	Brush down the aluminum dropsides with water and a neutral or mild alka- line cleaning agent.	Do not use abrasive cleaning agents to clean the dropsides.

# Notes on interior care

**WARNING** Risk of injury from plastic parts breaking off after the use of solvent-based care products

Care and cleaning products containing solvents can cause surfaces in the cockpit to become porous. When the airbags are deployed, plastic parts may break away.

Do not use any care or cleaning products containing solvents to clean the cockpit.

**WARNING** Risk of injury or death from bleached seat belts

Bleaching or dyeing seat belts can severely weaken them.

This can, for example, cause seat belts to tear or fail in an accident.

Never bleach or dye seat belts.

NOTE Damage to property due to incorrect leather care

The steering wheel, seat covers and other parts of the vehicle interior can be made of leather.

Leather becomes brittle and can crack if it is incorrectly cared for or cleaned.

- If it gets dirty, thoroughly wipe it with a damp cloth (water or mild soapy water) or use leather care agents or cleaners that have been recommended and approved by Mercedes-Benz. Then wipe it over again with a dry cloth.
- Do not use a microfiber cloth for cleaning.
- Do not soak the leather.
- Do not use solvent-based cleaning agents such as tar remover or wheel cleaner; neither should you use polishes or waxes.

# Observe the following notes:


	Notes on cleaning and care	Preventing damage to the vehicle
Seat belts	Clean with lukewarm soapy water.	<ul> <li>Do not use chemical cleaning agents.</li> <li>Do not dry the seat belt by heating above 176°F (80°C) or in direct sunlight.</li> </ul>
Instrument cluster surfaces	Clean the surfaces carefully with a micro- fiber cloth and acrylic glass care product.	Do not use any other agents.
Display	Clean the surface carefully with a micro- fiber cloth and LC/TFT display care prod- uct.	<ul><li>Switch off the display and let it cool down.</li><li>Do not use any other agents.</li></ul>
Plastic trim	Clean with a damp microfiber cloth.     For heavy soiling: Use care product recommended for Mercedes-Benz.	<ul> <li>Do not affix stickers, films or similar.</li> <li>Do not allow to come into contact with cosmetics, insect repellent and sun creams.</li> </ul>
Real wood and trim ele- ments	<ul> <li>Clean with a microfiber cloth.</li> <li>Black piano-lacquer look: Clean with a damp cloth and soapy water.</li> <li>For heavy soiling: Use care product recommended for Mercedes-Benz.</li> </ul>	Do not use solvent-based cleaning agents, polishes or waxes.
Headliner	Clean with a soft brush or dry shampoo.	
Cloth seat covers	Vacuum up dirt such as crumbs or dust and then use a damp microfiber cloth and a 1% soapsuds solution to clean the entire seat cover. Do not spot-clean.  Use cleaning and care products recommended for Mercedes-Benz.	Do not use any oil-based cleaning and care products.
Imitation leather seat covers	Vacuum up dirt such as crumbs or dust and then use a damp cotton cloth and a 1% soapsuds solution to clean the entire seat cover. Do not spot-clean.  Use cleaning and care products recommended for Mercedes-Benz.	Do not use a microfiber cloth.  Do not use any oil-based cleaning and care products.
Steering wheel and gear or selec- tor lever	Clean with a damp cloth.	
Pedals and floor mats	Clean with a damp cloth.	Do not use any cleaning and care products.

	Notes on cleaning and care	Preventing damage to the vehicle
Vehicle inte- rior	Clean with a damp cloth.	<ul> <li>Do not use a power washer.</li> <li>Allow the vehicle interior to dry completely after cleaning.</li> <li>Do not allow liquids to penetrate into gaps or cavities.</li> </ul>
Curtains	The curtains may only be dry cleaned.	Do not wash the curtains.

# **Emergency**

# Removing the safety vest

- Remove the safety vest from the storage compartment in the driver's door.
- Safety vests can also be stored in the storage compartments of the rear doors and the codriver door.

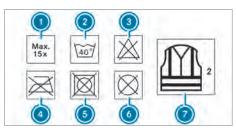

- Maximum number of washes
- Maximum wash temperature
- 3 Do not bleach
- O not iron
- 6 Do not tumble dry
- O not dry-clean
- This is a class 2 vest

The safety vest only fulfills the legally required standards if it is the correct size and is completely closed.

Replace the safety vest if:

- Damaged or if the reflex strips are dirty
- The maximum permitted number of washes is exceeded
- The safety vest's fluorescence has faded

## Removing the first-aid kit (soft sided)

The first-aid kit (soft sided) is located in the stowage compartment in the front passenger door.

Remove first-aid (soft sided) kit from the stowage compartment.

## Removing the warning lamp

The warning lamp is located in the stowage compartment in the front-passenger door.

Remove the warning lamp from the stowage compartment.

# **Emergency Call System**

# Information on the emergency call system

**USA only:** Your vehicle is equipped with the Emergency Call System ("eCall"). This feature can help save lives in the event of an accident. eCall in no way replaces assistance provided from dialing 911.

eCall only functions in areas where mobile phone coverage is available from the wireless service providers. Insufficient network coverage from the wireless service providers may result in an emergency call not being transmitted.

eCall is a standard feature in your Mercedes-Benz vehicle. In order to function as intended, the system relies on the transmission of data detailed in the Transmitted Data section that follows (  $\rightarrow$  page 223). To disable eCall, a customer must visit an authorized Mercedes-Benz Service department to deactivate the vehicle's communication module.

Deactivation of this module prevents the activation of any and all Mercedes me connect services. After the deactivation of eCall, automatic emergency call and manual emergency call will not be available.

The ignition must be switched on before an automatic emergency call can be made.

- (i) eCall is activated at the factory.
- (i) eCall can be deactivated by an authorized Mercedes-Benz dealer. Please note that in the event ownership of the vehicle is transferred to another owner in its deactivated state, eCall will remain deactivated unless the new owner visits an authorized Mercedes-Benz dealership to reactivate the system.

# Overview of the Emergency Call System

eCall can help to reduce the time between an accident and the arrival of emergency services at the site of the accident. It helps locate an accident site in places that are difficult to access. However, even if a vehicle is equipped with eCall, this does not mean the system is ON. As such, eCall does not replace dialing 911 in the event of an accident.

An emergency call can be made automatically ( $\rightarrow$  page 223) or manually ( $\rightarrow$  page 223). Only make emergency calls if you or others are in need of rescue. Do not make an emergency call in the event of a breakdown or a similar situation.

# Message in the media display:

SOS NOT READY: the ignition is not on or eCall is not available.

During an active emergency call, §sos appears in the display.

You can find more information on the regional availability of eCall at: http://www.mercedes-benz.com/connect\_ecall

i If an emergency call is unavailable or malfunctioning, a message to this effect also appears in the multifunction display of the instrument cluster.

## Triggering an automatic emergency call

### Requirements:

- · The ignition is switched on.
- The starter battery is sufficiently charged.

If restraint systems such as airbags or Emergency Tensioning Devices have been activated after an accident, eCall may automatically initiate an emergency call.

When the emergency call is made:

- A voice connection is made to the Mercedes-Benz emergency call center.
- A message with accident data is transmitted to the Mercedes-Benz emergency call center.

The SOS button in the overhead control panel flashes until the emergency call is finished.

It is not possible to immediately end an automatic emergency call.

If no connection can be made to the emergency services:

Dial the local emergency number on your mobile phone.

If an emergency call has been initiated:

- Remain in the vehicle if the road and traffic conditions permit you to do so until a voice connection is established with the emergency call center operator.
- Based on the call, the operator decides whether it is necessary to call rescue teams and/or the police to the accident site.
- If no vehicle occupant answers, an ambulance is sent to the vehicle immediately.

# Triggering a manual emergency call

To use the SOS button in the overhead control panel: press the SOS button at least one second long.

When the emergency call is made:

- A voice connection is made to the Mercedes-Benz emergency call center.
- A message with accident data is transmitted to the Mercedes-Benz emergency call center.
  - The Mercedes-Benz emergency call center can transmit the vehicle position data to one of the emergency call center.
- Remain in the vehicle if the road and traffic conditions permit you to do so until a voice connection is established with the emergency call center operator.

If no connection can be made to the emergency services:

Dial the local emergency number on your mobile phone.

#### Ending an unintentional emergency call

Select on the multifunction steering wheel. Depress the button for several seconds.

### Transmitted data with the emergency call system

Data transmitted by the eCall includes but is not limited to:

- · Vehicle's GPS position data
- GPS position data on the route (a few hundred meters before the incident)
- Direction of travel
- · Vehicle identification number
- · Vehicle drive type
- Estimated number of people in the vehicle
- Whether the emergency call was initiated manually or automatically
- · Time of the accident
- Language setting on the multimedia system

Data transmitted is vehicle information. For any questions about the collection, use and sharing of the eCall system data, please contact MBUSA's Customer Assistance Center at 800-FOR-MERC.

For Canada, please contact MBC's Customer Assistance Center at 1-800-387-0100.

Customer requests for covered information should be submitted via the same channels.

For accident clarification purposes, the following measures can be taken up to an hour after the emergency call has been initiated:

- · The current vehicle position can be determined
- A voice connection to the vehicle occupants can be established

# Flat tire

### Notes on flat tires

▲ WARNING Risk of accident due to a flat

A flat tire strongly impairs the vehicle's driving characteristics, as well as its steering and braking characteristics.

- Do not drive with a flat tire.
- Replace the flat tire with the spare wheel. Alternatively, consult a qualified specialist workshop.

In the event of a flat tire, the following options are available depending on your vehicle's equipment:

- · You can make a breakdown assistance call using the breakdown assistance call button in the overhead control panel.
- Change the wheel ( $\rightarrow$  page 256).

# Battery

### Notes on the starter battery

WARNING Risk of an accident due to work carried out incorrectly on the battery

Work carried out incorrectly on the battery can, for example, lead to a short circuit. This can restrict functions relevant for safety systems and impair the operating safety of your

You could lose control of the vehicle in the following situations in particular:

- · When braking
- In the event of abrupt steering maneuvers and/or when the vehicle's speed is not adapted to the road conditions
- In the event of a short circuit or a similar incident, contact a qualified specialist workshop immediately.
- Do not drive on.

- Always have work on the battery carried out at a qualified specialist workshop.
- Further information on ABS ( $\rightarrow$  page 140)
- Further information on  $ESP^{\mathbb{R}}(\rightarrow page 141)$

Mercedes-Benz recommends that you have the starter battery replaced at a qualified specialist workshop, e.g. an authorized Mercedes-Benz Cen-

If you want to replace the battery yourself, observe the following information:

- Only replace a faulty battery with a battery which fulfills the vehicle's specific require-
- Carry over detachable parts such as the vent hose or terminal cover from the battery which is to be replaced.
- · Make sure that the vent hose is always connected to its original opening on the battery side.

Install the existing or newly supplied stop plugs.

Otherwise, gases or battery acid could escape.

 Make sure that the detachable parts are connected in the same way as before.

For safety reasons, Mercedes-Benz recommends that you only use batteries that have been tested and approved for your vehicle by Mercedes-Benz. These batteries provide increased impact protection to prevent vehicle occupants from suffering acid burns should the battery be damaged in an accident.

WARNING Risk of explosion due to electrostatic charge

Electrostatic charge can ignite the highly explosive gas mixture in the battery.

To discharge any electrostatic charge that may have built up, touch the metal vehicle body before handling the battery.

The highly flammable gas mixture is created while the battery is charging and when jump-starting.

WARNING Danger of chemical burns from the battery acid

Battery acid is caustic.

Avoid contact with the skin, eyes or clothing.

- Do not lean over the battery.
- Do not inhale battery gases.
- Keep children away from the battery.
- Immediately rinse battery acid off thoroughly with plenty of clean water and seek medical attention immediately.

ENVIRONMENTAL NOTE Environmental damage due to improper disposal of batteries

Batteries contain pollutants. It is illegal to dispose of them with the household rubbish.

Dispose of batteries in an environmentally responsible manner. Take discharged batteries to a qualified specialist workshop or to a collection point for used batteries.

Consult a qualified specialist workshop to connect the battery.

Observe the safety notes and protective measures when handling batteries.



Risk of explosion



Fire, open flames and smoking are prohibited when handling the battery. Avoid creating sparks.



Electrolyte or battery acid is corrosive. Avoid contact with the skin, eyes and clothing. Wear suitable protective clothing, in particular gloves, an apron and a safety mask. Immediately rinse electrolyte acid splashes off with clean water. If necessary, seek medical advice.



Wear eye protection.



Keep children at a safe distance.



Observe this Operator's Manual.

If you do not use the vehicle for a long period or drive short distances regularly:

- Connect the battery to a charger recommended for Mercedes-Benz
- Consult a qualified specialist workshop to disconnect the battery

# Starting assistance and charging the starter battery

 Always use the jump-start connection in the engine compartment for starting assistance and when charging the battery.

! NOTE Damage to the battery from overvoltage

When charging using a battery charger without a maximum charging voltage, the battery or the on-board electronics may be damaged.

Only use battery chargers with a maximum charging voltage of 14.8 V.

**WARNING** Risk of explosion from hydrogen gas igniting

There is a danger of hydrogen gas igniting when charging the battery if there is a short circuit or sparks start to form.

- Make sure that the positive terminal of the connected battery does not come into contact with vehicle parts.
- Never place metal objects or tools on a battery.
- The described order of the battery clamps must be observed when connecting and disconnecting the battery.
- When giving starting assistance, always make sure that you only connect battery terminals with identical polarity.
- During starting assistance, you must observe the described order for connecting and disconnecting the jumper cable.

Do not connect or disconnect the battery clamps while the engine is running.

# **WARNING** Risk of explosion during charging process and starting assistance

During the charging process and starting assistance, the battery may release an explosive gas mixture.

- Avoid fire, open flames, creating sparks and smoking.
- Make sure there is sufficient ventilation.
- Do not lean over a battery.

# **WARNING** Risk of explosion from a frozen battery

A discharged battery may freeze at temperatures slightly above or below freezing point.

During starting assistance or battery charging, battery gas can be released.

Always allow a battery to thaw before charging it or performing starting assistance.

If the warning/indicator lamps do not light up in the instrument display around or below freezing point, it is very likely that the discharged battery has frozen.

In this case, observe the following points:

- Do not give the vehicle starting assistance or charge the battery
- The service life of a battery that has been thawed may be reduced drastically
- The starting behavior may deteriorate, particularly at low temperatures
- It is recommended that you have a thawed battery checked at a qualified specialist workshop
- I NOTE Damage caused by numerous or extended attempts to start the engine

Numerous or extended attempts to start the engine may damage the catalytic converter due to non-combusted fuel.


Avoid numerous and extended attempts to start the engine.

When jump-starting and charging the batteries, observe the following points:

- Only use undamaged jumper cables/charging cables with a sufficient cross-section and insulated terminal clamps
- Non-insulated parts of the terminal clamps must not come into contact with other metal parts while the jumper cables/charging cables are connected to the battery/jump-start connection point
- The jumper cables/charging cables must not come into contact with any parts which may move when the engine is running
- Make sure that neither you nor the battery is electrostatically charged
- · Avoid fire and open flames
- Do not lean over a battery
- When charging: only use a battery charger that has been tested and approved by Mercedes-Benz and read the operating instructions for your charger before charging the batteries

Observe the additional following points during starting assistance:

- Starting assistance may only be provided using batteries with a nominal voltage of 12 V.
- The vehicles must not touch each other
- Vehicles with a gasoline engine: only perform starting assistance when the engine and exhaust system are cold
- Vehicles with a battery main switch: check whether the battery main switch is inserted (→ page 118).
- Secure the vehicle using the parking brake.
- **Vehicles with automatic transmission:** shift the transmission to position [P].
- Vehicles with manual transmission: shift to neutral.
- Switch off the ignition and all electrical consumers.
- $\triangleright$  Open the hood ( $\rightarrow$  page 208).

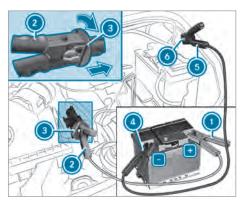

- (i) Right-hand drive vehicle: the jump-start connection may be on the opposite side.
- Remove the cover from the POSITIVE terminal of the donor battery.
- First connect a red POSITIVE terminal clamp of the starting assistance/charging cable to the POSITIVE terminal of the donor battery.
- With second red POSITIVE terminal clamp (2) of the starting assistance/charging cable, slide the red protective cap on jump-start connection (3) back with a clockwise turn.
- Attach second red POSITIVE terminal clamp 2 to the POSITIVE terminal of jump-start connection 3.
- During starting assistance: start the engine of the donor vehicle and let it run at idle speed.
- First, connect a black NEGATIVE terminal clamp 4 of the starting assistance/charging cable to the NEGATIVE terminal of the donor battery.
- Connect the second black NEGATIVE terminal clamp 6 of the starting assistance/charging cable to ground point 6 on your own vehicle (bare metal part in the engine compartment).
- During starting assistance: start the engine on your own vehicle.
- When charging: start the charging process.
- **During starting assistance:** let the engine run for a few minutes.
- During starting assistance: before disconnecting the jumper cable, switch on an electrical consumer on your own vehicle, e.g. the rear window heater or lighting.

When the starting assistance/charging process is complete:

To remove the clamps of the starting assistance/charging cable in reverse order: first remove second black NEGATIVE terminal clamp (5) from ground point (6) in the engine compartment, then black NEGATIVE terminal clamp 4 from the donor battery. Then remove second red POSITIVE terminal clamp (2) from the POSITIVE terminal of jump-start connection (3), followed by red POSITIVE terminal clamp 1 on the donor battery. The red protective cap springs back to its initial position when second red POSITIVE terminal clamp (2) is disconnected from jump-start connection 3.

You can obtain further information at a qualified specialist workshop.


# Installing/removing the floor covering (vehicles with rear wheel drive)

WARNING Risk of accident due to objects in the driver's footwell

Objects in the driver's footwell may impede pedal travel or block a depressed pedal.

This jeopardizes the operating and road safety of the vehicle.

- Stow all objects in the vehicle securely so that they cannot get into the driver's footwell.
- Ensure floor mats and carpets cannot slip and provide sufficient room for the pedals.
- Do not lay multiple floor mats or carpets on top of one another.

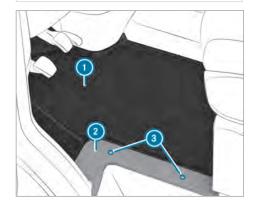

Switch off all electrical consumers.

- To remove: unscrew screws (3) and remove trim (2).
- Remove floor covering ①.
- ➤ To install: insert floor covering ① and align it at the base of the driver's seat and at the door sill
- Put trim ② in place and screw screws ③ back in.

# Disconnecting the starter battery


I NOTE Damage to electrical assemblies

Electrical assemblies could be damaged if the starter battery is disconnected while the engine is running.

- Switch off the engine. Then, release the battery clamps of the starter battery.
- Always disconnect the starter battery in the battery case in the left footwell first. Otherwise, electrical assemblies, e.g. the alternator, could be damaged.
- I NOTE Damage to the vehicle's electronics

If the starter battery is not disconnected as described below, the vehicle's electronics may be damaged.


Always disconnect the starter battery as described in the following sequence. Never reverse the terminal clamps. The vehicle's electronics system may otherwise be damaged.

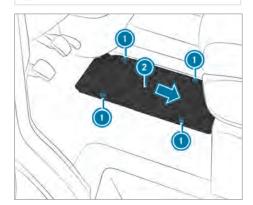

Vehicles with rear wheel drive

(i) If the vehicle is expected to be parked up or out of use for longer than four weeks, observe

- the information on parking up the vehicle  $(\rightarrow page 139)$ .
- Vehicles with a battery main switch: remove the main switch of the battery (→ page 119).
- **Vehicles without a battery main switch:** switch off all electrical consumers.
- Switch off the engine and the power supply.
- Remove the floor covering (→ page 227).
- Remove screws and slide battery cover in the direction of the arrow.
  The screws must protrude over the larger recesses.
- Remove battery cover ② upwards.

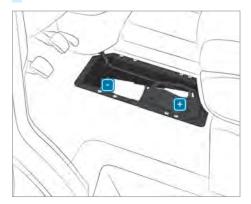


- First loosen and remove the NEGATIVE terminal clamp on the battery so that the clamp is no longer in contact with the terminal.
- Remove the clamp cover of the POSITIVE terminal.
- Loosen the POSITIVE terminal clamp and fold it up to the side, together with the prefuse box.

# Removing/installing the starter battery

Vehicles with rear wheel drive: removing the starter battery



- Disconnect the starter battery ( $\rightarrow$  page 228).
- Remove breather hose (1) with the connector bracket from the connection on the degassing

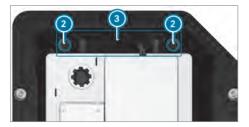

- Pull out and remove screws 2 of bracket 3 upwards.
- Slide the starter battery from its anchorage in the direction of travel.
- Fold the bars of the starter battery upwards and remove the starter battery from the bat-

# Vehicles with rear wheel drive: installing the starter battery

 When reconnecting the starter battery, observe the safety measures and protection notes ( $\rightarrow$  page 225).



- Insert the starter battery into the battery box.
- Fold down the bars of the starter battery.
- Slide the starter battery into its anchorage in the opposite direction to the direction of travel.
- Insert bracket 3.
- Tighten screws 2 on bracket 3 which holds the battery in place.



- Attach breather hose 1 with the connector bracket to the connection of the degassing cover.
- Reconnect the starter battery ( $\rightarrow$  page 228).

Mercedes-Benz recommends that you have the starter battery replaced at a qualified specialist workshop, e.g. an authorized Mercedes-Benz Cen-

If you want to replace the starter battery yourself, observe the following notes:

- · Always replace a defective starter battery with a starter battery which meets the specific requirements of the vehicle.
- · Carry over detachable parts such as the vent hose, elbow fitting or terminal cover from the starter battery to be replaced.
- · Make sure that the vent hose is always connected to its original opening on the battery
  - Install the existing or newly supplied stop plugs.
  - Otherwise, gases or battery acid could escape.
- Make sure that the detachable parts are connected in the same way as before.


# Disconnecting the auxiliary battery in the engine compartment

**NOTE** Damage to electrical assemblies

Electrical assemblies could be damaged if the starter battery is disconnected while the engine is running.

- Switch off the engine. Then, release the battery clamps of the starter battery.
- Always disconnect the starter battery in the battery case in the left footwell first. Otherwise, electrical assemblies, e.g. the alternator, could be damaged.

- ! NOTE Damage to the vehicle's electronics
- Incorrectly disconnecting the auxiliary battery can cause damage to the vehicle's electronics.
- Always disconnect the auxiliary battery as described in the following sequence. Do not reverse the battery terminals under any circumstances.

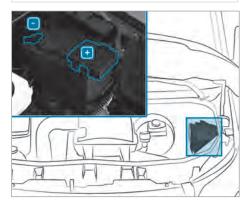

- Observe the safety measures and protection notices when disconnecting the auxiliary battery (→ page 225).
- Switch off all electrical consumers.
- Switch off the engine and the power supply.

- Open the hood (→ page 208).
- First loosen and remove the negative terminal clamp on the auxiliary battery so that the clamp is no longer in contact with the terminal.
- Remove the positive terminal clamp cover.
- Loosen and remove the positive terminal clamp.

# Towing or tow-starting

# Overview of permissible towing methods

In the event of a breakdown, Mercedes-Benz recommends that you have the vehicle transported instead of towed.

- I NOTE Damage to the vehicle due to towing away incorrectly
- Observe the instructions and notes on towing away.
- (i) Vehicles with automatic transmission and rearwheel drive: if there is a malfunction, the automatic transmission may be locked in position P.

If the automatic transmission cannot be shifted to position [N], transport the vehicle  $(\rightarrow page 232)$ . A towing vehicle with lifting equipment is required for vehicle transport.

#### Permissible towing methods

	Both axles on the ground	Front axle raised	Rear axle raised
Vehicles with automatic transmission and rearwheel drive	Yes, no further than 31 miles (50 km) at 31 mph (50 km/h)	Yes, no further than 31 miles (50 km) at 31 mph (50 km/h)	Yes, if the steering wheel is fixed in the center position with a steering wheel lock
Vehicles with all-wheel drive	Yes, no further than 31 miles (50 km) at 31 mph (50 km/h)	No	No

To tow with a raised axle: towing should be performed by a towing company.

# Towing away the vehicle with both axles on the ground

Observe the notes on permissible towing methods (→ page 230).

Make sure that the battery is connected and charged.

When the battery is discharged, the following situations occur:

- The engine will not start.
- It is not possible to release or apply the electric parking brake.
- Vehicles with automatic transmission: the automatic transmission cannot be shifted to position N or P.
- NOTE Damage due to towing away at excessively high speeds or over long distances

The drivetrain could be damaged when towing at excessively high speeds or over long distances.

- A towing speed of 30 mph (50 km/h) must not be exceeded.
- A towing distance of 30 miles (50 km) must not be exceeded.
- Vehicles with automatic transmission and rear wheel drive: if there is a malfunction, the automatic transmission may be locked in position
   P.

If the automatic transmission cannot be shifted to position [N], transport the vehicle ( $\rightarrow$  page 232). A towing vehicle with lifting equipment is required for vehicle transport.

**WARNING** Risk of accident due to towing away a vehicle that is too heavy

If the vehicle being tow started or towed away is heavier than the permissible gross weight of your vehicle, the following situations may arise:

- The towing eye may become detached.
- The vehicle/trailer combination may even tip over.
- Before tow starting or towing away a vehicle, check that it does not exceed the permissible gross weight.

If a vehicle is towed or tow started, its weight should not be greater than the permissible gross mass of the towing vehicle.

Information on the vehicle's permissible gross mass can be found on the vehicle identification plate (→ page 267).

- Vehicles with automatic transmission: do not open the driver's or co-driver door. Otherwise, the automatic transmission automatically shifts to position [₱].
- ▶ Install the towing eye ( $\rightarrow$  page 233).
- Secure the towing device.
- ! NOTE Damage due to incorrect connection of the tow bar
- Only connect the tow rope or tow bar to the towing eyes.
- (i) You can also secure the towing device to the trailer hitch.
- ! NOTE Damage and risk of accident when towing with a tow rope

There is a risk of an accident if you do not observe safety and protective measures when towing using a tow rope.

Observe the following points when towing with a tow rope:

- Secure the tow rope on the same side on both vehicles.
- Make sure the tow rope does not exceed the legally prescribed length.
- Mark the tow rope in the center, e.g. with a white cloth (30 x 30 cm). This will make other road users aware that a vehicle is being towed.
- Observe the brake lamps of the towing vehicle while driving. Always maintain a distance that ensures the tow rope does not sag.
- Do not use steel cables or chains to tow your vehicle. Otherwise, you could damage the vehicle.
- Deactivate automatic locking (→ page 50).
- Do not activate the HOLD function.
- $\triangleright$  Deactivate the tow-away alarm ( $\rightarrow$  page 64).
- Deactivate Active Brake Assist (→ page 145).
- ► Vehicles with automatic transmission: shift the automatic transmission to N.
- Release the parking brake.

**WARNING** Risk of accident due to limited safety-related functions during the towing process

Safety-related functions are limited or no longer available in the following situations:

- · The ignition is switched off.
- The brake system or power steering system is malfunctioning.
- The energy supply or the on-board electrical system is malfunctioning.

When your vehicle is then towed away, significantly more effort may be required to steer and brake than is normally required.

- Use a tow bar.
- Make sure that the steering wheel can move freely before towing the vehicle away.
- I NOTE Damage due to excessive tractive power

If you pull away sharply, the tractive power may be too high and the vehicles could be damaged.

Pull away slowly and smoothly.

## Towing a vehicle with the front or rear axle raised

I NOTE Damage when the ignition is switched on

If you leave the ignition switched on when towing the vehicle with the front or rear axle raised, ESP® actuation can damage the brake system.

- ▶ The ignition must be switched off.
- I NOTE Damage due to incorrect removal or installation of the propeller shafts

When installing the propeller shafts, they can be damaged if you do not use new screws.

Always use new screws when installing the propeller shafts.

Only have the propeller shafts installed or removed by qualified, skilled personnel.

 If the front axle is damaged, raise the vehicle at the front axle and if the rear axle is damaged, raise the vehicle at the rear axle. (i) Vehicles with automatic transmission and rear wheel drive: if there is a malfunction, the automatic transmission may be locked in position P.


If the automatic transmission cannot be shifted to position  $[\overline{\mathbf{N}}]$ , transport the vehicle ( $\rightarrow$  page 232). A towing vehicle with lifting equipment is required for vehicle transport.

- Observe the notes on permissible towing methods (→ page 230).
- The propeller shafts to the drive axles must be removed if the maximum permissible towing distance is exceeded.
- Only have the propeller shafts installed or removed by qualified, trained personnel.
- Vehicles with automatic transmission: shift the automatic transmission to N.
- Release the parking brake.
- Switch off the ignition.

# Loading the vehicle for transport

- Observe the notes on permissible towing methods (→ page 230, 232).
- Connect the tow bar to the towing eye to load the vehicle.
- **Vehicles with automatic transmission:** shift the automatic transmission to position N.
- (i) Vehicles with automatic transmission: in the event of damage to the electrics, the automatic transmission may be locked in position P. To shift to position N, provide the onboard electrical system with power (→ page 225).
- Load the vehicle onto the transporter.
- **Vehicles with automatic transmission:** shift the automatic transmission to position **P**.
- Use the parking brake to secure the vehicle against rolling away.
- Only secure the vehicle by the wheels.

## Vehicles with all-wheel drive/vehicles with automatic transmission

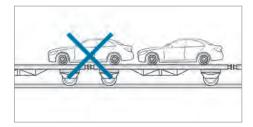

- Make sure that the front and rear axles come to rest on the same transportation vehicle.
- NOTE Damage to the drive train due to incorrect positioning of the vehicle
- ▶ Do not position the vehicle above the connection point of the transport vehicle.
- **NOTE** Vehicle damage due to improper loading

An all-wheel drive vehicle may be damaged if it is tilted, pushed or moved while being loaded using a hydraulic platform.


- ► When loading a vehicle with all-wheel drive, the vehicle should only be moved and positioned by its own power.
- ▶ The vehicle and the surface it is positioned on should no longer be moved when the key is removed or if the door is open.

# Towing eye storage location

The towing eye is located in the vehicle tool kit in the front-passenger footwell ( $\rightarrow$  page 235).

# Installing/removing the towing eye


### Installing the front towing eye

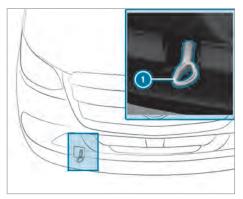

- Press the top of the cover and remove the cover.
- Screw in towing eye 1 clockwise to the stop and tighten.

# Removing the front towing eye

- Unscrew towing eye 1 counter-clockwise.
- Insert the cover with the tabs at the top and push in at the bottom until the cover engages.

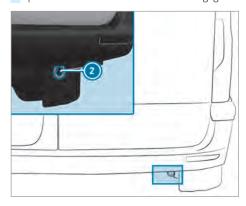

Rear towing eye (vehicles with passenger vehicle approval)

- (i) Rear towing eye (2) is permanently attached to the vehicle.
- NOTE Damage to the vehicle due to incorrect use of the towing eye

When a towing eye is used to recover a vehicle, the vehicle may be damaged in the process.

Only use the towing eye to tow away or tow start the vehicle.

### Tow starting vehicle (emergency engine start)

#### Vehicles with automatic transmission

I NOTE Damage to the automatic transmission due to tow starting

The automatic transmission may be damaged in the process of tow starting vehicles with automatic transmission.

- Vehicles with automatic transmission must not be tow started.
- Do not tow start vehicles with automatic transmission.

#### Electrical fuses

#### Notes on electrical fuses

**WARNING** Risk of accident and injury due to overloaded lines

If you manipulate or bridge a faulty fuse or if you replace it with a fuse with a higher amperage, the electric line could be overloaded.

This could result in a fire.

- Always replace faulty fuses with specified new fuses containing the correct amperage.
- ! NOTE Damage due to incorrect fuses

Electrical components or systems could be damaged by incorrect fuses.

 Only use fuses which have been approved by Mercedes-Benz and which have the correct fuse rating.

The electrical fuses in your vehicle switch off defective circuits. If a fuse blows, all the components on the circuit and their functions will cease to operate.

Blown fuses must be replaced with fuses of an equivalent specification, which you can determine by the color and fuse rating. The fuse allocation chart and further information on the electric fuses and relays can be found in the "Fuse allocation chart" supplement.

! NOTE Damage or malfunctions caused by moisture

Moisture may cause damage to the electrical system or cause it to malfunction.

- When the fuse box is open, make sure that no moisture can enter the fuse box.
- When closing the fuse box, make sure that the seal of the lid is positioned correctly on the fuse box.

If the new fuse which has been inserted also blows, have the cause traced and rectified at a qualified specialist workshop.


Make sure of the following before replacing a fuse:

- the vehicle is secured such that it does not roll away
- · all electrical consumers are switched off
- · the ignition is switched off

The fuses are located in various fuse boxes:

- fuse box in the front-passenger footwell
   (→ page 235)
- fuse box in the seat base of the driver's seat
   (→ page 234)

# Opening the fuse box in the seat base of the driver's seat

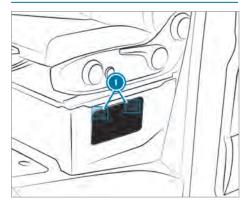

- To open: press down and unclip fasteners 
  on the cover.
- Remove the cover.
- To close: press the cover firmly into the seat base until fasteners ① clip in.

# Opening and closing the fuse box in the co-driver's footwell

# Opening the fuse box

Unlocking and removing the stowage compartment cover in the co-driver's footwell  $(\rightarrow page 235).$ 



Example: vehicle tool kit insert

- Lift the insert at marked positions ①.
- Pull the insert out of clips 2.

# Closing the fuse box

- Slide the insert into clips 2.
- Close the insert by pressing on marked positions 1.
- Put on the stowage compartment cover in the co-driver's footwell and lock it ( $\rightarrow$  page 235).

# Vehicle tool kit

# Information on the vehicle tool kit

The vehicle tool kit is located in the stowage compartment in the footwell on the co-driver side  $(\rightarrow page 235).$ 

The vehicle tool kit contains:


- · A towing eye
- A screwdriver with Torx<sup>®</sup>, Phillips and slotted

The vehicle tool kit may also contain the following, for example:

- · An open-end wrench
- A wheel wrench
- · A release tool for the park pawl

- · A plug-in blade
- A socket wrench
- · Tool for unlocking the lockable DEF filler cap

# Unlocking and removing the storage compartment

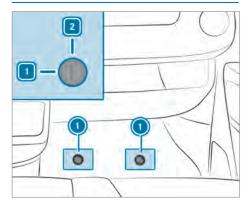

- Remove the rubber mat from the co-driver's footwell.
- To unlock: turn quick-release fastener (1) counter-clockwise to position 1.
- Slightly raise and pull out the cover.

# Inserting and locking the cover

- Slide in the cover and press it downwards.
- Press down quick-release fastener 1 until it engages.
- To lock: turn quick-release fastener (1) clockwise to position 2.

# Removing the vehicle tool kit



Example: vehicle tool kit insert


- Raise the insert at marked points ①.
- Pull the insert out of clips 2.

### Storing the vehicle tool kit

- Slide the insert into clips 2.
- Close the insert by pressing on marked points


# Hydraulic jack

Information on the hydraulic jack

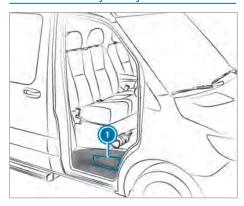

The hydraulic jack is located in side compartment above the co-driver door step.

Vehicles with more than 18 seats

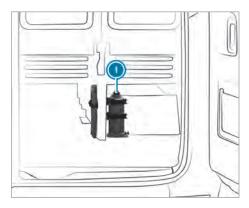

Hydraulic jack 1 is located behind the last bench seat on the right.

The jack has a maximum weight of 16.5 lbs (7.5 kg) depending on the vehicle's equipment. You will find the maximum load capacity of the jack stated on the adhesive label attached to the jack. If there is a malfunction, please contact a qualified specialist workshop.


Jack maintenance:

- · Clean and grease all moving parts after use.
- Extend and retract the pistons fully every six months.

# Removing the pump lever rod and the jack

# Requirements:

• The co-driver door is open.

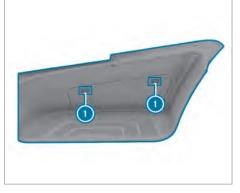

- To open: press down and unclip fasteners 
  on the cover.
- Remove the cover.


Pull out the holder completely and place it on the step.



- Remove jack 2 and the pump lever rod.
- To close: press the cover firmly so that fasteners (1) engage.

# Vehicles with more than 18 seats Requirement:

The right-hand rear-end door is open.

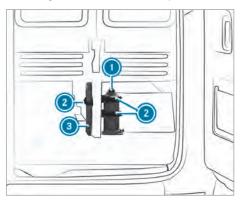

- Open clasps 2 on jack 1, loosen the straps and remove the jack.
- Open clasp 2 on pump lever rod 3, loosen the straps and remove the pump lever rod.
- To store: collapse pump lever rod 3 and place it along with jack 1 in the loosened straps, and tighten clasps 2 to close.

# Information on noise or unusual driving characteristics

While driving, pay attention to vibrations, noises and unusual driving characteristics, e.g. pulling to one side. This may indicate damage to the wheels or tires. If you suspect that a tire is defective, reduce your speed. Stop the vehicle as soon as possible to check if wheels and tires have been damaged or are no longer functioning properly. Hidden tire damage could also be causing the unusual driving characteristics. If no signs of damage can be detected, have the tires and wheels checked at a qualified specialist workshop.

# Notes on regularly inspecting wheels and tires

A

**WARNING** Risk of injury through damaged tires

Damaged tires can cause tire pressure loss.

 Check the tires regularly for signs of damage and replace any damaged tires immediately.

Check the wheels and tires of your vehicle for damage regularly, i.e. at least every two weeks, as well as after driving off-road or on rough roads. Damaged wheels can lead to a loss of tire pressure.

Look out for the following types of damage, for example:

- · Cuts in the tires
- · Punctures in the tires
- · Tears in the tires
- · Bulges on tires
- Deformation or severe corrosion on wheels

**WARNING** Risk of hydroplaning due to insufficient tire tread

Insufficient tire tread will result in reduced tire grip.

Thus, you should regularly check the tread depth and the condition of the tread across the entire width of all tires.

Minimum tread depth for:

• Summer tires: 1/8 in (3 mm)

M+S tires: ½ in (4 mm)

For safety reasons, replace the tires before the legally prescribed limit for the minimum tread depth is reached.

Conduct the following checks regularly on all wheels, at least once a month or as required, e.g. before a long journey or when driving off-road:

- Check the tire pressure (→ page 240)
- · Check the valve caps

Valves must be protected from moisture and dirt with valve caps specifically approved by Mercedes-Benz for your vehicle.

 Visually inspect the tread depth and the tire tread across the whole tire width

The minimum tread depth for summer use is  $\frac{1}{16}$  in (3 mm) and for winter use  $\frac{1}{16}$  in (4 mm).



Markings show in which places the bar indicators (arrow) are integrated into the tire tread. They are visible as soon as the tread depth is approximately 1/16 in (1.6 mm).

# Information on driving with summer tires

At temperatures below 50 °F (10 °C) Summer tires lose elasticity and therefore traction and braking power. Change the tires on your vehicle to M+S tires. Using summer tires at very cold temperatures could cause tears to form, thereby damaging the tires permanently. Mercedes-Benz cannot accept responsibility for this type of damage.

Always observe the maximum permissible speed specified for the summer tires you have installed ( $\rightarrow$  page 251).

Once you have installed the summer tires:

- Check the tire pressure (→ page 240)
- Restart the tire pressure monitor (→ page 246)

# Information on M+S tires

At temperatures below 50 °F (10 °C), use winter tires or all-season tires that are marked with M+S.

Only winter tires bearing the A snowflake symbol in addition to the M+S marking provide the best possible grip in wintry road conditions.

Only these tires allow driving safety systems such as ABS and  $\mathsf{ESP}^{\$}$  to also function optimally in winter. These tires have been developed specifically for driving in snow.

Use M+S tires of the same make and tread on all wheels to maintain safe handling characteristics.

Always observe the maximum permissible speed specified for the M+S tires you have installed  $(\rightarrow page 251)$ .

If you install M+S tires that have a lower maximum permissible speed than the maximum design speed of the vehicle, affix an appropriate warning sign in the driver's field of vision. You can obtain this at a qualified specialist workshop.

Once you have installed the M+S tires, take the following measures:

- Check the tire pressure (→ page 240)
- Restart the tire pressure monitor (→ page 246)

## Notes on snow chains

**WARNING** Risk of accident due to incorrectly installed snow chains

**Vehicles with rear-wheel drive:** if you have installed snow chains to the front wheels, they may drag against the vehicle body or chassis components.

- Never install snow chains on the front wheels.
- Only install snow chains on the rear wheels in pairs.
- Vehicles with twin tires: install the snow chains on the outer wheels.

**WARNING** Risk of accident due to unsuitable snow chains

Commercially available snow chains can come loose and damage chassis components or brake hoses.

Only install snow chains that have been approved by Mercedes-Benz for these tires.

For safety reasons, Mercedes-Benz recommends that you only use snow chains that have been checked and approved. You can obtain information about snow chains from any qualified specialist workshop.

**WARNING** Risk of accident due to snow chains breaking

If you drive too fast with snow chains, they can break, injure other persons, and damage the vehicle.

Observe the maximum permissible speed for operation with snow chains.

NOTE Damage to the wheel trim from mounted snow chains

If snow chains are mounted to steel wheels, the wheel trims can be damaged.

Remove the wheel trims of steel wheels before mounting snow chains.

Observe the following notes when using snow chains:

- Snow chains are only permissible for certain wheel/tire combinations. You can obtain information on them at a qualified specialist workshop.
- For safety reasons, only use snow chains that have been specifically approved for your vehicle by Mercedes-Benz, or snow chains with the same quality standard.
- The snow chains must be retightened after driving approximately 0.6 miles (1 km). This is the only way to ensure the snow chains are optimally seated with clearance to adjacent components.
- Vehicles with all-wheel drive: install snow chains on the wheels on the rear axle. On vehicles with twin tires, install the snow chains on the outer wheels. Observe the manufacturer's installation instructions.
- Use snow chains only when the road surface is completely snow-covered. Remove the snow chains as soon as possible when you come to a road that is not snow-covered.

- Local regulations may restrict the use of snow chains. Observe the applicable regulations before installing snow chains.
- Activate all-wheel drive before driving off with snow chains (→ page 122, 123).
- If snow chains are installed, the maximum permissible speed is 30 mph (50 km/h).
- Vehicles with Parking Assist: do not use Parking Assist PARKTRONIC if snow chains are installed.
- You can deactivate ESP® to pull away
   (→ page 142). This allows the wheels to spin, achieving an increased driving force.

# Tire pressure

### Notes on tire pressure

A

**WARNING** Risk of accident due to insufficient or excessive tire pressure

Underinflated or overinflated tires pose in particular the following risks:

- · The tires can burst.
- The tires can wear excessively and/or unevenly.
- The driving characteristics as well as the steering and braking characteristics may be greatly impaired.
- Comply with the recommended tire pressures and check the tire pressure of all tires, including the spare wheel, regularly:
- Monthly
- · When the load changes
- Before embarking on a longer journey
- If operating conditions change, e.g. offroad driving
- Adjust the tire pressure, if necessary.

Driving with tire pressure that is too high or too low can:

- · Shorten the service life of the tires
- Cause increased tire damage
- Adversely affect handling characteristics and thus driving safety, for example, due to hydroplaning

# **WARNING** Risk of accident due to too low a tire pressure

Tires with pressure that is too low can overheat and burst as a consequence.

In addition, they also suffer from irregular wear, which can significantly impair the braking properties and the handling characteristics.

Avoid excessively low tire pressure.

Tire pressure which is too low can cause:

- · Tire faults as a result of overheating
- · Impaired handling characteristics
- Irregular wear
- · Increased fuel consumption

# **WARNING** Risk of accident due to too high a tire pressure

Tires with excessively high pressure can burst. In addition, they also suffer from irregular wear, which can significantly impair the braking properties and the handling characteristics.

Avoid excessively high tire pressures.

Excessively high tire pressure can result in:

- Increased braking distance
- · Impaired handling characteristics
- Irregular wear
- · Impaired driving comfort
- · Susceptibility to damage

# **WARNING** Risk of accident due to repeated pressure drop in the tires

The wheels, valves or tires could be damaged.

Too low a tire pressure can lead to the tires bursting.

- Examine the tires for foreign objects.
- Check whether the tire has a puncture or the valve has a leak.
- If you are unable to rectify the damage, contact a qualified specialist workshop.

You can find information on recommended tire pressures for the vehicle's factory-installed tires on the following labels:

- · Tire and Loading Information placard on the B-pillar of your vehicle ( $\rightarrow$  page 246).
- Tire pressure table on the inside of the fuel filler flap.

Observe the maximum tire pressure  $(\rightarrow page 251)$ .

Use a suitable pressure gauge to check the tire pressure. The outer appearance of a tire does not permit any reliable conclusion about the tire pressure.



**ENVIRONMENTAL NOTE** Environmental damage due to insufficient or excessive tire pressure

Insufficient or excessive tire pressure shortens the service life of the tires.

Check the tire pressure regularly, but at least every 14 days.

Vehicles with a tire pressure monitor: you can also check the tire pressure using the on-board computer.

Only check tire pressure when the tires are cold. Conditions for cold tires:

- · The vehicle has been parked with the tires out of direct sunlight for at least three hours.
- The vehicle has traveled less than 1 mile (1.6 km).

A rise in the tire temperature of 18 °F (10 °C) increases the tire pressure by approx. 10 kPa (0.1 bar/1.5 psi). Take this into account when checking the tire pressure of warm tires.

The tire pressures recommended for increased load/speed in the tire pressure table may affect the ride comfort.



WARNING Risk of accident due to unsuitable accessories on tire valves

If you mount unsuitable accessories onto tire valves, the tire valves may be overloaded and malfunction, which can cause tire pressure loss.

Only screw standard valve caps or valve caps specifically approved by Mercedes-Benz for your vehicle onto the tire valve.

## Notes on trailer operation

The applicable tire pressure for the tires of the rear axle is always the recommended tire pressure for a full load.

# Overview of the tire pressure table

The tire pressure table can be found on the seat base or on the B-pillar on the driver's side.

(i) The data shown in the images is example data.



The tire pressure table shows the recommended tire pressure for the tires installed at the factory on this vehicle. The recommended tire pressures are valid for cold tires and different vehicle load conditions.

If one or more tire sizes precede a tire pressure, the tire pressure information following is only valid for those tire sizes.

If the preceding tire sizes are supplemented by the symbol, the tire pressure information following shows alternative tire pressures.

The load conditions "partially laden" and "fully laden" are defined in the table for varying weights. Some tire pressure tables only show the rim diameter instead of the complete tire size, e.g. R16. The rim diameter is part of the tire size and can be found on the side wall of the tire ( $\rightarrow$  page 251).

# Front axle tire pressures on vehicles with all-wheel/rear wheel drive and single tires Max. front axle load 4101 lbs (1860 kg)

Tires/disc wheel	Vehicle load	Max. front axle load 4101 lbs (1860 kg)
LT245/75R16 120/116Q	Fully laden	320 kPa (3.2 bar/46 psi)

# Front axle tire pressures on vehicles with rear wheel drive and single tires Max. front axle load 4409 lbs (2000 kg)

Tires/disc wheel	Vehicle load	Max. front axle load 4409 lbs (2000 kg)
LT245/75R16 120/116Q	Fully laden	360 kPa (3.6 bar/52 psi) 1)

<sup>&</sup>lt;sup>1)</sup> Only valid for vehicles with a long wheelbase 171 in (4350 mm) and a permissible gross mass of over 7716 lbs (3.5 t).

# Rear axle tire pressures on vehicles with all-wheel/rear wheel drive and single tires Max. rear axle load 5357 lbs (2430 kg)

Tires/disc wheel	Vehicle load	Max. rear axle load 5357 lbs (2430 kg)
LT245/75R16 120/116Q	Fully laden	480 kPa (4.8 bar/70 psi)
LT245/75R16 120/116Q	Partially laden <sup>2)</sup>	420 kPa (4.2 bar/61 psi) <sup>2)</sup>

<sup>&</sup>lt;sup>2)</sup> It is only permissible to use this reduced tire pressure if it can be guaranteed by weighing the vehicle that the rear axle load of 4960 lbs (2250 kg) will not be exceeded. In case of doubt, inflate to 480 kPa (4.8 bar/70 psi).

# Front axle tire pressures for vehicles with all-wheel/rear wheel drive and twin tires Max. front axle load 4079 lbs (1850 kg)

Tires/disc wheel	Vehicle load	Max. front axle load 4079 lbs (1850 kg)
LT215/85R16 115/112Q	Fully laden	380 kPa (3.8 bar/55 psi)

#### Max. front axle load 4409 lbs (2000 kg)

Tires/disc wheel	Vehicle load	Max. front axle load 4409 lbs (2000 kg)
LT215/85R16 115/112Q	Fully laden	420 kPa (4.2 bar/61 psi)

# Max. front axle load 4630 lbs (2100 kg)

Tires/disc wheel	Vehicle load	Max. front axle load 4630 lbs (2100 kg)
LT215/85R16 115/112Q	Fully laden	450 kPa (4.5 bar/65 psi)

# Rear axle tire pressures for vehicles with all-wheel/rear wheel drive and twin tires Max. rear axle load 7055 lbs (3200 kg)

Tires/disc wheel	Vehicle load	Max. rear axle load up to 7055 lbs (3200 kg)
LT215/85R16 115/112Q	Fully laden	370 kPa (3.7 bar/54 psi)

# Max. rear axle load 7716 lbs (3500 kg)

Tires/disc wheel	Vehicle load	Max. rear axle load 7716 lbs (3500 kg)
LT215/85R16 115/112Q	Fully laden	400 kPa (4.0 bar/58 psi)

# Max. rear axle load 7937 lbs (3600 kg)

Tires/disc wheel	Vehicle load	Max. rear axle load 7937 lbs (3600 kg)
LT215/85R16 115/112Q	Fully laden	420 kPa (4.2 bar/61 psi)

# Front axle tire pressures on vehicles with Super Single tires Max. front axle load 4079 lbs (1850 kg)

Tires/disc wheel	Vehicle load	Max. front axle load 4079 lbs (1850 kg)
225/75R16C 121/120R (122L)	Fully laden	340 kPa (3.4 bar/49 psi)

# Max. front axle load 4409 lbs (2000 kg)

Tires/disc wheel	Vehicle load	Max. front axle load 4409 lbs (2000 kg)
225/75R16C 121/120R (122L)	Fully laden	370 kPa (3.7 bar/54 psi)

# Rear axle tire pressures on vehicles with rear wheel drive and Super Single tires Max. rear axle load 7055 lbs (3200 kg)

Tires/disc wheel	Vehicle load	Max. rear axle load 7055 lbs (3200 kg)
285/65R16C 131R	Fully laden	460 kPa (4.6 bar/67 psi)

### Max. rear axle load 7716 lbs (3500 kg)

Tires/disc wheel	Vehicle load	Max. rear axle load 7716 lbs (3500 kg)
285/65R16C 131R	Fully laden	520 kPa (5.2 bar/75 psi)

Be sure to also observe the following further related subjects:

- Notes on tire pressure (→ page 240)
- Tire and Loading Information placard (→ page 246)
- Maximum tire pressure (→ page 251)

### Overview of the tire pressure tables for emergency spare wheels

Tires/emergency spare wheel	Air pressure	In combination with vehicle tires
225/75 R16C 121/120R (122L) 1)	370 kPa (3.7 bar/54 psi)	225/75 R16C 121/120R (122L)
225/75 R16C 121/120R (122L) 1)	690 kPa (6.9 bar/100 psi)	285/65 R16C 131R

<sup>1)</sup> Valid to use as an emergency spare wheel on Super Single vehicles for a maximum distance of 100 km (62 mi) and a maximum permissible speed of 55 km/h (34 mph).

## Tire pressure monitoring system

# Function of tire pressure monitor on single tires



**DANGER** Risk of accident due to incorrect tire pressure

Each tire, including the spare (if provided), should be checked monthly when cold and inflated to the inflation pressure recommended by the vehicle manufacturer on the vehicle placard or tire inflation pressure label. (If your vehicle has tires of a different size than the size indicated on the vehicle placard or tire inflation pressure label, you should determine

the proper tire inflation pressure for those tires.)

As an added safety feature, your vehicle has been equipped with a tire pressure monitoring system (TPMS) that illuminates a low tire pressure telltale when one or more of your tires is significantly under-inflated. Accordingly, when the low tire pressure telltale illuminates, you should stop and check your tires as soon as possible, and inflate them to the proper pressure. Driving on a significantly under-inflated tire causes the tire to overheat and can lead to tire failure. Under-inflation also reduces fuel efficiency and tire tread life, and may affect the vehicle's handling and stopping ability. Please note that the TPMS is not a substitute for proper tire maintenance, and it is the driver's responsibility to maintain correct tire pressure, even if under-inflation has not reached the

level to trigger illumination of the TPMS low tire pressure telltale.

Your vehicle has also been equipped with a TPMS malfunction indicator to indicate when the system is not operating properly. The TPMS malfunction indicator is combined with the low tire pressure telltale. When the system detects a malfunction, the telltale will flash for approximately one minute and then remain continuously illuminated. This sequence will continue upon subsequent vehicle start-ups as long as the malfunction exists.

When the malfunction indicator is illuminated, the system may not be able to detect or signal low tire pressure as intended. TPMS malfunctions may occur for a variety of reasons, including the installation of replacement or alternate tires or wheels on the vehicle that prevent the TPMS from functioning properly.

The system checks the tire pressure and the temperature of the tires installed on the vehicle by means of a tire pressure sensor.

New tire pressure sensors, e.g. in winter tires, are automatically taught-in during the first journey they are used.

The tire pressure and the tire temperature appear in the multifunction display ( $\rightarrow$  page 171).

If there is a substantial loss of tire pressure, a warning is issued:

- Via display messages (→ page 298)
- Via the (!) warning lamp in the instrument cluster

It is the driver's responsibility to set the tire pressure to the recommended cold tire pressure suitable for the operating situation. Set the tire pressure for cold tires using a tire pressure gauge. Note that the correct tire pressure for the current operating situation must first be taught-in to the tire pressure monitoring system.

In most cases, the tire pressure monitoring system will automatically update the new reference values after you have changed the tire pressure. You can, however, also update the reference values by restarting the tire pressure monitoring system manually ( $\rightarrow$  page 246).

## System limits

The system may be impaired or may not function in the following situations:

- If the tire pressure has been set incorrectly
- If there is a sudden pressure loss caused, for example, by a foreign object penetrating the
- If there is a malfunction caused by another radio signal source
- · If there is a change of tire size

Bear in mind the following related topic:

Notes on tire pressure (→ page 240)

## Checking the tire pressure with the tire pressure monitoring system

#### Requirements:

• The ignition is switched on.

On-board computer:

¬→ Service → Tires

One of the following displays appears:

 The current tire pressure and tire temperature of the individual wheels.



Instrument Display with color display

· The current tire pressure for each wheel.



Instrument Display with black and white display

· Tire pressure will be displayed after driving a few minutes: the teach-in process of the system is not yet complete. The tire pressures are already being monitored.

- Compare the tire pressure with the recommended tire pressure for the current operating condition (→ page 241). Observe the notes on tire temperature ( $\rightarrow$  page 240).
- (i) The values displayed in the multifunction display may deviate from those of the tire pressure gauge as they refer to sea level. At high altitudes, the tire pressure values indicated by a pressure gauge are higher than those shown by the on-board computer. In this case, do not reduce the tire pressure.

Make sure to observe the following further related subject:

Notes on tire pressure (→ page 240)

#### Restarting the tire pressure monitor

#### Requirements:

- The recommended tire pressure is correctly set for the respective operating condition on each of the wheels ( $\rightarrow$  page 240).
- Restart the tire pressure monitoring system in the following situations:
  - The tire pressure has changed.
  - The wheels or tires have been changed or newly installed.

On-board computer:

- → Service → Tires
- Scroll down in the menu. The Use Current Pressures as New Reference Values message appears in the multifunction display.
- Confirm the message to initiate a restart. The Tire Press. Monitor Restarted message appears in the multifunction display.

Current warning messages are deleted and the (!) yellow warning lamp goes out.

After you have driven for a few minutes, the system checks whether the current tire pressures are within the specified range. The current tire pressures are then accepted as reference values and monitored.

Make sure to observe the following further related subject:

Notes on tire pressure ( $\rightarrow$  page 240)

# Radio equipment approval of the tire pressure monitoring system

Country	Radio equipment approval number
Canada	IC: 4008C-TSSRE4A
	Operation is subject to the following two conditions:
	(1) this device may not cause harmful interference, and
	(2) this device must accept any interference received, including interference that may cause undesired operation.
Mexico	Model: TSSRE4A & TSSSG4G6, IFETEL: RLVHUTS17-0806
USA	FCC ID: YGOTSSRE4A
	This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
	WARNING: Any changes or modifi- cation not expressly approved by the party responsible for compli- ance could void the user's author- ity to operate this equipment.

# Loading the vehicle

# Tire and Loading Information placard

WARNING Risk of an accident when driving with an overloaded tire

Overloaded tires may overheat and burst as a consequence. Overloaded tires can also impair the steering and handling characteristics and lead to brake failure.



Observe the load rating of the tires.

- The load rating must be at least half the gross axle weight rating of the vehicle. Mercedes-Benz recommends you use the load-bearing index, which is given in the vehicle documents.
- Never overload the tires by exceeding the maximum load.

Only vehicles with a gross vehicle weight of less than 10,000 lbs (4,536 kg) have a Tire and Loading Information placard on the B-pillar on the driver's side.



Tire and Loading Information placard



(i) The data shown in the illustration is sample data.

The Tire and Loading Information placard shows:

- · The maximum number of seats indicates the maximum number of occupants permitted to travel in the vehicle.
- The maximum permissible load equals the gross weight of all vehicle occupants, the luggage and cargo.
- The recommended tire pressures for cold tires. The recommended tire pressures apply to the maximum permissible load and up to the maximum permissible speed of the vehicle.

Also observe the following information:

- The information about permissible weights on the vehicle identification plate ( $\rightarrow$  page 267).
- The information about tire pressure on the tire pressure table.

Additional related subjects:

- Determining the maximum load ( $\rightarrow$  page 247).
- Notes on tire pressure (→ page 240).

### Steps to determining the correct critical load

The following steps have been developed as required of all manufacturers under Title 49, Code of U.S. Federal Regulations, Part 575 in accordance with the "National Traffic and Motor Vehicle Safety Act of 1966".

- Step 1: locate the statement, "The combined weight of occupants and cargo should never exceed XXX kg or XXX lbs." on the Tire and Loading Information placard of your vehicle.
- Step 2: determine the combined weight of the driver and passengers that will be traveling in your vehicle.
- Step 3: subtract the combined weight of the driver and passengers from XXX kg or XXX lbs.
- Step 4: the resulting figure equals the permissible amount of cargo and luggage load capacity. For example, if the "XXX" amount equals 1.400 lbs and there will be five 150 lb passengers in your vehicle, the amount of available cargo and luggage load capacity is 650 lbs  $(1,400 - 750 (5 \times 150) = 650 lbs).$
- Step 5: determine the combined weight of luggage and cargo being loaded on the vehicle. For safety reasons, this weight must not exceed the cargo and luggage load capacity calculated in step 4.
- Step 6:

Even if you have calculated the total load carefully, you should still make sure that the maximum permissible gross weight and the maximum gross axle weight rating of your vehicle are not exceeded. Information for this can be found on the vehicle identification plate.

Weigh the laden vehicle, including driver, passengers and load, on a suitable vehicle weigh-

The measured values must not exceed the maximum permitted values listed on the vehicle identification plate.

Additional related subjects:

- · Sample calculation for determining the maximum load ( $\rightarrow$  page 248)
- · Tire and Loading Information placard  $(\rightarrow page 246)$

# 248 Wheels and tires

- Tire pressure table
- · Vehicle identification plate

# Sample calculation for determining the maximum load

The following table has examples of how to calculate total and cargo load capacities with varying seating configurations and different numbers and

sizes of occupants. The following examples use a maximum load of 1,500 lbs (680 kg). **This value is for illustrative purposes only.** Make sure you are using the actual load limit for your vehicle stated on your vehicle's Tire and Loading Information placard ( $\rightarrow$  page 246).

The higher the weight of all the occupants, the smaller the maximum load for luggage.

# Step 1

	Example 1	Example 2
Combined maximum weight of occupants and load (data from the Tire and Loading Information placard)	1500 lbs (680 kg)	1500 lbs (680 kg)

# Step 2


	Example 1	Example 2
Number of people in the vehicle (driver and occupants)	5	1
Distribution of the occupants	Front: 2 Rear: 3	Front: 1
Weight of occupants	Occupant 1: 150 lbs (68 kg) Occupant 2: 180 lbs (82 kg) Occupant 3: 160 lbs (73 kg) Occupant 4: 140 lbs (63 kg) Occupant 5: 120 lbs (54 kg)	Occupant 1: 200 lbs (91 kg)
Total weight of all occupants	750 lbs (340 kg)	200 lbs (91 kg)

# Step 3

	Example 1	Example 2
Permissible load (maximum gross vehicle weight rating from the Tire and Loading Information placard minus the gross weight of all occupants)	1500 lbs (680 kg) - 750 lbs (340 kg) = 750 lbs (340 kg)	1500 lbs (680 kg) - 200 lbs (91 kg) = 1300 lbs (589 kg)

# Tire labeling


# Overview of tire labeling

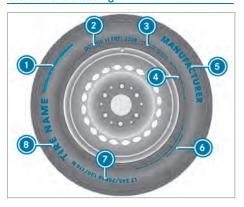

- Uniform Tire Quality Grading Standards  $(\rightarrow page 249)$
- 2 DOT (Department of Transportation), (TIN) Tire Identification Number (→ page 250)
- Maximum tire load (→ page 250)
- Maximum tire pressure (→ page 251)
- Manufacturer
- 6 Characteristics of the tire (→ page 251)
- Tire size designation, load-bearing capacity and speed rating ( $\rightarrow$  page 251)
- Tire name
- The data shown in the illustration is sample data.

#### Information on tire quality grades

According to the requirements of the U.S. Department of Transportation's "Uniform Tire Quality Grading Standards" tire manufacturers must grade their tires using the following three performance factors:

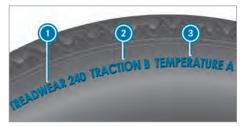

- Tread wear grade
- Traction grade
- Temperature grade
- The data shown in the illustration is sample
- (i) This grading is not legally prescribed for Canada, but specified in most cases anyway.

#### Tread wear grade

The tread wear grade is a comparative grading based on tread wear grade tests conducted under controlled conditions on a specified U.S. Department of Transportation test track. For example, a tire graded 150 would wear one and one-half times as well on the government test track as a tire gra-

The relative performance of tires depends upon the actual conditions of their use, however, and may depart significantly from the norm due to variations in driving habits, service practices and differences in road characteristics and climate conditions

### Traction grade



DANGER Risk of accident due to inadequate traction

The traction grade assigned to this tire is based on straight-ahead braking traction tests, and does not include either acceleration, cornering, hydroplaning or peak traction characteristics.

Always adapt your driving style and drive at a speed to suit the prevailing traffic and weather conditions.

**NOTE** Damage to the drivetrain from wheelspin

Avoid wheelspin.

The traction grades - from highest to lowest - are AA, A, B and C. These grades relate to the tire's

ability to come to a standstill on a wet pavement under controlled conditions on a specified U.S. government test surface made from asphalt and concrete.

# Temperature grade

A

**WARNING** Risk of accident from tire overheating and tire failure

The temperature grade for this tire is established for a tire that is properly inflated and not overloaded. Excessive speed, underinflation, or excessive loading, either separately or in combination, can cause excessive heat build-up and possible tire failure.

- Observe the recommended tire pressures and regularly check the tire pressure of all tires including the spare wheel.
- Adjust the tire pressure as necessary.

The temperature grades are A (highest grade), B and C. These relate to a tire's resistance to heat and its ability to release heat on a specified test wheel in laboratory tests under controlled conditions. Sustained high temperatures can cause the material of the tire to degenerate and reduce tire life. In addition, excessively high temperatures can lead to sudden tire failure. Grade C refers to a performance which all passenger vehicle tires must exhibit, according to the U.S. Department of Transportation's requirements.

# Information on DOT and TIN (Tire Identification Number)

U.S. tire regulations indicate that every tire manufacturer or retreader must imprint a TIN in or on the sidewall of each tire produced.



i The data shown in the illustration is sample data.

The TIN is a unique identification number for tires and consists of the following components:

- DOT (Department of Transportation): tire symbol (1) indicates that the tire complies with the requirements of the U.S. Department of Transportation.
- Manufacturer identification code: manufacturer identification code ② provides information about the tire manufacturer. New tires have a code with two symbols. Retreaded tires have a code with four symbols. For further information about retreaded tires, see (→ page 253).
- Tire size: identifier 3 describes the tire size.
- Tire type code: tire type code an be used by the manufacturer as a code to describe specific characteristics of the tire.
- Date of manufacture: date of manufacture sprovides information about the age of a tire. The 1st and 2nd numbers indicate the calendar week and the 3rd and 4th numbers indicate the year of manufacture (e.g. "3208" refers to the 32nd week of the year 2008).

#### Information on maximum tire load



(i) The data shown in the illustration is sample data

Maximum tire load **(1)** is the maximum permissible weight for which the tire is approved.

Do not overload the tires by exceeding the maximum permissible load. The maximum permissible load can be found on the vehicle's Tire and Loading Information placard on the B-pillar on the driver's side ( $\rightarrow$  page 246).

## Information on maximum tire pressure



(i) The data shown in the illustration is sample

Maximum permitted tire pressure (1), which is permitted for the tires must not be exceeded.

Exception: when using the 225/75 R16C 121/120R (122L) tires as a spare wheel on the rear axle of Super Single vehicles with a distance limit of 62 mi (100 km) and speed limit of 34 mph (55 km/h).

#### Information on tire characteristics



(i) The data shown in the illustration is sample

This information describes the type of tire cord and the number of layers in sidewall 1 and under tire tread 2.


## Tire size designation, load-bearing capacity and speed rating

WARNING Risk of injury through exceeding the specified tire load-bearing capacity or the permissible speed rating

Exceeding the specified tire load rating or the permissible speed rating may lead to tire damage and to the tires bursting.

Therefore, only use tire types and sizes approved for your vehicle model.

Observe the tire load rating and speed rating required for your vehicle.

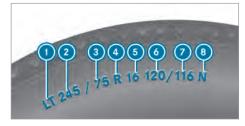

- First letter(s)
- Nominal tire width in millimeters
- Aspect ratio (in percent)
- Tire code
- Rim diameter
- 6 Load-bearing index, single tires
- Load-bearing index, twin tires
- Speed rating
- (i) The data shown in the illustration is sample

Further information about reading tire data can be obtained from any qualified specialist workshop.

## First letter(s) :

- "LT": light truck tires in accordance with U.S. manufacturer standards.
- "C": tires for commercial usage in accordance with European manufacturer standards.

## Aspect ratio (in percent) (3):

The size ratio between the tire height and tire width and is shown in percent (tire height divided by tire width).

#### Tire code (1) (tire type):

"R": radial tire

#### Rim diameter 63:

The diameter of the bead seat (not the diameter of the rim flange). The rim diameter is specified in inches (in).

## Load-bearing index 6 and 7:

Numerical code which specifies the maximum load-bearing capacity of a tire ("91" equals, e.g. 1,356 lb (615 kg)).

The tire load-bearing capacity must be at least half the gross axle weight rating of the vehicle. Do not overload the tires by exceeding the maximum permissible load of the tires.

#### See also:

- Maximum permissible load on the Tire and Loading Information placard (→ page 246)
- Maximum tire load (→ page 250)

## Speed rating 100:

Specifies the approved maximum design speed of the tire.

An electronic speed limiter prevents your vehicle from exceeding a speed of 130 mph (210 km/h).

Ensure that your tires have the required speed rating. You can obtain information on the required speed rating at an authorized Mercedes-Benz Center.

#### Summer tires

Index	Speed rating
L	Up to 75 mph (120 km/h)
М	Up to 81 mph (130 km/h)
N	Up to 87 mph (140 km/h)
Р	Up to 93 mph (150 km/h)
Q	Up to 100 mph (160 km/h)
R	Up to 106 mph (170 km/h)

## Summer, all-season and winter tires

Index	Speed rating
L M+S <sup>1</sup>	Up to 75 mph (120 km/h)
M M+S <sup>1</sup>	Up to 81 mph (130 km/h)
N M+S <sup>1</sup>	Up to 87 mph (140 km/h)
P M+S <sup>1</sup>	Up to 93 mph (150 km/h)
Q M+S <sup>1</sup>	Up to 100 mph (160 km/h)
R M+S <sup>1</sup>	Up to 118 mph (170 km/h)

1: or "M+S A " for winter tires.

Winter tires are marked with the <u>A</u> snowflake symbol and fulfill the requirements of the Rubber Manufacturers Association (RMA) and the Rubber Association of Canada (RAC) regarding the tire traction on snow.

## Information on definitions (tires and loading)

**Tire structure and characteristics:** describes the number of layers or the number of rubber-coated layers in the tire tread and the tire wall. These are made of steel, nylon, polyester and other materials

**Bar:** metric unit for tire pressure. 14.5038 pounds per square inch (psi) and 100 kilopascals (kPa) are the equivalent of 1 bar.

**DOT (Department of Transportation):** DOT marked tires fulfill the requirements of the U.S. Department of Transportation.

Average weight of vehicle occupants: the number of occupants for which the vehicle is designed multiplied by 150 lbs (68 kg).

Uniform Tire Quality Grading Standards: a uniform standard to grade the quality of tires with regards to tread quality, tire traction and temperature characteristics. The quality grading assessment is made by the manufacturer in accordance with test specifications of the U.S. government. The quality grade of a tire is imprinted on the sidewall of the tire

**Recommended tire pressure:** the recommended tire pressure is the pressure specified for the tires installed on the vehicle at the factory.

The Tire and Loading Information placard contains the recommended tire pressures for cold tires, the maximum permissible load and the maximum permissible vehicle speed.

The tire pressure table contains the recommended tire pressures for cold tires under various operating conditions, i.e. load and/or speed of the vehicle

Increased vehicle weight due to optional equipment: the combined weight of all standard and optional equipment available for the vehicle, regardless of whether it is actually installed on the vehicle or not.

**Rim:** the part of the wheel on which the tire is installed.

GAWR (Gross Axle Weight Rating): GAWR is the gross axle weight rating. The actual load on an axle must never exceed the Gross Axle Weight Rating. You can find the Gross Axle Weight Rating on the B-pillar on the driver's side.

**Speed rating:** the speed rating is part of the tire identification. It specifies the speed range for which a tire is approved.

**GVW (Gross Vehicle Weight):** the Gross Vehicle Weight includes the weight of the vehicle including

fuel, tools, the spare wheel, accessories installed, occupants, luggage and the trailer drawbar nose-weight if applicable. The Gross Vehicle Weight must never exceed the Gross Vehicle Weight Rating (GVWR) specified on the B-pillar on the driver's side.

GVWR (Gross Vehicle Weight Rating): the GVWR is the maximum permitted gross weight of the fully laden vehicle (weight of the vehicle including all accessories, occupants, fuel, luggage and the trailer drawbar noseweight if applicable). The Gross Vehicle Weight Rating is specified on the vehicle identification plate on the B-pillar on the driver's side.

Maximum weight of the laden vehicle: the maximum weight is the sum of the vehicle's curb weight, weight of the accessories, maximum load and the weight of the factory installed optional equipment.

**Kilopascal (kPa):** metric unit for tire pressure. 6.9 kPa are the equivalent of 1 psi. Another unit for tire pressure is bar. 100 kilopascals (kPa) are the equivalent of 1 bar.

**Curb weight:** the weight of a vehicle with standard equipment including the maximum capacity of fuel, oil and coolant. It also includes the air-conditioning system and optional equipment if these are installed on the vehicle, but does not include passengers or luggage.

**Maximum tire load:** the maximum tire load is the maximum permissible weight in kilograms or lbs for which a tire is approved.

**Maximum permissible tire pressure:** maximum permissible tire pressure for one tire.

**Maximum load on one tire:** maximum load on one tire. This is calculated by dividing the maximum axle load for one axle by two.

**PSI (pounds per square inch):** standard unit of measurement for tire pressure.

**Aspect ratio:** relationship between tire height and tire width in percent.

**Tire pressure:** pressure inside the tire applying an outward force to every square inch of the tire's surface. The tire pressure is specified in pounds per square inch (psi), in kilopascal (kPa) or in bar. The tire pressure should only be corrected when the tires are cold.

**Tire pressure on cold tires:** the tires are cold when the vehicle has been parked with the tires out of direct sunlight for at least three hours and the vehicle has been driven less than 1 mile (1.6 km).

**Tire contact surface:** the part of the tire that comes into contact with the road.

**Tire bead:** the purpose of the tire bead is to ensure that the tire sits securely on the wheel rim. There are several wire cores in the tire bead to prevent the tire from changing length on the wheel rim.

**Side wall:** the part of the tire between the tread and the tire bead.

Special equipment weight: the combined weight of those optional extras that weigh more than the replaced standard parts and more than 5 lbs (2.3 kg). Special equipment, such as high-performance brakes, level control system, a roof luggage rack or a high-performance battery, are not included in the curb weight and the weight of the accessories.

TIN (Tire Identification Number): a unique identification number which can be used by a tire manufacturer to identify tires, for example for a product recall, and thus identify the purchasers. The TIN is made up of the manufacturer identification code, tire size, tire type code and the manufacturing date.

**Load-bearing index:** the load-bearing index (also load index) is a code that contains the maximum load-bearing capacity of a tire.

**Traction:** traction is the result of friction between the tires and the road surface.

**Wear indicator:** narrow bars (tread wear bars) that are distributed over the tire tread. If the tire tread is level with the bars, the wear limit of 1/16 in (1.6 mm) has been reached.

**Distribution of vehicle occupants:** distribution of vehicle occupants over designated seat positions in a vehicle.

**Maximum permissible payload weight:** nominal load and luggage load plus 150 lbs (68 kg) multiplied by the number of seats in the vehicle.

## Changing a wheel

#### Notes on selecting, installing and replacing tires

You can ask for information regarding permitted wheel/tire combinations at a qualified specialist workshop.



**WARNING** Risk of accident due to incorrect wheel and tire dimensions

If wheels and tires of the wrong size are used, the service brakes or wheel suspension components may be damaged. Always replace wheels and tires with ones that fulfill the specifications of the original part.

For wheels, pay attention to the following:

- Designation
- Type
- · Permissible wheel load
- Wheel offset

For tires, pay attention to the following:

- Designation
- Manufacturer
- Type
- Load-bearing index
- Speed rating

▲ WARNING Risk of injury through exceeding the specified tire load-bearing capacity or the permissible speed rating

Exceeding the specified tire load rating or the permissible speed rating may lead to tire damage and to the tires bursting.

- Therefore, only use tire types and sizes approved for your vehicle model.
- Observe the tire load rating and speed rating required for your vehicle.
- NOTE Vehicle and tire damage due to tire types and sizes that have not been approved

For safety reasons, only use tires, wheels and accessory parts which have been specially approved by Mercedes-Benz for your vehicle.

These tires have been specially adapted for use with driving systems and driving safety systems, such as ABS or ESP<sup>®</sup>.

Otherwise, certain properties, such as handling characteristics, vehicle noise emissions and consumption could be adversely affected. Other wheel sizes may cause the tires to come into contact with the vehicle body and axle components when under load. This may result in damage to the tire or the vehicle.

 Only use tires, wheels and accessory parts that have been checked and recommended by Mercedes-Benz. NOTE Driving safety put at risk by retreaded tires

Retreaded tires are not checked or recommended by Mercedes-Benz, as previous damage is not always detected during the retread process

Driving safety cannot, therefore, be guaranteed.

Do not use used tires when their previous usage is unknown.

NOTE Damage to electronic component parts through the use of tire-installing tools

Vehicles with a tire pressure monitoring system: there are electronic component parts in the wheel. Tire-installing tools should not be applied in the area of the valve.

Otherwise, the electronic component parts could be damaged.

Always have tires changed at a qualified specialist workshop.

Accessory parts that are not approved for your vehicle by Mercedes-Benz, or are not being used correctly, can impair operating safety.

Before purchasing and using non-approved accessories, visit a qualified specialist workshop and inquire about:

- Suitability
- Legal stipulations
- · Factory recommendations

Observe the following points when selecting, installing and replacing tires:

- Use only tires and wheels of the same type, design (winter tires, all-season tires) and make.
- Only install wheels of the same size and tread design on one axle (left and right).

It is only permissible to install a different wheel size to this in the event of a flat tire in order to drive to the specialist workshop.

- Only install tires of the correct size onto the wheels.
- Vehicles with a tire pressure monitoring system: all installed wheels must be equipped with functioning sensors for the tire pressure monitoring system.

 At temperatures below 50 °F (10 °C) use winter tires or all-season tires with the M+S marking on all wheels.

Winter tires bearing the A snowflake symbol in addition to the M+S marking provide the best possible grip in wintry road conditions.

- · Only use tires with the same tread.
- Observe the maximum permissible speed for the installed tires.

If this is below the vehicle's maximum permissible speed, this must be indicated in an appropriate label in the driver's field of vision.

- Break in new tires at moderate speeds for the first 60 miles (100 km).
- · Replace the tires after six years at the latest, regardless of wear.

For more information on wheels and tires, contact a qualified specialist workshop.

#### (i) Vehicles with twin tires:

For vehicles with twin tires with a GVW of 11,030 lbs or 12,125 lbs, only use tires with the dimension LT 215/85 R16 which have been approved for this vehicle by the manufacturer. It is not permissible to use tires with different dimensions; doing so may lead to the general operating permit being rendered invalid.

#### (i) Vehicles with single tires:

For vehicles with single tires with a GVW less than or equal to 9,480 lbs, only use tires with the dimension LT 245/75 R16 which have been approved for this vehicle by the manufacturer. It is not permissible to use tires with different dimensions; doing so may lead to the general operating permit being rendered invalid

#### Vehicles with Super Single tires:

For vehicles with single tires with a GVW of 11,030 lbs, only use tires with the dimensions 225/75 R16C (FA) and 285/65 R16C (RA) which have been approved for this vehicle by the manufacturer. It is not permissible to use tires with different dimensions; doing so may lead to the general operating permit being rendered invalid.

Also observe the following further related subjects:

- Notes on tire pressure (→ page 240)
- · Tire and Loading Information placard  $(\rightarrow page 246)$

- · Tire size designation, load-bearing capacity and speed rating ( $\rightarrow$  page 251)
- Tire pressure table ( $\rightarrow$  page 241)
- Notes on the emergency spare wheel  $(\rightarrow page 261)$

#### Notes on changing wheels

WARNING Risk of injury through different wheel sizes

Rotating the front and rear wheels can severely impair the driving characteristics.

The wheel brakes or suspension components may also be damaged.



Rotate front and rear wheels only if the wheels and tires are of the same dimensions.

On vehicles that have the same size front and rear wheels, rotate the wheels according to the intervals in the tire manufacturer's warranty book in your vehicle documents. If this is not available. rotate the tires every 3,000 (5,000) to 6,000 miles (10,000 km), depending on the degree of wear. Ensure that the direction of rotation is maintained.

It is imperative to observe the instructions and safety notes on "Changing a wheel" when doing so.

#### Size categories of wheels

The determined vehicle speed is displayed in the instrument cluster and is important for controlling the driving safety systems and driving systems. The display accuracy of the speedometer and the odometer is legally prescribed. Determining the speed is dependent on the tire size or the rolling circumference of the tires. The rim diameter is always specified in inches.

For this reason, the vehicle control units can be coded for the following wheel size categories:

Wheel size category 3

- 205/75 R16C FA
- 225/75 R16C FA
- 285/65 R16C RA
- LT245/75 R16
- LT215/85 R16
- (i) Mercedes-Benz recommends that you stay within a wheel size category when changing a tire. In this way, you avoid recoding the control units.

If you change the wheel size of your vehicle, for instance when changing wheels for winter operation, check it is assigned to the correct wheel size category. If the wheel size category changes, you must have your vehicle's control units recoded at a qualified specialist workshop.

Otherwise, the display accuracy of the speedometer and the odometer will be outside the legally prescribed tolerance. It may also be lower, i.e. the current road speed is then higher than the speed shown on the speedometer. If a deviation is outside the range of tolerance, driving safety systems and driving systems may be operationally impaired or may detect a malfunction and switch themselves off.

#### Information on the direction of the tires' rotation

Tires with a specified direction of rotation have additional benefits, e.g. if there is a risk of hydroplaning. You will only gain these benefits if the correct direction of rotation is observed.

An arrow on the sidewall of the tire indicates its correct direction of rotation.

You may also install a spare wheel against the direction of rotation. Observe the time restriction on use as well as the speed limitation specified on the spare wheel.

#### Information on storing wheels

Observe the following when storing wheels:

- Wheels that have been removed should be stored in a cool, dry and, if possible, dark place.
- Protect the tires from oil, grease and fuel.


#### Overview of the tire-change tool kit

Necessary tire-changing tools may include, for example:

- Jack
- · Wheel wrench
- You will find the maximum load capacity of the jack stated on the adhesive label attached to the jack.

The jack is maintenance-free. If there is a malfunction, please contact a qualified specialist workshop.

#### Vehicles with rear wheel drive

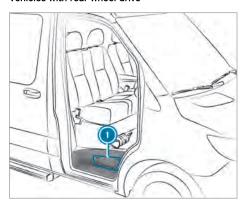


The tire-change tool kit is located in stowage compartment above the step of the co-driver's door and in the stowage compartment in the footwell on the co-driver side.

#### Preparing the vehicle for a wheel change

#### Requirements:

- The tire-change tool kit is available.
- The vehicle is not on a slope.
- The vehicle is on solid, non-slippery and level ground.
- Apply the parking brake.
- Move the front wheels to the straight-ahead position.
- **Vehicles with automatic transmission:** shift the transmission to position **P**.
- Switch off the engine.
- Make sure that the engine cannot be started.
- Take the vehicle tool kit from the footwell on the co-driver side (→ page 235).

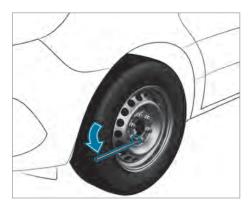

#### Vehicles with rear wheel drive

- Take the jack and the tire-change tool kit out of the storage compartment ( $\rightarrow$  page 256).
- If necessary, remove the hub cap.
- Assemble the lug wrench extension using the middle rod and the rod with the largest diameter from the three-piece jack pump lever.
- Starting with the middle rod, slide the lug wrench extension as far as it will go onto the lug wrench.
- Using the lug wrench, loosen the wheel nuts or bolts on the wheel you wish to change by about one full turn. Do not unscrew the wheel nuts or bolts completely.
- Raise the vehicle ( $\rightarrow$  page 257).

## Raising the vehicle when changing a wheel

#### WARNING Risk of injury from jack tipping

If you park a vehicle with air suspension, the air suspension may remain activated for up to one hour, even when the ignition is switched off. If you then raise the vehicle with the jack, the air suspension will attempt to adjust the vehicle level.

The jack may tip.

Press the Service button on the air suspension remote control before raising the vehicle.

This prevents automatic readjustment of the vehicle level and prevents it from being raised or lowered manually.

## WARNING Risk of injury from incorrect positioning of the jack

If you do not position the jack correctly at the appropriate jacking point of the vehicle, the jack could tip with the vehicle raised.

Only position the jack at the appropriate jacking point of the vehicle. The base of the jack must be positioned vertically under the jacking point of the vehicle.

## WARNING Risk of injury from vehicle tip-

On slopes, the jack could tip with the vehicle raised.

- Never change a wheel on a slope.
- Consult a qualified specialist workshop.

## **NOTE** Vehicle damage from the jack

If you do not position the jack correctly at the appropriate jack support point of the vehicle, the jack could tip over with the vehicle raised.

The jack is designed exclusively for jacking up the vehicle at the jack support points.

#### Requirements:

- There are no persons in the vehicle.
- The vehicle is prepared for changing a wheel  $(\rightarrow page 256)$ .

Only position the jack on the jack support points intended for this purpose. You could otherwise damage the vehicle.


Important notes on using the jack:

- Only use the vehicle-specific jack that has been tested and approved by Mercedes-Benz to raise the vehicle. If the jack is used incorrectly, it could tip over while the vehicle is raised.
- The jack is designed only to raise the vehicle for a short time while a wheel is being changed and is not suitable for carrying out maintenance work under the vehicle.
- · Avoid changing a wheel on uphill and downhill slopes.
- The jack must be placed on a firm, flat and non-slip surface. If necessary, use a large, flat, load bearing and non-slip underlay.
- The base of the jack is positioned vertically under the jack support point.

Safety instructions while the vehicle is raised:


- Do not put your hands or feet under the vehicle
- · Do not lie underneath the vehicle.
- Do not start the vehicle and do not release the parking brake.
- Do not open or close any doors.

#### Vehicles with rear wheel drive

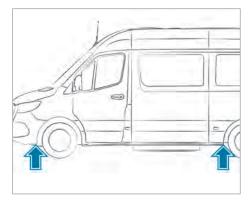


Jack support points

Only use the middle rod and the pump lever rod with the largest diameter for the jack as a lug wrench extension. Only insert the middle rod on the lug wrench, and always as far as it will go. Otherwise, the rods could bend and deform so much that they can no longer be used as pump levers for the jack.

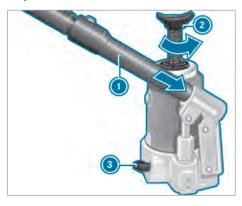


➤ To prepare the hydraulic jack: insert the third rod of pump lever for the jack into the lug wrench extension.


- Close pressure release screw 3.
- ➤ To do this, use the flattened section on pump lever to turn pressure release screw clockwise to the stop.
- (i) Do not turn pressure release screw (a) more than one or two full turns. Hydraulic fluid could otherwise escape.
- Insert pump lever with the largest rod into the recess on the jack and secure by turning it clockwise.
- Place the jack vertically beneath the jack support points described below.

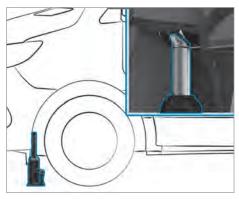


Jack support point, front axle

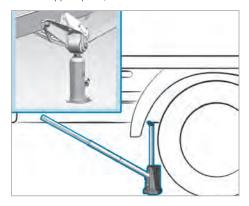

Jack support point, rear axle (example: chassis up to 3.5 t)

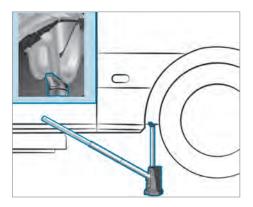

Jack support point, rear axle (example: Cargo Van and Passenger Van up to 4.0 t)

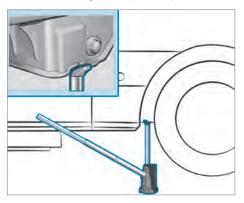

Jack support point, rear axle (vehicles 5.0 t)

- Place the jack beneath the jack support point.
- Vehicles with all-wheel drive: turn jack spindle counter-clockwise as far as it will go.
- Raise the vehicle until the tire is raised a maximum of 1.2 in (3 cm) off the ground.
- Loosen and remove the wheel ( $\rightarrow$  page 259).

## Removing a wheel

## Requirements:

• The vehicle is raised ( $\rightarrow$  page 257).

When changing a wheel, avoid applying any force to the brake discs since this could impair the level of comfort when braking.

- NOTE Damage to threading from dirt on wheel bolts
- Do not place wheel bolts in sand or on a dirty surface.
- Unscrew the wheel bolts or nuts with the wheel nut wrench
- On front wheels with wheel nuts, remove the wheel nut cover.
- Remove the wheel.

#### Installing a new wheel

## Requirements:

• The wheel is removed ( $\rightarrow$  page 259).

WARNING Risk of accident from losing a

Oiled, greased or damaged wheel bolt/wheel nut threads or wheel hub/wheel mounting bolt threads can cause the wheel bolts/wheel nuts to come loose.


- Never oil or grease the threads.
- In the event of damage to the threads, contact a qualified specialist workshop immediately.
- Have the damaged wheel bolts or damaged hub threads replaced.
- Do not continue driving.

WARNING Risk of injury from tightening wheel bolts and nuts

If you tighten the wheel bolts or wheel nuts when the vehicle is raised, the jack could tip.

- Only tighten wheel bolts or wheel nuts when the vehicle is on the ground.
- Observe the information on the choice of tires  $(\rightarrow page 253).$
- Observe the instructions and safety notes on changing a wheel ( $\rightarrow$  page 253).
- For safety reasons, only use wheel bolts or wheel nuts which have been approved by Mercedes-Benz and for the wheel in question.

When you install the steel spare wheel, it is essential you use short wheel bolts for a steel wheel. Using other wheel bolts when installing the steel spare wheel may damage the brake system.

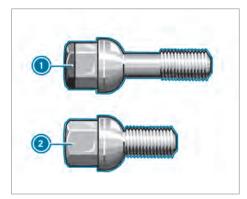

- Wheel bolt for alloy wheels
- Wheel bolt for steel wheel
- Clean the wheel and wheel hub contact surfaces.
- Vehicles with ultrawide-base tires: first install the adapter for the more narrow spare wheel on the wheel hub.
- Slide the wheel which is to be installed onto the wheel hub or the adapter for the spare wheel and push it on.

## Vehicles with light alloy wheels

- Use the short wheel bolts intended for the steel spare wheel, which are found in the vehicle tool kit.
- Screw in the wheel bolts until they are fingertight.

#### Wheels with wheel nuts

- Front wheels with wheel nut cover: press the wheel nut cover onto the wheel nuts.
- Screw in three wheel nuts over the fixing discs of the wheel nut cover.
- Turn the wheel so that the wheel bolts are in the middle of the holes.
- Screw in the remaining wheel nuts.
- Slightly tighten all the wheel nuts.

#### Lowering the vehicle after a wheel change

**WARNING** Risk of accident due to incorrect tightening torque

The wheels could come loose if the wheel bolts or wheel nuts are not tightened to the prescribed torque.

- Ensure that the wheel bolts or wheel nuts are tightened to the prescribed tightening torque.
- If you are not sure, do not move the vehicle. Contact a qualified specialist workshop and have the tightening torque checked immediately.

#### Requirements:

 The new wheel has been installed (→ page 259).


Observe the notes on raising the vehicle  $(\rightarrow page 257)$ .

#### Vehicles with rear wheel drive

Only use the middle rod and the pump lever rod with the largest diameter for the jack as a lug wrench extension. Only insert the middle rod on the lug wrench, and always as far as it will go. Otherwise, the rods could bend and deform so much that they can no longer be used as pump levers for the jack.

Vehicles with Super Single tires: if you mount the spare wheel to the rear axle, do not exceed the maximum speed of 34 mph (55 km/h) and the maximum distance of 62 miles (100 km). Otherwise, the transmission could be damaged due to the different rotational speeds of the wheels.

- Using the pump lever, slowly turn the drain screw on the jack approximately one revolution and carefully lower the vehicle.
- Place the jack to one side.
- Pull the rod with the smallest diameter off the pump lever.
  - The shortened pump lever serves as a lug wrench extension.
- Starting with the middle rod, slide the lug wrench extension as far as it will go onto the lug wrench.

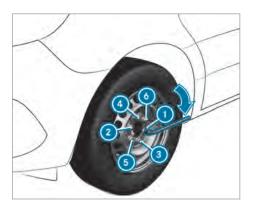

Tighten the wheel bolts or nuts evenly in the sequence indicated (1) to (3).

Specified tightening torque:

• Steel wheel bolts: 177 lb-ft (240 Nm)

Wheel nuts: 133 lb-ft (180 Nm)

- Alloy wheel bolts: 133 lb-ft (180 Nm)
- Push the piston on the hydraulic jack in again and close the pressure release screw.
- Vehicles with all-wheel drive: turn the jack spindle clockwise as far as it will go.
- (i) You can now install the hub caps on steel wheels with wheel bolts. The installation procedure depends on whether the hub cap acts as wheel trim that covers the whole wheel, or just covers the center.
- Wheel trim: position the opening in the wheel trim for the tire valve over the tire valve.
- Push the wheel trim onto the wheel rim with both hands until it engages into place. Make sure the wheel trim retaining catches engage on the steel wheel.
- Wheel with central hub cap: position the retaining lugs of the central hub cap over the wheel holts.
- Hit the middle of the hub cap to engage it on the wheel.
- Secure the faulty wheel in the spare wheel holder.
- Vehicles with Super Single tires: transport the faulty rear wheel in the load area. The rear wheel is too large for the spare wheel holder.
- Check the tire pressure of the newly installed wheel and adjust it if necessary.

- Retighten the wheel bolts or wheel nuts to the specified tightening torque after the vehicle has been driven 31 miles (50 km).
- When using a wheel or spare wheel with a new or newly painted wheel rim, have the wheel bolts or wheel nuts retightened after approximately 620 miles (1,000 km) to 3,100 miles (5.000 km).
- (i) Vehicles with the tire pressure monitor system: all installed wheels must be equipped with functioning sensors.

Make sure to observe the following further related

Notes on tire pressure (→ page 240)

#### Spare wheel

Notes on the emergency spare wheel and spare wheel

Spare wheel: wheel and tire dimensions as well as the type of tire correspond to the other installed wheels.

Emergency spare wheel: wheel and/or tire dimensions as well as the type of tire are different from the wheel to be replaced. A label with a speed limit can be found on the emergency spare wheel.

A installed emergency spare wheel or spare wheel changes the driving characteristics and bears risks.

WARNING Risk of accident due to incorrect wheel and tire dimensions

Mounting an emergency spare wheel or spare wheel may severely impair the driving characteristics.

There is an increased risk of an accident. To prevent hazardous situations:

- Check the tire pressure of the spare wheel or emergency spare wheel once installed and, if necessary, adjust.
- ► The emergency spare wheel may only be used temporarily and must be replaced with a standard wheel as soon as possi-
- Never install more than one emergency spare wheel.
- Adapt your driving style and drive carefully in emergency spare wheel mode.
- Do not switch off ESP®.

- Do not use snow chains on the emergency spare wheel.
- Replace the emergency spare wheel after six years at the latest, regardless of wear.
- When using an emergency spare wheel (different from the wheel to be replaced), you must not exceed a permissible top speed of 50 mph (80 km/h).
- Check the tire pressure of the emergency spare wheel before starting a journey.
- Have the emergency spare wheel replaced by a qualified specialist workshop.

**WARNING** Risk of accident due to damaged spare wheel with Super Single tires

#### Vehicles with Super Single tires

If you exceed the maximum speed or maximum distance, or re-install the spare wheel, its tire could be undetectably damaged and cause tire pressure loss.

You could lose control of the vehicle.

- Only use the spare wheel if it has not yet been installed on the rear axle with the current tire.
- If the spare wheel has been installed on the rear axle, have the tire of the spare wheel replaced after changing the wheel again.
- For safety reasons, when changing a tire ensure that only the tire valve type approved for the tires is used.
- ! NOTE Damage to the transmission due to differing wheel speeds

**Vehicles with Super Single tires:** when you install the spare wheel on the rear axle, the transmission may be damaged by the different rotational speeds of the wheels.

- When the spare wheel is installed on the rear axle, observe the maximum speed of 34 mph (55 km/h) and a maximum driving distance of 62 mi (100 km).
- (i) It is possible to use the spare wheel without restrictions only on the front axle of a vehicle with Super Single tires.

The following should be checked regularly, particularly prior to long journeys:


- The secure positioning of the spare wheel
- The tire pressure of the spare wheel (adjust the tire pressure if necessary) (→ page 241)
- The fastenings of the spare wheel holder

Replace the tires after six years at the latest, regardless of wear. This also applies to the spare wheel.


i If you have installed an emergency spare wheel or spare wheel, the tire pressure monitor will not function for this wheel. The emergency spare wheel or spare wheel is not equipped with a sensor for monitoring tire pressure.

#### Installing and removing the spare wheel

Vehicles with rear wheel drive: removing the spare wheel (Cargo Van or Passenger Van)

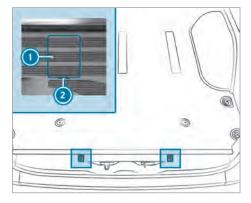

Bolt covers for the safety hooks (example: Cargo Van)

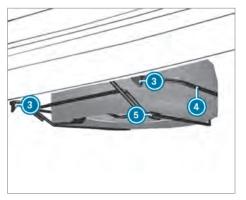


- Open the rear-end doors.
- Place a screwdriver into recesses 2 and then pry off covers 1.
- Using the lug wrench from the vehicle tool kit, unscrew the now visible bolts counter-clockwise by approximately 20 turns.
- Slightly raise spare wheel carrier 4 and unhook left-hand retaining hook 3.
- Assemble the pump lever for the jack and slide it into sleeve (5) on the right-hand side of spare wheel carrier (4).
- Raise spare wheel carrier (4) with the pump lever and unhook right-hand retaining hook 3.
- Slowly lower spare wheel carrier 4 to the ground.
- Lift spare wheel carrier (4) slightly and pull the pump lever out of the sleeve.
- Use the pump lever to lift the spare wheel beyond the rear edge of spare wheel carrier **4**).
- Carefully remove the spare wheel from spare wheel carrier 4. The spare wheel is heavy. When the spare wheel is removed, the center of gravity changes due to the heavy weight of the wheel. The spare wheel may slip down or


## Vehicles with rear wheel drive: installing the spare wheel (Cargo Van or Passenger Van)

- Carefully place the spare wheel onto spare wheel carrier 4. The spare wheel is heavy. When you place the spare wheel onto spare wheel carrier 4, the center of gravity changes due to the weight of the wheel. The spare wheel may slip down or tip over.
- Slide the pump lever for the jack into sleeve (5) on spare wheel carrier (4).
- Raise spare wheel carrier 4 with the pump lever and attach right-hand retaining hook 3.
- Slightly raise spare wheel carrier (4) and attach left-hand retaining hook 3.
- Pull the pump lever out of sleeve (5).
- Using the lug wrench, tighten safety hook bolts 3 by turning them clockwise.
- Replace and engage covers 1.
- Close the rear-end doors.

## Vehicles with rear wheel drive: removing the spare wheel (vehicle with lowered chassis)

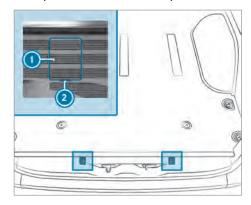

Bolt covers for the safety hooks (example: Cargo Van)

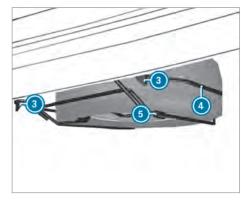


- Open the rear-end doors.
- Place a screwdriver into recesses 2 and then pry off covers 1.
- Using the lug wrench from the vehicle tool kit. unscrew the now visible bolts counter-clockwise by approximately 20 turns.
- Slightly raise spare wheel carrier 4 and unhook left-hand retaining hook 3.
- Assemble the pump lever for the jack and slide it into sleeve (5) on the right-hand side of spare wheel carrier 4.
- Raise spare wheel carrier with the pump lever and unhook right-hand retaining hook (3).
- Prepare the jack.
- Place the jack beneath the corresponding jack support point.

- Move the pump lever up and down until the tire is raised a maximum of 1.18 in (3 cm) off the ground.
- Carefully remove the spare wheel from spare wheel carrier (a). The spare wheel is heavy. When the spare wheel is removed, the center of gravity changes due to the heavy weight of the wheel. The spare wheel may slip down or tip over.
- Install the spare wheel on the vehicle.
- Lower the vehicle.

## Vehicles with rear wheel drive: installing the spare wheel (vehicle with lowered chassis)

- i In the event of a flat tire, you may store the faulty wheel inside the vehicle only. An intact wheel may be stored in the spare wheel carrier only when the vehicle is unladen. A laden vehicle must first be raised.
- ➤ Carefully place the spare wheel onto spare wheel carrier <a>③</a>. The spare wheel is heavy. When you place the spare wheel onto spare wheel carrier <a>⑥</a>, the center of gravity changes due to the weight of the wheel. The spare wheel may slip down or tip over.
- Slide the pump lever for the jack into sleeve
  on spare wheel carrier on.
- Raise spare wheel carrier (4) with the pump lever and attach right-hand retaining hook (3).
- Slightly raise spare wheel carrier (a) and attach left-hand retaining hook (3).
- Pull the pump lever out of sleeve 6.
- Using the lug wrench, tighten safety hook boltsby turning them clockwise.
- Replace and engage covers ①.
- Close the rear-end doors.

## Vehicles with rear wheel drive: removing the spare wheel (chassis)

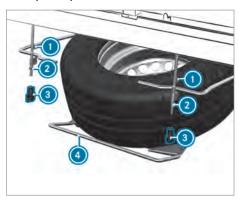

- Loosen wing nuts (3) manually and then remove them.
- Loosen nuts 2 as far as the thread end.
- Slightly raise spare wheel carrier (a) and unhook left-hand retaining hook (1).
- Assemble the pump lever for the jack and slide it into sleeve on the right-hand side of spare wheel carrier (a).
- Raise spare wheel carrier (a) with the pump lever and unhook right-hand retaining hook (b).
- Slowly lower spare wheel carrier **(4)** to the ground.
- Lift spare wheel carrier (a) slightly and pull the pump lever out of the sleeve.
- Use the pump lever to lift the spare wheel beyond the rear edge of spare wheel carrier.
- Carefully remove the spare wheel from spare wheel carrier. The spare wheel is heavy. When the spare wheel is removed, the center of gravity changes due to the heavy weight of the wheel. The spare wheel may slip down or tip

# Vehicles with rear wheel drive: installing the spare wheel (chassis)

- ➤ Carefully place the spare wheel onto spare wheel carrier ③. The spare wheel is heavy. When you place the spare wheel onto spare wheel carrier, the center of gravity changes due to the weight of the wheel. The spare wheel may slip down or tip over.
- Slide the pump lever for the jack into sleeve on spare wheel carrier (a).

- Raise spare wheel carrier (a) with the pump lever and attach right-hand retaining hook (b).
- Slightly raise spare wheel carrier and attach left-hand retaining hook ①.
- Pull the pump lever out of the sleeve.
- Tighten nuts ②.
- Put wing nuts ③ in place and tighten them.

## Notes on the technical data

The given data only applies to vehicles with standard equipment. You can obtain further information at a qualified specialist workshop.

#### On-board electronics

#### Notes on work on the engine electronics

I NOTES Premature wear through improper maintenance

Improper maintenance may cause vehicle components to wear more quickly and the vehicle's operating permit may be invalidated.

Always have work on the engine electronics and related components carried out at a qualified specialist workshop.

#### Two-way radios

#### Installation notes for two-way radios

▲ WARNING Risk of accident due to improper work on two-way radios

If two-way radios are manipulated or retrofitted incorrectly, the electromagnetic radiation from the two-way radios can interfere with the vehicle electronics and jeopardize the operating safety of the vehicle.

You should have all work on electrical and electronic components carried out at a qualified specialist workshop.

## WARNING Risk of accident due to improper operation of two-way radios

If you use two-way radios in the vehicle improperly, their electromagnetic radiation can disrupt the vehicle's electronics. This is the case in the following situations, in particular:

- The two-way radio is not connected to an exterior antenna.
- The exterior antenna is installed incorrectly or is not a low-reflection antenna.

This could jeopardize the operating safety of the vehicle.

▶ Have the low-reflection exterior antenna installed at a qualified specialist workshop.

- When operating two-way radios in the vehicle, always connect them to the lowreflection exterior antenna.
- **NOTE** Invalidation of the operating permit due to failure to comply with the instructions for installation and use

The operating permit may be invalidated if the instructions for installation and use of two-way radios are not observed.

- Only use approved frequency bands.
- Observe the maximum permissible output power in these frequency bands.
- Only use approved antenna positions.

Use Technical Specification ISO/TS 21609 (Road Vehicles - EMC guidelines for installation of aftermarket radio frequency transmitting equipment) when retrofitting two-way radios. Comply with the legal requirements for detachable parts.

If your vehicle has installations for two-way radio equipment, use the power supply or antenna connections intended for use with the installation. Observe the manufacturer's supplements during installation.

#### Two-way radio transmission output

The maximum transmission outputs (PEAK) at the base of the antenna must not exceed the values in the following table:

## Frequency band and maximum transmission output

Frequency band	Maximum transmis- sion output
Short wave 3 - 54 MHz	100 W
4 m waveband 74 - 88 MHz	30 W
2 m waveband 144 - 174 MHz	50 W
Trunked radio system/ Tetra 380 – 460 MHz	10 W

Frequency band	Maximum transmis- sion output
70 cm waveband 420 - 450 MHz	35 W
Two-way radio (2G/3G/4G)	10 W

The following devices can be used in the vehicle without restrictions:


- Two-way radios with a maximum transmission output of up to 100 mW
- Two-way radios with transmitter frequencies in the 380 - 410 MHz frequency band and a maximum transmission output of up to 2W (trunked radio system/Tetra)
- Mobile phones (2G/3G/4G)

There are no restrictions when positioning the antenna on the outside of the vehicle for the following frequency bands:

- Trunked radio system/Tetra
- 70 cm waveband
- 2G/3G/4G


Vehicle identification plate, vehicle identification number (VIN) and engine number

#### Vehicle identification plate

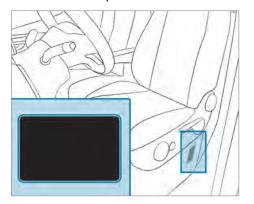


Depending on the vehicle model, the vehicle identification plate is located on the seat base of the driver's seat or on the B-pillar.

(i) The data is vehicle-specific and can differ from that shown. Always observe the specifications on your vehicle identification plate.

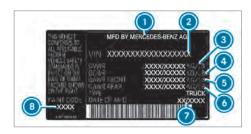

Vehicle identification plate (example: USA, complete vehicles)

- Vehicle manufacturer
- VIN (vehicle identification number)
- Permissible gross mass
- Permissible gross mass of vehicle combination
- Permissible front axle load
- Permissible rear axle load
- Date of manufacture
- Paint code

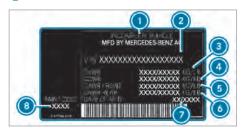

Vehicle identification plate (example: USA, incomplete vehicles)

- Vehicle manufacturer
- VIN (vehicle identification number)
- Permissible gross mass
- Permissible gross mass of vehicle combination
- Permissible front axle load
- Permissible rear axle load.
- Date of manufacture
- Paint code



Vehicle identification plate (example: Canada, complete vehicles)

- Vehicle manufacturer
- VIN (vehicle identification number)
- ② Permissible gross mass
- Permissible gross mass of vehicle combination
- Permissible front axle load
- O Permissible rear axle load
- Date of manufacture
- Paint code



Vehicle identification plate (example: Canada, incomplete vehicles)

- Vehicle manufacturer
- VIN (vehicle identification number)
- Permissible gross mass
- Permissible gross mass of vehicle combination
- Permissible front axle load
- Permissible rear axle load.
- Date of manufacture
- Paint code


The maximum permissible gross vehicle mass is made up of the vehicle weight, all vehicle occupants, the fuel and the load. The maximum gross axle weight rating is the maximum weight that can be carried by one axle (front or rear axle).

Do not exceed the maximum permissible gross vehicle mass or the maximum gross axle weight rating for the front or rear axle.

The vehicle identification plate may also contain the following data:

- Payload
- Curb weight
- Number of passenger seats

#### VIN engraved underneath the hood

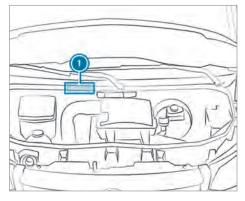

Engraved VIN (1) is located underneath the hood.

#### VIN below the windshield



The VIN is also attached as a label on the lower section of windshield (2).

#### **Emission Control Information label**



Example: Emission Control Information label

(i) The data is vehicle-specific and can differ from that shown.

#### Engine number

The engine number is stamped onto the crankcase. You can obtain further information from a qualified specialist workshop.

#### Operating fluids and capacities

## Notes on operating fluids

**WARNING** Risk of injury from operating fluids harmful to your health

Operating fluids may be poisonous and harmful to your health.

- Observe the text on the original containers when using, storing or disposing of operating fluids.
- Always store operating fluids sealed in their original containers.
- Always keep children away from operating fluids.

**ENVIRONMENTAL NOTE** Environmental pollution due to disposing of operating fluids in a non-environmentally responsible manner

Operating fluids include the following:

- fuels
- exhaust gas aftertreatment additives, e.g. DEF
- lubricants

Incorrect disposal of operating fluids can cause considerable damage to the environment

Dispose of operating fluids in an environmentally responsible manner.

Operating fluids include the following:

- Fuels
- Exhaust gas aftertreatment additives, e.g. DEF
- Lubricants
- Coolant
- Brake fluid
- Windshield washer fluid
- · Climate control system refrigerants

Only use products which have been approved for your vehicle by Mercedes-Benz. Damage caused by the use of products that have not been

approved is not covered by the Mercedes-Benz guarantee or goodwill gestures.

You can identify operating fluids approved by Mercedes-Benz by the following inscriptions on the container:

- MB-Freigabe (e.g. MB-Freigabe 229.51)
- MB-Approval (e.g. MB-Approval 229.51)

Further information on approved operating fluids is available at the following locations:

- In the MB Specifications for operating fluids at https://bevo.mercedes-benz.com (by entering the designation)
- At a qualified specialist workshop

WARNING Risk of fire or explosion from fuel

Fuels are highly flammable.

- Fire, open flames, smoking and creation of sparks must be avoided.
- Switch off the ignition and, if available, the stationary heater, before and while refueling the vehicle.

#### WARNING Risk of injury from fuels

Fuels are poisonous and hazardous to your health.

- Do not swallow fuel or let it come into contact with skin, eyes or clothing.
- Do not inhale fuel vapor.
- Keep children away from fuel.
- Keep doors and windows closed during the refueling process.

If you or other people come into contact with fuel, observe the following:

- Immediately rinse fuel off your skin with soap and water.
- If fuel comes into contact with your eyes, immediately rinse them thoroughly with clean water. Seek medical attention immediately.
- If you swallow fuel, seek medical attention immediately. Do not induce vomiting.
- Change immediately out of clothing that has come into contact with fuel.

#### Fuel

## Notes on fuel grades on vehicles with a gasoline engine

Observe the notes on operating fluids  $(\rightarrow)$  page 269).

! NOTE Do not use diesel to refuel vehicles with a gasoline engine.

If you accidentally refuel with the wrong fuel:

• Do not switch on the ignition. Otherwise fuel can enter the engine.

Even small amounts of the wrong fuel could result in damage to the fuel system and the engine. The repair costs are high.

- Contact a qualified specialist workshop.
- Have the fuel tank and fuel lines drained completely.

Only refuel using low-sulfur regular fuel with at least 87 AKI/91 RON.

- (i) E10 fuel contains an additive of up to 10% ethanol. Your vehicle is suitable for use with E10 fuel. You can fuel your vehicle with E10 fuel.
- **NOTE** Damage caused by the wrong fuel

Even small amounts of the wrong fuel could result in damage to the fuel system, engine and exhaust system.

Only refuel with the recommended fuel.

I NOTE Damage caused by the wrong fuel

Even small amounts of the wrong fuel could result in damage to the fuel system, engine and exhaust system.

Never refuel with the following:

- Diesel
- Gasoline with more than 10% ethanol by volume, e.g. E15, E20, E85, E100
- Gasoline with more than 3% methanol by volume, e.g. M15, M30, M85, M100
- Gasoline with additives containing metal
- Do not mix such fuels with the fuel recommended for your vehicle.
- To ensure the longevity and performance of the engine, only unleaded regular gasoline may be used.

Note that the higher quality premium grade gasoline can be refueled at any time.

If you are using drums or canisters to refuel the vehicle, you should filter the fuel before filling. This will prevent malfunctions in the fuel system due to contaminated fuel.

Usually you will find information about the fuel grade on the fuel pump. If there is no identification on the fuel pump, consult a gas station attendant.

 For further information, contact a qualified specialist workshop or visit http:// www.mbusa.com (USA only).

#### Notes on additives in gasoline

Observe the notes on operating fluids ( $\rightarrow$  page 269).

NOTE Damage from use of unsuitable additives

Even small amounts of the wrong additive may lead to malfunctions.

Only add cleaning additives recommended by Mercedes-Benzto the fuel.

Mercedes-Benz recommends using brand-name fuels with additives.

In some countries, the available fuel may not contain sufficient amounts of additives. Deposits could build up in the fuel injection system as a result.

In this case, in consultation with an authorized Mercedes-Benz Center, the fuel should be mixed with the cleaning additive recommended by Mercedes-Benz.

You must observe the notes and mixing ratios indicated on the container.

## Notes on fuel grades on vehicles with diesel engines

#### General notes

Observe the notes on operating fluids  $(\rightarrow)$  page 269).

#### WARNING Risk of fire from fuel mixture

If you mix diesel fuel with gasoline, the flash point of the fuel mixture is lower than that of pure diesel fuel.

- Never refuel using gasoline in diesel engines.
- Never mix gasoline with diesel fuel.

## NOTE Damage due to incorrect fuel

Even small amounts of the wrong fuel could result in damage to the fuel system, the engine and the emission control system.

Never refuel with the following:

- Gasoline
- Marine diesel
- · Heating oil
- · Pure fatty acid methyl ester or vegetable oil
- Paraffin or kerosene
- Do not mix such fuels with diesel fuel and do not use any additive.

If you have accidentally refueled with the wrong fuel, observe the following:

- Do not switch the ignition on.
- Consult a qualified specialist workshop.

### **NOTE** Malfunctions due to contaminated fuel

Fuel contamination can lead to malfunctions in the fuel system.

- If you are using drums or canisters to refuel the vehicle, you should filter the fuel before filling.
- NOTE Damage due to incorrect fuel

Incorrect fuel can lead to engine damage.

Refuel only ULSD or diesel fuel with a sulfur content of maximum 15 ppm.

Usually you will find information about the fuel grade on the fuel dispenser. If there is no identification on the fuel pump, consult a gas station attendant.

The fuel grade recommended for your vehicle is found on the instruction label in the fuel filler flap.

## Notes on low outside temperatures

**WARNING** Risk of fire and explosion from igniting fuel

If you heat up parts of the fuel system, fuel may leak and ignite. Depending on the type of damage, fuel might not escape until the engine is running.

Never heat fuel system components.

Contact a qualified specialist workshop to rectify the malfunction.

Refill only with commercially available ULTRA-LOW SULFUR DIESEL (ULSD, maximum sulfur content 15 ppm), which fulfills the ASTM D975 standard.

The flow properties of diesel fuel may be inadequate at low outside temperatures due to paraffin separation.

(i) Malfunctions resulting from paraffin separation can only be rectified by heating the entire fuel system. Park the vehicle in a heated garage, for example.

To prevent malfunctions, diesel fuel with improved flow characteristics is available in the winter months. You can obtain further information on this at the gas station or from your fuel supplier.

Your vehicle is equipped with a fuel preheating system. This additionally improves the flow characteristics of the diesel fuel by about 14.5°F (8°C). ULTRA-LOW SULFUR DIESEL can be used without risk of malfunction down to an outside temperature of approximately 14.5°F (-10°C).

## NOTE Damage due to gasoline or paraffin

Gasoline or paraffin in diesel fuel impairs the lubricity of the fuel. This can result in damage to the fuel injection system, for example.

Do not add any gasoline or paraffin to diesel fuel to improve its flow characteristics.

#### B20 fuels with bio-diesel content

NOTE Damage due to incorrect fuel

Continuous use of fuels with bio-diesel content over 5% (B20 fuels) can lead to fuel filter clogging. Deposits may also form on the fuel injector. This may reduce the engine output. Unburned fuel can get into the oil pan. This causes the engine oil level to rise. This can cause engine mechanical damage.

Observe the following points to avoid damage and reducing the engine output:

- Fill up with fuels with bio-diesel content of 5% (ULSD) or less, whenever possible.
- Regularly check your engine oil level if you use B20 fuels on a regular basis.

- Strictly follow the oil change intervals quoted in the instrument cluster and within your Maintenance Booklet.
- Use only engine oils and filters approved for use in your vehicle.
- If you do not plan to drive your vehicle for several weeks, completely fill the fuel tank in advance with ULSD fuel.

For more information, consult the gas station staff. The identification of fuels with bio-diesel content (ULSD or B20) must be clear. If the identification is not clear, do not refuel. Do not refuel with any fuels that have not been approved for your vehicle.

#### Tank content and reserve fuel

The total capacity of the fuel tank may vary, depending on the vehicle equipment.

#### Tank content and reserve fuel

Gasoline engine	Total capacity
M274	Approx. 22.5 gal (85 liters)
Diesel engine	Total capacity
OM642 OM651	Approx. 24.5 gal (93 liters)
Gasoline engine	Of which reserve fuel
Models with approx. 22.5 gal (85 l) total capacity	Approx. 5 gal (19 liters)
Diesel engine	Of which reserve fuel
Models with approx. 24.5 gal (93 l) total	Approx. 5 gal (19 liters)

#### DEF

#### Notes on DEF

Observe the notes on operating fluids  $(\rightarrow)$  page 269).

DEF is a water-soluble fluid for the exhaust gas aftertreatment of diesel engines.

NOTE Irritation to skin, eyes and respiratory tract due to DEF

DEF can cause irritation if inhaled or ingested, or if it comes in contact with eyes or skin.

When the tank is open, ammonia vapor can escape.

- Do not inhale or ingest DEF.
- Make sure DEF does not come into contact with your skin, eyes or clothing.
- Keep DEF away from children.
- Only fill the DEF tank in well-ventilated areas.

If a person comes into contact with DEF, observe the following:

- If you have ingested DEF, drink plenty of water and seek medical attention immediately.
- If DEF has come into contact with your eyes, rinse them for 15 minutes, also beneath the eyelids.
- Immediately rinse DEF off your skin with soap and water.

# I NOTE Damage caused by additives in DEF or by diluting DEF

The DEF exhaust gas aftertreatment system could be destroyed by the following:

- · Additives in DEF
- Diluting DEF
- Only use DEF in accordance with ISO 22241.
- Do not mix additives.
- Do not dilute DEF.

## I NOTE Damage and malfunctions caused by impurities in DEF

Impurities in DEF result in the following:

- Higher emission values
- · Damage to the catalytic converter
- Engine damage
- Malfunctions in the DEF exhaust gas aftertreatment system
- Avoid impurities in DEF.

## **ENVIRONMENTAL NOTE** Soiling with DEF

DEF residue crystallizes after some time and stain the affected surfaces.

Immediately rinse surfaces that come in contact with DEF when filling with water

or remove DEF with a damp cloth and cold water.

If DEF has already crystallized, clean using a sponge and cold water.

If you open the DEF tank, small amounts of ammonia vapor may be released. Do not inhale any ammonia vapor that may be released. Fill the DEF tank only in well-ventilated areas.

#### DEF consumption and filling capacity

## **DEF** consumption

Like fuel consumption, DEF consumption is highly dependent upon driving style and operating conditions. DEF consumption is usually within a range of 0 and 10% of the fuel consumption. If necessary, DEF must be refilled in accordance with the instructions when the refill message is displayed in the instrument cluster. This may also be necessary between the scheduled maintenance.

### Total capacity of DEF tank

Vehicle	Total capacity
All models	5.8 gal (22 liters )

### Exhaust gas aftertreatment

The vehicle must be operated with DEF if the exhaust gas aftertreatment system is to function

If you operate the vehicle without DEF or with emissions-relevant malfunctions, the legal MOT approval is invalidated. The vehicle could be prohibited from public road use by an official ordi-

It may be improper or punishable in some countries to operate a vehicle that uses no DEF or one that does not comply with the specifications of these operating instructions.

Engine management monitors the exhaust gas aftertreatment components for compliance with emissions laws and regulations. If you attempt to operate the vehicle without DEF, with diluted DEF or with a different reducing agent, this will be detected by the engine management system. Other emissions-relevant malfunctions, e.g. metering malfunctions or sensor errors, are also detected and logged.

The engine management system subsequently prevents the engine being restarted after issuing a warning message.

Therefore refill the DEF tank regularly during vehicle operation or, at the latest, after receiving the first warning message via the instrument cluster.

#### Engine oil

#### Notes on engine oil

Observe the notes on operating fluids  $(\rightarrow page 269).$ 



- NOTE Engine damage caused by an incorrect oil filter, incorrect oil or additives
- Do not use engine oils or oil filters other than those which meet the specifications necessary for the prescribed service intervals.
- ▶ Do not alter the engine oil or oil filter in order to achieve longer change intervals than prescribed.
- Do not use additives.
- Have the engine oil changed after the prescribed intervals.

Mercedes-Benz recommends having the oil changed at a qualified specialist workshop.

Further information on engine oil and oil filter:

- In the MB Specifications for operating fluidsat https://bevo.mercedes-benz.com (by entering the designation)
- At a qualified specialist workshop

## Quality and capacity of engine oil

i The containers of the various engine oils are marked with the ACEA (Association of European Automotive Manufacturers) and/or API (America Petroleum Institute) classifications. Only use approved engine oils that correspond to the MB Specifications for operating fluids and the prescribed ACEA and/or API classifications named below. Engine oils of other grades are not permissible and can result in the loss of the New Vehicle Limited Warranty. The use of other engine oils not approved for diesel engines can damage the diesel particulate filter (DPF).

## MB-Freigabe or MB-Approval

Gasoline engines	MB-Freigabe orMB- Approval
M274	229.5
Diesel engines	MB-Freigabe orMB-
	Approval

\* Recommended for lowest possible fuel consumption (lowest SAE viscosity class in each case; observe possible restrictions of the approved SAE viscosity classes).

To achieve the lowest possible fuel consumption, it is recommended to use the engine oil specifications marked in the table for the lowest SAE viscosity class. Observe any possible restrictions of the approved SAE viscosity classes.

If the engine oils listed in the table are not available, you may add a maximum 1.1 US qt (1.0 l) of the following engine oils once only:

- Vehicles with gasoline engines: MB-Freigabe or MB-Approval 229.3 or ACEA A3/B4
- Vehicles with diesel engines: MB-Freigabe or MB-Approval 228.5, 229.3 or 229.5

Multigrade engine oils of the prescribed SAE classification (viscosity) may be used all year round, taking the outside temperature into account.

## Engine oil viscosity

!

**NOTE** Engine damage due to incorrect SAE classification (viscosity) of the engine oil


If the SAE classification (viscosity) of the engine oil added is not suitable for prolonged low outside temperatures, it may cause engine damage.

The temperature readings of the SAE classification are always based on fresh oil. Engine oil ages when driving as a result of soot and fuel residue. The characteristics of engine oil deteriorate significantly at low outside temperatures.

- Use an engine oil of the appropriate SAE classification at low outside temperatures.
- ▶ Use oil for all-year-round operation.

The temperature readings of the SAE classification are always based on fresh oil. The temperature characteristics of the engine oil, especially at low outside temperatures, can deteriorate significantly due to aging when driving.

Therefore, Mercedes-Benz recommends that you change the engine oil before the start of the cold season. Only use an approved engine oil in the prescribed SAE classification for this purpose.

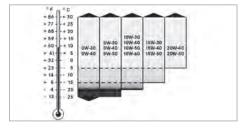

Viscosity indicates the flow characteristics of a fluid. If an engine oil has a high viscosity, this means that it is thick; a low viscosity means that it is thin. Depending on the respective outside temperatures, select an engine oil according to the SAE classification (viscosity). The table displays the SAE classification to be used. The low temperature characteristics of engine oils can deteriorate significantly during operation due to aging and soot and fuel accretion, for example. A regular oil change with an approved engine oil in the appropriate SAE classification is therefore strongly recommended.

#### Additives

NOTE Engine damage due to use of additives in the engine oil

The use of additional additives in the engine oil can damage the engine.

Do not use any additional additives in the engine oil.

## Miscibility of engine oil

The benefits of high-quality engine oils are reduced by mixing oil.

We recommend that you only use engine oil of the same grade and SAE classification as the oil filled at the last oil change. If, in exceptional cases, engine oil of the type in the engine is not available, use another approved mineral or synthetic engine

Vehicles with diesel engines: if the grade is not available, you may also refill with engine oils according to MB-Freigabe or MB-Approval 228.5, 229.3 or 229.5. The refill quantity is then limited to maximum 1.1 US qt (1.0 liter).

You must then have an oil change carried out at the earliest possible opportunity.

Vehicles with gasoline engines: if the grade is not available, you may refill with engine oils according to MB-Freigabe or MB-Approval 229.3 or ACEA A3/B4. The refill quantity is then limited to maximum 1.1 US qt (1.0 liter).

You must then have an oil change carried out at the earliest possible opportunity.

Engine oils are differentiated according to:

- · Engine oil brand
- Grade (MB-Freigabe or MB-Approval)
- SAE classification (viscosity)

## Oil change interval

The on-board computer automatically shows the date of the next oil change as an event message on the display.

Mercedes-Benz recommends having the oil changed at a qualified specialist workshop.

## Engine oil capacities

Engine	Engine oil
M274	approx. 11.1 qt (10.5 liters)
OM642	approx. 13.2 qt (12.5 liters)
OM651 Rear-wheel drive	approx. 12.2 qt (11.5 liters)

#### Information about oil consumption

Depending on the driving style, the vehicle consumes a maximum of 1.1 US qt (1.0 liter) of engine oil per 620 miles (1000 km).

In the following cases, oil consumption may also exceed this limit:

- The vehicle is new.
- · You use the vehicle mostly under arduous conditions.
- · You drive frequently at a high engine speed.

Regular maintenance is a prerequisite for favorable consumption figures. You can only estimate the oil consumption after you have driven a considerable distance. Check the oil level in the engine regularly, e.g. weekly or every time you refuel.

#### Notes on brake fluid

Observe the notes on operating fluids  $(\rightarrow page 269).$ 



WARNING Risk of an accident due to vapor pockets forming in the brake system

The brake fluid constantly absorbs moisture from the air. This lowers the boiling point of the brake fluid. If the boiling point is too low, vapor pockets may form in the brake system when the brakes are applied hard.

This causes the braking effect to be impaired.



Have the brake fluid renewed at the specified intervals.



NOTE Damage to paint, plastic or rubber by brake fluid

There is a risk of damage to property if brake fluid comes into contact with paint, plastic or rubber.

 If paint, plastic or rubber comes into contact with brake fluid, rinse with water immediately.

Observe the notes on paintwork/matte finish paintwork care ( $\rightarrow$  page 217).

Have the brake fluid renewed every two years at a qualified specialist workshop.

Only use brake fluid approved by Mercedes-Benz in accordance with MB-Freigabe or MB-Approval 331.0

Information on brake fluid is available at the following locations:

- In the MB Specifications for operating fluids 331.0
  - At https://bevo.mercedes-benz.com
  - In the BeVo app
- · At a qualified specialist workshop

#### Coolant

#### Notes on coolant

Observe the notes on operating fluids ( $\rightarrow$  page 269).

## **WARNING** - Risk of fire and injury from antifreeze

If antifreeze comes into contact with hot component parts in the engine compartment, it may ignite.

- Allow the engine to cool down before adding antifreeze.
- Make sure that no antifreeze spills out next to the filler opening.
- Thoroughly clean off any antifreeze from component parts before starting the vehicle.
- NOTE Damage caused by incorrect coolant
- Only add coolant that has been premixed with the required antifreeze protection.

Information on coolant is available at the following locations:

- In the MB Specifications for operating fluids 320.1
  - At https://bevo.mercedes-benz.com
  - In the BeVo app
- At a qualified specialist workshop

NOTE Overheating at high outside temperatures

If an inappropriate coolant is used, the engine cooling system is not sufficiently protected against overheating and corrosion at high outside temperatures.

- Always use coolant approved by Mercedes-Benz.
- ► Observe the instructions in the MB Specifications for operating fluids320.1.
- NOTE Paintwork damage due to coolant
- Do not spill coolant on painted surfaces.

Have the coolant regularly replaced at a qualified specialist workshop.

Note the proportion of anti-corrosion agent/antifreeze in the engine cooling system within the following temperature ranges:

- A minimum of 50% (antifreeze protection down to about -35°F (-37°C))
- A maximum of 55% (antifreeze protection down to -49°F (-45°C))

## Coolant capacities

#### Engine cooling system

Engine	Coolant
M274	approx. 3.0 gal (11.5 liters)
OM642	approx. 2.6 gal (10 liters)
OM651	approx. 2.5 gal (9.5 liters)

#### Windshield washer fluid

#### Notes on windshield washer fluid

Observe the notes on operating fluids ( $\rightarrow$  page 269).

### WARNING - Risk of fire and injury from windshield washer concentrate

Windshield washer concentrate is highly flammable. It could ignite if it comes into contact with hot engine component parts or the exhaust system.

- Make sure that no windshield washer concentrate spills out next to the filler opening.
- NOTE Damage to the exterior lighting due to unsuitable windshield washer fluid

Unsuitable windshield washer fluid may damage the plastic surface of the exterior lighting.

- Only use windshield washer fluid which is also suitable for use on plastic surfaces, e.g. MB SummerFit or MB WinterFit.
- NOTE Blocked spray nozzles caused by mixing windshield washer fluids
- Do not mix MB SummerFit and MB WinterFit with other windshield washer fluids.

Do not use distilled or de-ionized water. Otherwise. the fill level sensor may give a false reading.

#### Information on the windshield washer fluid

Recommended windshield washer fluid:

- · above freezing point: e.g. MB SummerFit
- · below freezing point: e.g. MB WinterFit

#### Mixing ratio

For the correct mixing ratio, refer to the information on the anti-freeze container.

Mix the washer fluid with windshield washer fluid all year round.

## Filling capacities

## Windshield washer system

Washer fluid 5.8 qt (5.5 l)

#### Refrigerant

#### Notes on refrigerant

Observe the notes on operating fluids  $(\rightarrow page 269).$ 

(i) Your vehicle's climate control system may be filled with the refrigerant R134a. The refrigerant R134a contains fluorinated greenhouse gas.

NOTE Damage due to incorrect refrigerant or refrigerant compressor oil

If the incorrect refrigerant or refrigerant compressor oil (PAG oil) is used, this can damage the climate control system.

- Use only R-134a refrigerant and the PAG oil approved for your vehicle by Mercedes-Benz.
- Do not mix the approved PAG oil with another PAG oil.

Maintenance work, such as adding refrigerant or replacing components, may be carried out only by a qualified specialist workshop. All applicable regulations, as well as SAE standard J639, must be adhered to.

Have all work on the climate control system carried out at a qualified specialist workshop.



Example: refrigerant information label

- Symbols for hazard and service information
- Refrigerant capacity
- Applicable standards
- PAG oil part number
- Refrigerant type

Warning symbols 1 refer to the following:

- · Potential dangers
- The performance of maintenance work at a qualified specialist workshop

#### Vehicle data

#### Information on vehicle dimensions

The following section contains important technical data for your vehicle. Your vehicle documents contain further vehicle-specific and equipmentdependent technical data such as vehicle dimensions and weights.

#### Trailer hitch

## Notes on the trailer hitch



**WARNING** Risk of accident due to impermissible attachment of a trailer tow hitch

If you install a trailer tow hitch or other components, the longitudinal frame member is weakened and can break. The trailer may become detached from the vehicle.

There is a risk of an accident.

Only retrofit a trailer tow hitch if permissible.

Observe the notes on trailer operation  $(\rightarrow page 163)$ .

Retrofitting a trailer hitch is only permissible if a towing capacity is specified in your vehicle documents.

You can obtain further information on the trailer hitch at a qualified specialist workshop.

Mercedes-Benz recommends that you have a trailer hitch retrofitted at an authorized Mercedes-Benz Center.

Only use a trailer hitch which has been tested and specially approved by Mercedes-Benz for your vehicle.

Use only a ball neck that has been approved for your vehicle and for your Sprinter trailer hitch. Notes on the permissible dimensions of the ball neck can also be found on the identification plate of the trailer hitch.

The maximum permissible towing capacity for unbraked trailers is 1,653 lbs (750 kg).

#### Trailer loads

The permissible weights and loads can also be obtained from the following sources of information:

- Vehicle documents
- The type plates of the trailer hitch, trailer and vehicle

The values approved by the manufacturer can be found in the following table. If the values differ, the lowest value applies. Use a calibrated weighing machine to check that the weight restrictions have been complied with before you start your journey.

## Maximum permissible weights and loads Vehicle type, gross vehicle weight and curb weight

Vehicle model	Permissible gross vehicle weight GVWR	Permissible unladen weight <sup>7)</sup>
1500	8550 lbs (3.878 t)	6950 lbs (3.152 t) (gasoline only)
2500	8550 lbs (3.878 t)	7400 lbs (3.357 t) (diesel only)
	9050 lbs (4.105 t)	6450 lbs (2.926 t) (gasoline only)
		7400 lbs (3.357 t) (diesel only)
	9480 lbs (4.300 t)	7400 lbs (3.357 t) (diesel only)
3500	9900 lbs (4.490 t) (Canada only)	7400 lbs (3.357 t)
	9989 lbs (4.531 t) (USA only)	
3500 XD	11030 lbs (5.003 t)	10470 lbs (4.749 t)
4500	12125 lbs (5.500 t)	9375 lbs (4.252 t)

<sup>7)</sup> Maximum permissible curb weight of a roadworthy vehicle without driver or vehicle occupants, including all fluids and their reservoirs when filled up to 100%.

Front axle load, rear axle load, gross weight of vehicle combination (series, optional) Vehicle types 1500 and 2500 with a max. permissible gross weight of 8,550 lbs (3.878 t), 9,050 lbs (4.105 t) and 9,480 lbs (4.300 t)

Permissible front axle load GAWR (FA)	Permissible rear axle load GAWR (RA)
4100 lbs (1.860 t) <sup>5)</sup>	5360 lbs (2.431 t)
4410 lbs (2.000 t) 1)	

Vehicle type 3500 with a max. permissible gross weight of 9,900 lbs (4.490 t) (Canada only) and 9,989 lbs (4.531 t) (USA only)

Permissible front axle load GAWR (FA)	Permissible rear axle load GAWR (RA)
4080 lbs (1.851 t) <sup>5)</sup>	7060 lbs (3.202 t)
4410 lbs (2.000 t) 1)	

## Vehicle type 3500 XD with a max. permissible gross weight of 11,030 lbs (5.003 t)

	Permissible front axle load GAWR (FA)	Permissible rear axle load GAWR (RA)
	4080 lbs (1.851 t) <sup>5)</sup>	7720 lbs (3.502 t)
	4410 lbs (2.000 t) 1)	

## Vehicle type 4500 with a max. permissible gross weight of 12,125 lbs (5.500 t)

Permissible front axle load GAWR (FA)	Permissible rear axle load GAWR (RA)
4630 lbs (2.100 t)	7935 lbs (3.599 t)

<sup>1)</sup> Front axle with increased load capacity.

## Gross weight of vehicle combination, trailer load, tongue weight Vehicle types 1500 and 2500 with a max. permissible gross weight of 8,550 lbs (3.878 t)

Permissible gross weight of vehicle/trailer combination GCWR <sup>6), 9)</sup>	Permissible trailer load GTW, braked <sup>6)</sup>	Permissible tongue weight TWR
13550 lbs (6.146 t)	5000 lbs (2.268 t) <sup>2)</sup>	500 lbs (0.227 t) <sup>2)</sup>

## Vehicle type 2500 with a max. permissible gross weight of 9,050 lbs (4.105 t)

Permissible gross weight of vehicle/trailer combination GCWR <sup>6), 9)</sup>	Permissible trailer load GTW, braked <sup>6)</sup>	Permissible tongue weight TWR
13930 lbs (6.319 t)	5000 lbs (2.268 t) <sup>2)</sup>	500 lbs (0.227 t) <sup>2)</sup>

## Vehicle type 2500 with a max. permissible gross weight of 9,480 lbs (4.300 t)

Permissible gross weight of vehicle/trailer combination GCWR <sup>6), 9)</sup>	Permissible trailer load GTW, braked <sup>6)</sup>	Permissible tongue weight TWR
9480 lbs (4.300 t)	-	-

<sup>&</sup>lt;sup>5)</sup> Not in combination with all-wheel drive (4x4) and not in combination with vehicle model designation 907.745 (combination vehicles with a vehicle length of 290 in (7,367 mm)).

## Vehicle type 3500 with a max. permissible gross weight of 9,900 lbs (4.490 t) (Canada only)

Permissible gross weight of vehicle/trailer combination GCWR 6), 9)	Permissible trailer load GTW, braked <sup>6)</sup>	Permissible tongue weight TWR
14900 lbs (6.759 t) <sup>2)</sup> , only for vehicle model designation 907.657 <sup>8)</sup>	5000 lbs (2.268 t) <sup>2)</sup> , only for vehicle model designation 907.657 <sup>8)</sup>	500 lbs (0.227 t) $^{2)}$ , only for vehicle model designation 907.657 $^{8)}$
15250 lbs (6.917 t) $^{3)}$ , not for vehicle model designation 907.657 $^{8)}$	7500 lbs (3.402 t) <sup>3)</sup> , not for vehicle model designation 907.657 <sup>8)</sup>	750 lbs (0.340 t) $^{3)}$ , not for vehicle model designation 907.657 $^{8)}$

## Vehicle type 3500 with a max. permissible gross weight of 9,990 lbs (4.531 t) (USA only)

Permissible gross weight of vehicle/trailer combination GCWR <sup>6), 9)</sup>	Permissible trailer load GTW, braked <sup>6)</sup>	Permissible tongue weight TWR
14990 lbs (6.799 t) <sup>2)</sup> , only for vehicle model designation 907.657 <sup>8)</sup>	5004 lbs (2.270 t) <sup>2)</sup> , only for vehicle model designation 907.657 <sup>8)</sup>	500 lbs (0.227 t) $^{2)}$ , only for vehicle model designation 907.657 $^{8)}$
15250 lbs (6.917 t) <sup>3)</sup> , not for vehicle model designation 907.657 <sup>8)</sup>	7500 lbs (3.402 t) <sup>3)</sup> , not for vehicle model designation 907.657 <sup>8)</sup>	750 lbs (0.340 t) <sup>3)</sup> , not for vehicle model designation 907.657 <sup>8)</sup>

## Vehicle type 3500 XD with a max. permissible gross weight of 11,030 lbs (5.003 t)

Permissible gross weight of vehicle/trailer combination GCWR <sup>6), 9)</sup>	Permissible trailer load GTW, braked <sup>6)</sup>	Permissible tongue weight TWR
15250 lbs (6.917 t) <sup>4)</sup>	5004 lbs (2.270 t) <sup>2)</sup> , only for vehicle model designation 907.657 <sup>8)</sup>	500 lbs (0.227 t) $^{2)}\!,$ only for vehicle model designation 907.657 $^{8)}$
	optional: 7500 lbs (3.402 t) <sup>3)</sup> , not for vehicle model designation 907.657 <sup>8)</sup>	optional: 750 lbs (0.340 t) $^{3)}$ , not for vehicle model designation 907.657 $^{8)}$

#### Vehicle type 4500 with a max. permissible gross weight of 12,125 lbs (5.500 t)

Permissible gross weight of vehicle/trailer combination GCWR <sup>6), 9)</sup>	Permissible trailer load GTW, braked <sup>6)</sup>	Permissible tongue weight TWR
15250 lbs (6.917 t) <sup>4)</sup>	5004 lbs (2.270 t) <sup>2)</sup> , only for vehicle model designation 907.657 <sup>8)</sup>	500 lbs (0.227 t) $^{2)}$ , only for vehicle model designation 907.657 $^{8)}$
	optional: 7500 lbs (3.400 t) <sup>3)</sup> , not for vehicle model designation 907.657 <sup>8)</sup>	optional: 750 lbs (0.340 t) <sup>3)</sup> , not for vehicle model designation 907.657 <sup>8)</sup>

<sup>2)</sup> Only NAFTA trailer cross member, towing capacity 5.004 lbs (2.270 t).

- 3) Only NAFTA trailer cross member, towing capacity 7,500 lbs (3.400 t).
- 4) Only NAFTA trailer cross member, towing capacity 5,004 lbs (2.270 t) or 7,500 lbs (3.400 t).
- 6) In trailer operation, do not exceed any individual maximum permissible gross weight of those specified in the table.
- 8) The vehicle length for vehicles with the vehicle model designation 907.657 (Cargo Van) is 290 in (7,367 mm).
- 9) It is not possible to tow a trailer on vehicles which have not been equipped with a trailer coupling as standard. In this case, the maximum permissible gross vehicle weight corresponds to the maximum permissible gross weight of the vehicle combination.
- (i) If the trailer coupling is retrofitted, adapt the type plates accordingly with the altered, maximum permissible weights. Please consult an authorized Mercedes-Benz Center if you have any further questions.

### MERCEDES-BENZ AG IMPORTANT INFORMATION FOR BODY BUILDERS INFORMATIONS IMPORTANTES POUR LES CARROSSIERS This vehicle and engine conform to all applicable US EPA, CARB Le véhicule et le moteur sont conformes aux directives EPA CARB (E.-U.) et du Canada appli cables à la date de production and Canadian regulations at the time of manufacture for vehicles du véhicule ayant un PN6V <∪0> à 10000 lb et un poids <UO> 10000 lbs GVWR and has a maximum unloaded vehicle weight (UVW) of <UVW> lbs

The body builder label is found on the front-end module above the radiator and contains the maximum permissible curb weight for the vehicles.

## Cargo tie-down points and carrier systems Information about the cargo tie-down points

NOTE Risk of accident if the maximum loading capacity of the cargo tie-down points is exceeded

If you combine various cargo tie-down points to secure a load, always take the maximum loading capacity of the weakest cargo tie-down point into account.

During maximum full-stop braking, forces may act which can multiply the weight of the load.

Always use several cargo tie-down points to distribute and spread the load. Distribute the load on the cargo tie-down points evenly.

Nominal tensile load is the maximum permissible tractive power.

Further information on the cargo tie-down points and tie-down eyes can be obtained in the "Transporting" section ( $\rightarrow$  page 204).

#### Tie-down eves

#### Nominal tensile load of tie-down eves

Tie-down eyes	Nominal tensile load
Passenger Van	350 daN
Cargo Van	800 daN

## Loading rails

## Nominal tensile load of cargo tie-down points in the cargo compartment

Cargo tie-down point	Nominal tensile load
Loading rails on cargo compartment floor	500 daN
Lower loading rail on side wall	200 daN
Upper loading rail on side wall	125 daN

The values specified apply only to loads resting on the cargo compartment floor under the following circumstances:

- The load is secured to two cargo tie-down points on the rail
- The distance to the nearest load-securing point on the same rail is approximately 1 m

#### Information about roof racks

# **WARNING** Risk of injury if maximum roof load is exceeded

The vehicle center of gravity and the usual driving characteristics as well as the steering and braking characteristics will change.

If you exceed the maximum roof load, the driving characteristics, as well as the steering and braking characteristics, will be greatly impaired.

Always comply with the maximum roof load and adjust your driving style.

# **WARNING** Danger of accident due to uneven loading

The driving characteristics, as well as steering and braking characteristics, may be greatly impaired.

- Load the vehicle evenly.
- Secure the load against sliding.

The driving, braking and steering characteristics of the vehicle will change with the type of load, the weight and the center of gravity of the load.

## ! NOTE Risk of accident if the maximum permissible roof load is exceeded

If the weight of the roof luggage, including the roof rack, exceeds the maximum permissible roof load, there will be a risk of an accident.

- Ensure that the weight of the roof luggage and roof rack does not exceed the maximum permissible roof load.
- The roof rack supports must be arranged at an even distance from each other.
- Mercedes-Benz advises you to install a stabilizer on the vehicle's front axle.

Further information about safety measures can be found in the "Transport" section ( $\rightarrow$  page 204).

#### Max. roof load/pairs of roof rack supports

Vehicles with	Maximum roof load	Minimum number of pairs of sup- ports
Roof	661 lbs (300 kg)	6
High roof	331 lbs (150 kg)	3

This information applies if the load is distributed evenly across the entire roof area.

If the roof rack is shorter, reduce the load proportionately. The maximum load per pair of roof rack supports is 110 lbs (50 kg).

The loading guidelines and other information about load distribution and load securing can be found in the "Transport" section ( $\rightarrow$  page 204).

#### Introduction

## Function of display messages

The display messages appear on the multifunction display.

The display messages with graphic displays can be displayed in simplified format in the Operator's Manual and may deviate from the display on the multifunction display. The multifunction display shows high-priority display messages in red. In addition, a warning tone sounds for specific display messages.

Act in accordance with the display messages and comply with the additional instructions in this Operator's Manual.

In addition, symbols are shown for some display messages:

i	Further information
	Hide display messages
You c	an use the left-hand Touch Con

You can use the left-hand Touch Control to select between the symbols by swiping to the left or right. Pressing i displays further information on the multifunction display. Pressing hides the display message.

You can hide low-priority display messages by pressing the f button or with the left-hand Touch Control. The display messages are saved in the message memory.

Rectify the cause of a display message as quickly as possible.

You cannot hide high-priority display messages. The multifunction display will show these display messages until their causes have been rectified.

## Calling up saved display messages

On-board computer:



If there are no display messages, No Messages appears on the multifunction display.

- Browse through the display messages by swiping upwards or downwards on the left-hand Touch Control.
- ► To exit the message memory: press the button.

### Safety systems

#### Display messages



Left Side Curtain Airbag Malfunction Service Required (example)

## Possible causes/consequences and ▶ Solutions

\* The respective window curtain airbag is malfunctioning (→ page 37).

WARNING Risk of injury or fatal injury due to malfunctions in the window airbag

If the window airbag is malfunctioning, it might be triggered unintentionally or might not be triggered at all in the event of an accident with high deceleration.

- Have the window airbag checked and repaired immediately at a qualified specialist workshop.
- Consult a qualified specialist workshop immediately.



system If the restraint system is malfunctioning, restraint system components may be triggered unintentionally or may not deploy as intended during an accident. This may affect the Emergency Tensioning

WARNING Risk of injury due to malfunctions in the restraint

► Have the restraint system checked and repaired immediately at a qualified specialist workshop.

Recognition of a restraint system malfunction:

Devices or airbags, for example.

- The prestraint system warning lamp does not light up when the ignition is switched on.
- The prestraint system warning lamp lights up continuously or repeatedly during a journey.
- Consult a qualified specialist workshop immediately.

\* The restraint system is malfunctioning ( $\rightarrow$  page 33).

**WARNING** Risk of injury due to malfunctions in the restraint system

If the restraint system is malfunctioning, restraint system components may be triggered unintentionally or may not deploy as intended during an accident. This may affect the Emergency Tensioning Devices or airbags, for example.

► Have the restraint system checked and repaired immediately at a qualified specialist workshop.

Recognition of a restraint system malfunction:

- The prestraint system warning lamp does not light up when the ignition is switched on.
- The prestraint system warning lamp lights up continuously or repeatedly during a journey.
- Consult a qualified specialist workshop immediately.



Front Left Malfunction Service Required (example)



SRS Malfunction Service Required

## Display messages



Parking Brake Inoperative

#### Possible causes/consequences and > Solutions

\* A malfunction has occurred in the system; the parking brake is inoperative.



**WARNING** Risk of an accident due to a brake system malfunc-

If the brake system is malfunctioning, braking characteristics may be impaired.

- Drive on carefully.
- Have the brake system checked immediately at a qualified specialist workshop.
- Park the vehicle on a level surface only and secure it against rolling away.
- Vehicles with automatic transmission: shift the transmission to position P.
- Have the brake system checked at a qualified specialist workshop immediately.



Incline Too Steep See Operator's Manual

\* The on-board electrical system voltage is low or a malfunction has occurred in the system; the holding force may not be sufficient for the incline.

**WARNING** Risk of accident if the electrical parking brake has insufficient holding force

If the electrical parking brake does not have sufficient holding force on a steep incline, the vehicle may roll away.

- Park the vehicle on a level surface only and secure it against rolling away.
- ▶ Shift the automatic transmission to position **P**.

Observe the notes on parking the vehicle ( $\rightarrow$  page 135).



Parking Brake See Operator's Manual

\* The on-board electrical system voltage is low or a malfunction has occurred in the system; the closing force may not be sufficient for the incline.

**WARNING** Risk of an accident due to a brake system malfunc-

If the brake system is malfunctioning, braking characteristics may be impaired.

- Drive on carefully.
- ► Have the brake system checked immediately at a qualified specialist workshop.
- Park the vehicle on a level surface only and secure it against rolling away.
- Vehicles with automatic transmission: shift the transmission to position P.
- Have the brake system checked at a qualified specialist workshop immediately.

## Display messages Possible causes/consequences and ▶ Solutions Check Brake Pads See \* The brakepads have reached their wear limit. Operator's Manual **WARNING** Risk of accident due to restricted braking power When the brake pads have reached their wear limit, the braking power may be restricted. Drive on carefully. ► Have the brake system checked immediately at a qualified specialist workshop. Visit a qualified specialist workshop. \* There is not enough brake fluid in the brake fluid reservoir. **WARNING** Risk of an accident due to low brake fluid level If the brake fluid level is too low, the braking effect and the brak-Check Brake Fluid Level ing characteristics may be impaired. Pull over and stop the vehicle safely as soon as possible, paying attention to road and traffic conditions. Do not continue driving under any circumstances. Consult a qualified specialist workshop. Do not add brake fluid. Stop the vehicle immediately in accordance with the traffic conditions. Do not continue driving. Consult a qualified specialist workshop. Do not add brake fluid. Active Brake Assist Func-\* Active Brake Assist is malfunctioning. tions Limited See Opera-Visit a qualified specialist workshop. tor's Manual Active Brake Assist Func-\* Active Brake Assist is temporarily unavailable. tions Currently Limited The ambient conditions are outside the system limits ( $\rightarrow$ page 143). See Operator's Manual When the ambient conditions are within the system limits, the system will be available again. If the display message does not disappear, stop in accordance with the traffic conditions and restart the engine. Radar Sensors Dirty See \* The radar sensor system is malfunctioning. Possible causes: Operator's Manual · Dirt on the sensors · Heavy precipitation • Extended country driving without other traffic, e.g. in the desert Driving systems and driving safety systems may be malfunctioning or temporarily unavailable. When the causes have been eliminated, the driving systems and driving safety systems will be available again. If the display message does not disappear, proceed as follows:

D' 1	D "II ( ) D O I "
Display messages	Possible causes/consequences and ▶ Solutions
	Stop in accordance with the traffic conditions.
	Clean all sensors (→ page 218).
	Restart the engine.
SOS NOT READY	<ul> <li>* The emergency call system is not available.</li> <li>Possible causes for this include:</li> <li>• The ignition is switched off.</li> </ul>
	The emergency call system is malfunctioning.
	<ul> <li>Switch on the ignition.         If an emergency call is unavailable, a message to this effect will appear on the multifunction display of the instrument cluster.</li> <li>Visit a qualified specialist workshop.</li> <li>You can find more information on the regional availability of the emergency call system at: http://www.mercedes-benz.com/connect_ecall</li> </ul>
	* EBD, ABS and ESP® are malfunctioning.
EBD	Other driving systems and driving safety systems may also be mal- functioning.
(ABS)	<b>WARNING</b> Risk of skidding if EBD, ABS and ESP® are malfunctioning
Inoperative See Operator's Manual	If EBD, ABS and ESP® are malfunctioning, the wheels can lock when braking and ESP® cannot carry out vehicle stabilization.  The steering capability and braking characteristics are thus severely impaired. The braking distance in an emergency braking situation can increase. In addition, other driving safety systems are switched off.
	▶ Drive on carefully.
	Have the brake system checked immediately at a qualified specialist workshop.
	▶ Drive on carefully.
	Consult a qualified specialist workshop immediately.
	* ESP® is malfunctioning.
Inoperative See Opera-	Other driving systems and driving safety systems may also be mal- functioning.
tor's Manual	The brake system continues working with the normal effect. The braking distance may increase in emergency braking situations.
	<b>▲ WARNING</b> Risk of skidding if ESP <sup>®</sup> is malfunctioning
	If ESP® is malfunctioning, ESP® cannot carry out vehicle stabilization. In addition, other driving safety systems are switched off.
	► Drive on carefully.
	► Have ESP <sup>®</sup> checked at a qualified specialist workshop.

# Display messages Possible causes/consequences and > Solutions Drive on carefully. Consult a qualified specialist workshop immediately. \* ESP® is temporarily unavailable. Other driving systems and driving safety systems may also be malfunctioning. Currently Unavailable WARNING Risk of skidding if ESP® is malfunctioning See Operator's Manual If ESP® is malfunctioning, ESP® cannot carry out vehicle stabilization. In addition, other driving safety systems are switched off. Drive on carefully. Have ESP® checked at a qualified specialist workshop. Carefully drive some gentle curves at a speed greater than 19 mph (30 km/h) on a suitable stretch of road. If the display message does not disappear, visit a qualified specialist workshop immediately. Drive carefully when doing so. \* ABS and ESP® are temporarily unavailable. Other driving systems and driving safety systems may also be temporarily unavailable. WARNING Risk of skidding if ABS and ESP® are malfunction-Currently Unavailable If ABS and ESP® are malfunctioning, the wheels could lock when See Operator's Manual braking and ESP® cannot carry out vehicle stabilization. The steering capability and braking characteristics are thus severely impaired. The braking distance in an emergency braking situation can increase. In addition, other driving safety systems are switched off. Drive on carefully. Have ABS and ESP® checked immediately at a qualified specialist workshop. Carefully drive some gentle curves at a speed greater than 19 mph (30 km/h) on a suitable stretch of road. If the display message does not disappear, visit a qualified specialist workshop immediately. Drive carefully when doing so. \* ABS and ESP® are malfunctioning. Other driving systems and driving safety systems may also be malfunctioning. The brake system continues working with the normal effect. The braking distance may increase in emergency braking situations.

Inoperative See Opera-

tor's Manual

Display messages	Possible causes/consequences and ▶ Solutions
	<b>WARNING</b> Risk of skidding if ABS and ESP <sup>®</sup> are malfunctioning
	If ABS and ESP® are malfunctioning, the wheels could lock when braking and ESP® cannot carry out vehicle stabilization.
	The steering capability and braking characteristics are thus severely impaired. The braking distance in an emergency braking situation can increase. In addition, other driving safety systems are switched off.
	▶ Drive on carefully.
	► Have ABS and ESP® checked immediately at a qualified specialist workshop.
	▶ Drive on carefully.
	Consult a qualified specialist workshop immediately.

# Driving systems

Display messages	Possible causes/consequences and ▶ Solutions
Cruise Control Inoperative	<ul><li>* Cruise control is malfunctioning.</li><li>Visit a qualified specialist workshop.</li></ul>
Off Off	* Cruise control has been deactivated.  If a warning tone also sounds, this means cruise control has deactivated itself automatically (→ page 145).
mph	<ul> <li>* Cruise control cannot be activated as not all activation conditions have been met.</li> <li>▶ Observe the activation conditions for cruise control (→ page 146).</li> </ul>
Active Distance Assist Inoperative	<ul> <li>* Active Distance Assist DISTRONIC is malfunctioning.</li> <li>Other driving systems and driving safety systems may also be malfunctioning.</li> <li>Visit a qualified specialist workshop.</li> </ul>
Active Distance Assist Currently Unavailable See Operator's Manual	<ul> <li>* Active Distance Assist DISTRONIC is temporarily unavailable.         The ambient conditions are outside the system limits (→ page 148).         Stop in accordance with the traffic conditions         Restart the engine         When the ambient conditions are within the system limits, the system will be available again.     </li> </ul>

## Display messages Possible causes/consequences and > Solutions \* The camera view is restricted. Possible causes: • Dirt on the windshield in the camera's field of vision · Heavy precipitation or fog Driving systems and driving safety systems may be malfunctioning or temporarily unavailable. When the causes have been eliminated, the driving systems and driving safety systems will be available again. If the display message does not disappear: Currently Unavailable Stop in accordance with the traffic conditions. Camera Dirty Clean the windshield. If necessary, consult a qualified specialist workshop. \* The radar sensor system is malfunctioning. Possible causes: · Dirt on the sensors Heavy precipitation • Extended country driving without other traffic, e.g. in the desert The following systems may be affected: Active Distance Assist DISTRONIC (→ page 148) Currently Unavailable Blind Spot Assist (→ page 158) Radar Sensors Dirty Active Brake Assist (→ page 143) Driving systems and driving safety systems may be malfunctioning or temporarily unavailable. When the causes have been eliminated, the driving systems and driving safety systems will be available again. If the display message does not disappear: Stop in accordance with the traffic conditions. Clean all sensors ( $\rightarrow$ page 218). Restart the engine. If necessary, consult a qualified specialist workshop. Active Distance Assist \* Active Distance Assist DISTRONIC is operational again and can be Now Available activated ( $\rightarrow$ page 149). \* The HOLD function has been deactivated because the vehicle is slip-HOLD ping or an activation condition has not been met. Reactivate the HOLD function later on or check the HOLD function's activation conditions ( $\rightarrow$ page 151). Off Blind Spot Assist Inoper-\* Blind Spot Assist is malfunctioning (→ page 158). ative Visit a qualified specialist workshop. Blind Spot Assist Trailer \* When you establish an electrical connection with the trailer, Blind Not Monitored Spot Assist will remain available but the area beside the trailer will not be monitored. The function of Blind Spot Assist may be restricted as a result ( $\rightarrow$ page 158).

Display messages	Possible causes/consequences and ▶ Solutions
	Press the left-hand Touch Control and acknowledge the display message.
Blind Spot Assist Cur- rently Unavailable See Operator's Manual	<ul> <li>* Blind Spot Assist is temporarily unavailable (→ page 158).</li> <li>The system limits have been reached (→ page 158).</li> <li>▶ Drive on.</li> </ul>
	When the causes have been eliminated, the system will be available again.  or
	If the display message does not disappear, stop in accordance with the traffic conditions and restart the engine.
	If necessary, clean the rear bumper. If the bumper is very dirty, the sensors in the bumper may malfunction.
Active Lane Keeping Assist Camera View	* The camera view is restricted (→ page 161). Possible causes:
Restricted See Operator's Manual	Dirt on the windshield in the camera's field of vision
	Heavy precipitation or fog
	Driving systems and driving safety systems may be malfunctioning or temporarily unavailable.
	When the causes have been eliminated, the driving systems and driving safety systems will be available again.
	If the display message does not disappear:
	<ul><li>Stop in accordance with the traffic conditions.</li><li>Clean the windshield.</li></ul>
Active Lane Keeping Assist Inoperative	<ul> <li>* Active Lane Keeping Assist is malfunctioning (→ page 161).</li> <li>▶ Visit a qualified specialist workshop.</li> </ul>
Active Lane Keeping Assist Currently Unavail- able See Operator's Man- ual	<ul> <li>* Active Lane Keeping Assist is temporarily unavailable (→ page 161).</li> <li>The ambient conditions are outside the system limits (→ page 161).</li> <li>Drive on.</li> <li>When the ambient conditions are within the system limits, the system will be available again.</li> </ul>
	If the display message does not disappear:
	<ul><li>Stop in accordance with the traffic conditions.</li><li>Clean the windshield.</li></ul>
ATTENTION ASSIST Inop-	* ATTENTION ASSIST is malfunctioning.  Visit a qualified specialist workshop.
erative	

Display messages	Possible causes/consequences and ▶ Solutions
ATTENTION ASSIST: Take a Break!	<ul> <li>* ATTENTION ASSIST has detected fatigue or increasing inattentiveness on the driver's part (→ page 157).</li> <li>▶ If necessary, take a break.</li> </ul>
120 km/h!  Maximum Speed Exceeded	You have exceeded the maximum permitted speed (specific countries only).      Drive more slowly.

# Engine

Display messages	Possible causes/consequences and ▶ Solutions
Fuel Level Low	* The fuel supplies have reached the reserve level.  Refuel.
Replace Air Filter	<ul> <li>Vehicles with a diesel engine: The engine air filter is clogged and must be replaced.</li> <li>Visit a qualified specialist workshop.</li> </ul>
<b>₩</b>	* The fan motor is defective.  Without a high engine load, continue to the nearest qualified specialist workshop. Ensure that the coolant temperature display remains below 248 °F (120 °C).
Check Fuel Filter	<ul> <li>* The water that has accumulated in the water separator has reached the maximum level.</li> <li>▶ Drain the water separator (→ page 215).</li> </ul>
Engine Oil Level Cannot Be Measured	* The electrical connection to the oil level sensor has been interrupted or the oil level sensor is faulty.  Visit a qualified specialist workshop.
Engine Oil Pressure Stop Switch Off Engine	* Display message for certain engines only: The engine oil pressure is too low.  I NOTE Engine damage caused by driving with insufficient engine oil pressure  Avoid driving with insufficient engine oil pressure.

Display messages	Possible causes/consequences and ▶ Solutions
	Stop in a safe location immediately. Do not continue driving.
	Consult a qualified specialist workshop.
Check Engine Oil Level	* The engine oil level has fallen to the minimum level.
	NOTE Engine damage caused by driving with insufficient engine oil
(Add 1 Liter)	Avoid long journeys with insufficient engine oil.
	Check the engine oil level at the next fuel stop.
	Refill engine oil (→ page 211).
	Observe the notes on engine oil ( $\rightarrow$ page 273).
DT a	* Display message for certain engines only:
	The engine oil level is too high.
Engine Oil Reduce Oil	NOTE Engine damage caused by driving with excess engine oil
Level	Avoid long journeys with excess engine oil.
	Visit a qualified specialist workshop immediately and have the engine oil suctioned off.
NI a	* Display message for certain engines only:
	The engine oil level is too low.
Engine Oil Level Low Stop Vehicle Turn	NOTE Engine damage caused by driving with insufficient engine oil
Engine Off	Avoid long journeys with insufficient engine oil.
	<ul> <li>Stop in a safe location immediately. Do not continue driving.</li> <li>Switch off the engine.</li> <li>Check the engine oil level.</li> </ul>
	Add engine oil (→ page 211).
	Observe the notes on engine oil ( $\rightarrow$ page 273).
DI a	* The engine oil level has fallen to the minimum level.
Check Engine Oil At Next Refueling	NOTE Engine damage caused by driving with insufficient engine oil
	Avoid long journeys with insufficient engine oil.
	Check the engine oil level at the next fuel stop.
	Top up engine oil ( $\rightarrow$ page 211).
	Observe the notes on engine oil ( $\rightarrow$ page 273).

Display messages	Possible causes/consequences and ▶ Solutions
رج هم	* The battery's charge level is too low.
	Stop in a safe location immediately. Do not continue driving!
	Let the engine run.
Stop Vehicle Leave Engine Running	Do not continue driving until the display message goes out.
<del>- +</del>	* The battery is no longer being charged and has reached an excessively low battery charge level.
Stop Vehicle See Opera-	NOTE Possible engine damage if you continue driving
tor's Manual	<ul><li>Do not continue driving under any circumstances.</li><li>Consult a qualified specialist workshop.</li></ul>
	<ul> <li>Stop in a safe location immediately. Do not continue driving.</li> <li>Switch off the engine.</li> <li>Consult a qualified specialist workshop.</li> </ul>
12 V Battery See Operator's Manual	<ul> <li>* The engine is off and the battery charge level is too low.</li> <li>Switch off electrical consumers that are not required.</li> <li>Let the engine run for a few minutes or drive an extended distance.</li> <li>The battery is charged.</li> </ul>
ر مصم	* The battery is no longer being charged.
	NOTE Possible engine damage if you continue driving
See Operator's Manual	Do not continue driving under any circumstances.
	Consult a qualified specialist workshop.
	<ul> <li>Stop in a safe location immediately and switch off the engine.</li> <li>Consult a qualified specialist workshop.</li> </ul>
	* The coolant is too hot.
Southert Tree Het Sterr	Stop immediately in accordance with the traffic conditions and switch off the engine.
Coolant Too Hot Stop Vehicle Turn Engine Off	<b>WARNING</b> Danger of burns when opening the hood
	If you open the hood when the engine has overheated or during a fire in the engine compartment, you could come into contact with hot gases or other escaping operating fluids.
	Before opening the hood, allow the engine to cool down.
	In the event of a fire in the engine compartment, keep the hood closed and call the fire service.
	▲ WARNING Risk of scalding from hot coolant
	The engine cooling system is pressurized, particularly when the engine is warm. If you open the cap, you could be scalded by hot coolant spraying out.

# Display messages Possible causes/consequences and > Solutions Let the engine cool down before opening the cap. When opening the cap, wear protective gloves and safety glasses. Open the cap slowly to release pressure. Wait until the engine has cooled down. Ensure that the air supply to the engine radiator is not obstructed. Avoiding high engine loads, continue to the nearest qualified specialist workshop. Ensure that the coolant temperature display remains below 248°F (120°C). \* The coolant level is too low. ▲ WARNING Risk of scalding from hot coolant The engine cooling system is pressurized, particularly when the Check Coolant Level See engine is warm. If you open the cap, you could be scalded by hot Operator's Manual coolant spraying out. Let the engine cool down before opening the cap. When opening the cap, wear protective gloves and safety glasses. Open the cap slowly to release pressure. **NOTE** Engine damage due to insufficient coolant Avoid long journeys with insufficient coolant. Top up coolant (→ page 213). Regeneration Not Possi-\* Not all conditions have been met for regeneration of the diesel particble ulate filter ( $\rightarrow$ page 117). Continue driving as normal until all conditions have been met for regeneration of the diesel particulate filter.

#### DEF (Diesel Exhaust Fluid)

## Display messages



Refill Additive See Operator's Manual

## Possible causes / consequences and ▶ Solutions

message still appears on the instrument cluster.

Consult a qualified specialist workshop.

\* In addition, the yellow <u>S</u> DEF indicator lamp lights up on the instrument cluster and a warning tone sounds.

The DEF supply has fallen below the first warning threshold.

The load condition of the diesel particulate filter is over 50% and the

## Display messages



Refill Additive Starts until Emerg. Op.: XXX See Operator's Manual

## Possible causes/consequences and ▶ Solutions

\* In addition, the yellow DEF indicator lamp lights up and a warning tone sounds.

The DEF supply has fallen below the reserve mark.

After the message appears for the first time, the remaining DEF supply will last for approximately 1200 miles (1900 km). The engine can then only be started another 16 times. The number of remaining engine starts XX (16 to 1) is shown in the message every time the engine is started.

Add at least 2.5 gal (9.5 l) of DEF ( $\rightarrow$  page 132). The  $\bigtriangleup$  DEF indicator lamp only disappears when the vehicle is stationary, at the latest after 20 seconds, as soon as you switch on the ignition or start the engine after topping up.



Refill Additive Emergency Op.: XXX mph See Operator's Manual

\* In addition, the yellow DEF indicator lamp [ lights up on the instrument cluster and a warning tone sounds.

If the Refill Additive Emergency Op.: XXX mph See Operator's Manual display message is shown, you can only drive the vehicle at a maximum speed of 5 mph (8 km/h).

Add at least 2.5 gal (9.5 l) of DEF ( $\rightarrow$  page 132). The DEF indicator lamp only disappears when the vehicle is stationary, at the latest after 20 seconds, as soon as you switch on the ignition or start the engine after refilling.



Additive System Fault See Operator's Manual \* In addition, the yellow [ Check Engine warning lamp on the instrument cluster lights up and a warning tone sounds.

The DEF reducing agent is contaminated, diluted or is not compliant with ISO 22241.

► Have the DEF supply tank cleaned and refilled at a qualified specialist workshop as soon as possible.



Additive System Fault Starts until Emerg. Op.: XXX See Operator's Manual

\* In addition, the yellow Check Engine warning lamp on the instrument cluster lights up and a warning tone sounds.

The DEF reducing agent is contaminated, diluted or is not compliant with ISO 22241.

The exhaust gas aftertreatment system is defective or an emissionsrelevant malfunction has occurred. This malfunction or fault can damage the exhaust gas aftertreatment system.

After the message appears for the first time, the engine can be started another 10 times. The number of remaining engine starts XX (10 to 1) is shown in the message every time the engine is started.

Consult a qualified specialist workshop immediately.



Additive System Fault Emergency Op.: XXX mph See Operator's Manual

ment cluster lights up and a warning tone sounds.

The DEF reducing agent is contaminated, diluted or is not compliant with ISO 22241.

In emergency operating mode, you can drive the vehicle only at a maximum speed of 5 mph (8 km/h).

Consult a qualified specialist workshop immediately.

## Tires

Tires	
Display messages	Possible causes/consequences and ▶ Solutions
Tire Pressure Monitor Inoperative No Wheel Sensors	* The installed wheels do not have suitable tire pressure sensors. The tire pressure monitor has been switched off.
Sensors	Install wheels with suitable tire pressure sensors.
(1)	* The tire pressure sensor signal is missing from one or more tires. No pressure value is displayed for the tire in question.
Tire Press. Sen. Missing	Have the faulty tire pressure sensor replaced at a qualified specialist workshop.
Tire Press. Monitor Currently Unavailable	* There is interference from a powerful source of radio waves As a result, no signals from the tire pressure sensors are received. The tire pressure monitor is temporarily unavailable.
	<ul> <li>Continue driving.</li> <li>As soon as the cause has been eliminated, the tire pressure monitor automatically switches on.</li> </ul>
<b>(!)</b>	$\mbox{\ensuremath{^{\star}}}$ The pressure in one or more tires suddenly falls. The wheel position is shown.
Warning Tire Malfunction	<b>WARNING</b> Risk of an accident from driving with a flat tire
Warning Tire Malfunction	Flat tires are dangerous in the following ways:
	The tires can overheat and cause a fire.
	The driving characteristics, as well as steering and braking, may be greatly impaired.
	You could then lose control of the vehicle.
	▶ Do not drive with a flat tire.
	Observe the notes on flat tires.
	Information about flat tires ( $\rightarrow$ page 224).
	<ul><li>Stop the vehicle in accordance with the traffic conditions.</li><li>Check the tires.</li></ul>
<b>(!)</b>	* The pressure in one or more tires has fallen significantly. The wheel position is shown.
Check Tires	<b>WARNING</b> Risk of an accident due to insufficient tire pressure
	Tire pressures that are too low pose the following hazards:
	The tires may burst, especially as the load and vehicle speed increase.
	The tires may wear excessively and/or unevenly, which may greatly impair tire traction.
	The driving characteristics, as well as steering and braking, may be greatly impaired.
	You could then lose control of the vehicle.
	Observe the recommended tire pressure.
	Adjust the tire pressure if necessary.

Display messages	Possible causes/consequences and ▶ Solutions
	<ul> <li>Stop in accordance with the traffic conditions.</li> <li>Check the tire pressure (→ page 240) and the tires.</li> </ul>
<b>(!)</b>	* The pressure in at least one tire is too low or the pressures of the individual tires deviate too much from each other.
Please Correct Tire Pressure	<ul> <li>Check the tire pressure, and add air if necessary.</li> <li>When the tire pressure has been set correctly, re-start the tire pressure monitor (→ page 246).</li> </ul>
Tire Pressure Monitor Inoperative	<ul><li>* The tire pressure monitor is malfunctioning.</li><li>Visit a qualified specialist workshop.</li></ul>

#### Key

# Display messages Possible causes/consequences and ▶ Solutions \* This message reminds you not to leave your SmartKey in the vehicle. Take the SmartKey with you when you get out of the vehicle. Don't Forget Your Key \* SmartKey detection is malfunctioning. Change the SmartKey's position in the vehicle. Start the vehicle with the SmartKey in the marked space Place the Key in the $(\rightarrow page 107).$ Marked Space See Operator's Manual \* The SmartKey is not detected and may no longer be in the vehicle. The SmartKey is no longer in the vehicle and you switch the engine Key Not Detected (red · You can no longer start the engine. display message) You cannot lock the vehicle centrally. Ensure that the SmartKey is in the vehicle. If the SmartKey detection function has a malfunction due to a strong radio signal source, proceed as follows: Stop the vehicle immediately in accordance with the traffic conditions. Place the SmartKey in the marked space for starting with the SmartKey ( $\rightarrow$ page 107). \* The SmartKey is currently not detected. Change the SmartKey's position in the vehicle. If the SmartKey is still not detected, start the engine with the Key Not Detected (white SmartKey in the marked space ( $\rightarrow$ page 107). display message)

## Vehicle

Display messages	Possible causes/consequences and ▶ Solutions
Refill Washer Fluid	<ul> <li>* The washer fluid level in the washer fluid reservoir has dropped below the minimum.</li> <li>▶ Add washer fluid (→ page 214).</li> <li>If the display message still appears:</li> </ul>
	<ul> <li>Consult a qualified specialist workshop.</li> <li>* At least one door is open.</li> <li>Close all the doors.</li> </ul>
	* The hood is open.
	<b>WARNING</b> Risk of accident if the engine hood is unlatched while driving
	An unlocked engine hood may open up when the vehicle is in motion and block your view.  Never unlatch the engine hood while driving.  Before every trip, ensure that the engine hood is latched.
	<ul><li>Stop the vehicle immediately in accordance with the traffic conditions.</li><li>Close the hood.</li></ul>
Inoperative See Operator's Manual	<ul> <li>* The stationary heater is temporarily malfunctioning.</li> <li>When the vehicle is at a standstill in a horizontal position and the engine has cooled down: try to switch on the stationary heater four times, leaving a gap of several minutes between each attempt.</li> <li>If the stationary heater does not switch on: consult a qualified specialist workshop.</li> </ul>

D'1	Describe and American American
Display messages	Possible causes/consequences and ▶ Solutions
Inoperative Refuel Vehicle	<ul> <li>* There is too little fuel in the fuel tank. The stationary heater cannot be switched on.</li> <li>Refuel the vehicle.</li> </ul>
Inoperative Battery Low	<ul> <li>* The on-board electrical system voltage is too low.</li> <li>The stationary heater has switched off.</li> <li>Drive an extended distance until the battery has been sufficiently charged again.</li> </ul>
	* The steering power assistance is malfunctioning.
Steering Malfunction	<b>WARNING</b> Risk of an accident due to altered steering characteristics
Increased Physical Effort See Operator's Manual	If the power assistance of the steering fails partially or completely, you will need to use more force to steer.
	If safe steering is possible, drive on carefully.
	Visit or consult a qualified specialist workshop immediately.
	If safe steering is possible, drive on carefully.
	Visit or consult a qualified specialist workshop immediately.
	* The steering is malfunctioning. Steerability is heavily impaired.
	<b>WARNING</b> Risk of accident if steering capability is impaired
Steering Malfunction Stop Immediately See	If the steering does not function as intended, the vehicle's operating safety is jeopardized.
Operator's Manual	Pull over and stop the vehicle safely as soon as possible, paying attention to road and traffic conditions. Do not con- tinue driving under any circumstances.
	Consult a qualified specialist workshop.
	Stop the vehicle immediately in accordance with the traffic conditions. Do not continue driving.
	Consult a qualified specialist workshop.
Shift to 'P' or 'N' to Start Engine	* You have attempted to start the engine in transmission position $\boxed{\textbf{D}}$ or $\boxed{\textbf{R}}.$
	Shift the transmission to position P or N.
To Engage Transmiss. Position R First Depress the Brake	<ul> <li>You have attempted to shift from position D or N to position R.</li> <li>Depress the brake pedal.</li> <li>Shift the transmission to position R.</li> </ul>
Air Conditioning Malfunction See Operator's Manual	<ul> <li>* The function of the climate control system is temporarily restricted.         The quantity of air and flow of fresh air are controlled automatically.     </li> <li>Have the climate control system checked at a qualified specialist workshop.</li> </ul>

Display messages	Possible causes/consequences and ▶ Solutions
Auxiliary Battery Mal- function	<ul> <li>* The auxiliary battery for the transmission is no longer being charged.</li> <li>Visit a qualified specialist workshop.</li> <li>Until then, always shift the transmission to position P manually before you switch off the engine.</li> <li>Before leaving the vehicle, apply the parking brake.</li> </ul>
Reversing Not Possible Service Required	<ul> <li>* The transmission is malfunctioning. It is no longer possible to select reverse gear.</li> <li>Visit a qualified specialist workshop.</li> </ul>
Transmission Malfunction Stop	<ul> <li>* The transmission is malfunctioning. The transmission automatically shifts to position N.</li> <li>Stop the vehicle immediately in accordance with the traffic conditions.</li> <li>Shift the transmission to position P.</li> <li>Consult a qualified specialist workshop.</li> </ul>
Vehicle Operational Switch the Ignition Off Before Exiting	<ul> <li>You are about to exit the vehicle when it is in a ready-to-drive state.</li> <li>When you exit the vehicle, switch off the ignition and take the key with you.</li> <li>If you do not exit the vehicle, switch off the electrical consumers, e.g. the seat heating. Otherwise, the 12-V battery may discharge and it will be possible to start the vehicle only with the aid of a second battery (starting assistance).</li> </ul>
Service Required Do Not Shift Gears Visit Dealer	<ul> <li>* The transmission is malfunctioning. The transmission position can no longer be changed.</li> <li>If the transmission is in position  , visit a qualified specialist workshop, without changing the transmission position.</li> <li>For all other transmission positions, park the vehicle in a safe location.</li> <li>Inform a qualified specialist workshop or breakdown service.</li> </ul>
Only Shift to 'P' when Vehicle is Stationary	* The transmission can only be shifted to position <b>P</b> if the vehicle is at a standstill.
N Permanently Active Risk of Rolling Away	<ul> <li>* While the vehicle is rolling or driving, the transmission was shifted to position N.</li> <li>To stop, depress the brake pedal and, when the vehicle is at a standstill, shift the transmission to position P.</li> <li>To continue your journey, shift the transmission to position D or R.</li> </ul>
Driver's Door Open & Transmission Not in P Risk of Vehicle Rolling Away	<ul> <li>* The driver's door is not fully closed and the transmission is in position R, N or D.</li> <li>When parking the vehicle, shift the transmission to position P.</li> </ul>
Apply Brake to Shift from 'P'	<ul> <li>You have attempted to shift to a different transmission position from position P.</li> <li>Depress the brake pedal.</li> </ul>

## Display messages



Veh. Tracking Activated See Op. Manual or mobile app



Step Not Extended See Operator's Manualor Step Not Extended Malfunction



Step Not Retracted See Operator's Manualor step not retracted malfunction

## Possible causes/consequences and ▶ Solutions

- \* The vehicle has activated services from Mercedes PRO at its disposal. Locating the vehicle may be possible within the framework of Mercedes PRO connect.
  - Check the status of the activated services at http:// mercedes.pro.
  - Ask the vehicle owner for the details.
- \* The electrical step is not, or is only partially, extended.
  - Ensure there is sufficient clearance for the electrical step.
  - Open or close the sliding door again.
  - If the electrical step does not completely extend again, push it in manually (emergency release) ( $\rightarrow$  page 60).
  - Inform passengers that the step is missing before they exit the vehicle.
- \* The electric step is not, or is only partially, retracted.
  - Ensure there is sufficient clearance for the electric step.
  - Open or close the sliding door again.
  - If the electric step does not completely retract again, push it in manually (emergency release) ( $\rightarrow$  page 60).

## Lights

## Display messages



Switch On Headlamps



Check Left Low Beam (example)

Adaptive Highbeam Assist Camera View Restricted See Operator's Manual

- Possible causes/consequences and ▶ Solutions
  - \* You are driving without the low beam.
  - ► Turn the light switch to the D position.

  - Turn the light switch to the AUTO position.
- \* The corresponding light source is faulty.
  - Consult a qualified specialist workshop.
- Check whether changing the bulb is permitted.
- \* The camera view is reduced. Possible causes:
  - Dirt on the windshield in the camera's field of vision
  - Heavy precipitation or fog

Driving systems and driving safety systems may be malfunctioning or temporarily unavailable.

When the causes have been eliminated, the driving systems and driving safety systems are available again.

If the display message does not go out:

Stop in a safe location.

Display messages

Diopidy micoodeco	1 cooldie caacedy contecquences and P conditions
	Clean the windshield.
Adaptive Highbeam Assist Currently Unavail- able See Operator's Man- ual	<ul> <li>* Adaptive Highbeam Assist is temporarily unavailable.</li> <li>The system limits have been reached (→ page 86).</li> <li>▶ Continue driving.</li> <li>When the causes have been eliminated, the system will be available again. The display message Adaptive Highbeam Assist Now Available appears.</li> </ul>
Adaptive Highbeam Assist Inoperative	<ul> <li>* Adaptive Highbeam Assist is malfunctioning.</li> <li>Visit a qualified specialist workshop.</li> </ul>
Auto Lamp Function Inoperative	<ul> <li>* The light sensor is malfunctioning.</li> <li>Visit a qualified specialist workshop.</li> </ul>
Switch Off Lights	* You are leaving the vehicle and the light is still switched on.  Turn the light switch to position AUTO.
Malfunction See Opera-	* The exterior lighting is malfunctioning.  Visit a qualified specialist workshop.  * Vehicles with trailer hitch: a fuse may have blown.  Stop in accordance with the traffic conditions.

Possible causes/consequences and ▶ Solutions

## Indicator and warning lamps

## Overview of indicator and warning lamps

Some systems will perform a self-test when the ignition is switched on. Some indicator and warning lamps may briefly light up or flash. This behavior is non-critical. These indicator and warning lamps indicate a malfunction only if they light up or flash after the engine has been started or during a journey.

# Indicator and warning lamps:

■D	Low beam (→ page 84)
->00€	Parking lamps (→ page 84)
<b>≣</b> D	High beam ( $\rightarrow$ page 85)
<b>\$</b>	Turn signal lights ( $\rightarrow$ page 85)
0≢	Rear fog lamp (→ page 84)
Ä	Seat belt not fastened ( $\rightarrow$ page 31
BRAKE and	USA: Brakes (red) (→ page 305)

0 1 ( 1 0 /
High beam (→ page 85)
Turn signal lights ( $\rightarrow$ page 85)
Rear fog lamp (→ page 84)
Seat belt not fastened ( $\rightarrow$ page 311)
USA: Brakes (red) (→ page 305)

**≱** 

<b>(</b> D)	Canada: Brakes (red) (→ page 305)
(D)	Brakes (yellow) (→ page 305)
	ABS malfunction ( $\rightarrow$ page 305)
LOW RANGE	Off-road gear
<b>F</b>	$ESP^{\text{(R)}}$ ( $\rightarrow$ page 305)
OFF .	ESP <sup>®</sup> OFF (→ page 305)
₹.6-	Active Brake Assist switched off (→ page 143)
PARK and (P)	USA: Electric parking brake applied (red) $(\rightarrow$ page 305)
(P)	Canada: Electric parking brake applied (red) (→ page 305)
(P)	Electric parking brake (yellow) (→ page 305)
<b>⊕</b> !	Electric power steering malfunction $(\rightarrow page 311)$
<u>-</u>	Electrical malfunction ( $\rightarrow$ page 312)

Restraint system (→ page 305)

Check Engine ( $\rightarrow$  page 312)

4₽ Fuel reserve with fuel filler cap loca-

tion indicator ( $\rightarrow$  page 312)

~£ Coolant too hot/cold ( $\rightarrow$  page 312)

A Distance warning ( $\rightarrow$  page 311)

900 Preglow

(i) Tire pressure monitoring system

 $(\rightarrow page 246, 244, 246, 245)$ 

## Safety systems

#### Warning/indicator lamp



and



Electric parking brake applied red indicator lamp (USA) does not light up



Electric parking brake applied red indicator lamp (Canada) does not light up



Electric parking brake malfunctioning yellow indicator lamp lights up

## Possible causes/consequences and ▶ Solutions

\*Vehicles with electric parking brake: the electric parking brake red indicator lamp does not light up. The electric parking brake yellow indicator lamp lights up.

Meaning of the indicator lamps:

- The red indicator lamp does not light up: the electric parking brake has been released.
- The yellow indicator lamp lights up: the electric parking brake is malfunctioning.
- Observe the messages on the multifunction display.
- Switch the ignition off and back on.
- If the fault message persists, consult a qualified specialist workshop.
- Park the vehicle only on level ground and secure it against rolling away ( $\rightarrow$  page 137).



and



Red electric parking brake applied indicator lamp (USA) lights up



Red electric parking brake applied indicator lamp (Canada) lights up



Electric parking brake malfunctioning vellow indicator lamp lights up

#### Possible causes/consequences and > Solutions

\*Vehicles with electric parking brake: the red and yellow electric parking brake indicator lamps light up.

Meaning of the indicator lamps:

- The electric parking brake red indicator lamp lights up: the electric parking brake has been applied.
- The electric parking brake yellow indicator lamp lights up: the electric parking brake is malfunctioning.
- Observe the messages on the multifunction display.
- Switch the ignition off and back on.
- If the fault message persists, consult a qualified specialist workshop.
- If it is not possible to release the electric parking brake, do not drive the vehicle.



and



Red electric parking brake applied indicator lamp (USA) flashes



Red electric parking brake applied indicator lamp (Canada) flashes



Electric parking brake malfunctioning yellow indicator lamp lights up \*Vehicles with electric parking brake: the electric parking brake red indicator lamp flashes. The electric parking brake yellow indicator lamp lights up.

Meaning of the indicator lamps:

- The electric parking brake red indicator lamp flashes: the activation status of the electric parking brake is unknown.
- The electric parking brake yellow indicator lamp lights up: the electric parking brake is malfunctioning.
- Observe the messages on the multifunction display.
- Switch the ignition off and back on.
- Engage and release the electric parking brake using the switch while depressing the brake pedal.
- If the fault message persists, park the vehicle on level ground and secure it against rolling away ( $\rightarrow$  page 137).
- Consult a qualified specialist workshop.
- When the red indicator lamp flashes, the vehicle must not be driven as the brake system may overheat.



and



Red electric parking brake applied indicator lamp (USA) lights up



Red electric parking brake applied indicator lamp (Canada) lights up



The electric parking brake malfunctioning yellow indicator lamp does not light up

## Possible causes/consequences and ▶ Solutions

\*Vehicles with electric parking brake: the electric parking brake red indicator lamp lights up. The electric parking brake yellow indicator lamp does not light up.

Meaning of the indicator lamps:

- The electric parking brake red indicator lamp lights up: the electric parking brake has been applied.
- The electric parking brake yellow indicator lamp does not light up: there are no faults with the electric parking brake.
- Do not drive the vehicle if the electric parking brake has been applied.



and



Red parking brake applied indicator lamp (USA) lights up



Red parking brake applied indicator lamp (Canada) lights up



Brake system warning lamp (yellow)

\*Vehicles with manual parking brake: the parking brake red indicator lamp lights up.

Meaning of the indicator lamp:

- The parking brake red indicator lamp lights up: the parking brake has been applied.
- Do not drive the vehicle if the parking brake has been applied.

\*The brake system yellow warning lamp lights up while the engine is on.

WARNING Risk of an accident due to a brake system malfunc-

If the brake system is malfunctioning, braking characteristics may be impaired.

Drive on carefully.

## Possible causes/consequences and > Solutions

- Have the brake system checked immediately at a qualified specialist workshop.
- Drive on carefully at an adjusted speed and at a sufficient distance from the vehicle in front.
- If the multifunction display shows a display message, comply with it.
- Visit a qualified specialist workshop.





Brake warning lamp (red) (USA)



Brake warning lamp (red) (Canada)

- \*The brake system red warning lamp lights up while the engine is on. Possible causes:
  - · The brake force boosting is malfunctioning.
  - The EBD (electronic brake force distribution) is malfunctioning.
  - There is not enough brake fluid in the brake fluid reservoir.

WARNING Risk of accident and injury if brake force boosting is malfunctioning

If brake force boosting is malfunctioning, increased brake pedal force may be necessary for braking. The braking characteristics may be impaired. The braking distance can increase in emergency braking situations.

- Stop in a safe location immediately. Do not continue driving.
- Consult a qualified specialist workshop.
- WARNING Risk of an accident if the EBD (electronic brake force distribution) malfunctions

If the EBD malfunctions, the wheels may lock during braking. The braking characteristics may be impaired.

The braking distance can increase in emergency situations.

- Stop in a safe location immediately. Do not continue driving.
- Consult a qualified specialist workshop.

## WARNING Risk of an accident due to low brake fluid level

If the brake fluid level is too low, the braking effect and the braking characteristics may be impaired.

- Pull over and stop the vehicle safely as soon as possible, paying attention to road and traffic conditions. Do not continue driving under any circumstances.
- Consult a qualified specialist workshop.
- Do not add brake fluid.
- Stop the vehicle immediately in accordance with the traffic conditions. Do not continue driving.
- Consult a qualified specialist workshop.



and




Brake warning lamp (red) (USA)

## Possible causes/consequences and > Solutions

\*Only in the USA: The brake system red warning lamp lights up while the engine is on.

#### Possible cause:

The brakepads have reached their wear limit.



When the brake pads have reached their wear limit, the braking power may be restricted.

- Drive on carefully.
- Have the brake system checked immediately at a qualified specialist workshop.
- Drive on carefully.
- Consult a qualified specialist workshop immediately.



Restraint system warning lamp

\*The restraint system red warning lamp is lit while the engine is on. The restraint system is malfunctioning.

**WARNING** Risk of injury due to malfunctions in the restraint

Components in the restraint system may be activated unintentionally or not deploy as planned in an accident.

► Have the restraint system checked and repaired immediately at a qualified specialist workshop.

#### Detection of a restraint system malfunction:

- The prestraint system warning lamp does not light up when the ignition is switched on.
- The 👺 restraint system warning lamp lights up continuously or repeatedly during a journey.
- Drive on carefully.
- Observe the messages on the multifunction display.
- Consult a qualified specialist workshop immediately.



ESP® warning lamp lights up

\*The ESP® yellow warning lamp lights up while the engine is on. ESP® is malfunctioning.

Other driving systems and driving safety systems may also be malfunctioning.

## **A** WARNING Risk of skidding if ESP® is malfunctioning

If ESP® is malfunctioning, ESP® cannot carry out vehicle stabilization. In addition, other driving safety systems are switched off.

- Drive on carefully.
- Have ESP® checked at a qualified specialist workshop.
- Drive on carefully.
- Observe the messages on the multifunction display.

#### Seat belt

# Warning/indicator lamp



Seat belt warning lamp flashes

# Possible causes/consequences and ▶ Solutions

\*The seat belt red warning lamp flashes and an intermittent warning tone sounds.

The driver or front passenger does not have their belt on while the vehicle is in motion (speeds above 15 mph (25 km/h)).

 $\triangleright$  Put on the seat belt ( $\rightarrow$  page 36).

There are objects on the front passenger seat.

Remove the objects from the front passenger seat.



Seat belt warning lamp lights up

\*The seat belt red warning lamp lights up after the engine has started.

A warning tone may also sound.

When the vehicle is stationary: The seat belt warning lamp reminds drivers and front passengers to put on their seat belt.

Put on the seat belt (→ page 36).

Objects on the front passenger seat may prevent the seat belt warning lamp from going out.

## **Driving systems**

#### Warning/indicator lamp



Distance warning lamp

## Possible causes/consequences and ▶ Solutions

\*The red distance warning lamp lights up while you are driving and a warning tone sounds.

You are approaching an obstacle at too high a speed.

- Be ready to apply the brakes immediately.
- Increase the distance.

#### Vehicle

#### Warning/indicator lamp



Power steering system warning lamp

## Possible causes/consequences and ▶ Solutions

\*The power steering system red warning lamp lights up while the engine is on.

The power steering assistance or the steering itself is malfunctioning.

**WARNING** Risk of accident if steering capability is impaired

If the steering no longer functions as intended, the vehicle's operating safety is jeopardized.

Consult a qualified specialist workshop.

Observe the messages on the multifunction display.

#### **Engine**

## Warning/indicator lamp

Coolant warning lamp

## Possible causes/consequences and ▶ Solutions

- \*The red coolant warning lamp lights up while the engine is running. Possible causes:
  - · temperature sensor malfunctioning
  - · coolant level too low
  - · air supply to the engine radiator obstructed
  - · engine radiator fan faulty

If a warning tone also sounds, the coolant has exceeded the temperature of 248 °F (120 °C).

## WARNING Danger of burns when opening the hood

If you open the hood when the engine has overheated or during a fire in the engine compartment, you could come into contact with hot gases or other escaping operating fluids.

- ▶ Before opening the hood, allow the engine to cool down.
- In the event of a fire in the engine compartment, keep the hood closed and call the fire service.
- Stop immediately in accordance with the traffic conditions and switch off the engine. Do not continue driving.
- Observe the messages on the multifunction display.

If the coolant temperature display is at the lower end of the temperature scale:

Consult a qualified specialist workshop.

#### Otherwise:

- Leave the vehicle and keep a safe distance from the vehicle until the engine has cooled down.
- Check the coolant level ( $\rightarrow$  page 213).
- Ensure that the air supply to the engine radiator is not obstructed.
- Without subjecting the engine to excessive strain, continue to the nearest qualified specialist workshop. Ensure that the coolant temperature display remains below 248 °F (120 °C).



Electrical malfunction warning lamp

\*The electrical malfunction red warning lamp lights up. A malfunction has occurred in the electrics.

Read the messages on the multifunction display.



Fuel reserve warning lamp

- \*The yellow fuel reserve warning lamp lights up while the engine is on. The fuel supply has dropped into the reserve range.
- Refuel.



Engine diagnosis warning lamp

## Possible causes/consequences and > Solutions

\*The yellow Check Engine warning lamp lights up while the engine is on. A malfunction has occurred in the engine, the exhaust system or the fuel system.

The emissions limit value may have been exceeded and the engine may be running in emergency operation mode.

Have the vehicle checked as soon as possible at a qualified specialist workshop.

#### Tires

## Warning/indicator lamp



Tire pressure monitoring system warning lamp flashes

## Possible causes/consequences and > Solutions

\*The yellow tire pressure monitoring system warning lamp (pressure loss/malfunction) flashes for roughly one minute and then lights up permanently.

The tire pressure monitoring system is malfunctioning.

**WARNING** There is a risk of an accident if the tire pressure monitoring system is malfunctioning

If the tire pressure monitoring system is malfunctioning, it is not able to issue a warning if there is pressure loss in one or more of the tires.

Underinflated tires may, for example, impair the driving, steering and braking characteristics.

- ► Have the tire pressure monitoring system checked at a qualified specialist workshop.
- Visit a qualified specialist workshop.



Tire pressure monitoring system warning lamp lights up

\*The yellow tire pressure monitoring system warning lamp (pressure loss/malfunction) lights up.

The tire pressure monitoring system has detected a loss of pressure in at least one tire.

**WARNING** Risk of an accident due to insufficient tire pressure

Tire pressures that are too low pose the following hazards:

- The tires may burst, especially as the load and vehicle speed increase.
- The tires may wear excessively and/or unevenly, which may greatly impair tire traction.
- The driving characteristics, as well as steering and braking, may be greatly impaired.

You could then lose control of the vehicle.

- Observe the recommended tire pressure.
- Adjust the tire pressure if necessary.
- Stop the vehicle in accordance with the traffic conditions.
- Check the tire pressure and the tires.

3-zone automatic climate control (control panel)	1, 2, 3	Additives
trol panel).         99         Additives (lergine oil) see DEF see DEF see DEF see DEF see DEF see Socket (12 V)           115 V socket see Socket (115 V)         4dditives (lengine oil) see Additives (fuel) see Fuel Additives (fuel) see Fuel See Fuel Address book see Contacts           Amount of Care	3-zone automatic climate control (con-	
12 V socket   see Socket (12 V)   See Socket (12 V)   See Socket (15 V)   See Socket (15 V)   See Fuel		•
See Additive   See Additive   See Additive   See Fuel	12 V socket	
Additives (fuel)   See Fuel	see Socket (12 V)	
See Fuel   Address book   See Contacts		
Address book   See Contacts   Switching on/off	see Socket (115 V)	
Selecting a view.   157		
ABS (Anti-lock Braking System)		
ABS (Anti-lock Braking System)		
ABS (Anti-lock Braking System). 140  Acceleration see Using kickdown  Accident and Breakdown Management Mercedes me connect. 179  Acoustic locking verification signal Activating/deactivating. 48 Active Brake Assist Function/notes. 143 Setting. 145 Active Distance Assist DISTRONIC Calling up a speed. 149 Requirements. 149 Requirements. 149 Requirements. 149 Switching off/deactivating. 149 Switching off/deactivating. 149 Switching off/deactivating. 149 Switching off/deactivating. 149 System limitations. 148 Active Lane Keeping Assist Activating/deactivating. 161 System limitations. 161 Trailer operation. 161 Adaptive cruise control see Active Distance Assist DISTRONIC  Additive Highbeam Assist Function. 86 Switching on/off. 86 Switching on/off. 86 Switching on/off. 86 Add-on equipment. 21 Addditive wehicles). 91 Addditive DEF. 130, 272  After-sales service center see ASSYST PLUS  Afterosales service center see ASSYST PLUS  Air nozzles see Air vents  Air verts adjusting (front). 102 Adjusting (roof). 102 Aribag Activation. 34 Airbag Activation		
Acceleration see Using kickdown         After-sales service center see ASSYST PLUS           Accident and Breakdown Management Mercedes me connect.         179           Acoustic locking verification signal Activating/deactivating.         48           Active Brake Assist Function/notes.         143 Setting.         145 Active Distance Assist DISTRONIC         Active Distance Assist DISTRONIC         140 Activating (front).         102 Adjusting (front).         103 Adjusting (front).         102 Adjusting (front).         <	A	Function 163
Acceleration see Using kickdown         After-sales service center see ASSYST PLUS           Accident and Breakdown Management Mercedes me connect.         179           Acoustic locking verification signal Activating/deactivating.         48           Active Brake Assist Function/notes.         143 Setting.         443 Activation.         444 Adjusting (roof).         102 Rear passenger compartment.         103 Adjusting (roof).         102 Adjusting (roof).         102 Rear passenger compartment.         103 Adjusting (roof).         102 Adjusting (roof).         103 Adjusting (roof).         102 Adjusting (roof).         102 Adjusting (roof).         103 Adjusting (roof).         102 Adjusting (roof).         102 Adjusting (roof).         102 Adjusting (roof).         103 Adjusting (roof).         103 Adjusting (roof).         103 Adjusting (roof).         104 Adju	ABS (Anti-lock Braking System) 140	Switching on/off 163
Accident and Breakdown Management Mercedes me connect	Acceleration	
Accoustic locking verification signal		
Active Brake Assist Function/notes		
Active Brake Assist Function/notes		Air vents
Active Brake Assist   Function/notes.   143   Setting.   145   Active Distance Assist DISTRONIC   Calling up a speed.   149   Function.   148   Increasing/decreasing speed.   149   Requirements.   149   Steering wheel buttons.   149   Switching off/deactivating.   149   System limitations.   149   System limitations.   148   Activating/deactivating.   149   System limitations.   148   Active Lane Keeping Assist   Activating/deactivating.   162   Function.   161   System limitations.   161   System limitations.   161   Adaptive operation.   161   Engaging disengaging.   123   LOW range.   124   Notes.   122   Add-on equipment guidelines.   21   Overview.   196   Add-on equipment guidelines.   21   Overview.   196   Additional turn signal light (all-wheel drive vehicles).   91   Transferred vehicle data.   197   Additive   DEF.   130, 272   Pets in the vehicle.   46   Additional turn vehicles.   46   Additional turn vehicles.   46   Additive   DEF.   130, 272   Pets in the vehicle.   46   Additive   Animals   Pets in the vehicle.   46   Additional turn vehicles.   46   Additional turn vehicles.   46   Additional turn signal light (all-wheel drive vehicles).   46   Additive   Animals   Pets in the vehicle.   46   Additional turn vehicles.   46   Additional turn vehicles.   46   Additional turn vehicles.   46   Additional turn vehicles.   46   Additive   Animals   Pets in the vehicle.   46   Additional turn vehicles.		adjusting (front) 102
Function   notes   143   Setting   145   Setting   145   Setting   145   Active Distance Assist DISTRONIC   Calling up a speed   149   Function   148   Overview   37   Installation locations   37   Installation loc		, 8( )
Active Distance Assist DISTRONIC   Calling up a speed		Rear passenger compartment 103
Active Distance Assist DISTRONIC         Activation		. •
Calling up a speed	9	
Function		
Increasing/decreasing speed. 149 Requirements. 149 Steering wheel buttons. 149 Switching a speed. 149 Switching on/activating. 149 System limitations. 148  Active Lane Keeping Assist Activating/deactivating. 162 Function. 161 System limitations. 161 System limitations. 161 Trailer operation. 161 System Distance Assist DISTRONIC  Adaptive Highbeam Assist Function. 86 Switching on/off. 86 Switching on/off. 86 Add-on equipment. 21 Addd-on equipment guidelines. 21 Additive DEF. 130, 272  Protection impaired. 37 Side airbag. 37 Window curtain airbag. 37 Alarm system see ATA (Anti-Theft Alarm system) Alarm system see ATTENTION ASSIST All-wheel drive Engaging. 123 LOW range. 124 Notes. 122 Android Auto Connecting a mobile phone (wire-less). 196 Ending. 197 Note. 196 Sound settings. 197 Transferred vehicle data. 197 Additive DEF. 130, 272  Protection impaired. 38 Protection impaired. 37 Side airbag. 37 Window curtain airbag. 37 Alarm system see ATA (Anti-Theft Alarm system) Alertness assistant see ATTENTION ASSIST  All-wheel drive  Engaging/disengaging. 123 LOW range. 124 Notes. 122 Notes. 122 Note. 196 Sound settings. 197 Transferred vehicle data. 197 Transferred vehicle data. 197 Additive DEF. 130, 272  Protection provided. 37 Side airbag. 37 Window curtain airbag. 37 Window curtain airbag. 37 Alarm system see ATA (Anti-Theft Alarm system) Alertness assistant see ATTENTION ASSIST  All-wheel drive See ATTENTION ASSIST  Alertness assistant see ATTENTION assist see ATTENTION assi		
Steering wheel buttons		
Storing a speed	the state of the s	
Switching off/deactivating		
Switching on/activating		Window curtain airbag 37
System limitations		Alarm system
Active Lane Keeping Assist    Activating/deactivating	0 , 0	see ATA (Anti-Theft Alarm system)
Activating / deactivating		
Function         161         All-wheel drive           System limitations         161         Engaging         123           Trailer operation         161         Engaging/disengaging         123           Adaptive cruise control see Active Distance Assist DISTRONIC         LOW range         124           Adaptive Highbeam Assist Function         86         Android Auto           Switching on/off         86         Ending         196           Add-on equipment         21         Note         196           Add-on equipment guidelines         21         Overview         196           Additional turn signal light (all-wheel drive vehicles)         91         Transferred vehicle data         197           Additive DEF         130, 272         Pets in the vehicle         46		see ATTENTION ASSIST
Trailer operation	Function 161	
Adaptive cruise control see Active Distance Assist DISTRONIC  Adaptive Highbeam Assist Function	,	
Adaptive Cities Collitor  see Active Distance Assist DISTRONIC  Adaptive Highbeam Assist Function	Irailer operation 161	0 0 0 0
Adaptive Highbeam Assist Function	·	
Function		
Switching on/off         86         less)         196           Add-on equipment         21         Note         196           Add-on equipment guidelines         21         Overview         196           Additional turn signal light (all-wheel drive vehicles)         91         Transferred vehicle data         197           Additive         Animals         Pets in the vehicle         46		
Add-on equipment         21         Note         197           Add-on equipment guidelines         21         Overview         196           Additional turn signal light (all-wheel drive vehicles)         50 sound settings         197           Transferred vehicle data         197           Additive         Animals           DEF         130, 272         Pets in the vehicle         46		
Add-on equipment guidelines		
Additional turn signal light (all-wheel drive vehicles)		
Additive vehicles)	Add-on equipment guidelines21	
Additive Animals DEF		
DEF	drive vehicles)	
DL1 100, 272		
	DEF	r ets iii tile veriicie

Anti-lock braking system see ABS (Anti-lock Braking System)	Automatic transmission DIRECT SELECT lever
Anti-skid chains	Engaging drive position 121
see Snow chains	Engaging neutral
Anti-theft Alarm system	Engaging reverse gear
see ATA (Anti-Theft Alarm system)	Kickdown
Anti-theft protection	Selecting park position
Immobilizer	Transmission position display 119
Anti-theft protection see ATA (Anti-Theft Alarm system)	Transmission positions
Apple CarPlay®	Function 103
Connecting an iPhone <sup>®</sup>	Axle load
Notes	В
Overview	Back support see Lumbar support (4-way)
	BAS (Brake Assist System) 141
Ashtrays In the windshield stowage compart-	Battery
ment	Charging
ASR (acceleration skid control) 141	Charging the starter battery
Assistance graphic (on-board computer) 172	Disconnecting the auxiliary battery in the engine compartment
Assistance Systems	Disconnecting the starter battery 228
see Driving safety system	Jump-starting (vehicle)225
ASSYST PLUS	Key
Battery disconnection periods	Notes (vehicle)
Displaying the service due date 208	Removing or installing the starter battery 228
Function/notes	Starter battery
Regular maintenance work	Battery main switch
Special service requirements	Notes
ATA (Anti-Theft Alarm system) Activating/deactivating the interior	Switching power supply on/off 119
motion sensor	Belt
Function	see Seat belt
Interior motion sensor function 64	Belt warning
Stopping the alarm	see Seat belt
Switching the tow-away alarm on/off 64	Blind Spot Assist
Tow-away alarm function	Activating/deactivating
Attachments	Function
ATTENTION ASSIST	Rear Cross Traffic Alert
Function	,
Setting	Bluetooth® Activating/deactivating
	Information
Authorized workshop see Qualified specialist workshop	Bottle holder
Automatic distance control	Brake
see Active Distance Assist DISTRONIC	ABS (Anti-lock Braking System) 140
Automatic driving lights 84	Activating/deactivating the HOLD
Automatic measures after an accident 39	function151
Automatic measures after all accident 39	Active Brake Assist 143

BAS (Brake Assist System) Braking with the parking brake Downhill gradient Driving instructions Driving notes EBD (electronic brake force distribution) Heavy and light loads HOLD function	141 111 111 111 108 143 111 151	Declining Ending a call Incoming call during an existing call Making  Camera see 360° Camera see Rear view camera  Car wash see Care	193 193 193 193
Limited braking effect (salt-treated roads)	111	Car wash (care)	216
New brake discs and brakepads	111	Care	
Wet roadway	111	Car wash	216
Brake Assist System		Carpet	219
see BAS (Brake Assist System)		Display	219
Brake Assistance		Exterior lighting	218
see BAS (Brake Assist System)		Headliner	219
Brake fluid		Matte finish	217
Notes	275	Paint	217
	270	Plastic trim	219
Brake force distribution		Power washer	217 219
EBD (electronic brake force distribution)	143	Real wood/trim elements Rear view camera/360° Camera	219
<i>'</i>	145	Seat belt	219
Brakes	1.00	Seat cover	219
Breaking-in notes	108	Sensors	218
New/replaced brake discs and brakepads	100	Tailpipes	218
Post-collision brake		Trailer hitch	218
	. 07	Washing by hand	217
Breakdown	1.0	Wheels/rims	218
Assistance overview Changing a wheel		Windows	218
Roadside Assistance		Wiper blades	218
Tow starting		Cargo compartment lighting	
Towing away		Motion detector	89
Transporting the vehicle		Cargo compartment ventilation	
Breakdown		Deactivating	105
see Flat tire		Setting	105
	100	Cargo tie-down points	
Breaking-in notes	106	Information	282
Bulbs	0.0	Overview	205
Reversing light	93	Carpet (care)	219
Buttons			206
Steering wheel	170	Carrier systems (notes)	200
		Change bulbs	
С		Additional turn signal light (all-wheel	0.1
Call list		drive vehicles)	. 91
Calling up options	195	Changing a bulb	
Making a call	195	see Changing bulbs	
Overview	194	Changing a wheel	
Calls		Lowering the vehicle	260
Accepting	193	Preparing	256
Activating functions during a call	193	Raising the vehicle	257
Calls with several participants	193	Removing a wheel	259

Changing address23	Control panel for 3-zone automatic
Changing bulbs	climate control
High beam 90	Hot-water auxiliary heater 104
Indicator (front)	Refrigerant
Interior lamps (rear compartment) 94	Setting the air distribution
License plate lamp 93	Switching air-recirculation mode
Light bulb types halogen headlamps 90	on/off
Low beam	Switching the A/C function on/off 100
Notes	Switching the rear window defroster on/off 102
Tail lamp bulb types (Cargo Van and	on/off
Passenger Van)	(control panel)101
Tail lamp bulb types (chassis)	Switching the windshield heater
Turn signal light (rear) (chassis) 93	on/off101
Changing lamps	Ventilating the vehicle (convenience
see Changing bulbs	opening)
Changing owner	Ventilation nozzles at front 102
Characteristics of the tire	Ventilation nozzles in the roof 102
	Ventilation nozzles, rear passenger
Charging Battery	compartment 103
Battery	Cockpit (overview)6
	Combination switch
Child safety lock (doors)45	see High beam
Child seat	see High-beam flasher
Attaching (notes)41	see Indicator
Basic instructions	_
Front-passenger seat (notes)	Computer
LATCH-type (ISOFIX) (installing)	see On-board computer
Notes on risks and dangers	Contacts
Rearward-facing child restraint system (notes)	Calling up
tem (notes)	Deleting
Securing on the rear seat	Downloading (from mobile phone) 194 Information
Top Tether	Making a call
Children	Name format
Avoiding dangers in the vehicle	
Basic instructions	Convenience closing
Special seat belt retractor	Convenience opening 62
	Conversions
Cigarette lighter	Coolant
Cleaning	Filling capacities 276
see Care	Coolant (engine)
Cleaning water drain valve of the air	Checking level
intake box	Notes
Climate control	Copyright
Activating/deactivating 99	License
Adjusting rear-compartment heating 99	
Air distribution settings 100	Copyrights
Automatic control 100	Trademarks
automatically controlling (rear	Cornering light 85
passenger compartment)	Crosswind Assist
Auxiliary heating	Function/notes142
Clearing fogged up windows 101	Cruise control
Clearing fogged up windows 101	Activating

Buttons	Dial telephone number (on-board computer)
Deactivating146	Diesel
Function	Low outside temperatures 270
Requirements	Notes
Selecting	Diesel particulate filter
Storing a speed	Automatic regeneration 117
System limitations	Canceling regeneration 117
Cup holders	Displaying load
Overview of center console	Notes
Customer Assistance Center (CAC)	
Customer Relations Department	Digital speedometer
Customer Relations Department	Dimming the inside rearview mirror 97
D	DIRECT SELECT lever
Dashboard	Engaging drive position
see Cockpit (overview)	Engaging neutral
	Engaging park position automatically 120 Engaging reverse gear 120
Dashboard lighting see Instrument lighting	Engaging reverse gear
	Selecting park position
Data acquisition (vehicle)	Transmission positions
Data protection rights	Direction indicator
Data storage	see Indicator
Data storage	<b>Display (care)</b>
Data protection rights	Display (MBUX multimedia system)
Date	Operating
Setting the time and date automati-	Setting acoustic operating feedback 183
cally	Settings 186
Dealership	Display (multimedia system)
see Qualified specialist workshop	Home screen
Declaration of conformity	Notes
Radio operating permit for head unit 25	Display (on-board computer) 171
Radio operating permit for wireless central locking	Display message
Radio operating permit of transmit-	Calling up (on-board computer) 284
ter key	Notes
Radio operating permits for the roof	Display messages
antenna24	293
Vehicle components which receive	(S) mph
and/or transmit radio waves	12 V Battery See Operator's
DEF	,
Additive	Manual
Displaying the fill level	Additive System Fault Emer-
Filling capacity	gency Op.: XXX mph See Operator's
Refilling	Manual 297
Definitions (tires and loading)	Additive System Fault See
	Operator's Manual 297
Detecting inattentiveness see ATTENTION ASSIST	Additive System Fault Starts
Diagnostics connection	until Emerg. Op.: XXX See Opera-
	tor's Manual

ATTENTION ASSIST Inopera-		[ Inoperative See Operator's	
tive	292	Manual	288
ATTENTION ASSIST: Take a		<b>EBD</b> Inoperative See Operator's	
Break!	293	Manual	288
Auto Lamp Function Inopera-		Inoperative See Operator's	
tive	304	Manual	300
(D) Check Brake Fluid Level	287	Key Not Detected (red dis-	
Check Coolant Level See		play message)	299
Operator's Manual	296	Key Not Detected (white dis-	
Check Engine Oil At Next		play message)	299
Refueling	294	Left Side Curtain Airbag Mal-	
Check Engine Oil Level (Add 1		function Service Required (example)	285
Liter)	294	Malfunction See Operator's	
Check Fuel Filter	293	Manual	304
Check Left Low Beam (exam-		120 km/h! Maximum Speed Exceeded	293
ple)	303	Obtain a New Key	300
(!) Check Tires	298	⊙ Off	290
Coolant Too Hot Stop Vehicle		HOLD Off	291
Turn Engine Off	295	Parking Brake Inoperative	286
Currently Unavailable Camera		Parking Brake See Operator's	
Dirty	291	Manual	286
Currently Unavailable See		Place the Key in the Marked	
Operator's Manual	289	Space See Operator's Manual	299
<b>?</b> Currently Unavailable See		(!) Please Correct Tire Pressure	299
Operator's Manual	289	Refill Additive Emergency Op.:	
Don't Forget Your Key	299	XXX mph See Operator's Manual	297
Engine Oil Level Cannot Be		Refill Additive See Operator's	
Measured	293	Manual	296
Engine Oil Level Low Stop		Refill Additive Starts until	
Vehicle Turn Engine Off	294	Emerg. Op.: XXX See Operator's	
Engine Oil Pressure Stop		Manual	297
Switch Off Engine	293	Refill Washer Fluid	300
Engine Oil Reduce Oil Level	294	Replace Air Filter	293
★ Front Left Malfunction		Replace Key Battery	300
Service Required (example)	285	See Operator's Manual	295
Fuel Level Low	293	SRS Malfunction Service	
(P) Incline Too Steep See Opera-		Required	285
tor's Manual	286	<b>⊚!</b> Steering Malfunction	
Inoperative Battery Low	301	Increased Physical Effort See Oper-	
Inoperative Refuel Vehicle	301	ator's Manual	301
[ Inoperative See Operator's		<b>⊚!</b> Steering Malfunction Stop	
Manual	289	Immediately See Operator's Manual	301

Step Not Extended See Oper-		Blind Spot Assist Currently Unavail-	
ator's Manual or Step Not Extended		able See Operator's Manual	292
Malfunction	303	Blind Spot Assist Inoperative	291
Stop Vehicle Leave Engine		Blind Spot Assist Trailer Not Moni-	
Running	295	tored	291
Stop Vehicle See Operator's		Check Brake Pads See Operator's	
Manual	295	Manual	287
Switch Off Lights	304	Cruise Control Inoperative	290
Switch On Headlamps	303	Currently Unavailable Radar Sen-	
(!) Tire Press. Sen. Missing	298	sors Dirty	291
Veh. Tracking Activated See		Driver's Door Open & Transmission	
Op. Manual or mobile app	303	Not in P Risk of Vehicle Rolling Away	302
Vehicle Operational Switch		N Permanently Active Risk of Roll-	
the Ignition Off Before Exiting	302	ing Away	302
(1) Warning Tire Malfunction	298	Only Shift to 'P' when Vehicle is	
Active Brake Assist Functions Cur-		Stationary	302
rently Limited See Operator's Man-		Radar Sensors Dirty See Operator's	
ual	287	Manual	287
Active Brake Assist Functions Limi-		Regeneration Not Possible	296
ted See Operator's Manual	287	Reversing Not Possible Service	
Active Distance Assist Currently		Required	302
Unavailable See Operator's Manual	290	Service Required Do Not Shift	
Active Distance Assist Inoperative	290	Gears Visit Dealer	302
Active Distance Assist Now Available	291	Shift to 'P' or 'N' to Start Engine	301
Active Lane Keeping Assist Camera		SOS NOT READY	288
View Restricted See Operator's		Tire Press. Monitor Currently	
Manual	292	Unavailable	298
Active Lane Keeping Assist Cur-		Tire Pressure Monitor Inoperative	299
rently Unavailable See Operator's		Tire Pressure Monitor Inoperative	
Manual	292	No Wheel Sensors	298
Active Lane Keeping Assist Inopera-		To Engage Transmiss. Position R	
tive	292	First Depress the Brake	301
Adaptive Highbeam Assist Camera		Transmission Malfunction Stop	302
View Restricted See Operator's	I	Display range (trip menu)	173
Manual	303 <b>I</b>	Display total distance (trip menu)	173
Adaptive Highbeam Assist Currently	[	Distance control	
Unavailable See Operator's Manual	304	see Active Distance Assist DISTRONIC	
Adaptive Highbeam Assist Inopera-	[	Distance recorder	
tive	304	see Trip distance	
Air Conditioning Malfunction See	[	DISTRONIC see Active Distance Assist DISTRONIC	
Operator's Manual	301		
Apply Brake to Shift from 'P'	302	Door Locking (emergency key)	51
Auxiliary Battery Malfunction	302	Unlocking (emergency key)	

Door control panel DOT, Tire Identification Number (TIN)		see Lane Keeping Assist see Parking Assist PARKTRONIC	
Downhill driving		see Rear view camera	
see DSR (Downhill Speed Regulation)		<b>Driving tips</b> Driving abroad (symmetrical low	
Drinking and driving	108	beam)	84
Drive Away Assist	160	Driving off-road	
Driver's seat			113
see Seats		0	113
Driving and drinking	108	Hydroplaning	113
Driving characteristics (unusual)	238	Drowsiness detection	
Driving instructions	200	see ATTENTION ASSIST	
Brakes	111	DSR (Downhill Speed Regulation)	
Breaking-in notes	108	8,	147
Downhill gradient	111		146
Driving in winter	113	DYNAMIC SELECT	
Foreign trip (information)	111	Displaying vehicle data	190
Limited braking effect (salt-treated		E	
roads) New brake discs and brakepads	111 111		070
Parking brake	111	=	270
Subjecting brakes to a load	111	EBD (electronic brake force distribution)	143
Wet roadway	111	ECO display	
Driving light			116
see Automatic driving lights		0	174
Driving notes		Electric parking brake	
Drinking and driving	108		137
General driving tips	108	11 7 6 7	138 138
Transport by rail	111	8 ) 8	137
Driving safety system			138
ABS (Anti-lock Braking System)	140	Electric sliding door	
ASR (acceleration skid control)	141	Function	53
BAS (Brake Assist System)	141	Opening with button	
EBD (electronic brake force distri-	143	Opening with the door handle	55
bution) ESP <sup>®</sup> Crosswind Assist	142	Opening/closing with the key	
ESP® trailer stabilization	142	Programming the key	54
Overview	140	Resetting	56 55
Radar sensors	140	Unlocking manually	55
Responsibility	139	Electrical closing assist	52
Driving safety system		Notes	33
see Active Brake Assist		Electrical consumption	4.0
see ESP® (Electronic Stability Program)		Key	40
Driving system		Electrical fuses	
see 360° Camera		see Fuses	
see Active Distance Assist DISTRONIC		Electrical step	40
see Active Lane Keeping Assist		Emergency release Extending/retracting	50
see ATTENTION ASSIST see Blind Spot Assist		Function	
see Cruise control		Obstacle	
see Driving safety system		Preventing extending	
see HOLD function			

Electronic Stability Program		Engine output	
see ESP® (Electronic Stability Program)		Notes on changes	26
Electronics	266	ENR (electronic level control)	
Emergency		Function	124
Assistance overview	. 18	Lowering the vehicle	125
First-aid kit (soft sided)	222	Manually inflating air bellows	128
Safety vest	222	Problems	128
Warning lamp	222	Raising the vehicle	125
Emergency braking		Entering characters	=
Electric parking brake	138	Function/notes	185
Manual parking brake	137	Setting the keyboard language	186
Emergency call system		Using the media display	186
Automatic emergency call	223	Environmental protection	
Information	222	Notes	. 20
Manual emergency call	223	ESC (Electronic Stability Control)	
Overview	222	see ESP® (Electronic Stability Program)	
Transferred data	223	ESP®	
Emergency engine start	234	Crosswind Assist	142
Emergency key		Trailer stabilization	142
Locking the door	. 51		
Unlocking the door		ESP® (Electronic Stability Program)	142
	01	Activating/deactivating Function/notes	141
Emergency operation mode Starting the vehicle	107		
	107	Exhaust emission monitoring	110
Emergency Tensioning Devices	0.4	Exterior lighting	
Activation	34	Care	218
Engaging drive position (automatic	1 0 1	Exterior lighting	
transmission)	121	see Lights	
Engaging neutral (automatic transmis-	100	F	
sion)	120	•	
Engaging reverse gear	120	Fatigue detection	
Engaging/disengaging LOW RANGE	124	see ATTENTION ASSIST	
Engine		Favorites	=
Engine number	267	Adding	185
Parking (start/stop button)	135	Calling up	185
Problems	130	Deleting	185
Starting (in emergency operation		Moving	185
mode)	107	Overview	185
Starting (start/stop button)	107	Renaming	185
Starting assistance	225	First-aid kit (soft sided)	222
Engine data		Flat tire	
Showing	190	Changing a wheel	256
Engine electronics (notes)	266	Notes	224
Engine number	267	Floor covering	
Engine oil		Installing/removing (starter battery)	227
Additive	273	Floor mat	83
Checking the oil level (on-board	_, _	Foreign trip	
computer)	210	Instructions	111
Checking the oil level with a dipstick	211	symmetrical low beam	
Filling capacity	274	Free software	
Topping up			52

Frequencies	Gross axle weight rating 267
Mobile phone	Н
Front airbag (driver, co-driver)	
	Handbrake (electrical) see Electric parking brake
Front door Opening (from inside)	Handbrake (manual)
Unlocking (from inside)	see Manual parking brake
Front passenger bench seat	Handling control system
Folding the seat cushion forwards/	see ESP® (Electronic Stability Program)
backwards72	Hazard warning light system
Front seats	Switching on/off85
8-way adjustment options	Hazardous substances
Adjusting (electrically)	Information23
Memory function	Head restraint
Turning 71	Adjusting mechanically 76
With Seat Comfort Package 68	Head unit
Without Seat Comfort Package 66	Radio operating permit
Fuel	Headliner (care)219
Additives	Heating system (control panel) 98
Diesel	High beam
E10	Activating/deactivating 85
Flexible fuel vehicles	Adaptive Highbeam Assist
Fuel reserve	Changing bulbs
Gasoline	High-beam flasher 85
Low outside temperatures	Hill start assist
Quality (diesel)	HOLD function
Quality (gasoline)	Notes
Refueling	_
Sulfur content	Home screen (media display)
Tank capacity	Hot-water auxiliary heater Function
Fuel consumption (on-board computer) 173	Problems
Fuel consumption indicator  Calling up	Switching on/off with on-board
0 1	computer104
Fuses Before replacing	switching on/off with the button 104
Fuse box in the front-passenger	Hydroplaning113
footwell	
Fuse box in the seat base of the	
driver's seat	Identification plate Engine
Notes	Engine
G	Vehicle
<b>Gasoline</b>	Ignition key
General operating permit number (EC) 267	see Key
Genuine parts	Immobilizer63
	Indicator
	Activating/deactivating 85
Grab handles	Changing bulbs (front)

Changing bulbs (rear) (Cargo Van	L	
and Passenger Van)	Labeling (tires)	
Changing bulbs (rear) (chassis)	see Tire labeling	
Installations	Lane detection (automatic)	
Instrument display	see Active Lane Keeping Assist	
Adjusting the lighting	Lane Keeping Assist	
Function/notes	Function	161
,	System limitations	
Instrument Display see Warning/indicator lamp	Trailer operation	161
Instrument lighting	Lane Keeping Assist	
Intelligent light system	see Active Lane Keeping Assist see Lane Keeping Assist	
Adaptive Highbeam Assist		
Cornering light 85	Language Notes	190
Interior lamps (rear compartment)	Setting	190
(replacing the light bulbs)	LATCH-type (ISOFIX) child seat anchor	.,.
Interior lighting	Installing	. 42
Box bodies 87	Level control	
Bus equipment 88	see ENR (electronic level control)	
Cargo compartment 89	License plate lamp (changing bulbs)	. 93
Reading lamp above the passenger seat	Light switch (overview)	
seat		0-
Setting 87	Lighting Adjusting the instrument lighting	179
Switch-off delay time 89		1 / 2
Interior motion sensor	<b>Lighting</b> see Lights	
Function64	Lights	
Switching on/off64	Adaptive Highbeam Assist	. 86
iPhone®	Automatic driving lights	
see Apple CarPlay®	Combination switch	
	Cornering light	. 85
J	Driving abroad (symmetrical low	0./
Jack	beam) Hazard warning light	
Hydraulic	High beam	
Removing the hydraulic jack from the stowage compartment	High-beam flasher	
Storage location of hydraulic jack 236	Indicator	
Jump-start connection	Light switch	
	Low beam	
K	Parking light Rear fog lamp	
Key	Responsibility with lighting systems	
Battery 48	Setting the exterior lighting switch-	
Electrical consumption	off delay time	
Functions	Switching the surround lighting on/off	87
Key ring attachment	Limited Warranty (vehicle)	. 28
Mechanical key	Limiting speed	110
Problem	Load	
Radio connection	Determining the maximum	247
Unlocking setting	Sample calculation	
	Load distribution	204

Load securing Cargo tie-down points	205	Resetting (factory setting) Switching the sound on/off	
Installing and removing tie-down		MBUX multimedia system	
eyes	205 204	see Display (MBUX multimedia system)	
Notes  Load-bearing capacity (tires)	251	see Entering characters	
Loading	201	Mechanical key Removing/inserting	. 48
Definitions	252	Media	. 40
Loading guidelines		Menu (on-board computer)	174
Loading information table		Operating media playback	174
Low beam	240	Selecting a media source	174
Activating/deactivating	. 84	Media display	
Changing bulbs		Entering characters	186
Setting for abroad (symmetrical)		Home screen	181
LOW range	123	Notes	181
Lubricant additives		Media mode	000
see Additive		Adding a favorite song Connecting Bluetooth® audio equip-	200
Lumbar support (4-way)	71	ment	199
		Connecting USB devices	199
M		Controlling media playback	199
M+S tires	239	Copyright and trademarks	198
Maintenance		Notes about the search function in	
Vehicle	23	categories	200
Maintenance		Overview of the media menu	198 200
see ASSYST PLUS		Starting a search in categories	200
Malfunction		Starting media playback	199
Restraint system	. 33	Supported format and data storage	
Malfunction message		media	197
see Display message		Using the keyword search	200
Maneuvering assistance		Medical aids	. 27
Activating/deactivating	157	Memory function (seat)	. 71
Manual parking brake		Menu (on-board computer)	
Applying/releasing	136	Assistance graphic	172
Emergency braking	137	Media	174
Folding up/down	136	Overview Radio	170 174
Manually inflating air bellows (ENR)	128	Service	172
Matte finish (cleaning instructions)	217	Settings	175
Maximum gross vehicle weight	267	Telephone	175
Maximum load		Trip	173
Determining		Mercedes me app	
Sample calculation		Calling up services	180
Maximum tire load	250	Calling up your user account	179
Maximum tire pressure	251	Deleting the connection to the user account	180
MBUX multimedia system		Information	179
Adjusting the volume		Mercedes me calls	
Configuring display settings		Arranging a service appointment	177
Operating the touchscreen		Calling the Mercedes-Benz cus-	
Overview	101	tomer center	176

Calling the Mercedes-Benz cus-		N	
tomer center after automatic accident or breakdown detection	176 177 176 177 179 178	General information	192 192 192 192
trol panel Transferred data	176 179	see Air vents	
Message (multifunction display)		0	
see Display message		Occupant safety	
Message memory Mirrors Adjusting the inside rearview mirror Mirrors see Outside mirrors		see Airbag see Automatic measures after an accide see Child seat see Pets in the vehicle see Post-collision brake see Restraint system	nt
Mobile phone		see Seat belt	
Frequencies Transmission output (maximum) Wireless charging	266	Odometer see Display total distance (trip menu) Oil	
Mobile phone		see Engine oil	
see Android Auto see Apple CarPlay <sup>®</sup> see Mobile phone see Telephone		On-board computer Adjusting stationary heater/ventilation	104 172
Mobile phone voice recognition Starting Stopping Model series		Diesel particulate filter load display Displaying the service due date Media menu Menus overview	118 208 174 170 171
see Vehicle identification plate			170
Mounting a load		Radio menu	174
Multi Purpose Vehicle (MPV)	27		172
Multifunction display (on-board computer)	171	Telephone menu	175 175 173
Multifunction steering wheel Button overview	170	On-board diagnostic interface see Diagnostics connection	
Multifunction steering wheel		On-board electronics	
see Steering wheel			266
Multimedia system  Main functions	183		266
Multimedia system	100	,	266
see MBUX multimedia system		Onboard Logic Unit Online services Vehicle data storage	
		Open-source software	

Opening rear-end doors with door retainer	Parking brake (electrical) see Electric parking brake
Opening the cup holder in the rear	see Manual parking brake
	Parking for an extended period 13
Opening/closing the hood 20	<sup>08</sup> <b>Parking light</b> 8-
Operating fluids	Partition sliding door
	70 From the cargo compartment 5
	From the driver's compartment 5
( 8 )	/6 Pormissible gross mass 26
	/ <u>C</u>
0	73 Permissible towing methods
	Pets in the vehicle 4
(0)	70 69 Phone book
Notes	CAD I ONIZOTO
Operating Instructions (vehicle equip-	Placing a load on the wheel arch 20
	Plastic trim (care) 21
Operating safety	Post-collision brake 3
	26 Power supply
Declaration of conformity (wireless	Battery main switch 11
	Switching on (start/stop button) 10
Information	23 Power washer (care)
Operating system On-board computer	
•	
Outside mirrors	QR code (rescue card)
Outside mirrors folding in/out	QR code (rescue card)
Outside mirrors folding in/out	QR code (rescue card)
Outside mirrors folding in/out	QR code (rescue card)
Outside mirrors folding in/out	QR code (rescue card)
Outside mirrors folding in/out	OR code (rescue card)
Outside mirrors folding in/out	QR code (rescue card)
Outside mirrors folding in/out	QR code (rescue card)
Outside mirrors folding in/out	96       QR code (rescue card)
Outside mirrors folding in/out	96       QR code (rescue card)
Outside mirrors folding in/out	96       QR code (rescue card)
Outside mirrors folding in/out	96       QR code (rescue card)
Outside mirrors folding in/out	96         QR code (rescue card)
Outside mirrors folding in/out	96         QR code (rescue card).         2           96         Qualified specialist workshop.         2           16         R           87         Radar sensors.         14           11         Radio         20           Activating.         20           Calling up the station list.         20           Calling up the station list.         20           Deleting stations.         20           Displaying emergency messages.         20           Displaying emergency warnings.         20           Displaying information.         20
Outside mirrors folding in/out	96         QR code (rescue card).         2           96         Qualified specialist workshop.         2           16         R           87         Radio         14           11         Radio         20           Activating.         20         20           17         Calling up the station list.         20           17         Deleting stations.         20           67         Direct frequency entry.         20           Displaying emergency messages.         20           20         Displaying emergency warnings.         20           20         Displaying information.         20           Displaying radio text.         20
Outside mirrors folding in/out	QR code (rescue card)
Outside mirrors folding in/out	QR code (rescue card)
Outside mirrors folding in/out	QR code (rescue card)
Outside mirrors folding in/out	QR code (rescue card)
Outside mirrors folding in/out	96         QR code (rescue card)
Outside mirrors folding in/out	96         QR code (rescue card)
Outside mirrors folding in/out	96         QR code (rescue card)
Outside mirrors folding in/out	96         QR code (rescue card)
Outside mirrors folding in/out	96         QR code (rescue card)

Radio connection Key	Reset function (MBUX multimedia system)
Radio operating permit	Reset function (MBUX multimedia sys-
Head unit	tem)
Roof antenna	see Reset function (MBUX multime-
Transmitter key	dia system)
Wireless central locking 24	Resetting (factory setting)
<b>Real wood (care)</b>	see Reset function (MBUX multime-
Rear	dia system)
Motion detector 89	Restraint system
Rear bench seat	Basic instructions for children
see Seats	Function in an accident
Rear Cross Traffic Alert 160	Malfunction
Rear fog lamp 84	Protection limited
Rear view camera	Protection provided 33
Care	Self-test
Function	Warning lamps
Rear window wiper	Restricting the shift range 121
Replacing	Reversing light
Switching on/off	Changing bulbs93
Rear-compartment heating	Reversing lights
Rear-end doors	Replacing light bulbs (Cargo Van
Opening and closing (from inside) 58	and Passenger Van)
Opening and closing (from outside) 56	<b>Rims (care)</b>
Reducing agent	Roadside Assistance (breakdown)
see DEF	Roll away protection
Refrigerant (air conditioning)	see HOLD function
Notes	Roof antenna
Refuel	Radio operating permit 24
Displaying the DEF level 131	Roof luggage rack (notes)
Refilling DEF	
Refueling	<b>Roof rack</b>
Refueling the vehicle	S
Regeneration	
Canceling 117	Safety systems see Driving safety system
Notes	
Starting 117	Safety vest
Registration	Seat belt
Vehicle	Adjusting the height
Removing the vehicle tool kit	Care
Replacing a wheel	Protection impaired
Installing a new wheel	Protection provided
Replacing light bulbs	Releasing
Indicators (rear) (Cargo Van and	Warning lamps 37
Passenger Van)	Seat cover (care)
Reversing lights (Cargo Van and	Seats
Passenger Van)	4-way lumbar support 71
Reporting safety defects	8-way adjustment options
Rescue card	

Adjusting the head restraints mechanically	76	Closing (all)	60
Adjusting the seat backrests (rear bench seat)	76	Opening (all) Problem	62
Adjusting the seat cushion (twin co-	70	Resetting	
driver's seat) correct driver's seat position		Size designation (tires)	251
Folding the folding seat up/down		Sliding door	
front (adjust electrically)	69	B-pillar door sill (button)	
Front (adjusting manually, with Seat		Center console (button)	
Comfort Package)Front (adjusting mechanically, with-	68	Child safety lock	
out Seat Comfort Package)	66	Opening and closing (from the outside)	52
Front (adjusting mechanically)	68	SmartKey	02
Installing and removing rear bench seat	73	Acoustic locking verification signal	48
Memory function		Smartphone	10
Operating the memory function		see Android Auto	
Setting options	16	see Apple CarPlay®	
Turning (front seat)		see Telephone	
With Seat Comfort Package	68	Snow chains	239
Without Seat Comfort Package		Socket (12 V)	
Securing luggage	203	Front center console	80
Selector lever		Socket (115 V)	
see DIRECT SELECT lever		Lower control panel	81
Sensors (care)	218	Sound	
Service		see Sound settings	
see ASSYST PLUS		Sound settings	
Service (on-board computer) Service center	172	Adjusting the balance/fader Adjusting treble, mid-range and	202
see Qualified specialist workshop		bass settings	202
Service interval display		Automatic volume adjustment	202
see ASSYST PLUS		Calls up the sound menu	202
Service products		Information	202
Refrigerant (air conditioning)	277	Spare wheel	040
Setting summer time	187	Installing/removing Notes	262 261
Setting the date format	187	Special seat belt retractor	
Setting the distance unit	190		42
Setting the speed		Specialist workshop see Qualified specialist workshop	
see Cruise control			251
Settings (on-board computer)	175	Speed rating (tires)	251
Short-distance trips		Speedometer (digital)	173
•		Standby mode	100
Side airbag	3/	Activating/deactivating	139
Side window	62	Start/stop button	105
Closing using the key  Convenience closing		Parking the vehicle Starting the vehicle	135 107
Convenience opening		Switching on the power supply or	107
Opening with the key		the ignition	106
Side windows		Starting	
Closing	60	see Vehicle	

Starting assistance see Jump-start connection		Switching the rear window defroster on/off	102
Starting-off aid see Hill start assist		Switching the reset function on/off (control panel)	101
Station		Switching the windshield heater on/off	101
	202	•	101
	201	System settings Reset function (MBUX multimedia	
	202	system)	190
8	201	Setting the distance unit	190
	201	Setting the time and date automati-	
Storing	202	cally	187
Station list		Setting the time zone	187
Calling up	201	Setting the time/date format	187
Station presets		Switching transmission of the vehi-	100
Managing	202	cle position on/off	188
Stationary heater		System settings	
Problems	105	see Bluetooth®	
Stationary heating/ventilation		see Language see Wi-Fi	
Adjusting (on-board computer)	104	See Will I	
Stationary heating/ventilation		T	
see Auxiliary heating		Tailpipes (care)	218
see Hot-water auxiliary heater			210
Steering wheel		Tank capacity Fuel	272
Adjusting		Reserve (fuel)	272
Buttons	170	Tank content	2,2
Stopping the alarm (ATA)	63	DEF	273
Stowage areas			2/0
see Stowage space		Technical data Information	266
Stowage compartments		Notes (trailer hitch)	278
see Stowage space		Tire pressure monitor	246
Stowage space		Vehicle identification plate	267
Armrest	78	Telephone	
Center console	78	Activating functions during a call	193
Door		Calls with several participants	193
Glove box		Connecting a mobile phone (Near	
Sulfur content	270	Field Communication (NFC))	192
Summer tires	238	Connecting a mobile phone (Pass-	191
Surround lighting		key) Connecting a mobile phone (Secure	191
Switching on/off	87	Simple Pairing)	191
Surround View		De-authorizing a mobile phone	192
see 360° Camera		Incoming call during an existing call	193
Switch-off delay time		Information	191
Exterior	86	Menu (on-board computer)	175
Interior	89	Mobile phone voice recognition	193
Switching air-recirculation mode on/off	101	NotesReception and transmission volume	191 193
Switching on ignition (start/stop button)	106	Switching mobile phones	193
Switching seat heating on/off		Ŭ I	172
Controlling Code Hodeling Olly Ollinininin	77	Switching mobile phones (Near	
Switching the A/C function on/off		Switching mobile phones (Near Field Communication (NFC))	192

Telephone operationUsing Near Field Communication	193	Tire temperature Checking (tire pressure monitoring	
(NFC)	192	system)	245
Wireless charging (mobile phone)	. 82	Tire pressure monitoring system	
Telephone operation		(function)	244
see Calls		Tire tread	238
Temperature grade	249	Tire-change tool kit	256
•		_	230
Tie-down eyes	205	Tires	0.54
Time		Characteristics	251
Manual time setting	187	Checking	238
Setting summer time	187	Checking the tire pressure (tire	245
Setting the time and date automati-		pressure monitoring system)	252
cally	187	Definitions  Direction of rotation	256
Setting the time zone	187	DOT, Tire Identification Number (TIN)	250
Setting the time/date format	187	Flat tire	224
Tire and Loading Information placard	246	Installing	259
Tire Identification Number (TIN)	250	Load-bearing capacity	251
Tire information table	246	M+S tires	239
	240	Maximum tire load	250
Tire labeling	0 = 1	Maximum tire pressure	251
Characteristics	251	Noise	238
DOT, Tire Identification Number (TIN)	250	Notes on installing	253
Load-bearing capacity	251	Overview of tire labeling	249
Maximum tire load	250	Removing	259
Maximum tire pressure	251	Replacing253,	
Overview	249	Restarting the tire pressure monitor	246
Size designation		Selecting	253
Speed rating	251	Size designation	251
Temperature grade	249	Snow chains	239
Tire quality grades		Speed rating	251
Traction grade		Storing	256
Tread wear grade	249	Summer tires	238
Tire load (maximum)	250	Temperature grade	249
Tire pressure		Tire and Loading Information placard	246
Checking (tire pressure monitoring		Tire pressure (notes)	240
system)	245	Tire pressure monitoring system	
Maximum	251	(function)	244
Notes	240	Tire pressure table 241,	244
Restarting the tire pressure monitor	246	Tire quality grades	249
Tire pressure monitoring system		Traction grade	249
(function)	244	Tread wear grade	249
Tire pressure table 241	244	Unusual driving characteristics	238
Tire pressure monitor		Wheel size categories	255
Checking the tire pressure	245	Tool	
Checking the tire temperature	245	see Removing the vehicle tool kit	
Function	244	see Vehicle tool kit	
Restarting	246	see Vehicle tool kit stowage compartme	nt
Technical data		Top Tether	43
Tire pressure table 241,	244		
		Topping up the windshield washer sys-	21/
Tire quality grades	249	tem	Z 1 <sup>2</sup>
		Touch Control	47
		On-board computer	170

OperatingSetting acoustic operating feedback	182 182	Transmission ratio see Engaging/disengaging LOW RANGE
Setting the sensitivity	182	Transmitter key
Touchscreen Operating	182	Radio operating permit
	102	Transport by rail111
Touchscreen (media display) Setting acoustic operating feedback	183	Transporting (vehicle breakdown) 232
Tow starting	234	Tread wear grade
Tow-away alarm	204	Trim element (care)
Function	64	Trip
Switching on/off		Display total distance
Towing away		Menu (on-board computer) 173
Raised front or rear axle	232	Trip computer
Towing eye		Resetting
Installing/removing	233	3
Storage location	233	Trip distance Resetting
Towing eye (storage location)		Showing
see Vehicle tool kit		Trip odometer
Towing methods	230	see Trip distance
Traction grade	249	Turn signal light
Trailer hitch		Additional turn signal light (all-wheel
Care	218	drive vehicles)
General notes	278	Twin co-driver's seat 72
Information	166	Two-way radio telephone
Information about trailer operation Permissible trailer loads and trailer	163	see Mobile phone
drawbar noseweights	167	Two-way radios
Power supply	168	Frequencies
Socket	166	Installation notes
Trailer loads	278	Transmission output (maximum) 266
Trailer operation		U
Active Lane Keeping Assist	161	Ü
Coupling/Decoupling the trailer	166	Units of measurement Setting
Gross axle weight rating	267	
Information	166	Unlocking setting
Lane Keeping Assist Notes	161 163	Unlocking/locking
Permissible trailer loads and trailer	100	Switching automatic locking feature on/off 50
drawbar noseweights	167	Unlocking and opening front doors
Power supply	168	from inside
Socket	166	USB port
Trailer loads	278	Connecting devices
Trailer stabilization	142	USB socket in the rear passenger com-
Transferred vehicle data		partment81
Android Auto		Using kickdown 122
Apple CarPlay®		-
Transmission position display	119	V
Transmission ratio	4.00	Vehicle
LOW range	123	Correct use

Diagnostics connection		Vehicle level	105
Equipment Limited Warranty		Lowering Raising	125
Locking (automatic)			120
Locking/unlocking (emergency key)		Vehicle maintenance see ASSYST PLUS	
Lowering			
Maintenance	23	Vehicle operation	2.0
Medical aids		Outside the USA or Canada	
Notifying problems		Vehicle tool kit	
Parking (start/stop button) Parking for an extended period	139	Vehicle tool kit stowage compartment VIN	235
QR code rescue cardQualified specialist workshop		Identification plate	267
Raising		Reading out	267
Registration		Seat	267
Starting (in emergency operation		Windshield	267
mode)	107	W	
Starting (start/stop button)	107		
Switching on power supply (start/	10/	Warning and indicator lamps Overview	304
stop button)			
Unlocking (from inside) Ventilating (convenience opening)		Warning lamp	222
	02	Warning system	
Vehicle components which receive and/or transmit radio waves		see ATA (Anti-Theft Alarm system)	
Declaration of conformity	25	Warning/indicator lamp	
Vehicle data		ABS warning lamp	310
Displaying (DYNAMIC SELECT)	190	(e) and 305, 306, 307, 308,	309
Showing	190	(1) Brake system warning lamp	
Transferring to Android Auto	197	(yellow)	307
Transferring to Apple CarPlay®	197	(D) Brake warning lamp (red)	
Vehicle height	277	(Canada)	308
Vehicle length	277		500
Vehicle width	277	BRAKE Brake warning lamp (red)	000
Wheelbase	2//	(USA)	
Vehicle data memory	20	Coolant warning lamp	312
Service providers	30		311
Vehicle data storage	20	Electric parking brake applied	
Electronic control units Event data recorders		red indicator lamp (Canada) does	
Onboard Logic Unit		not light up	305
Vehicle dimensions		PARK Electric parking brake applied	000
	2//	red indicator lamp (USA) does not	
Vehicle identification number see VIN			205
		light up	305
Vehicle identification plate  EC general operating permit number	267	Electric parking brake mal-	
Gross axle weight rating	267	functioning yellow indicator lamp	
Maximum permissible gross vehicle	207	lights up 305,	306
weight	267	Electrical malfunction warning	
Paint code	267		312
VIN	267	Engine diagnosis warning lamp	
Vehicle key			
see Key		ESP® OFF warning lamp	310

ESP® warning lamp flashes	310	Checking the tire pressure (tire	
ESP® warning lamp lights up	309	pressure monitoring system)	245
Fuel reserve warning lamp	312	Definitions	252
	012	DOT, Tire Identification Number (TIN) Flat tire	250 224
<b>⊗!</b> Power steering system warn-	011	Installing	259
ing lamp	311	Load-bearing capacity	251
(P) Red electric parking brake		Maximum tire load	250
applied indicator lamp (Canada) flas		Maximum tire pressure	251
hes	306	Noise	238
(P) Red electric parking brake		Notes on installing	253 249
applied indicator lamp (Canada)		Overview of tire labeling Removing	259
lights up 306,	307	Replacing	
PARK Red electric parking brake	, 007	Restarting the tire pressure monitor	246
	207	Selecting	253
applied indicator lamp (USA) flashes	306	Size designation	251
PARK Red electric parking brake		Snow chains	239
applied indicator lamp (USA) lights		Speed rating	251 256
up 306,	, 307	Storing Temperature grade	249
(P) Red parking brake applied		Tire and Loading Information placard	246
indicator lamp (Canada) lights up	307	Tire pressure (notes)	240
PARK Red parking brake applied		Tire pressure monitoring system	
indicator lamp (USA) lights up	307	(function)	244
		Tire pressure table	
Restraint system warning lamp		Tire quality grades	
Seat belt warning lamp flashes	311	Traction grade Tread wear grade	249
Seat belt warning lamp lights		Unusual driving characteristics	238
up	311	Wheel size categories	255
The electric parking brake		Wi-Fi	
malfunctioning yellow indicator		Overview	188
lamp does not light up	307	Setting	188
(!) Tire pressure monitoring sys-		Window curtain airbag	. 37
tem warning lamp flashes	313	Window lifter	
(!) Tire pressure monitoring sys-	0.0	see Side windows	
tem warning lamp lights up	313	Windows	
		see Side windows	
Varranty		Windows (care)	218
Varranty terms and conditions	. 22	Windshield	
Vasher fluid		Replacing the wiper blades	95
see Windshield washer fluid		Replacing the wiper blades (WET	
Vashing by hand (care)	217	WIPER SYSTEM)	95
Wheel rotation	255	Windshield	
Wheel wrench	256	see Windshield	
Vheels	-	Windshield washer fluid	
Care	218	Information	277
Changing		Windshield wipers	
Characteristics of the tire	251	Replacing the wiper blades	95
Checking	238	Replacing the wiper blades (WET	0.5
		WIPER SYSTEM)	95

Switching on/off	. 94
Winter driving (snow chains)	239
Winter tires	239
Wiper blades	
Care	218
Replacing (rear window)	96
Replacing (WET WIPER SYSTEM)	. 95
Replacing (windshield)	. 95
Wireless central locking	
Radio operating permit	. 24
Wireless charging	
Function/notes	. 82
Mobile phone	82
Workshop	
see Qualified specialist workshop	

