

## SERVICE SOLUTIONS BUILT FOR YOU

# Mercedes-Benz Vans ServiceCARE Customer Guide

For Mercedes-Benz Vans Extended Limited Warranty, Prepaid Maintenance, and Complete.



### ServiceCARE Plans Overview





#### Extended Limited Warranty (ELW)

More warranty. More certainty.

Service Repair Wear & Tear

The Extended Limited Warranty product offers you greater coverage for mechanical, electrical and electronic components. It protects you against unforeseen repair costs and without any deductibles, you get the benefit of predictable and attractive conditions.

Sprinter Diesel	Sprinter Gas	Metris
Term	Term	Term
5 Years / 100,000 Miles	5 Years / 100,000 Miles	5 Years / 100,000 Miles
6 Years / 120,000 Miles	6 Years / 120,000 Miles	6 Years / 120,000 Miles
7 Years / 140,000 Miles	7 Years / 140,000 Miles	7 Years / 140,000 Miles





#### Maintenance (PPM)

Keeping your van in top shape.

Service

Repair

Wear & Tear

Regular and accurate checking of the most important vehicle parts and functions ensures that your van continues to deliver outstanding performance and reliability. Maintenance prevents unnecessary repair costs and keeps downtime minimal.

	Sprinter Diesel
	Term
	2 Services / 4 Years
-	4 Services / 8 Years
6	Services / 12 Years

Sprinter Gas
Term
2 Services / 3 Years
4 Services / 5 Years
6 Services / 7 Years

Metris	
Term	
2 Services / 3 Years	
4 Services / 5 Years	
6 Services / 7 Years	





#### Complete

The all-inclusive service package.

Service Repair Wear & Tear

If you require comprehensive additional protection for your van, look no further than our Complete product. This package covers all workshop work, including wear and tear repairs. The vehicle is ready for action when you need it, and you keep costs safely under control.

Sprinter Diesel	Sprinter Gas	Metris
Term	Term	Term
3 yrs / 60K / 3 Services	3 yrs / 60K / 4 Services	3 yrs / 60K / 4 Services
4 yrs / 80K / 4 Services	4 yrs / 80K / 5 Services	4 yrs / 80K / 5 Services
5 yrs / 100K / 5 Services	5 yrs / 100K / 6 Services	5 yrs / 100K / 6 Services

### **Extended Limited Warranty (ELW)**



Extended Limited Warranty Program (ELW) will help prepare and protect you against unforeseen cost beyond your factory warranty to minimize downtime and maximize productivity.

Stay in Control

ELW gives you a peace of mind knowing that you won't be sidelined by unexpected expensive repairs over the years. At any time if you decide to sell or trade in your vehicle, an ELW can help retain, even increase, the value of your van.

	COVERAGE	OVERVIEW	
i ENGINE	ዐ- <b>ዕ-</b> ዐ REAR AXLE	🔯 COOLING SYSTEM	© CLIMATE CONTROL
Engine block	Rearaxle center section	Thermostat	A/C compressor and clutch
Cylinder head(s)	All internally lubricated parts	Radiator	Climate control module
Cylinder head gasket(s)	Seals	Fanclutch	Receiver/drier bottle
All internally lubricated parts	Gaskets	Engine fan	Refrigerant hoses and
Intake and exhaust manifolds	Drive shaft	Coolant expansion tank	connections
Timing chain cover	Drive shaft center bearing	Transmission oil cooler	Evaporator
Flywheel	Flex-disc assembly	Engine oil cooler	Condenser
Harmonic balancer	Universal joints	Metal lines	Stepper actuators
Coolant pump	Rear axle shaft bearings and	Fittings	Valves and elements
Injection pump	hubs	1 14411.90	Auxiliary cooling pump
Turbocharger			Heater core
Belt tensioners			Heater housing assembly (not
Control module			including auxiliary water heater or additional roof mounted air
301.00			or additional roof mounted air conditioner
Motor mounts			
(₩) TRANSMISSION	<b>0-∳-0</b> FRONT AXLE	္မွာ TRANSFER CASE	■ AUDIO SYSTEM

⊕ TRANSMISSION	<b>ዑቀብ</b> FRONT AXLE	ੂੰ TRANSFER CASE	■ AUDIO SYSTEM
Transmission case	Front axle center section	Transfer case	Speakers
Control module	All internally lubricated parts	Control module	Amplifiers
All internally lubricated parts	Seals	All internally lubricated parts	CD player
Valve body	Side shafts	Shifting motor	Head unit (radio, AM/FM,
Hydraulic lines	Side shaft joints	Gear sensor	Bluetooth)
Control cable	Side shaft boots		
Torque converter	Front hubs		

<sup>\*</sup>This is a summary of coverage. For additional details please refer to the Extended Limited Warranty terms and conditions.

## Prepaid Maintenance Plan (PPM)



#### Maintenance

Keeping your van in top shape.

Regular and accurate checking of the most important vehicle parts and functions ensures that your van continues to deliver outstanding performance and reliability. Maintenance prevents unnecessary repair costs and keeps downtime minimal and predictable.

Our Maintenance product protects your vehicle's value and boosts its resale value.

Available Metris PPM plans cover 2, 4, or 6 services.						_			
	Service:	A	В	A	В	A	В	A	B
Metris PPM Coverage	Up to:	I YR 15K	2YR 30K	3YR 45K	4YR 60K	5YR 75K	6YR 90K	<b>7YR</b> 105K	8YR 120K
<b>ⓓ OIL SERVICE</b>									
1. Engine: Oil Change & Filter Change		•	•	•	•	•	•	•	•
MAINTENANCE									
1. Function Checks									
a. Seat belts, seat belt buckles, set belt buckle extensions		•	•	•	•	•	•	•	•
b. Indicators, indicator lamps			•		•		•		•
c. Headlamps, exterior lighting			•		•		•		•
d. Windshield wipers, rear wiper, washer system, headlamp cleaning system			•		•		•		•
Check for leaks & general condition		•	•	•	•	•	•	•	•
3. Fluid checks		•	•	•	•	•	•	•	•
4. Brake test and brake fluid check		•	•	•	•	•	•	•	•
C ENGINE			-						
1. Check Poly-V belt for wear & damage			•		•		•		•
CHASSIS & BODY WORK									
Replace dust filter for rear compartment AC system		•	•	•	•	•	•	•	•
2. Replace dust filter		•	•	•	•	•	•	•	•
3. Trailer tow hitch: check function, play & attachment			•		•		•		•
4. Sliding door: check water drain holes			•		•		•		•
5. Lubricate door hinges			•		•		•		•
6. Inspect steering & suspension components		•	•	•	•	•	•	•	•
🚳 ROAD WHEELS, BRAKES									
1. Check & correct tire pressure		•	•	•	•	•	•	•	•
2. Check thickness of brake pads & brake discs									•
ADDITIONAL WORK									
1. Automatic transmission: oil & filter change								•	
2. Replace air filter element					•		•		•
3. Replace spark plugs				•			•		
4. Reset maintenance computer		•		•	•	•	•	•	•
5. Replace brake fluid			•		•		•		•
6. Rear Axle oil change									•
7. Replace coolant									

# Prepaid Maintenance Plan (PPM)

Available Sprinter Gas PPM plans cover 2, 4,  $\,\mathrm{or}$  6 services. Service Interval: Up to 1 Year/15,000 Miles

	Service:	Α	В	Α	В	Α	В	Α	В
Sprinter Gas	Up to:	I YR 15K	2YR 30K	3YR 45K	4YR 60K	5YR 75K	6YR 90K	7YR 105K	8YR 120K
ம் OIL SERVICE		JOK	JUK	431	OUK	7510	90K	TOSK	IZUK
Engine: Oil Change & Filter Change		•	•	•	•	•	•	•	•
MAINTENANCE									
1. Function Checks									
a. Seat belts, seat belt buckles, set belt buckle extensions		•	•	•	•	•	•	•	•
b. Indicators, indicator lamps			•		•		•		•
c. Headlamps, exterior lighting			•		•		•		•
d. Windshield wipers, rear wiper, washer system, headlamp cleaning system			•		•		•		•
2. Check for leaks & general condition		•	•	•	•	•	•	•	•
3. Fluid checks		•	•	•	•	•	•	•	•
4. Brake test and brake fluid check		•	•	•	•	•	•	•	•
C ENGINE									
1. Check Poly-V belt for wear & damage			•		•		•		•
CHASSIS & BODY WORK									
Replace dust filter for rear compartment AC system			•		•		•		•
2. Replace dust filter			•		•		•		•
3. Trailer tow hitch: check function, play & attachment			•		•		•		•
4. Sliding door: check water drain holes			•		•		•		•
5. Lubricate door hinges			•		•		•		•
6. Inspect steering & suspension components		•	•	•	•	•	•	•	•
ROAD WHEELS, BRAKES									
Check & correct tire pressure		•	•	•	•	•	•	•	•
2. Check thickness of brake pads & brake discs			•		•		•		•
ADDITIONAL WORK									
Automatic transmission: oil & filter change			•					•	
2. Replace air filter element				•			•		
3. Replace spark plugs			•		•		•		•
4. Reset maintenance computer				•	•	•			•
5. Replace brakefluid					•				•
6. Replace Poly-V belt					•				
•									•

### Prepaid Maintenance Plan (PPM)

Available Sprinter Diesel PPM plans cover 2, 4, or 6 services. Service Interval: Up to 2 Years / 20,000 Miles Service: Α В Α В Α В В 6YR 10YR 14YR 2YR 4YR 8YR 12YR 16YR **Sprinter Diesel** Up to: 20K 40K 60K 80K 100K 120K 140K 160K OIL SERVICE 1. Engine: Oil Change & Filter Change MAINTENANCE 1. Function Checks a. Seat belts, seat belt buckles, set belt buckle extensions b. Indicators, indicator lamps c. Headlamps, exterior lighting d.Windshield wipers, rear wiper, washer system, headlamp cleaning system 2. Check for leaks & general condition 3. Fluid checks (except brake fluid, DEF) 4. Brake test, DEF and break fluid check ENGINE 1. Check Poly-V belt for wear & damage 2. Replace the fuel filter with water separator CHASSIS & BODY WORK 1. Replace dust filter for rear AC system, check evaporator 2. Replace dust filter 3. Trailer tow hitch: check function, play & attachment 4. Sliding door: check water drain holes 5. Lubricate door hinges 6. Inspect steering & suspension components ROAD WHEELS, BRAKES 1. Check & correct tire pressure 2. Check thickness of brake pads & brake discs ADDITIONAL WORK 1. Automatic transmission: oil & filter change 2. Replace air filter element 3. Replace Poly-V belt 4. Check level for diesel particle filter 5. Reset maintenance computer 6. Replace brake fluid for hydraulic brakes 7. Rear axle: Retighten spring brakets AdBLUE ® 1. Check & fill the DEF reservoir 4x4 ADDITIONAL WORK 1. Transfer case & Front Axle

### Complete



### Complete

The all-inclusive service package.

If you require comprehensive additional protection for your van, look no further than our Complete product. This package covers all workshop work, including wear and tear repairs. The vehicle is ready for action when you need it, and you keep costs safely under control.

Complete combines the advantages of the ELW and Maintenance packages and additionally covers the wear and tear components. Only tires are excluded.

COVERAGE OVERVIEW						
MAINTENANCE	從 REPAIR POWERTRAIN		₩ WEAR & TEAR			
Maintenance Service A	Engine	Suspension	Battery, additional battery			
Maintenance Service B	Injection system	Spring elements	V-belt, Poly V-belt, Toothed belt			
Engine coolant	Cooling system	Wishbone	Spark plug			
Brake fluid charge	Automatic gearbox	Bearing, shock absorber	Brake discs			
Oil, automatic transmission	Transmission housing	Boot, shock-absorber strut	Brake lining			
Transfer case oil	Disc brake	Body and cockpit	Wiper blades front, rear			
Front axle gear oil	Transfer case	Steering	Shock absorbers front, rear			
Rear axle gear oil	Gears and bearings	Electrical components	Muffler			
Air filter elements	Propeller shaft	Wiring harnesses	Center muffler			
Spark plug	Universal joint propeller shaft	Central locking system	End main muffler			
Waterseparator, fuel system	Front axle, rear axle	Heating and air conditioning	Exterior lights, light source,			
Check/lubricate trailer hitch	Differential case	Safety systems	bulbs, burner Xenon			
Oil change, engine oil, engine	Ring gear, bevel gear		Interior lights, light source,			
oil filer, grease vehicle	Wheel hub		bulbs			
Air/dust combination filter,	Emission control system					
heating and ventilation system	NOx Sensor					
	AdBlue Unit					
	Diesel particulate filter					



#### Roadside Assistance

Here for when your customers need it most

Our Roadside Assistance Program can help with the following:

- Replace a flat tire with a spare\*\*
- Deliver a jump start in the event of a dead battery
- Provide 3-5 gallons of fuel if the customer runs out
- Arrange a tow in the event of a mechanical issue or accident

<sup>\*</sup>This is a summary of coverage. For additional details please refer to the Complete terms and conditions.

<sup>\*\*</sup>Flat-tire changes will require a heavy-duty portable jack capable of lifting 3,000-15,000 lbs, depending on vehicle style, modifications, and/or load. Dealers are responsible for ensuring technicians are properly equipped to provide these services.

Inclusions	E.	Wainterance	Complete
⊚ STANDARD COVERAGE			
Maintenance works		•	•
Repair powertrain	•		•
Repair vehicle	•		•
Wear&tear components			•
MAINTENANCE WORKS			
Regular maintenance work as per Service Booklet and manufacturer's specifications		•	•
Maintenance Service A		•	•
Maintenance Service B		•	•
Oil change, engine oil, engine oil filter, grease vehicle		•	•
Engine coolant		•	•
Brake fluid charge		•	•
Oil, automatic transmission		•	•
Transfer case oil		•	•
Front axle gear oil		•	•
Rear axle gear oil		•	•
Air filter element		•	•
Air/dust combination filter, heating and ventilation system		•	•
Maintenance work, diesel particulate filter		•	•
Spark plug		•	•
Waterseparator, fuel system		•	•
Check/lubricate trailer hitch		•	•
Maintenance documentation and registration		•	•
REPAIR POWERTRAIN			T I
Engine	•		•
Crankcase	•		•
Crankshaft	•		•
Connectingrod	•		•
Piston, engine	•		•
Dual mass flywheel	•		•
Engine timing	•		•
Injection system	•		
Air intake, turbocharging	•		•
Exhaust manifold, emission control system	•		
Exhaust after treatment (Catalytic converter, NOx storage catalytic converter, AdBlue unit)	•		•
Diesel particulate filter	•		
Electrical system-engine	•		•
Alternator, starter motor	•		


Inclusions	畏	Maintenance
T REPAIR POWERTRAIN (CON'T)		
Glow plug	•	•
Engine cooling system, coolant pump, coolant hoses, fan	•	•
Radiator	•	•
Charge air cooler	•	•
Steering pump	•	•
A/C compressor	•	•
Engine suspension	•	•
Accelerator pedal	•	•
Automatic gearbox		
Torque converter, automatic transmission	•	•
Transmission housing	•	•
Shift operation	•	•
Clutch plate	•	•
Primary pump	•	•
Secondary pump	•	
Rear planetary gear set	•	•
Bearing, planetary gear set	•	
Disc brake	•	•
Electric controller unit	•	•
Transfer case		
Housing, transfer case	•	•
Drive shaft, Output shaft	•	•
Gear	•	
Drive gear	•	•
Gear set (bevel/spur gear)	•	
Ball bearing	•	•
Roller bearing	•	
Planetary gear set	•	•
Planet gear	•	
Ring gear	•	•
Oil cooler	•	
Propeller shaft		
Propeller shaft transmission/rear axle	•	
Propeller shaft/front axle	•	
Universal joint propeller shaft	•	
Bracket, propeller shaft intermediate bearing	•	•
Center support bearing, propeller shaft		

Transmission, intermediate bearing Propeller shaft intermediate bearing rear axle  Front axle, rear axle  Differential case Front axle arear axle housing Front and rear axle differentials Dive shaft, right Differential pinion Ringgear, bevel gear Crown wheel Front and rear axle shafts Bearing universal joint Seal boot, front axle shaft Seal boot, front axle shaft  Stoering knuckle Wheal hub  Repair VerHICLE Suspension Front and rear axle springs Bearing, axle spring Rubber mount rear spring/auxiliary spring Sieve, bearing, torsion bar Vibration damper, leaf spring Spring element Leaf spring Center bolt Spring U-bolt/leaf spring Trailing arm Transverse leaf springs, front axle spring Wishbone Stabilizer bar, front and rear axle Bearing basket, forsion bar, frame Rubber mount, front on par, frame Rubber mount, forsion bar, frame	Inclusions	型	Complete
Drive shaft, transmission, intermediate bearing Propeller shaft intermediate bearing rear axle  Front axle, rear axle  Differential case Front and rear axle housing Front and rear axle housing Front and rear axle housing Front and rear axle differentials Drive shaft, right Differential prino Ringsear, bevel gear Crown wheel Front and rear axle shafts Bearing universal joint Seal boot, front axle shafts Tapered roller bearing, Needle bearing Steering knuckle Wheel hub Front and rear axle springs Steering knuckle Wheel hub Front and rear axle springs Bearing, axle spring Front and rear swle springs Bearing, axle spring Front and rear syring/fauxiliary spring End stop, axle spring Sleeve, bearing, torsion bar Vibration damper, leaf spring Spring element Leaf spring Center bolt Spring U-bolt/leaf spring Trailing arm Transverse leaf springs, front axle spring Spring bearing Wishbone Slabilizer bar, front and rear axle Bearing basket, torsion bar, frame	© REPAIR POWERTRAIN (CON'T)		
Propeller shaft intermediate bearing rear axle  Differential case Front axle, rear axle Differential case Front and rear axle housing Front and rear axle differentials Drive shaft, right Differential pinion Ringgear, bevel gear Crown wheel Front and rear axle shafts Bearing universal joint Seal boot, front axle shaft Bearing universal joint Seal boot, front axle shaft Tapered roller bearing, Needle bearing Steering knuckle Wheel hub FREADRIVEHICLE Suspension Front and rear axle springs Bearing, axle spring Rubber mount rear spring/auxiliary spring Front short, axle spring Sieve, bearing, torsion bar Vibration damper, leaf spring Spring element Leaf spring Center bolt Spring U-bolt/leaf spring Trailing arm Transverse leaf springs, front axle spring Spring bearing Spring bearing Transverse leaf springs, front axle spring Spring bearing Spring U-bolt/leaf spring Transverse leaf springs, front axle spring Spring bearing	Vibration damper	•	•
Front axle, rear axle  Differential case  Front and rear axle housing  Front and rear axle differentials  Dive shaft, right  Differential pinion  Ring gear, bevel gear  Crown wheel  Front and rear axle shafts  Bearing universal joint  Seal boot, front axle shaft  Tapered roller bearing, Needle bearing  Steering knuckle  Wheel hub  Wheel hub  Tront and rear axle springs  Bearing, axle spring  Front and rear axle springs  Bearing, axle spring  Front part rear syle spring  See and spring  Front and rear axle springs  Bearing, axle spring  Suspension  Front and rear axle springs  Bearing, axle spring  See and spring  Leaf spring  Sieve, bearing, torsion bar  Vibration damper, leaf spring  Spring element  Leaf spring  Trailing arm  Transverse leaf springs, front axle spring  Spring bearing  Wishbone  Stabilizer bar, front and rear axle  Bearing basket, torsion bar, frame	Drive shaft, transmission, intermediate bearing	•	•
Differential case Front and rear axle housing Front and rear axle housing Front and rear axle housing Front and rear axle differentials Drive shaft, right Differential pinion Ring gear, bevel gear Crown wheel Front and rear axle shafts Bearing universal joint Seal boot, front axle shaft Tapered roller bearing, Needle bearing Steering knuckle Wheal hub Front and rear axle springs Steering knuckle Wheal hub Front and rear axle springs Suspension Front and rear axle springs Bearing, axle spring Rubber mount rear spring/auxiliary spring End stop, axle spring Skeeve, bearing, torsion bar Vibration damper, leaf spring Spring element Leaf spring Center bott Spring U-bott/leaf spring Trailing arm Transverse leaf springs, front axle spring Spring bearing Spring bearing Spring bearing Wishbore Stabilizer bar, front and rear axle Bearing basket, torsion bar, frame	Propeller shaft intermediate bearing rear axle	•	•
Front and rear axle housing Front and rear axle differentials Drive shaft, right Differential pinion Sing gear, bevel gear Crown wheel Front and rear axle shafts Bearing universal joint Seal boot, front axle shaft Tapered roller bearing, Needle bearing Steering knuckle Wheel hub Suspension Front and rear axle springs Bearing, axle springs Bearing, axle springs Front and rear axle springs Bearing, axle spring Front and rear axle springs Bearing, axle spring Front and rear axle springs Bearing, axle spring Cedeve, bearing, torsion bar Vibration damper, leaf spring Spring element Leaf spring Center bott Spring U-bolt/leaf spring Trailing arm Transverse leaf springs, front axle spring Spring bearing Wishbore Stabilizer bar, front and rear axle Bearing basket, torsion bar, frame	Front axle, rear axle		
Front and rear axle differentials  Drive shaft, right  Differential pinion  Ring gear, bevel gear  Crown Wheel  Front and rear axle shafts  Bearing universal joint  Seal boot, front axle shaft  Tapered roller bearing, Needle bearing Steering knuckle  Wheel hub  Tapered roller searing, Needle bearing Steering knuckle  Wheel hub  Tapered roller searing, Needle bearing Steering knuckle  Wheel hub  REPAIR VEHICLE  Suspension  Front and rear axle springs  Bearing, axle spring  Rubber mount rear spring/auxiliary spring  End stop, axle spring  Sleeve, bearing, torsion bar  Vibration damper, leaf spring  Spring element  Leaf spring  Center boit  Spring U-bolt/leaf spring  Trailing arm  Trailing arm  Transverse leaf springs, front axle spring  Spring bearing  Wishbore  Stabilizer bar, front and rear axle  Bearing basket, torsion bar, frame	Differential case	•	
Drive shaft, right Differential pinion Ring gear, bevel gear Crown wheel Front and rear axle shafts Bearing universal joint Seal boot, front axle shaft  Sear front axle shaft Tapered roller bearing, Needle bearing Steering knuckle Wheel hub Steering knuckle Suspension Front and rear axle springs Searing, axle spring Searing, axle spring Searing, axle spring Searing, axle spring Shewe, bearing, torsion bar Vibration damper, leaf spring Spring element Leaf spring Center bott Spring U-bott/leaf spring Trailing arm Transverse leaf springs, front axle spring Spring bearing Wishbone Stabilizer bar, front and rear axle Bearing basket, torsion bar, frame	Front and rear axle housing	•	•
Differential pinion Ring gear, bevel gear Crown wheel Front and rear axle shafts Bearing universal joint Seal boot, front axle shaft Tapered roller bearing, Needle bearing Steering knuckle Wheel hub Steering knuckle Suspension Front and rear axle springs Bearing, axle spring Bearing, axle spring Steeve, bearing, torsion bar Vibration damper, leaf spring Spring element Leaf spring Center bolt Spring U-bolt/leaf spring Trailing arm Transverse leaf springs, front axle spring Spring bearing Wishbone Stabilizer bar, front and rear axle Bearing basket, torsion bar, frame	Front and rear axle differentials	•	
Ring gear, bevel gear Crown wheel Front and rear axle shafts Bearing universal joint Seal boot, front axle shaft Tapered roller bearing, Needle bearing Steering knuckle Wheel hub Wheel hub Front and rear axle springs Bearing, axle spring Bearing, axle spring Rubber mount rear spring/auxiliary spring End stop, axle spring Sleeve, bearing, torsion bar Vibration damper, leaf spring Spring element Leaf spring Center bolt Spring U-bolt/leaf spring Trailing arm Transverse leaf springs, front axle spring Spring bearing Spring bearing Spring bearing Spring bearing Spring spring Spring arm Transverse leaf springs, front axle spring Spring bearing Spring bearing Spring bearing Spring bearing Spring springs, front axle spring Spring bearing Spring basket, torsion bar, frame	Drive shaft, right	•	•
Crown wheel Front and rear axde shafts Bearing universal joint Seal boot, front axle shaft Tapered roller bearing, Needle bearing Steering knuckle Wheel hub Wheel hub Wheel hub Front and rear axle springs Bearing, axle spring Bearing, axle spring Bearing, axle spring Fubber mount rear spring/auxiliary spring End stop, axle spring Sleeve, bearing, torsion bar Vibration damper, leaf spring Spring element Leaf spring Center bolt Spring U-bolt/leaf spring Trailing arm Transverse leaf springs, front axle spring Spring bearing Spring basket, torsion bar, frame	Differential pinion	•	•
Front and rear axle shafts  Bearing universal joint  Seal boot, front axle shaft  Tapered roller bearing, Needle bearing  Steering knuckle  Wheel hub  Wheel hub  Front and rear axle springs  Bearing, axle springs  Bearing, axle spring  Bearing, axle spring  End stop, axle spring  Sleeve, bearing, torsion bar  Vibration damper, leaf spring  Spring element  Leaf spring  Center bolt  Spring U-bolt/leaf spring  Trailing arm  Transverse leaf springs, front axle spring  Sying bearing  Wishbone  Stabilizer bar, front and rear axle  Bearing basket, torsion bar, frame	Ring gear, bevel gear	•	•
Bearing universal joint Seal boot, front axle shaft Tapered roller bearing, Needle bearing Steering knuckle Wheel hub   ***REPAIR VEHICLE**  Suspension Front and rear axle springs Bearing, axle spring Rubber mount rear spring/auxiliary spring End stop, axle spring Sleeve, bearing, torsion bar Vibration damper, leaf spring Spring element Leaf spring Center bolt Spring U-bolt/leaf spring Trailing arm Transverse leaf springs, front axle spring Spring bearing Wishbone Stabilizer bar, front and rear axle Bearing basket, torsion bar, frame	Crown wheel	•	
Seal boot, front axle shaft Tapered roller bearing, Needle bearing Steering knuckle Wheel hub  **REPAIR VEHICLE  Suspension Front and rear axle springs Bearing, axle spring Rubber mount rear spring/auxiliary spring End stop, axle spring Sleeve, bearing, torsion bar Vibration damper, leaf spring Spring element Leaf spring Center bolt Spring U-bolt/leaf spring Trailing arm Transverse leaf springs, front axle spring Spring bearing Wishbone Stabilizer bar, front and rear axle Bearing basket, torsion bar, frame	Front and rear axle shafts	•	•
Tapered roller bearing, Needle bearing  Steering knuckle  Wheel hub  FREPAIR VEHICLE  Suspension  Front and rear axle springs  Bearing, axle spring  Rubber mount rear spring/auxiliary spring  End stop, axle spring  Sleeve, bearing, torsion bar  Vibration damper, leaf spring  Spring element  Leaf spring  Center bolt  Spring U-bolt/leaf spring  Trailing arm  Transverse leaf springs, front axle spring  Spring bearing  Wishbone  Stabilizer bar, front and rear axle  Bearing basket, torsion bar, frame	Bearing universal joint	•	
Steering knuckle  Wheel hub  FREPAIR VEHICLE  Suspension  Front and rear axle springs  Bearing, axle spring  Rubber mount rear spring/auxiliary spring  End stop, axle spring  Sleeve, bearing, torsion bar  Vibration damper, leaf spring  Spring element  Leaf spring  Center bolt  Spring U-bolt/leaf spring  Trailing arm  Transverse leaf springs, front axle spring  Spring bearing  Wishbone  Stabilizer bar, front and rear axle  Bearing basket, torsion bar, frame	Seal boot, front axle shaft	•	•
Wheel hub  FREPAIR VEHICLE  Suspension  Front and rear axle springs  Bearing, axle spring  Rubber mount rear spring/auxiliary spring  End stop, axle spring  Sleeve, bearing, torsion bar  Vibration damper, leaf spring  Spring element  Leaf spring  Center bolt  Spring U-bolt/leaf spring  Trailing arm  Transverse leaf springs, front axle spring  Spring bearing  Wishbone  Stabilizer bar, front and rear axle  Bearing basket, torsion bar, frame	Tapered roller bearing, Needle bearing	•	
Suspension Front and rear axle springs Bearing, axle spring Rubber mount rear spring/auxiliary spring End stop, axle spring Sleeve, bearing, torsion bar Vibration damper, leaf spring Spring element Leaf spring Center bolt Spring U-bolt/leaf spring Trailing arm Transverse leaf springs, front axle spring Spring bearing Wishbone Stabilizer bar, front and rear axle Bearing basket, torsion bar, frame	Steering knuckle	•	
Suspension       •         Front and rear axle springs       •         Bearing, axle spring       •         Rubber mount rear spring/auxiliary spring       •         End stop, axle spring       •         Sleeve, bearing, torsion bar       •         Vibration damper, leaf spring       •         Spring element       •         Leaf spring       •         Center bolt       •         Spring U-bolt/leaf spring       •         Trailing arm       •         Transverse leaf springs, front axle spring       •         Spring bearing       •         Wishbone       •         Stabilizer bar, front and rear axle       •         Bearing basket, torsion bar, frame       •	Wheel hub	•	
Suspension       •         Front and rear axle springs       •         Bearing, axle spring       •         Rubber mount rear spring/auxiliary spring       •         End stop, axle spring       •         Sleeve, bearing, torsion bar       •         Vibration damper, leaf spring       •         Spring element       •         Leaf spring       •         Center bolt       •         Spring U-bolt/leaf spring       •         Trailing arm       •         Transverse leaf springs, front axle spring       •         Spring bearing       •         Wishbone       •         Stabilizer bar, front and rear axle       •         Bearing basket, torsion bar, frame       •	/S REPAIR VEHICLE		
Front and rear axle springs  Bearing, axle spring  Rubber mount rear spring/auxiliary spring  End stop, axle spring  Sleeve, bearing, torsion bar  Vibration damper, leaf spring  Spring element  Leaf spring  Center bolt  Spring U-bolt/leaf spring  Trailing arm  Transverse leaf springs, front axle spring  Spring bearing  Wishbone  Stabilizer bar, front and rear axle  Bearing basket, torsion bar, frame			
Rubber mount rear spring/auxiliary spring  End stop, axle spring  Sleeve, bearing, torsion bar  Vibration damper, leaf spring  Spring element  Leaf spring  Center bolt  Spring U-bolt/leaf spring  Trailing arm  Trailing arm  Transverse leaf springs, front axle spring  Spring bearing  Wishbone  Stabilizer bar, front and rear axle  Bearing basket, torsion bar, frame		•	•
Rubber mount rear spring/auxiliary spring  End stop, axle spring  Sleeve, bearing, torsion bar  Vibration damper, leaf spring  Spring element  Leaf spring  Center bolt  Spring U-bolt/leaf spring  Trailing arm  Trailing arm  Transverse leaf springs, front axle spring  Spring bearing  Wishbone  Stabilizer bar, front and rear axle  Bearing basket, torsion bar, frame	Bearing, axle spring	•	
End stop, axle spring  Sleeve, bearing, torsion bar  Vibration damper, leaf spring  Spring element  Leaf spring  Center bolt  Spring U-bolt/leaf spring  Trailing arm  Transverse leaf springs, front axle spring  Spring bearing  Wishbone  Stabilizer bar, front and rear axle  Bearing basket, torsion bar, frame		•	
Sleeve, bearing, torsion bar  Vibration damper, leaf spring  Spring element  Leaf spring  Center bolt  Spring U-bolt/leaf spring  Trailing arm  Transverse leaf springs, front axle spring  Spring bearing  Vishbone  Stabilizer bar, front and rear axle  Bearing basket, torsion bar, frame		•	
Vibration damper, leaf spring  Spring element  Leaf spring  Center bolt  Spring U-bolt/leaf spring  Trailing arm  Transverse leaf springs, front axle spring  Spring bearing  Wishbone  Stabilizer bar, front and rear axle  Bearing basket, torsion bar, frame		•	
Spring element  Leaf spring  Center bolt  Spring U-bolt/leaf spring  Trailing arm  Transverse leaf springs, front axle spring  Spring bearing  Wishbone  Stabilizer bar, front and rear axle  Bearing basket, torsion bar, frame	_	•	
Leaf spring Center bolt Spring U-bolt/leaf spring Trailing arm Transverse leaf springs, front axle spring Spring bearing Wishbone Stabilizer bar, front and rear axle Bearing basket, torsion bar, frame		•	
Center bolt  Spring U-bolt/leaf spring  Trailing arm  Transverse leaf springs, front axle spring  Spring bearing  Wishbone  Stabilizer bar, front and rear axle  Bearing basket, torsion bar, frame		•	
Spring U-bolt/leaf spring  Trailing arm  Transverse leaf springs, front axle spring  Spring bearing  Wishbone  Stabilizer bar, front and rear axle  Bearing basket, torsion bar, frame		•	
Trailing arm  Transverse leaf springs, front axle spring  Spring bearing  Wishbone  Stabilizer bar, front and rear axle  Bearing basket, torsion bar, frame		•	
Transverse leaf springs, front axle spring  Spring bearing  Wishbone  Stabilizer bar, front and rear axle  Bearing basket, torsion bar, frame  • • • • • • • • • • • • • • • • • •		•	
Spring bearing  Wishbone  Stabilizer bar, front and rear axle  Bearing basket, torsion bar, frame  • • • • • • • • • • • • • • • • • •		•	
Wishbone Stabilizer bar, front and rear axle Bearing basket, torsion bar, frame  • • • • •			
Stabilizer bar, front and rear axle  Bearing basket, torsion bar, frame  • • •			
Bearing basket, torsion bar, frame   •  •		•	
Tabbor mount, totalon bar	-	•	
Bearing, shock absorber • •			

Inclusions		EL EL	Maintenance
•	HICLE (CON'T) , damper/suspension strut		
Boot, shock-abs		•	
Body and cockpit	Sign of the Control o		
Steering Steering			
_	steering, mechanical/hydraulic/electric		
Fuel tank		•	
Fuel filter/straine	er, filler neck		
Fuel lines		•	
AdBlue® tank			1
Pump, lines AdB	ue®	•	
Electrical compo			
Electrical system		•	
Wiring harnesse		•	
Electronic contro		•	
Central locking s	system		
Electronic key		•	•
Heating and air o	conditioning		
Safety systems		•	•
Seats (Fabric an	d leather excluded)	•	
₩ WEAR & TE	·		
Battery, additional			•
V-belt, Poly V-belt,	-		•
Spark plug			
Brake discs			•
Brake lining			
Wiper blades front,	rear		•
Shock absorbers fr	ont, rear		
Muffler			•
Center muffler			
End main muffler			•
Exterior lights, ligh	t source, bulbs, burner Xenon		•
Interior lights, light	source, bulbs		•
Exclusions	<ul> <li>Refueling</li> <li>Tires</li> <li>Body parts</li> <li>Glass and mirrors</li> <li>Housing lamp unit</li> <li>Wheels</li> <li>Seats fabric</li> <li>Body-builder Superstructure and components</li> <li>Loss of key</li> </ul>		

### Manufacturer Warranty

The Mercedes-Benz Vans manufacturer warranty provides now even more security to our customers, complementing the new vehicle warranty with a powertrain warranty.

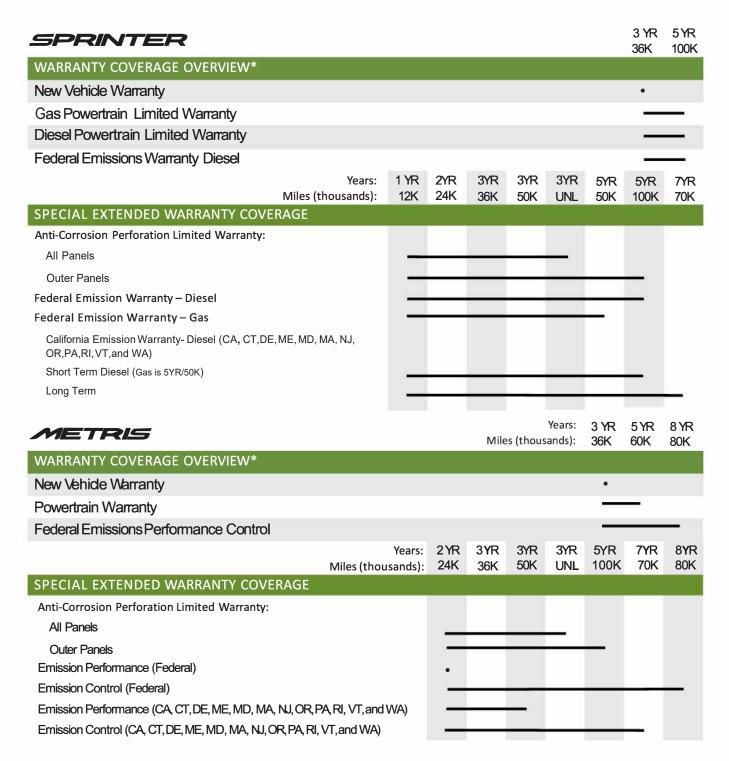

<sup>\*</sup>For detailed warranty coverage information, please check the vehicle manufacture warranty booklet.

### ServiceCARE Resources

For more information, please visit:

https://www.mbvans.com/sprinter/mercedes-van-parts-and-services#servicecare

ASCG-18-MB001

©2022 Mercedes-Benz USA, LLC 1 Mercedes-Benz Drive, Sandy Springs, GA 30328 1-877-762-8267 www.MBVans.com

All information contained in this publication is correct as of publication date. The details inside are subject to change. All rights reserved. Reproduction or translation in whole or in part is not permitted without written authorization from the publisher. Printed in USA.